

Basic Editing

Move the insertion point: Touch where you want to type. The cursor will blink in the new position and a blue tab will appear below it. Drag the tab to move the cursor.

 
Select text: Touch & hold or double-tap within the text. The nearest word will be highlighted and blue tabs will appear. Drag tabs to edit selection.

Delete text: Touch  to delete characters or selected text.

Insert Capital Letters: Tap the  key once to insert one capital letter. Or hold  key while you type.

Turn on caps lock: Double-tap  key. It will turn into . Tap again to return to lowercase.

Cut, Copy, Paste:  Select the text you want to manipulate. When highlighted, touch  Cut,  Copy, or  Paste.



Keyboard Settings



Input languages: Select different languages to be included when typing.

Android Keyboard Settings: Edit keyboard settings such as Auto-capitalization, Sound, Auto correction, and Input methods & styles.

 
7. Exploring Apps

Open up some Apps to better familiarize yourself with your new tablet.



Tap the Clock app to access your alarm clock, timer, or stopwatch.

Clock Timer Stopwatch

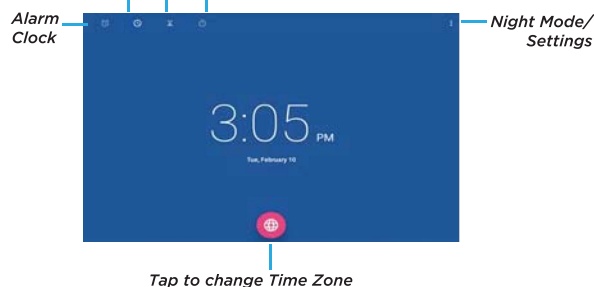

Tap the camera app to take pictures and videos to share with your friends and family.

Taking Photos:

- Make sure the icon bar on the left is the camera icon
- Tap the camera icon to take a photo
- To zoom pinch two fingers together on the screen.
- Tap the menu icon in the top right corner for camera settings

To switch to video record, swipe right from the left icon bar. Select the video icon. You can also change the resolution settings and try advanced features.

Recording Video:

- Make sure the icon bar on the left is the video icon
- Tap the video icon to start recording
- To zoom pinch two fingers together on the screen.
- Tap the video icon again to stop recording
- While recording you can tap anywhere on the screen to take take a picture.
- Tap the menu icon in the top right corner for video settings

Included Apps



Calculator: Basic calculator functions



Calendar: keep track of your schedule and set reminders



Camera Take photos and record videos



Chrome™: Browse the web with Google Chrome



Clock: Set the time and and alarms



Contact: Manage your contacts



Downloads: Manage your downloads



Drive: Share your Google Docs and files



ES File Explorer: Browse for files to edit



OneDrive Share and work together with everyone



Excel: Create spreadsheets, organize and calculate data



Powerpoint: Create slides for presentations



Word: Create and edit documents



Gmail: Fast, searchable email from Google



Google: Stay up to date with Google Now cards



Hangouts™: One-on-one and group conversations with photos, emoji, and video calls for free.



Maps™: Find directions and locations



Photos: Share photos and back them up on Google.



Play Movies & TV: Stream movies & TV shows instantly



Play Music: Discover, play, store and share the music you love



Outlook: Sync all your e-mails and contacts



Skype: Call and chat with family and friends



OneNote: Capture your ideas and to-do lists



Videos: Plays your videos that you have on your device



Play Store: Shop for music, books, magazines, movies, TV shows, games and apps



Settings: Adjust settings on your tablet



Sound Recorder: Record audio using the built-in microphone



Voice Search: Search the web by speaking instead of typing



YouTube: Stream your favorite videos on the web



Translate: Translate words, phrases, and web pages between English and over 100 other languages.



RD Client: Connect to a remote PC and work resources

Uninstalling Apps

 
To Uninstall an unwanted App:

1




Tap Settings

2

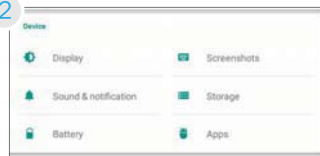


Under Device, tap Apps.

 3

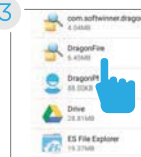

Tap the App that you want to uninstall.

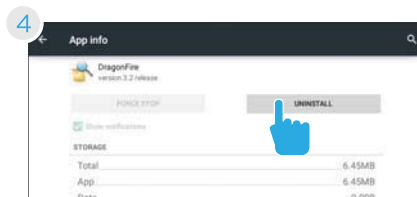 

Tap Uninstall

8. Google Accounts

Why use a Google Account?

Google Accounts let you organize and access your personal information from any computer or mobile device.

Sync & Back-up: Whether you draft an email, add a contact, or add an event to your calendar, your work continuously gets backed up and synchronizes with any computer with the same Google Account.

Accessibility: Check your latest emails, events, or text messages wherever you are on any computer or mobile device.

Security: Google works round the clock to ensure your private information stays secure.

Shopping: Connect your Google Account with your Google Wallet™ to easily purchase music, books, apps, and more on Google Play and other online stores.

Services: Your Google Account also lets you take full advantage of other Google apps and services such as YouTube, Google Play, Hangouts, Google Maps, Messaging, and more.

 
Add a Google Account

1




Tap Settings.

2

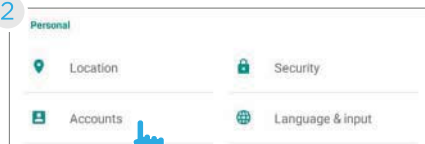


Under Personal,
tap Accounts.

 3

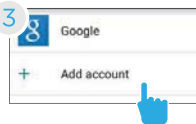

Tap Add account.

 4

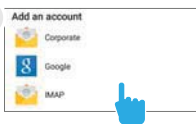

Tap what kind of account
you want to add and sign in.

 
Remove a Google Account

1




Tap Settings

2

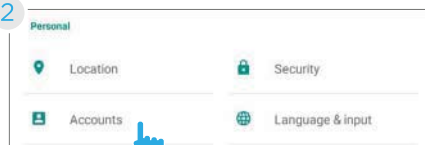

Under Personal,
tap Accounts.

 3




Tap on the type of
account that you
want to remove.



Tap the account that you want to remove.



 Tap Menu icon.



Tap Remove account.

Google Play



Play Store

Google Play brings together all of your favorite content in one place. Access movies, TV shows, music, books, magazines, apps, and more when you sign in with your Google Account. You can also shop for more games, books, magazines, and more in the Google Play Store app.

Google Play

My Library: Displays your most recently used books, music, and so on. Tap any of the images to view your content.

Recommended Apps: Recommends apps that you can add to your home screen.

All Google Play recommendations work the same way:



Tap to see a different suggestion



Tap to avoid future suggestions like this



Hold and drag blue dots to resize



Purchase music, games, books, magazines, movies, TV shows, and apps on the Google Play Store app



With Google Play, shop the world's largest eBookstore now with over 5 million books-available on web, tablet, and phone.



With Google Play Newsstand, discover more of the news and magazines you love with a newsstand made for you.



Choose from thousands of movies and TV shows on Google Play and stream them instantly on your Android phone, tablet or the web.



Buy now, listen now, sync never, with music on Google Play.

9. Google Now™

Google Now uses contextual data from your tablet and from other Google products to supply you with just the right information at just the right time.

You can download the Google Search app on Google Play.

 
After you have downloaded and installed the Google Search app, tap the  icon on the Home screen or swipe up from the  icon to open Google Now.

Google Now Cards

Google Now displays cards when they're most likely to be useful and relevant based on the current time and your current location.

Find out what the weather is like, how much traffic to expect before you leave for work, or how your favorite sports team is doing.

To dismiss a card from the Google Now screen, swipe it away. The card will return the next time it's relevant, which may be hours or days from now.

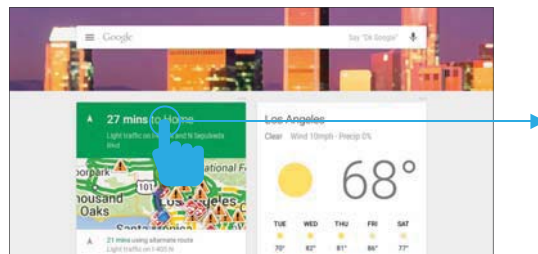

You can turn Google Now cards on or off at any time. To do so from the main Google Now screen go to Menu < Settings < Google Now and choose a specific card. You can then check or uncheck when you would like that card to appear.

Location Access

Find out what the weather is like or how the commute to work will be by confirming your home and work locations.



Google Now Settings

In order to get to your Google Now settings from the Google Now Main Screen, touch the Menu icon at the bottom right of the screen. Then touch Settings. 4 types of settings will be available.

Google Now: These settings allow you to turn Google Now On or Off. It will also take you through a brief introduction to Google Now and you will be given the chance to opt in. From the settings screen you can also change the priority of cards and also sound settings for notifications.

Voice settings: Voice settings control different aspects of speech input and output.

- Language: Select a language to use for Voice Searches. The Voice Search language can be different from the language displayed by your tablet.
- Speech Output: Select Hands-free only to turn on speech output only when using a headset.
- Block offensive words: Check to ensure that search results with offensive language are blocked.
- Hotword detection: When this is checked, you can say "Google" when viewing the Google Now screen to initiate a voice search or action.

Tablet Search: Select which apps in your tablet are included in Google searches.

Privacy & Accounts: Control search-related privacy options for your Google Account.

- Manage location history: Opens Google Maps settings, where you can turn location settings and location reporting on or off.
- Location: Allows you to turn location access by all Google apps on or off.
- Show recent searches: Check if you want search suggestions based on your recent searches.
- Manage Web History: View your Web History after signing in

10. Voice Actions

After installing the Google Search app you can use Voice Actions to get directions, send messages, and perform a number of other common tasks.

To initiate a Voice Action you can:

- Tap the Microphone in the Google Search Bar on your Home Screen
- Tap the Microphone in your keyboard

Next, speak the Voice Action you want to use. Here are some typical examples:

“Set alarm for 8:30 a.m.”

“Send email to Marcus Foster. Subject: Coming to-night? Message: Hope to see you later.”

“Navigate to Mike’s Bikes in Palo Alto”

As you speak, Voice Search analyzes your speech and initiates the action. If Voice Search doesn’t understand you, it lists a set of possible meanings. Just tap the one you want.

Some Voice Actions, such as “send email” and “note to self,” open a panel that prompts you to complete the action by speaking or typing more information.

When prompted, you can:

- Touch any text already in the panel to add, or edit the text by typing. (You can tap the Microphone icon again to continue speaking instead of typing)
- Touch underlined words or phrases, drag across multiple words to view a list of alternate transcriptions, or edit by speaking or typing.
- Touch a button at the bottom of the window to add any optional fields (you can also speak the name and content of any of these fields)
- When you are done, touch the button appropriate to complete the action, such as Send.

Voice Commands



To initiate a Voice Action touch the Microphone icon

*Voice Actions will only be available after downloading the Google Search app.

Some handy voice commands are:

Say	Followed By	Examples
[Words you want to search for]		"bike shoes"
"Map of"	Address, name, business name, or other destination	"Navigate to Union Square" or "1299 Colusa Ave, Berkeley, CA"
"Go to"	Search string or URL	"Go to Google.com"
"Note to self"	Message text	"Note to self: remember to buy milk"
"Define"	Word to define	"Define campanile"
"Weather"	Location	"Weather Detroit"
"Movie"	Movie location and Movie name	"Movie, Los Angeles, London After Midnight"
"Pictures of"	Topic	"Pictures of cats"
"Translate to"	Language & Phrase	"Translate to French, Where is the restroom?"
[A math phrase]		"75 divided by 6"

11. Tablet Settings

Wi-Fi: Turn Wi-Fi on to see available networks and connect.

Bluetooth: Turn on Bluetooth to sync to another device.

Display: Adjust brightness, change your wallpaper, turn on/off screen rotation, sleep settings, and font size.

Sound & notification: Adjust the volume, notifications, and alarm sounds.

Battery: Provides battery usage data.

Users: Add users & profiles with their own apps and content.

Screenshots: Display or hide the screenshot button in the status bar.

Storage: Provides storage use data.

Apps: Tap an app to force stop, uninstall, clear data, move to SD card, or clear data.

Location: Allow google to use data to determine your location for improved search results.

Accounts: Tap to add or remove Email accounts.

Backup & reset: Backup data and factory reset your tablet.

Security: Adjust settings to make your tablet more secure. Allow installation of non-Market apps.

Language & input: Set language, spelling correction, keyboard and voice settings.

Date & time: Set the date, time, and time zone.

Printing: Set up Google Cloud Print to connect your printer to the web.

 
Accessibility: Adjust settings for users with poor vision.

About tablet: Model number and general tablet information.


12. Tips & Tricks

Extending Battery Life


Reducing the Brightness of your screen can help extend your battery life.

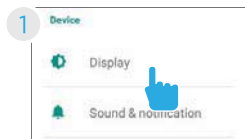

In Settings, tap Display.

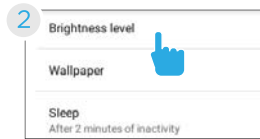 


Tap Brightness level.

 

Use the slider to adjust the brightness. Then tap OK.

 Use a Quick Screen Timeout.

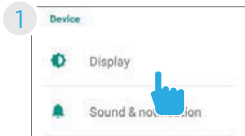

In Settings tap Display.

 


Tap Sleep.




Switch off Wi-Fi if you're not close to a strong signal.

Disable Location Services.

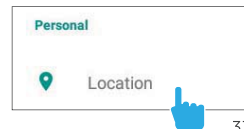

Reset/Restore

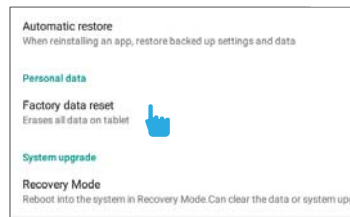 

Factory Restore

Tap Backup & reset in the settings app. Then select Factory data reset to restore factory settings. This will erase all data on the tablet.

Troubleshooting

Cannot turn on the tablet.

Check the tablet's power level. Please charge it before starting it. If your tablet still cannot be turned on, you may reset it before you turn it on.

No sound from earphones.

Check if volume is set to 'O'. Or earphone may be broken, please try another one.

Loud static noise.

Check if there is dust in the earphone or speaker. Check if the file is broken.

Frozen to any operation.

Press and hold the power button for 6 seconds to reset the device.

Application is not working.

Possible reasons may be that this app is not compatible with your OS or the downloaded .apk file is broken. You may need to download a full version.

How do I delete a Google account?

If an account is added, the account is shown in Accounts of Settings, where you may also add another account. To delete an undesired account, tap the account, then tap the menu icon in the upper right hand corner and choose Remove account.

Technical Specifications

- Android 7.1 Nougat
- 1.2Ghz quad-core
- 10.1" LCD Screen
- Multi-Touch Screen
- 1024 x 600 Screen Resolution
- 5000mAh battery
- Ram: 1GB
- 16GB Flash Storage
- Front Camera: 0.3MP
- Built-in Speakers
- Built-in G-sensor
- MicroSD card Slot
- USB connection

Customer Support

Visit ematic.us/support for customer support regarding your device.

To submit a request, fill out the required information online. You will be provided a ticket number regarding your issue which you can refer to when contacting us further.

Limitations of Liability Statement

Limitations of Liability Statement

The Ematic User Manual may contain or reference links to third-party sites, however, please be aware that Ematic is not responsible for and cannot control these other sites. Ematic makes no representations or warranties whatsoever about any other website which you may access as a result of reading this user manual, or otherwise. When you access a website that is not owned or operated by Ematic (a "non-Ematic website"), even one that may contain an Ematic logo, please understand that it is independent from Ematic, and that Ematic has no direct control over the content on such website(s). In addition, a link to any such non-Ematic website does not mean Ematic endorses or accepts any responsibility for the content, or of any functionalities or services, of such website(s). Furthermore, Ematic makes no promise, representation or warranty that any non-Ematic website you navigate to will be free of viruses, worms, Trojan horses and other items of a destructive nature. The Ematic User Manual is for your exclusive benefit and you assume all risks, losses and/or damages of whatever nature that may result arising out of your use of the Ematic User Manual.

Limitation of Liability and Indemnity

To the maximum extent permitted by applicable law, Ematic shall not be liable for any damages suffered as a result of using, modifying, contributing, copying, distributing, or downloading the materials, use of the Ematic User Manual or use of any Ematic product and/or software. In no event shall Ematic be liable for any indirect, extraordinary, exemplary, punitive, special, incidental, or consequential damages (including, without limitation, loss of data, revenue, profits, use or other economic advantage) however arising, whether for breach of contract or in tort, even if Ematic has been previously advised of the possibility of such damage. You agree that you have sole responsibility for adequate protection and backup of data and/or equipment used in connection with the product and software and will not make a claim of any nature against Ematic for lost data, inaccurate output, work delays or lost profits resulting from the use of the materials. You agree to indemnify, hold harmless and defend Ematic, together with its affiliates, parent and subsidiary entities, successors, assigns, partners, managers, members, employees, officers, directors and shareholders, from and against any and all damages, liens, liabilities, losses, demands, actions, causes of action, claims, costs and expenses (including, without limitation, reasonable attorneys' fees, charges and disbursements, as well as the cost of in-house counsel and appeals) arising from or related to Ematic, the use of The Ematic User Manual or any Ematic product and/or software. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Windows™ is a registered trademark of Microsoft Corp. in the United States and other countries; Mac OS® is a registered trademark of Apple Inc.; Linux™ is a registered trademark of Linus Torvalds. Android, Google, Google Play, Google Now and other marks are trademarks of Google Inc. Ematic is not affiliated with Google Inc. Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.

Ematic is not affiliated with Microsoft, Apple, Inc., Linux, or Google, Inc., (including Android).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The Ematic brand and products are owned by Shaghal, Ltd.



Warning Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.