


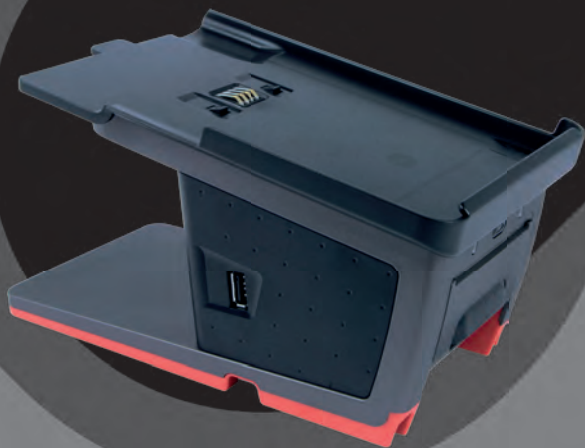

AXIUM DOCK

User Guide

ingenico
GROUP

Contents

1_Introduction	4
2_Presentation	5
2_1 Content of the box	5
2_2 Overview on the AXIUM DOCK	7
3_Use of the Docking Station	9
3_1 Power on the device	9
3_2 Docking / undocking of the D7	9
3_3 AXIUM D7 charging	10
3_4 Advance paper	11
3_5 LED information	11
4_Installation	12
4_1 Recommendations	12
4_2 Docking Station connections	13
4_2_1 USB slots	13
4_2_2 Charging contacts	13
4_2_3 NFC interface for Bluetooth paring	14
4_3 Paper roll	15
4_3_1 Main characteristics of INGENICO paper roll	15
4_3_2 Installing paper roll	16



4_4	Ethernet connection over WIFI	17
4_4_1	Software configuration	17
4_4_2	Factory default settings	19
4_4_3	Firmware upgrade	20
4_4_4	Emergency firmware upgrade	20
4_4_5	Change settings	21
5	Recommendations	22
5_1	Securisation	22
5_2	Safety	22
5_3	FCC/IC Compliance	23
6	Environment (WEE, Batteries and Packaging)	25
7	Troubleshooting	25
8	Marking	26



1_Introduction

We hope that you will be fully satisfied with your new Docking Station for AXIUM D7 terminal.

Read this guide to understand and make the best use of this accessory. It presents you the necessary information about use, installation, maintenance, safety and security recommendations.



WARRANTY / SECURITY

Use only the power supply included with the product to ensure best performance and safety. Maintenance should only be provided by Ingenico authorized technician. Failure to comply with these instructions will void the manufacturer's responsibility.



This symbol indicates an important Warning.



This symbol indicates a piece of advice.

2_Presentation

2_1 Content of the box

AXIUM DOCK station

The AXIUM DOCK is an accessory for AXIUM D7 POS terminal. It offers different types of functions:

- Charge contacts for Axiom D7 charging.
- 3 USB slots
- Ethernet connection through a Wifi router (option)

The AXIUM DOCK embeds a thermal printer



User guide



> 8V-4V Power supply



> Magic box cable (option)



> Power cable



WARNING



The power supply unit provided with your equipment is specially designed for Ingenico terminals. Do not use any other power supply. The use of a power supply with apparently similar voltage/current characteristics may damage your terminal.




ADVICE

Keep the packaging. It must be re-used whenever the terminal is shipped.

2_2 Overview of the AXIUM DOCK

Charging contact +
USB interface

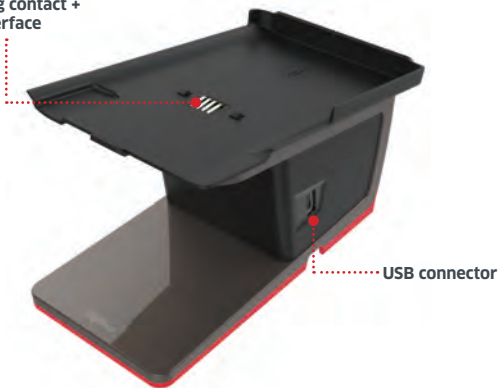


> Docking Station unit



Compartment below the docking

- Ethernet connection
- Power supply connection
- USB connection

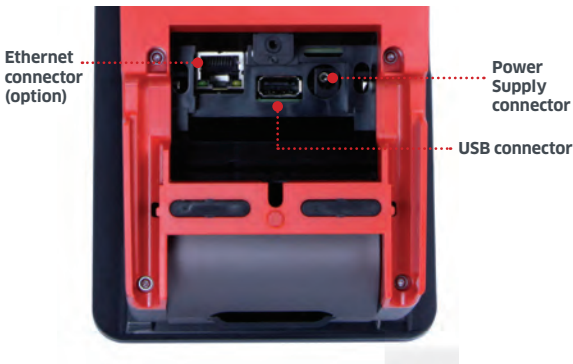

Weight	780gr
Dimensions (L x w x h)	Terminal : 122 x 212 x 117 mm3
Electrical mains network	100-240VAC / 50-60 Hz - Class VI equipment
Connections on station	3 USB slots Charging contacts + USB interface through the tablet 1 Ethernet port (option)

3_Use of the DOCKING STATION



ADVICE

Before to use the Docking Station, always check if the paper roll is present.

3_1 Power on the device

To power on the station it is necessary to connect the device to the electrical main network through the power supply unit provided with the station.



Power
connection

3_2 Docking / undocking of the D7

In order to charge the D7, you have to dock it on the station. This action is automatic by sliding down the D7 on the terminal support as per below.



In case you need to undock the product, please action the dedicated button on the station as per below.



3_3 Axium D7 charging

The Axium Dock allows to charge the Axium D7 through the contacts spring on the tablet holder.

The Axium Dock offers a 5V voltage with a maximum current of 2A.



3_4 Advance paper

Advance the paper by pressing “advance paper key”.



**Advance
paper key**

3_5 LED information

Two LEDs are integrated in the docking station :

- One (on the left) to indicate if the station is powered
- The second one (on the right), to indicate the Bluetooth connection during printing ticket.



Power Led :

Orange : to indicate that the device is powered.

Flashing Orange : to indicate that there is no paper for printing

Bluetooth LED :

Blue : when the Docking Station is connected over the Bluetooth link.

4_Installation

4_1 Recommendation

Location of the AXIUM DOCK

Place the terminal on flat surface near an electric socket. The terminal should be placed far from any very hot zones, protected from vibrations, dust, damp and electromagnetic radiation (computer screen, anti-theft barrier etc.).

Operating conditions

Ambiant temperature	From 0°C to +40°C
Max relative humidity	85% at +40°C

Storage conditions

Ambiant temperature	From -20°C to +70°C
Max relative humidity	85% at +55°C

Power supply

Electrical main network	100 - 240VAC / 50-60Hz - Class VI
External power supply	8V - 4A provided by Ingenico

Securisation of your device

To undock your terminals below the terminal support please press the dedicated button.



4_2 Docking Station connections

4_2_1 USB slots

The Docking station embeds 3 USB slots. All the 3 ports are available from tablet (Axiom D7) when this one is physically connected to the docking Station.

For instance, external barcode reader, external printer or cash drawer can be connected to the Station.



USB Type «A» connector

4_2_2 Charging contacts

The four contacts on the tablet holder offer the power supply to the Axiom D7 and the USB interface.



Charging contacts

Insert the Axiom D7 terminal on the tablet support to make the charge



4_2_3 NFC interface for Bluetooth pairing

The docking Station embeds a passive NFC interface for Bluetooth pairing.

To make the Bluetooth pairing easier.

This interface allows to make key exchange between Axiom D7 and the station for Bluetooth connection.

To proceed to this pairing, please launch the pairing application from the tablet and then approach the terminal to the dock.



4_3 Paper roll

4_3_1 Mains characteristics of INGENICO paper roll

R40 paper roll characteristics	Precisions
Colour	White
Width	58 mm
Diameter	42 mm (Max)
Length	About 18 metres

The thermal paper can be deteriorated by poor storage condition, so we recommend you to avoid :

- Storage in hot wet places (near air-conditioner, humidity higher than 85%)
- Exposure to sunlight or ultraviolet for the long periods
- Contact with organic solvents (solvent type adhesive)
- Direct contact with materials containing plasticizers (PVC transparent folders or envelopes)
- Direct contact with "diaz" papers
- Direct contact with water
- Rubbing or pressing the paper too strongly



WARNING

For best product performances, **only use heat sensitized paper approved by Ingenico.**



WARNING

Switch off the terminal prior to install a paper roll.
Use only paper approved by Ingenico
The use of non-approved paper is likely to damage the printer of the Docking Station.



4_3_2 Installing paper roll

- Open the paper compartment by pulling on the paper door button and pull the door.



- Insert the paper roll in the compartment following the directions shown on the below picture
- Pull the paper up to the top of the terminal
- Maintain the paper and close the lid
- Press simultaneously on both upper corners of the paperflap, as shown by arrows on picture, until it clips into position



4_4 Ethernet connection over WIFI

4_4_1 Software configuration

The first time you receive your docking station equipped with the Wifi/Ethernet board, this one is under Factory default mode.

You could access the device via Ethernet with IP 192.168.0.50.



User Name : Admin

Password : Password

Those information can be found on the docking label (below the product)

Remark: if you change some settings on the web interface and you save those settings, you will not be able to access to the Factory default mode.

Once the configuration changed under the Factory Test Mode, you could only access the device via WLAN with IP 192.168.1.1.

Or you could access the device via Ethernet with WAN IP and management port when the “Enable Remote Management” function is enabled. And with the password you set or default password.

Product Page : WNC-AC15 Hardware Version : B1 Firmware Version : 1.80

ingenico


WNC-AC15	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
ADMIN	ADMINISTRATOR SETTINGS The 'admin' account can access the management interface. The admin has read/write access and can change password. By default there is no password configured. It is highly recommended that you create a password to keep your router secure. Save Settings Don't Save Settings				Helpful Hints... • For security reasons, it is recommended that you change the password for the Admin account. Be sure to write down the new password to avoid having to reset the router in case they are forgotten. • When enabling Remote Management, you can specify the IP address of the computer on the Internet that you want to have access to your router, or leave it blank to allow access to any computer on the Internet. • Select a filter that controls access as needed for this admin port. If you do not use the filter you need in the list of filters, go to the Advanced > Inbound Filter screen and create a new filter. • More...
TIME	ADMIN PASSWORD Please enter the same password into both boxes, for confirmation. Password : Verify Password :				
SYSTEM	SYSTEM NAME Gateway Name : WNC-AC15				
FIRMWARE	ADMINISTRATION Enable Graphical : ☐ Authentication : ☐ Enable HTTPS Server : ☒ View Log View Log View Log Remote Admin Port : 8080 Use HTTPS : ☒ Remote Admin Inbound Filter : Details : Add New Save Settings Don't Save Settings				
DYNAMIC DNS					

WIRELESS

Copyright © 2019 Ingenico. All rights reserved.

4.4.2 Factory default settings

Enter **TOOLS** → **SYSTEM** page and click “Restore Factory Defaults” button and click OK in the Popup message, then the router will restore all factory configuration settings.

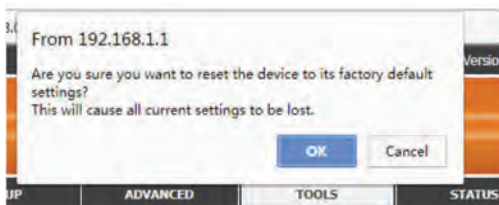

4.4.3 Firmware upgrade

Enter TOOLS → FIRMWARE page, click on “BROWSE” to search the local hard drive for the firmware to be used for the update



4.4.4 Emergency firmware upgrade

If the firmware is damaged, the device could not load the runtime firmware and it would stop in bootloader. You could access the device using



4.4.5 Change settings

You could access the function page you want to modify and change the setting you need.

Change settings then click “Save Settings” button, the settings will be saved and taking effect.

Below is an example (function details could be found in external spec)

The screenshot displays the web interface of a Zingipico router, specifically the 'WIRELESS NETWORK' settings page. The interface has a top navigation bar with tabs: WIRELESS, SETUP, ADVANCED, TOOLS, STATUS, and SUPPORT. The left sidebar shows 'WIRELESS SETTINGS' and 'NETWORK SETTINGS'. The main content area is titled 'WIRELESS NETWORK' and includes a brief instruction: 'Use this section to configure the wireless settings for your Zingipico router. Please note that changes made in this section may also need to be duplicated on your wireless client. To protect your privacy you can configure wireless security features. This device supports three wireless security modes including: WEP, WPA and WPA2.' Below this are 'Save Settings' and 'Don't Save Settings' buttons. The 'WIRELESS NETWORK SETTINGS' section includes: 'Wireless Band : 2.4GHz Band', 'Enable Wireless : ☒', 'Wireless Network Name : test2qasid (Also called the SSID)', '802.11 Mode : Mixed 802.11n, 802.11g and 802.11b', 'Enable Auto Channel Scan : ☒', 'Wireless Channel : 2.412 (2412 - CH 1)', 'Transmission Rate : Best (Automatic) (Mbps)', 'Channel Width : 20/40 (Mixed Auto)', and 'Visibility Status : * Visible ☒ Invisible'. The 'WIRELESS SECURITY MODE' section shows 'Security Mode : WPA-Personal'. The 'WPA' section at the bottom explains: 'Use WPA or WPA2 mode to achieve a balance of strong security and best compatibility. This mode uses WPA for legacy clients while maintaining higher security with stations that are WPA2 capable. Also the strongest cipher that the client supports will be used. For best security, use WPA2 Only mode. This mode uses AES(CCM) cipher and legacy stations are not allowed access with WPA security. For maximum compatibility, use WPA Only. This mode uses TKIP cipher. Some gaming and legacy devices work only in this mode.'

Helpful Hints...

- Changing your Wireless Network Name is the first step in securing your wireless network. We recommend that you change it to a familiar name that does not contain any personal information.
- Enable Auto Channel Selection let the router can select the best possible channel for your wireless network to operate on.
- Enabling Hidden Mode is another way to secure your network. With this option enabled, no wireless clients will be able to see your wireless network when they perform a scan to see what's available. In order for your wireless devices to connect to your router, you will need to manually enter the Wireless Network Name on each device.
- If you have enabled wireless security, make sure you enter down the WEP Key or Passphrase that you have configured. You will need to enter this information on any wireless device that you connect to your wireless network.

• More...

5_Recommendations

5.1 Securisation

AXIUM / series offers the possibility to secure AXIUM DOCK and AXIUM D7 with one single Kensington.

When the D7 is docked lock the Kensington system as per below.



5.2 Safety

Powering down the AXIUM DOCK

Disconnect the AXIUM DOCK power supply block adapter from the electrical mains network.

Electrical power outlet

The electrical outlet must meet the following criteria :

- Must be installed **near the equipment and easily accessible;**
- Do not short-circuit the battery.
- Do not attempt to open the battery container.
- Used batteries must be disposed of at the appropriate sites.

Explosion areas

Certain regulations restrict the use of radio equipment in chemical plants, fuel depots and any site where blasting is carried out. You are urged to comply with these regulations. The terminal shall be protected by a specially fitted and certified cover enabling use in proximity to a fuel pump.

Electronic health appliances

Your handset is a radio transmitter which may interfere with health appliances, such as hearing aids, pacemaker, hospital equipment, etc. Your doctor or the equipment manufacturer will be able to provide you with appropriate advice.

5_3 FCC/IC Compliance

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.



Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This device complies with FCC RF radiation exposure limits set forth for general population. This device must be installed to provide a separation distance of at least 20cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.



6_Environment (WEE, Batteries and Packaging)

This product is labeled in accordance with European Directives 2012/19/UE concerning Waste Electrical and Electronic Equipment (WEEE) and 2006/66/EC concerning Batteries and Accumulators. Those provisions are requiring producers and manufacturers to become liable for take-back, treatment and recycling upon end of life of equipment and batteries.



The associated symbol means that WEEE and waste batteries must not be thrown away but collected separately and recycled.

Ingenico ensures that efficient collection and recycling schemes are set-up for WEEE and batteries according to the local regulation of your country. Please contact your retailers for more detailed information about the compliance solution in place for disposing of your old product and used batteries.

Packaging waste must also be collected separately to assure a proper disposal and recycling.

Please note that proper recycling of the electrical and electronic equipment and waste batteries will ensure safety of human health and environment.

7_Troubleshooting

The docking station does not turn on

- Check that the external power supply is correctly plugged
- Get technical support

The Ethernet connection does not work

- Check that the Leds on the Ethernet connector are switch ON
- Get technical support

8_Marking



The CE marking indicates terminal complies with harmonized standards and requirements of European Directives



This marking indicates that the product operates with an alternating current (AC) source (mains). It is completed by afferent values (voltage, frequency and max current).



This marking indicates that your terminal is suitable for direct current (DC) only. It is completed by afferent values (voltage, and max current).



This marking indicates power supply meets the energy efficiency level V requirements.



Marking for Class VI product. Such product does not require a safety connection to electrical earth.



For Indoor use only.



This marking indicates power supply meets limited power source safety requirements.



Power on marking placed on the docking station close to a LED to indicate if the device is switched on.



Bluetooth marking placed on the docking station close to a LED to indicate if the device is connected in Bluetooth.

NOTES



"This Document is Copyright © 2019 by INGENICO Group. INGENICO retains full copyright ownership, rights and protection in all material contained in this document. The recipient can receive this document on the condition that he will keep the document confidential and will not use its contents in any form or by any means, except as agreed beforehand, without the prior written permission of INGENICO. Moreover, nobody is authorized to place this document at the disposal of any third party without the prior written permission of INGENICO. If such permission is granted, it will be subject to the condition that the recipient ensures that any other recipient of this document, or information contained therein, is held responsible to INGENICO for the confidentiality of that information.

Care has been taken to ensure that the content of this document is as accurate as possible. INGENICO however declines any responsibility for inaccurate, incomplete or outdated information. The contents of this document may change from time to time without prior notice, and do not create, specify, modify or replace any new or prior contractual obligations agreed upon in writing between INGENICO and the user. INGENICO is not responsible for any use of this device, which would be non consistent with the present document.

All trademarks used in this document remain the property of their rightful owners."

Your contact



296243646AC

www.ingenico.com

28-32, boulevard de Grenelle, 75015 Paris - France / (T) +33 (0)1 58 01 80 00 / (F) +33 (0)1 58 01 91 35
Ingenico - SA au capital de 47 656 332 / 317 218 758 RCS Nanterre

● SEAMLESS PAYMENT

AXIUM DOCK



28

Copyright© 2019 Ingenico
All rights reserved

900035196 R11 000 04/0319