



# Move 5000

## User Guide



**Optional**

[www.ingenico.com](http://www.ingenico.com)

28-32, boulevard de Grenelle, 75015 Paris - France / (T) +33 (0)1 58 01 80 00 / (F) +33 (0)1 58 01 91 35  
Ingenico - SA au capital de 47 656 332 / 317 218 758 RCS Nanterre

● SEAMLESS PAYMENT

# Contents

|                                               |           |
|-----------------------------------------------|-----------|
| <b>1_Introduction</b>                         | <b>4</b>  |
| <b>2_Presentation</b>                         | <b>5</b>  |
| <b>2_1</b> Content of the box                 | <b>5</b>  |
| <b>2_2</b> Overview on the MOVE/5000          | <b>6</b>  |
| <b>2_3</b> Keyboard details and functionality | <b>8</b>  |
| <b>2_4</b> Touch panel                        | <b>9</b>  |
| <b>3_Use of the terminal</b>                  | <b>10</b> |
| <b>3_1</b> Switching off the terminal         | <b>10</b> |
| <b>3_2</b> Reading card                       | <b>10</b> |
| <b>3_3</b> Scan Engine (Optional)             | <b>12</b> |
| <b>4_Installation</b>                         | <b>13</b> |
| <b>4_1</b> Recommendations                    | <b>13</b> |
| <b>4_2</b> Terminal connections               | <b>14</b> |
| <b>4_2_1</b> uUSB                             | <b>14</b> |
| <b>4_2_2</b> DC Jack                          | <b>14</b> |
| <b>4_2_3</b> MicroSD memory Card              | <b>15</b> |
| <b>4_2_4</b> Audio Jack (optional)            | <b>15</b> |
| <b>4_3</b> Opening trap door                  | <b>16</b> |
| <b>4_4</b> SAMS & SIMS                        | <b>17</b> |

|            |                                             |           |
|------------|---------------------------------------------|-----------|
| <b>4_5</b> | <b>Battery</b>                              | <b>18</b> |
| 4_5_1      | Main characteristics                        | 18        |
| 4_5_2      | Installing the battery                      | 18        |
| 4_5_3      | Charging the battery                        | 20        |
| 4_5_4      | Changing the battery                        | 21        |
| <b>4_6</b> | <b>Paper roll</b>                           | <b>22</b> |
| 4_6_1      | Main characteristics of INGENICO paper roll | 22        |
| 4_6_2      | Installing paper roll                       | 23        |
| <b>5</b>   | <b>Recommendations</b>                      | <b>24</b> |
| 5_1        | Safety                                      | 24        |
| 5_2        | Security of your terminal                   | 25        |
| 5_3        | Fixed installation                          | 26        |
| <b>6</b>   | <b>Standards</b>                            | <b>28</b> |
| 6_1        | Environment (WEEE, Batteries and Packaging) | 28        |
| 6_2        | FCC/IC Compliance                           | 29        |
| 6_3        | MIC Compliance                              | 33        |
| <b>7</b>   | <b>Troubleshooting</b>                      | <b>34</b> |

# 1\_Introduction

We hope that you will be fully satisfied with your new terminal MOVE/5000. This terminal is available in different models. Please select by yourself in this documentation items related to your model.

Read this guide to understand and make the best use of your terminal. It presents you the necessary information about use, installation, maintenance, safety and security recommendations.



---

## WARRANTY / SECURITY

Use only the power supply included with the product to ensure best performance and safety. Maintenance should only be provided by Ingenico authorized technician. Failure to comply with these instructions will void the manufacturer's responsibility.

---



---

This symbol indicates an important Warning.

---



---

This symbol indicates a piece of advice.

---

## 2\_Presentation

### 2\_1 Content of the box

 
- **MOVE/5000 terminal unit equipped with a paper roll**




- **A battery pack disconnected**



- **User guide**



- **Power adapter**

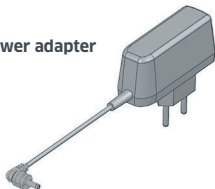

#### **WARNING**

The power supply unit provided with your equipment is specially designed for Ingenico terminals. Do not use any other power supply. The use of a power supply with apparently similar voltage/current characteristics may damage your terminal.

● SEAMLESS PAYMENT




## ADVICE

Keep the packaging. It must be re-used whenever the terminal is shipped.

## 2.2 Overview of the MOVE/5000



### > Terminal unit

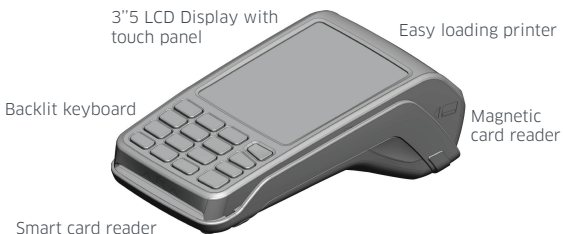



### Compartment where are located:

- the battery pack
- the modules SAM1/SAM2/SIM1/SIM2
- the 2nd Smart card reader (optional)



|                                            |                                                                    |
|--------------------------------------------|--------------------------------------------------------------------|
| Weight<br>(without paper roll nor battery) | 310g                                                               |
| Dimensions (L x w x h)                     | 169x78x57 mm                                                       |
| Electrical mains network                   | 100-240VAC / 50-60 Hz - Class II equipment                         |
| Connections on terminal                    | Micro USB AB serial link<br>Power connector<br>Contacts for Cradle |

## 2.3 Keyboard details and functionality



Some keys can have other functions according to the applications that are in the terminal.



The functions key accesses the different application menus

The red key cancels the procedure in progress

The yellow key cancels the last character

The green key validates input selections and information. It is also used to switch on the terminal

Feed paper a few centimeters if pressed for a long time (more than 2 seconds)

● SEAMLESS PAYMENT

## 2\_4 Touch panel


Move/5000 features touch screen display, allowing user interaction via finger or a stylus. Note that there are 2 different stylus pens depending on the touch screen type, one for Move/5000 with resistive touch screen and one for Move/5000 with capacitive touch screen as shown below :



**Resistive stylus**



**Capacitive stylus**

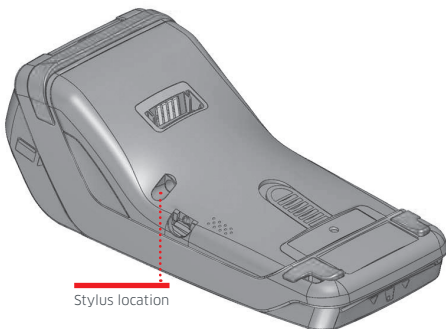

Retractable stylus is located at the back cover as shown above :



● SEAMLESS PAYMENT

## 3\_Use of the terminal



### ADVICE

Before to use the terminal, always check if the roll of paper is present.

### 3\_1 Switching off the terminal

If the battery is empty and the terminal in use is removed from its base, the terminal automatically shuts off.

It may also be switch by pressing simultaneously  and  (yellow key) for one second.

In order to restart the terminal, press  on the keyboard.

### 3\_2 Reading card

#### Magnetic stripe card

The card can be read either from bottom to top or from top to bottom, with the stripe facing the terminal.

Use a regular movement in order to ensure a reliable card reading.



## Smart card

- **Card reader:** insert the card horizontally with the chip facing upwards and leave in position throughout the transaction.



- **2nd card reader (Optional):** is located under terminal trapdoor (on back of the terminal). Insert the card up side down chip facing the terminal.



## Contactless (optional)

- Bring the card firmly up to the active zone. Keep the card close to the reader during the transaction
- The 4 virtual LEDs are displayed during the transaction.

The terminal behavior for the cardholder may depend on:

- The terminal environment
- Local usage (language...)



### 3.3 Scan Engine (Optional)

An optional Camera Autofocus with LED or an optional Barcode module can be fitted on back of Move/5000 terminal (dedicated reference).

About camera feature, 11.16.7B SDK minimum is required to have the benefit of Honeywell® Library.



Different formats barcode can be decoded, exhaustive list is given below :

- UPC
- EAN
- CODES 11,39, 93 & 128
- Interleaved 2 of 5
- CODABAR & CODABLOCK
- GS1\_DATABAR (RSS) & DATABAR\_EXPANDED
- QR\_CODE
- DATA\_MATRIX
- AZTEC
- PDF417 & Micro PDF 417
- MAXICODE
- POSTAL CODES

If other types of barcode formats have to be decoded, please share your request with your Region Coordination Manager to check the feasibility.

## 4\_Installation

### 4\_1 Recommendations

#### Location of the Move5000

Place the base on flat surface near an electric socket and according to the base to the telephone or a Ethernet socket. The terminal should be placed far from any very hot zones, protected from vibrations, dust, damp and electromagnetic radiation (computer screen, anti-theft barrier etc.).

#### Operating conditions

|                       |                    |
|-----------------------|--------------------|
| Ambient temperature   | from +0°C to +50°C |
| Max relative humidity | 85% at +40°C       |

#### Battery charging conditions

|                     |                    |
|---------------------|--------------------|
| Ambient temperature | from +0°C to +40°C |
|---------------------|--------------------|


#### Storage conditions

|                       |                     |
|-----------------------|---------------------|
| Ambient temperature   | from -20°C to +55°C |
| Max relative humidity | 85% at +55°C        |

## 4\_2 Terminal connections

### 4\_2\_1 uUSB

- There is an USB connector (microAB) on the left side of the Move/5000 Wireless terminal (see below picture). This connector manages Host and Slave connexions.
- The terminal supports USB Keys with FAT16 or FAT32
- The USB Key has to be used with an USB adapter (refers to accessories section)

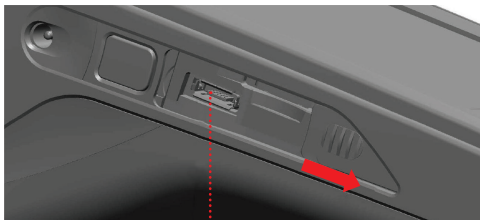

#### **USB micro AB**

Connector used for USB Key, etc...

***\*MicroAB connector durability: up to 10 000 mating cycles***

### 4\_2\_2 DC Jack




#### **Power Supply Jack**

Connector used to plug DC power supply 5V delivered by Ingenico

● SEAMLESS PAYMENT

### 4\_2\_3 MicroSD memory Card

- Insert the MicroSD Memory Card into the connector slot as shown on the figure.
- MicroSD connector is located on terminal side.
- The terminal supports MicroSD up to 32GB

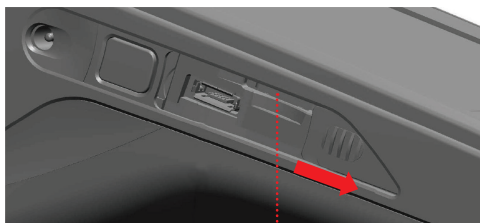

**microSD connector**

### 4\_2\_4 Audio Jack (optional)



**Audio Jack 3.5**

● SEAMLESS PAYMENT

## 4\_3 Opening trap door



### CAUTION

Switch off the terminal before opening the trapdoor.


- Turn the terminal and unclip the trapdoor by pushing on the clip with as shown with the arrows on the picture



## 4\_4 SAMs & SIMs

The connector modules security SAM/SIM are located inside the terminal, in a closed compartment.

- SAMs and SIMs are identified by the engraved marks on the lower housing
- When introducing a SAM/SIM in its slot, be sure to put the cut corner as indicated on the engraved marks

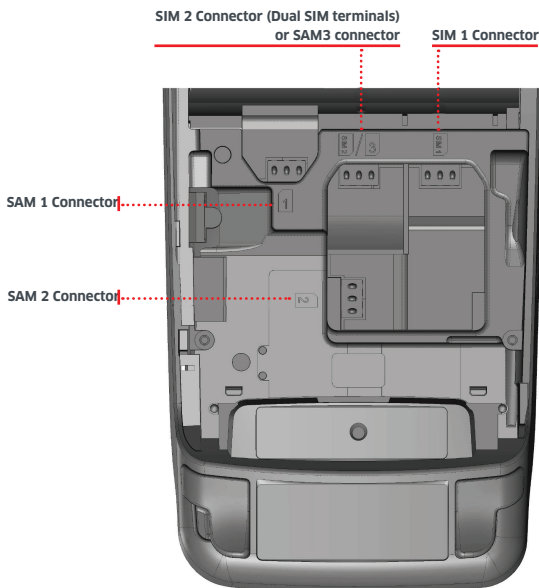

## 4\_5 Battery

### 4\_5\_1 Main characteristics

| Characteristics               | Li-ion 2900 mAh                                                                                                                                                                                                                                                                                                                                   |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Charge<br>(power supply-1.5A) | 50% capacity in 1,5 h; full capacity in 4 hours                                                                                                                                                                                                                                                                                                   |
| Battery life                  | <ul style="list-style-type: none"><li>● 450 transactions in GPRS with fully charged battery, printing and backlit activated</li><li>● Can remain powered ON up to 150 hours with connected GPRS link and terminal in sleeping state starting with fully charged battery and without energy consumption related to backlit or radio link</li></ul> |

*\* The battery capacity depends on the model of terminal and its use*

### 4\_5\_2 Installing the battery



#### WARNING

Check that the terminal is not connected to the main electric network.

- Turn your terminal and unclip the battery trapdoor by pushing on the button as shown on the picture
- Disengage the trapdoor
- Take the battery pack included in the box
- Locate the battery pack connector beside the battery compartment
- Plug the battery pack connector **according to the connector locating system and** (as shown on picture). Verify that it locks.
- Place the battery pack in its compartment.
- Close the battery compartment trapdoor.

● SEAMLESS PAYMENT



● SEAMLESS PAYMENT

### 4\_5\_3 Charging the battery

➤ When does the battery need to be charged?

- On initial start up, charge the battery under the environmental conditions stated above
- When used daily, the terminal recharges its batteries each time it is placed on its base . Charging is automatic
- When used with a terminal power supply: connect the power supply to Move5000 power connector.

➤ How does the battery need to be charged?

- The environment in which the charge takes place influences battery lifetime and autonomy (number of transactions)

The optimal conditions are as follows:

/ Charging away from any external heat source (radiator, sun, enclosed area...)

/ The optimal temperature is between +15°C and +25°C

➤ How can the battery be charged?

Using the base

- Place the terminal on its base
- **Check if the battery symbol is flashing or moving (=battery charging).**

Using the terminal power supply (the terminal is out of its base)

- Connect the terminal power supply unit to use the jack connector located on the left side of the terminal.
- Connect the power supply unit to the power supply mains network
- **Check to see if the battery symbol is flashing or moving(=battery charging)**

## 4.5.4 Changing the battery




It is imperative to use a battery authorized by Ingenico. There is danger of explosion if battery used is not approved by Ingenico.

- Remove the terminal from its base
- Turn it off by pressing simultaneously  and  (yellow key) for about one second
- Remove the battery trapdoor (see section 4.5.2 "installing battery")
- Carefully disconnect battery, following the instructions below, For standard battery :

**a** Unlock the connector by pressing the locking mechanism as indicated by F1 arrow while pulling this connector (F2 arrow). Release traction on it as soon as the connector comes unclipped


**b** Finish extracting connector by tilting it slightly (F3 arrow) to bring it away from the terminal housing

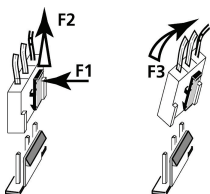

- Following the instructions below for Hardpack battery :

**a** Unlock the connector by moving up the battery pack latch (F1)

**b** Finish extracting battery pack by raising slightly the connector to bring battery pack away from the terminal housing. (F2)

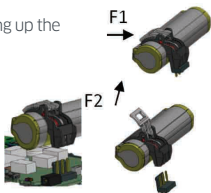

- Connect and install the new battery by following the instructions in section 4.5.2 "Installing battery"
- Close the battery trapdoor and charge the new battery. See section «Charging the Battery»
- In order to preserve the environnement, dispose used battery in compliance with current country recycling legislation.

● SEAMLESS PAYMENT

## 4\_6 Paper roll

### 4\_6\_1 Mains characteristics of INGENICO paper roll

| R40 paper roll Characteristics | Precisions      |
|--------------------------------|-----------------|
| Colour                         | White           |
| Width                          | 58 mm           |
| Diameter                       | 40 mm           |
| Length                         | About 18 metres |

- The thermal paper can be deteriorated by poor storage conditions, so we recommend you to avoid:
  - / storage in hot wet places (near air-conditioner, humidity higher than 85%)
  - / exposure to sunlight or ultraviolet for long periods
  - / contact with organic solvents (solvent type adhesive)
  - / direct contact with materials containing plasticizers (PVC transparent folders or envelopes)
  - / direct contact with «diaz» papers
  - / direct contact with water
  - / Rubbing or pressing the paper too strongly



#### WARNING

For best product performance, **only use heat sensitized paper approved by Ingenico.**




#### WARNING

Switch off the terminal prior to installing a paper roll.  
Use only paper approved by Ingenico.  
The use of non approved paper is likely to damage the printer of your terminal.

● SEAMLESS PAYMENT

## 4\_6\_2 Installing paper roll

- Open the paper compartment by lifting the catch located at the rear of the terminal and pull the cover to the rear of the terminal.

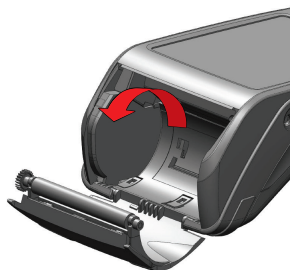

- Insert the paper roll in the compartment following the directions shown on the below picture
- Pull the paper up to the top of the terminal
- Maintain the paper and close the lid
- Press simultaneously on both upper corners of the paper flap, as shown by arrows on picture, until it clips into position



● SEAMLESS PAYMENT



## ADVICE

If you insert a new R40 paper roll, tear off the first length (one complete turn to avoid printing on adhesive tape footprint).

# 5\_Recommendations

## 5\_1 Safety

### Powering down the Move/5000 :

Disconnect the Move/5000 power supply block adapter from the electrical mains network.

### Lithium cell

The Move/5000 is fitted with an internal lithium cell which can only be accessed by a qualified technician.

### Battery

Move5000 is fitted with battery specially designed for this terminal.

- Only use the appropriate chargers and batteries listed in the Ingenico's catalogue.
- Do not short-circuit the battery.
- Do not attempt to open the battery container.
- Used batteries must be disposed of at the appropriate sites.



## WARNING

There is a risk of explosion if the battery is incorrectly replaced or is placed in a fire.

### Electrical power outlet

The electrical outlet must meet the following criteria :

- Must be installed **near the equipment and easily accessible**;
- Must meet standards and regulations in the country where used;
- For type A plug, the protection of the installation must be set to 20 A

### SAR exposure

- Maximum SAR value : 1.880 W/kg (LTE FDD I 2100 MHz)
- Maximum simultaneous SAR value : 1.998 W/kg

The power supply label contains seven symbols :



**Double insulation symbol**



**DC current output**



**AC current input**



**DC Power jack polarity**



**In door use only**



**International Efficiency Marking Protocol (Energy Star Level 5)**



**International Efficiency Marking Protocol (Energy Star Level 6)**

### **SAM1/SAM2/SIM1/(SAM3/SIM2) readers compartment**

The trapdoor for battery, SAM1/SAM2/SIM1/(SAM3/SIM2), readers located underneath the terminal, must be in place during the normal operation of the terminal. See sections «Removal of SAM1/SAM2/SIM, modules» as well as «Connecting the battery».

### **On airplanes**

Your handset must be switched off by removing the battery pack. Remove the battery from the terminal when on an airplane. Non-compliance with these safety rules may result in legal action and/or a ban on later access to cellular network services.

### **Explosion areas**

Certain regulations restrict the use of radio equipment in chemical plants, fuel depots and any site where blasting is carried out. You are urged to comply with these regulations. The terminal shall be protected by a specially fitted and certified cover enabling use in proximity to a fuel pump.

### Electronic health appliances

Your handset is a radio transmitter which may interfere with health appliances, such as hearing aids, pacemaker, hospital equipment, etc.

Your doctor or the equipment manufacturer will be able to provide you with appropriate advice.

### External connection

All external circuits connected to the Move/5000 must be SELV (Safety Extra Low Voltage) and LPS (limited power source) within the meaning of section 2.2 and 2.5 of the standard IEC60950-1:2005+/A1:2010 and EN60950-1:2006+/A11:2009+/A1:2010+/A12:2011

### Cleaning

To clean the terminal, use a soft cloth slightly moistened with water. Do not clean the electrical connections; do not use solvents, detergents or abrasive products.

## 5.2 Security of your terminal

Your device fulfils current applicable PCI PTS security requirements. Upon receipt of your terminal you should check for signs of tampering of the equipment. It is strongly advised that these checks are performed regularly after receipt. You should check, for example: that the keypad is firmly in place; that there is no evidence of unusual wires that have been connected to any ports on your terminal or associated equipment, the chip card reader or any other part of your terminal. Such checks would provide warning of any unauthorised modifications to your terminal, and other suspicious behaviour of individuals that have access to your terminal. Your terminal detects any "tampered state". In this state the terminal will repeatedly flash the message "Alert Irruption!" and further use of the terminal will not be possible. If you observe the "Alert Irruption!" message, you should contact the terminal helpdesk immediately.

You are strongly advised to ensure that privileged access to your terminal is only granted to staff that have been independently verified as being trustworthy.

The terminal must never be put in or left at a location where it could be stolen or replaced by another device.