

Z700 Desktop Self-service Ordering Equipment

User Manual (FCC Certified)

Copyright © 2026 TableTop Media, LLC. All rights reserved. No part of this manual may be reproduced, transmitted, or stored in any form without the prior written permission of the manufacturer.

Table of Contents

1. Safety & Regulatory Compliance
2. Product Overview
3. Technical Specifications
4. Getting Started
5. Basic Operations
6. Maintenance & Troubleshooting
7. Warranty & Support
8. Appendices

1. Safety & Regulatory Compliance

1.1 General Safety Warnings

- Do not expose the device to water, rain, or high humidity. The device is not waterproof unless otherwise stated.
- Use only the original battery and accessories provided by the manufacturer. Using unapproved accessories may cause fire, explosion, or damage to the device.
- Keep the device away from high temperatures, open flames, and direct sunlight for extended periods.
- Keep small parts (such as accessories) away from children under 3 years old to prevent choking hazards.
- Do not disassemble, puncture, or crush the device or its battery. This may cause leakage, overheating, or explosion.

1.2 FCC Compliance Statements (Mandatory)

FCC ID: XOX-Z700

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

1.3 Interference Correction Guidelines

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

1.4 Unauthorized Modification Warning

Pursuant to Part 15.21 of the FCC Rules, you are cautioned that changes or modifications not expressly approved by the manufacturer could void your authority to operate the device.

1.5 RF Radiation Exposure Safety

FCC regulations restrict the operation of this device to indoor use only.

The operation of this device is prohibited on oil platforms, cars, trains, boats, and aircraft, except that operation of this device is permitted in large aircraft while flying above 10,000 feet.

Operation of transmitters in the 5.925-7.125 GHz band is prohibited for control of or communications with unmanned aircraft systems.

The antenna(s) used for this transmitter must be installed such that a minimum separation distance of 20 cm is maintained between the radiator (antenna) and all persons at all times and must not be co-located or operating in conjunction with any other antenna or transmitter.

2. Product Overview

2.1 Product Description

This is an Android-based [Product Type, e.g., smartphone/tablet/set-top box] designed to provide users with a variety of functions, including wireless communication, entertainment, and productivity. It supports [key features, e.g., Wi-Fi, Bluetooth, touch screen, camera].

2.2 Package Contents

- 1 × Ziosk Mini (Model: Z700)
- 1 × Battery
- 1 × User Manual (this document)

2.3 Device Layout

Refer to the diagram below for the location of ports, and other components:

[Note: Insert device layout image here if needed]

1. USB-C Port (Charging & Data Transfer)
2. Camera
3. Speaker
4. Microphone

3. Technical Specifications

Category	Specifications
Product Model	Z700
Operating System	Android 15
CPU	MT8371 2 × A78 2.2GHz+6 × A55 2.0GHz
Memory (RAM)	8GB

Storage	128GB
Display	7" 800x1280
Battery	3.7V,20800mAh
Wireless Connectivity	Wi-Fi: [IEEE 802.11 a/b/g/n/ac/ax, 2.4/5/6Ghz], Bluetooth: [Ver 5.3];NFC MiFare EMVCo
Camera	Front Camera: [8MP AF]
Input Voltage	5V/2A
Operating Temperature	-10°C ~ +45°C

4. Getting Started

4.1 Charging the Device

There are two startup methods:

1. In the absence of a battery, the device can be powered by connecting it to a Type-C data cable.
2. Plug in the battery to power the device.

5. Basic Operations

5.1 Android System Navigation


- Home Screen: Press the Home Button to return to the home screen from any app.
- Recent Apps: Swipe up from the bottom of the screen and hold to view recently used apps. Swipe left/right to close an app.
- Notification Center: Swipe down from the top of the screen to view notifications and quick settings (e.g., Wi-Fi, Bluetooth, brightness).

5.2 Connecting to Wi-Fi/Bluetooth

5.2.1 Wi-Fi Connection

1. Swipe down from the top of the screen to open the quick settings panel.

2. Tap the Wi-Fi icon to turn it on (the icon will turn blue when enabled).
3. Select the desired Wi-Fi network from the list of available networks.
4. Enter the network password (if required) and tap "Connect".

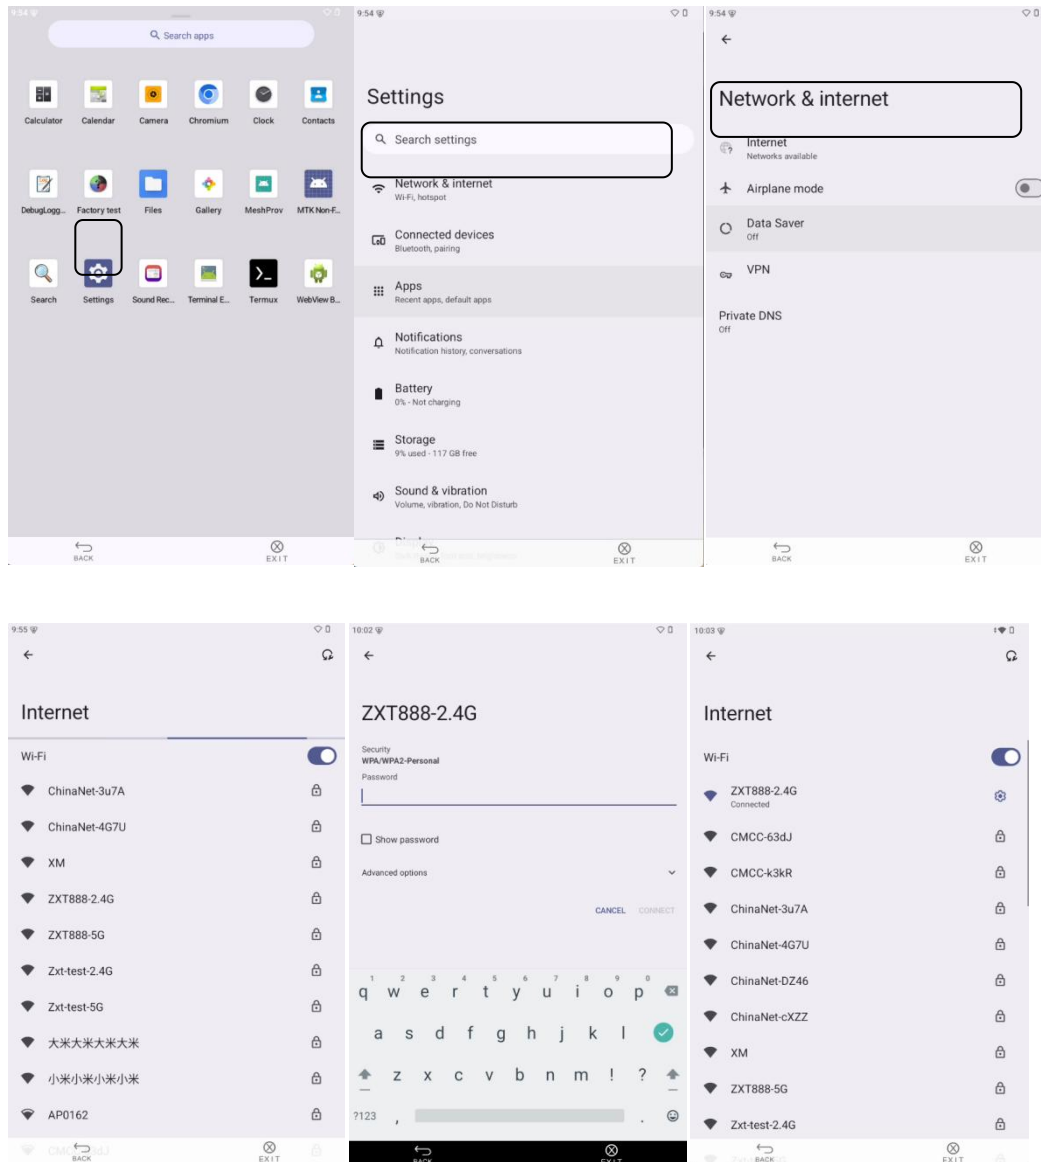


5.2.2 Bluetooth Connection

1. Swipe down from the top of the screen to open the quick settings panel.
2. Tap the Bluetooth icon to turn it on (the icon will turn blue when enabled).
3. Put your Bluetooth device (e.g., headphones, speaker) into pairing mode.

4. The device will search for nearby Bluetooth devices. Select your device from the list to pair.
5. Follow the on-screen prompts to complete the pairing process.

5.3 Using Apps

- Opening Apps: Tap the app icon on the home screen or app drawer to open it.
- Downloading Apps: Open the Google Play Store, search for the desired app, and tap "Install" to download and install it.
- Uninstalling Apps: Press and hold the app icon on the home screen, then select "Uninstall" from the pop-up menu. Confirm to uninstall the app.
- After installing the Ziosk-specific software, customers can use this device to complete ordering, payment and other functions.

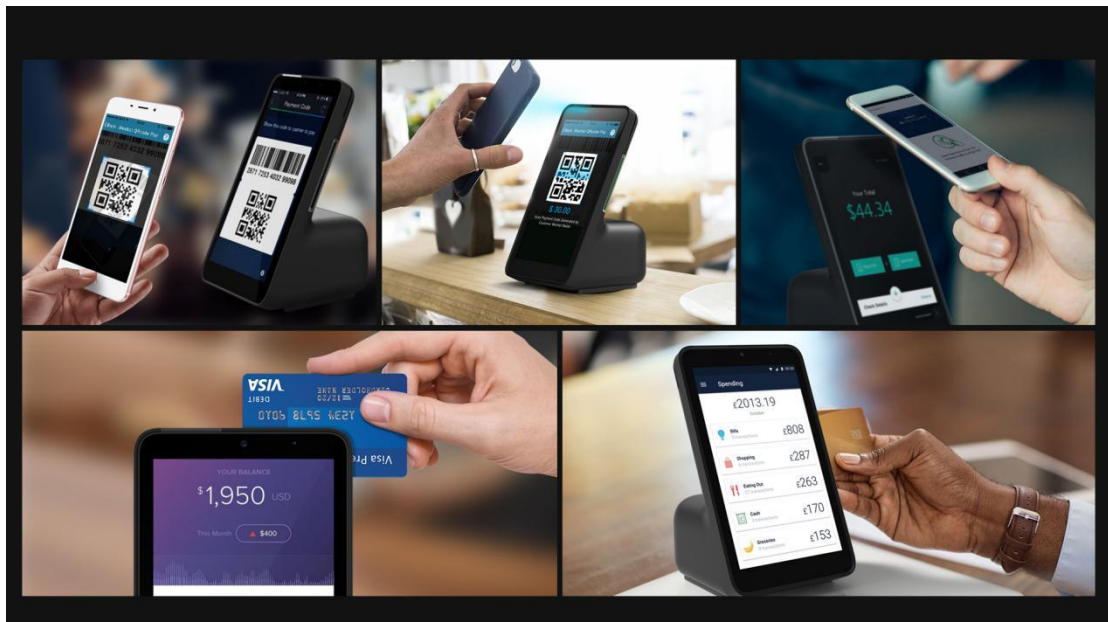

6. Maintenance & Troubleshooting

6.1 Device Maintenance

- Cleaning: Use a soft, dry cloth to wipe the device screen and body. Do not use harsh chemicals (e.g., alcohol, bleach) or abrasive materials, as they may damage the device.
- Firmware Update: Go to "Settings" > "System" > "Software Update" to check for and install the latest firmware updates. Ensure the device is fully charged or connected to a power source during the update.
- Battery Care: If the battery power runs out, please replace it with a new one in

time. Do not expose the battery to extreme temperatures, as this may reduce battery life.

6.2 Common Troubleshooting

Problem	Solution
Device does not power on	1. Make sure the battery is fully charged. 2. The battery has been properly plugged into the device.
Wi-Fi/Bluetooth not working	1. Turn Wi-Fi/Bluetooth off and on again. 2. Restart the device. 3. Forget the network/device and re-pair/connect. 4. Check if the router/Bluetooth device is working properly.
Battery drains quickly	1. Close unused apps running in the background. 2. Reduce screen brightness. 3. Turn off Wi-Fi/Bluetooth when not in use. 4. Check for firmware updates.
App crashes or freezes	1. Close the app and reopen it. 2. Clear the app cache (Settings > Apps > [App Name] > Storage > Clear Cache). 3. Uninstall and reinstall the app. 4. Restart the device.

7. Warranty & Support

7.1 Warranty Terms

The manufacturer provides a [Warranty Period, e.g., 1-year] limited warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. The warranty does not cover: (1) Damage caused by improper use, accidents, or unauthorized modifications; (2) Wear and tear of accessories; (3) Damage caused by natural disasters (e.g., fire, flood).

7.2 Support Contact Information

For technical support, product inquiries, or warranty claims, please contact:

- Manufacturer Name: TableTop Media, LLC d/b/a Ziosk

- U.S. Responsible Party: Ebrahim Bardeh
- 6201 W Plano Parkway Suite. 450, Plano, TEXAS 75093
- Email: ebrahim.bardeh@ziosk.com
- +1 (312) 383-8149
- Website: <https://www.ziosk.com>

8. Appendices

8.1 Glossary

- FCC: Federal Communications Commission, the U.S. government agency responsible for regulating radio frequency devices.
- RF: Radio Frequency, electromagnetic waves used for wireless communication.
- FCC ID: A unique identifier assigned to devices that comply with FCC regulations.
- Class B Digital Device: A digital device that is intended for use in a residential environment and has lower RF emission limits.

8.2 FCC Contact Information

For more information about FCC regulations, visit the FCC website at <https://www.fcc.gov/> or contact the FCC Consumer Center at 1-888-CALL-FCC (1-888-225-5322).

Note: All [bracketed content] must be replaced with your actual product information, FCC ID, and parameters before submitting for FCC certification. Ensure all wireless specifications match the test report provided to the FCC.