

 
FRONT

**R/C TYRANNOSAURUS REX**

OPERATOR'S MANUAL

AGES
4+**CONTENTS**

1 Remote 1 Tyrannosaurus Rex

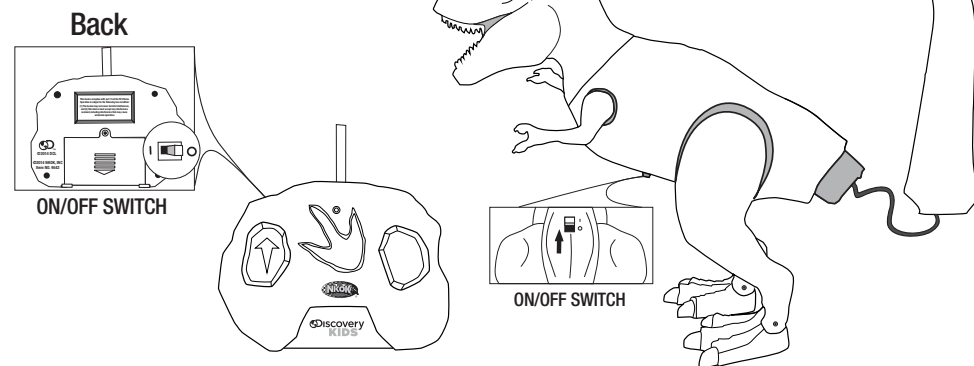**HOW TO USE**

STEP 1: Remove both the remote and T-Rex from packaging and switch to the ON position. The light on the remote will turn red indicating the device is ON. The eyes will only light up once in motion.

STEP 2: Press the LEFT button on the remote to make the T-Rex move forward.

STEP 3: Press the RIGHT button on the remote to make the T-Rex roar.

The button located on the tale will only control light, sounds, and motions of the head once in the ON position.

Effective signal range: Approximately 40 feet or 12 meters.

IMPORTANT

 
Turn to the OFF position when not in use.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) The device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

TAIL ASSEMBLY

Push the tail on until it "clicks."

To assemble tail refer to the illustration to the right.

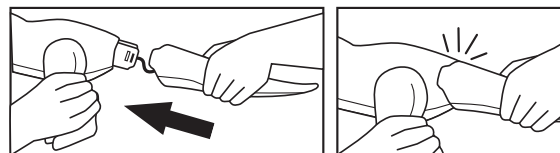

WARNING:
CHOKING HAZARD – Small parts.
Not for children under 3 years.

OFFICIAL LICENSED PRODUCT

Customer Toll Free Number (USA): 888-656-5869
Email Address: CustomerService@nkok.com



© 2014 NKOK, Inc.
Irwindale, CA 91706, USA
Check us out at: www.nkok.com



 
©2014 Discovery Communications, LLC.
Discovery Kids and the Discovery Kids logo are trademarks
of Discovery Communications, LLC, used under license.
All rights reserved. discoverykids.com

BACK

BATTERY INSTALLATION

Operates on 3 x "AA" / 1.5V LR6/R6
batteries Install as shown.

3 x "AA" / 1.5V LR6/R6 batteries included
for try me function only.

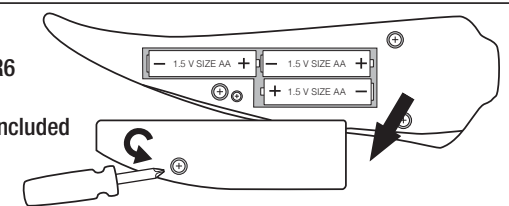

 
WARNING: DO NOT USE RECHARGEABLE BATTERIES
(i.e, Nickel Cadmium) We recommend the use of Alkaline
batteries. Remove the battery cover by removing the screw
and lifting up the cover. Install batteries to each separate
component as shown in the illustration to the top and to the
right.

Contents and color may vary slightly from these shown.

Conforms to ASTM F963 standard. Please retain packaging for
future reference. Accessories may vary without prior notice.

REMOTE BATTERY INSTALLATION:

Operates on 2 x "AA"
1.5V LR6/R6 batteries.
Install as shown.
Batteries not included.

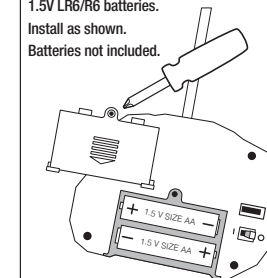**BATTERY SAFETY**

Read and follow operating instructions.

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (carbon-zinc), or rechargeable (Nickel-cadmium) batteries.
3. Only batteries of the same or equivalent type as recommended are to be used.
4. Batteries are to be inserted with the correct polarity.
5. Exhausted batteries are to be removed from the product.
6. The supply terminals are not to be short-circuited.
7. Non-rechargeable batteries are not to be recharged.
8. Rechargeable batteries are to be removed from the product before being charged.
9. Rechargeable batteries are only to be charged under adult supervision.
10. Dispose of batteries safely.
11. Do not dispose of this product in a fire. The batteries inside may explode or leak.
12. Batteries should be changed by adults only.

WARNING

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

****This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.**

#9545
Made in China

8.5"

5.5"