

DIME[®] 3

User Guide

DIME[®] 3

Scan to get started.
Balayez pour commencer.

Warranty information at: skullcandy.com/warranty
Renseignements sur la garantie à: skullcandy.com/warranty

Auto Power - On/Off

- *Auto On - Remove buds from Case
- *Auto Off - Place buds into Case

Power - On/Off

On/Off	Encendido/Apagado
Accessione/Spegnimento	Ligar/Desligar
Eiri/Aus	Aan/Uitzetting
Tændi/Stuk For Strøm	Virta Päälle/Pois
Ström Av/På	Ström Av/På
Стром Ав/Па	Включить/Выткнуть
Otomark Güç Açık	Открыть/Закрыть
开机/关机	電源 - On/Off
전원 켜기/끄기	Güc Kapalı
الاستاءة / قالة	电源 - Off

Manual Power - On

- *Off Mode
- Either bud

Manual Power - Off

- *On Mode
- Both earbuds

Power - Off

Off	Apagado
Spegnimento	Desligar
Aus	Uitzetting
Stuk For Strøm	Pois
På	På
Стром Ав/Па	Включить/Патание
Güc Kapalı	Открыть/Закрытие
关机	电源 - Off
전원 끄기	الاستاءة / قالة

Power - On

On/off	Encendido
Accessione	Ligar
Eiri/Aus	Aan-
Tændi	Virta Päälle
Ström Av	Ström Av
Стром Ав/Па	Включить
Otomark Güç Açık	Güc Açık
开机	電源 - On
전원 켜기	تشغيل

Power - Off

Off	Apagado
Spegnimento	Desligar
Aus	Uitzetting
Stuk For Strøm	Pois
På	På
Стром Ав/Па	Включить/Патание
Güc Kapalı	Открыть/Закрытие
关机	电源 - Off
전원 끄기	الاستاءة / قالة

Manual Pairing Mode
 "On Mode
 Either bud

Pairing Mode
 Mode Couplage
 Modo De Vinculaci3n
 Modalit3 Di Accoppiamento
 Modo Empareilhamento
 Koppelmodus
 Paarmodus
 Parandamisestvustand
 Lühipeeri Muudostuulista
 Sammenkoblingsmodus
 Parinningsilge
 Режим Сопаркени
 Egelseirime Mode
 配对模式
 ペアリングモード
 페어링 모드
 وضع الاقتران

Pair New Device
 Voice Prompt - "Ready to Pair"
 Available Device - "Dime 3"

Pair New Device
 Coughier Nouvel Appareil
 Coughier Nuovo Dispositivo
 Accoppiare Nuovo Dispositivo
 Empareilhar Novo Dispositivo
 Mit neuem Ger3t koppeln
 Nieuw Apparaat Pairen
 Pardan Ny Enhet
 Muudosta Uusi L3itsari
 Sammenkoble Ny Enhet
 Para Ny Enhet
 Сопаркени Новое Устройство
 Yeni Cihaz Ekle
 配对新设备
 新しいデバイスとペアリング
 새 기기와 짝 맞추기
 وضع الجهاز

LED Flashes
 Red/Blue

Play/Pause/Answer Call
 "While On
 Either bud

 
Play/Pause-Answer/End
 Lecture/Pause-R3pondre/Fin
 Reprodur/pausa-Responder/fin
 Riproduci/pausa-Risposta/fin
 Reprodur/c3colocar /Em/Pausa-
 Atender/desligar
 Wiedergabe/Pause/Annehmen/Auflegen
 Afspelen/pauzeren/
 Beantwoorden/Be3indigen
 Atspil/pause-Besvar/afslut
 Toisto/tauko-/vastaus/Kopetus
 Spill/pause-Svar/avslutt
 Spela Upp/pausa-Svara/l3gg P3
 Воспроизведение/пауза/
 Ответить/закончить
 Oynat/Duraklat
 播放/暂停-接听/结束
 再生 /一時停止-応答 / 終了
 재생 /일시 정지-전화 받기/마무리
 تشغيل / إيقاف مؤقت الإجابة / الإنهاء

Volume Up
 Either Earbud

Volume Up
 Volume +
 Subir Volumen
 Aumentar Volume
 Aumentar O Volume
 Lautstärke erh3hen
 Volume Omhoog
 Sikui Up For Lydystyken
 33inenvoimakkuuden Lis3ys
 Volum Opp
 33k Volumet
 Увеличение Громкости
 音量增大
 音量を上げる
 音量 높이기
 33st3rkt3tt

Volume Down
 Either Earbud

Volume Down
 Volume -
 Bajar Volumen
 Reduzire Volume
 Diminuir O Volume
 Lautstärke senken
 Volume Omhoog
 Sikui Ned For Lydystyken
 33inenvoimakkuuden V3hennys
 Volum Ned
 33nk Volumet
 Уменьшение Громкости
 音量减小
 音量を下げる
 音量 낮추기
 33v3rkt3tt

Stay-Aware Mode On/Off Either Earbud 	Activate Voice Assistant Left Earbud or Right Earbud 	EQ Switch *On Mode *Connected 	Re-Sync Earbuds Both Earbuds *While On *Bluetooth Disconnected 	Reset Paired Device List Both earbuds *While ON *Bluetooth Disconnected 
--	--	--	--	---

[illegible][illegible]