


Bluetooth Speaker Watch

MA-255 / HD-255

Location of Controls:

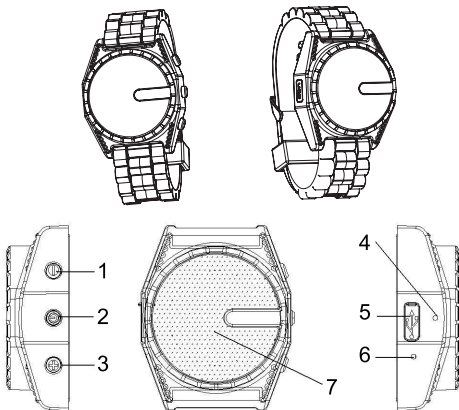

1. - **Button:**

Volume down; Skip Backward

2. **Button:**

Power On/Off; Play; Pause; Hook On/Off the incoming phone call

3. + **Button:**

Volume up; Skip Forward

4. **Built in Microphone**

5. **Micro USB Port:**

For charging only

6. **Indicators**

7. **Speaker**

Battery Recharge

The unit has a built in Li-polymer rechargeable battery, recharges it before use as follow:

1. Connect the unit to the computer or any USB charger by the supplied USB cable as:
 - Insert the small plug from the supplied USB cable to the Micro USB Port on the unit.
 - Insert the other plug to the USB Port on the Personal Computer or any USB Charger.
 - Charging will start automatically. During charging, the red indicator will light. When finished, it will not light.

Notes:

Your battery will last longer if you following these simple guidelines for charging and storing.

- A. For charging first time, charge it at least 10 hours.
- B. Recharge and store the unit within the temperature range of 5°C~35°C (40°F~95°F).
- C. Do not over charge (longer than 24 hours). Excessive charging or discharging may shorten the battery's life.
- D. Battery life naturally shortens slowly over time.
- E. During charging, you can play the music at the same time.
- F. The rechargeable battery incorporated in this product is not user replaceable.

Operating Instruction

In first time use or re-pairing to new BT device, pairing the unit to external BT device as below:

1. Press and hold  Button approximate 3 seconds until the Blue and Red Indicator is light and blinking.
2. Power on the external BT device and enter to searching mode. Start pairing as the on screen instructions on the external BT device. After paired, the Blue Indicator will stop blink and Red Indicator will not light.

3. When finished, press and hold the  Button approximate 2 seconds then release the button to shut off the unit.

Notes:

- When the external BT device searched the unit, our model number “CMA3575” will appear on the display of external BT device.
- Pairing code “0000” or “1234” may need to enter.

Normal operation after pairing:

1. Turn on the BT function of the external BT device.
2. Press and hold the  Button 1 second then release the button, the Blue Indicator will light and blinking.
3. Wait a few seconds until the unit paired to the external BT device automatically.
(Blue Indicator will stop blinking).
4. Plays the music in the connected BT device as usual.
5. During playback:
 - Press and hold the + or – Buttons to adjust volume level. (When the volume set to maximum or minimum, two short beeps will be heard).

- Press the  Button to pause; press again to resume normal playback.
 - Press the + or - Button to skip tracks.
6. If paired to Cell Phone:
- When a call is incoming during listening, press the  Button to hook off then speak to the built-in microphone to answer the phone. When finished, press the  Button to hook on then resume to music hearing.
7. When finished, press and hold the  Button approximate 2 seconds then release the button to shut off the unit.

Specifications

Power Source:

Built-in rechargeable Li-polymer battery;
Recharge by DC  5V through Micro USB Port

Bluetooth Version: Bluetooth 3.0+EDR

Operating Distance: 32 Feet

Impedance of Speaker: 8Ω; 1.5W

Audio power: 1 W

Accessories:

1x User's Manual

1x USB Connection Cable (For charge only)

**SPECIFICATIONS AND ACCESSORIES
ARE SUBJECT TO CHANGE
WITHOUT NOTICE**

FCC INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 Of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING:

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. Modifications not authorized by the manufacturer may void user's authority to operate this device.