

 
 


REMOTE USER GUIDE

WB-RC01

■ SPECS

Using time	15 hr
Battery size	AAA
Weight	116 g
*without battery	
Standby time	17 hr
Water-proof	IPX 7
*must in the waterproof case	

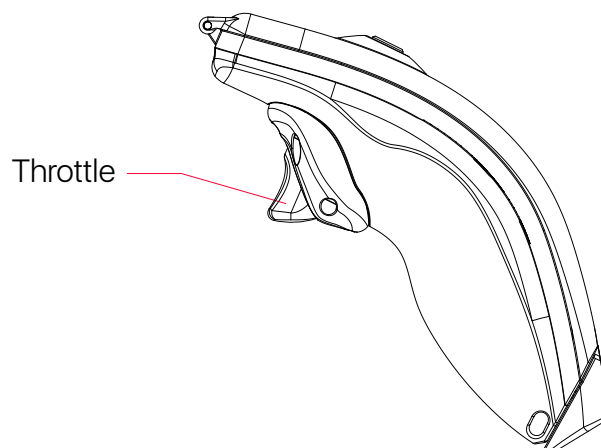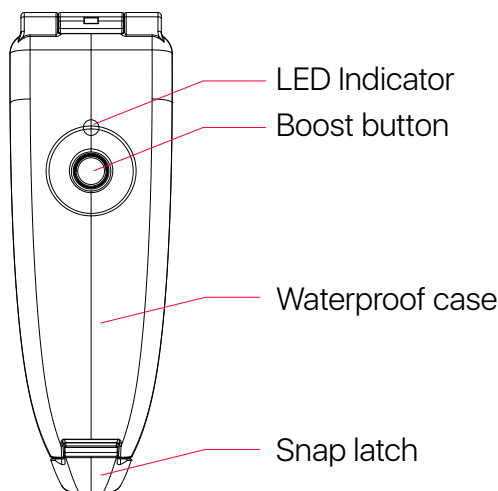

First time pairing.

 
1. Turn ON the Wheebo's power.
2. Press Boost button to wake up the remote.
3. When the remote's LED slow flashes is stop, it means they are paired

Battery level check


1. Press BOOST button to wake up the remote.
2. Press BOOST button twice to check battery voltage:
LED flashes once = battery low , flashes twice = battery half0,
flashes thrice = battery full

How to control the Wheebo ?


- Keep pressing the throttle to ride the Wheebo

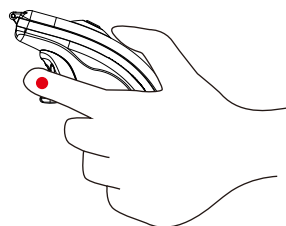

 
- Release the throttle to stop the Wheebo

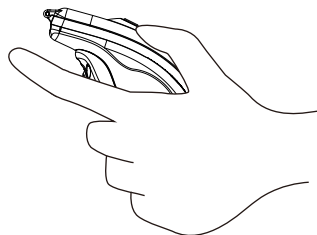

 - Keep pressing throttle then press and hold Boost button to make the speed faster

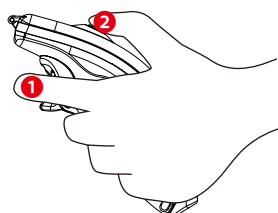

How to change battery ?

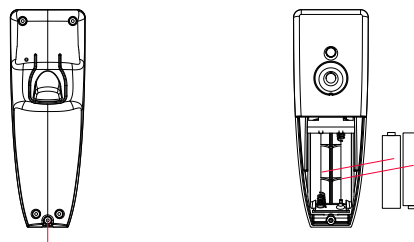 

Take out the screw Battery size:3AAA

Note :

After standby 10 minutes, the remote will change to sleep mode, press Boost button to wake it up.

WARNING

1. Once you fall down from the Wheebo, release the throttle instantly !
2. When waterproof case get damaged, stop to use the remote !

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on,

The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

"RF Exposure Warning!"

This device contains transmitters and receivers which emit Radio Frequency (RF) energy. The device is designed to comply with the limits for exposure to RF energy set by the Federal Communications Commission (FCC) of the United States, Industry Canada (IC) of Canada, and the regulating entities of other countries."