

Figure 3
Signal Port of the EUT



Figure 4
Inside Configuration of the EUT



Figure 5
Inside Configuration of the EUT



Figure 6
Inside Configuration of the EUT

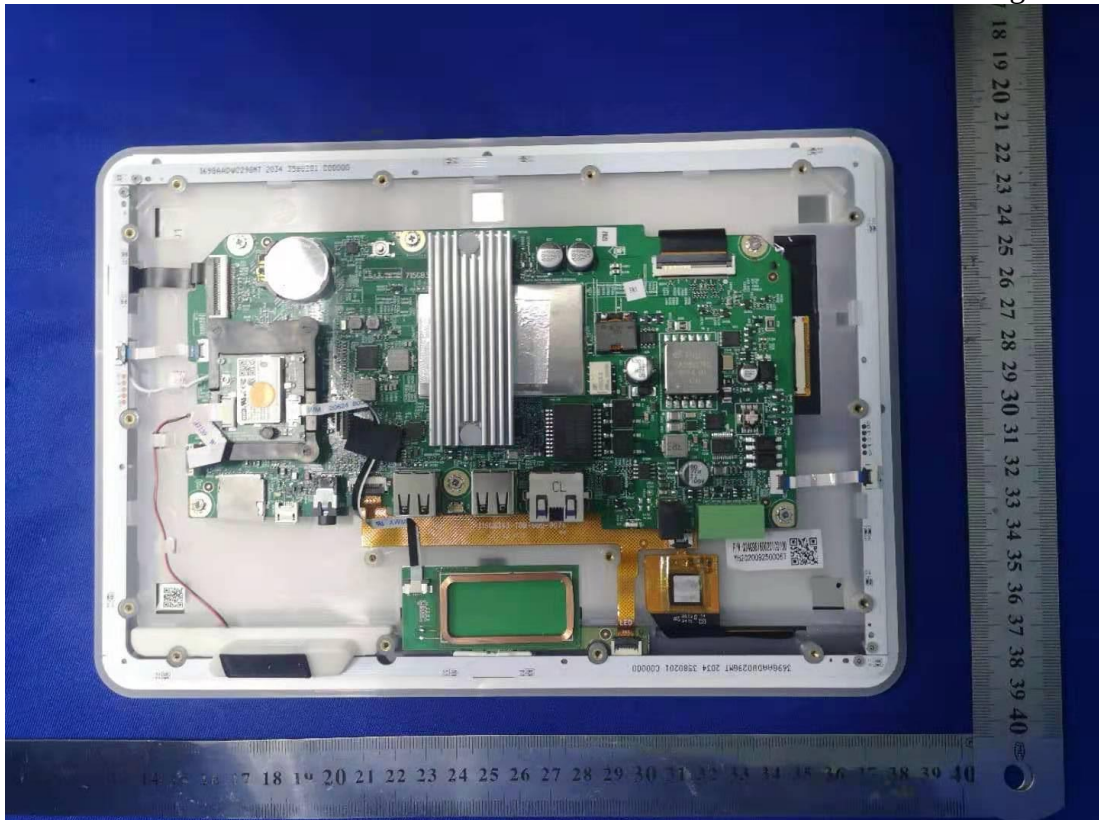


Figure 7
Inside Configuration of the EUT

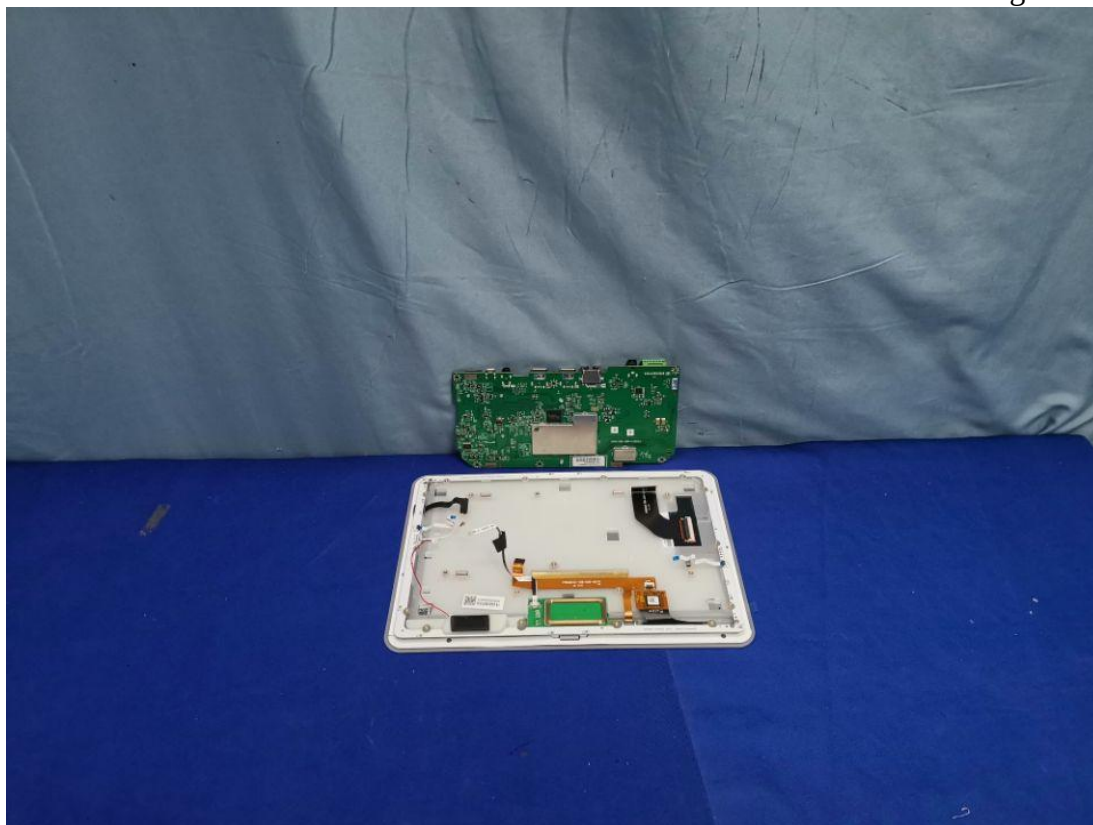


Figure 8
Inside Configuration of the EUT

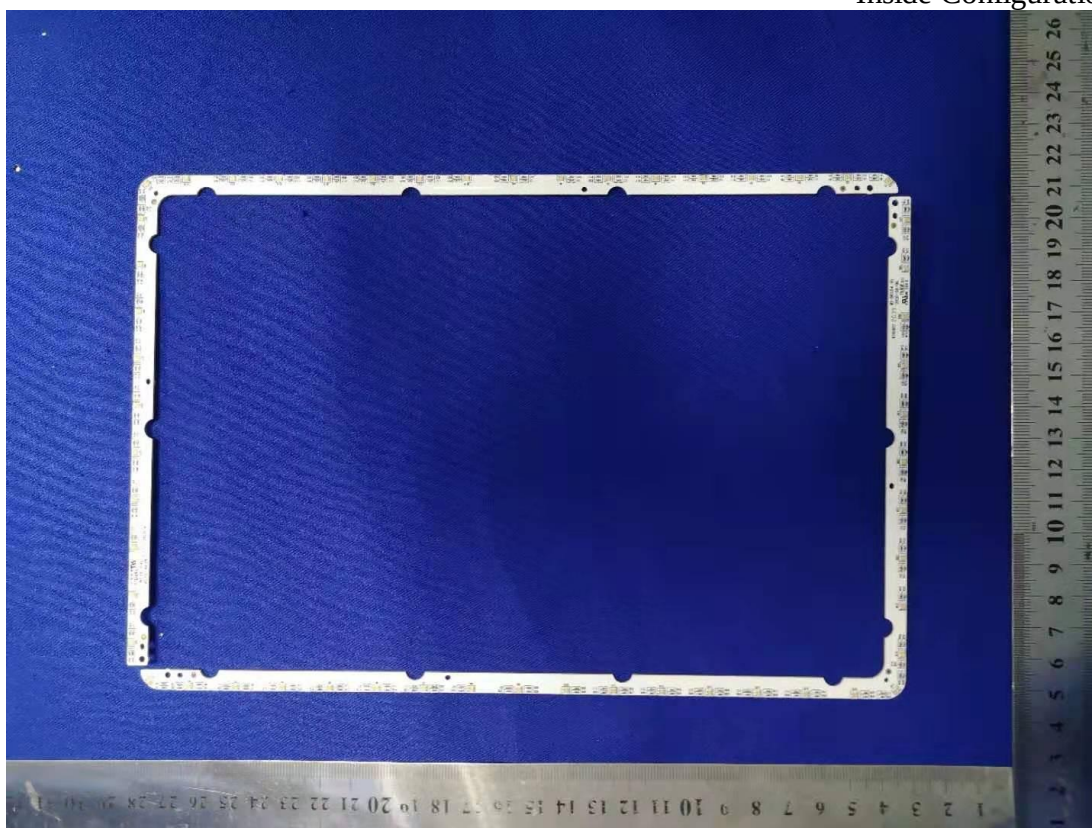


Figure 9
Inside Configuration of the EUT

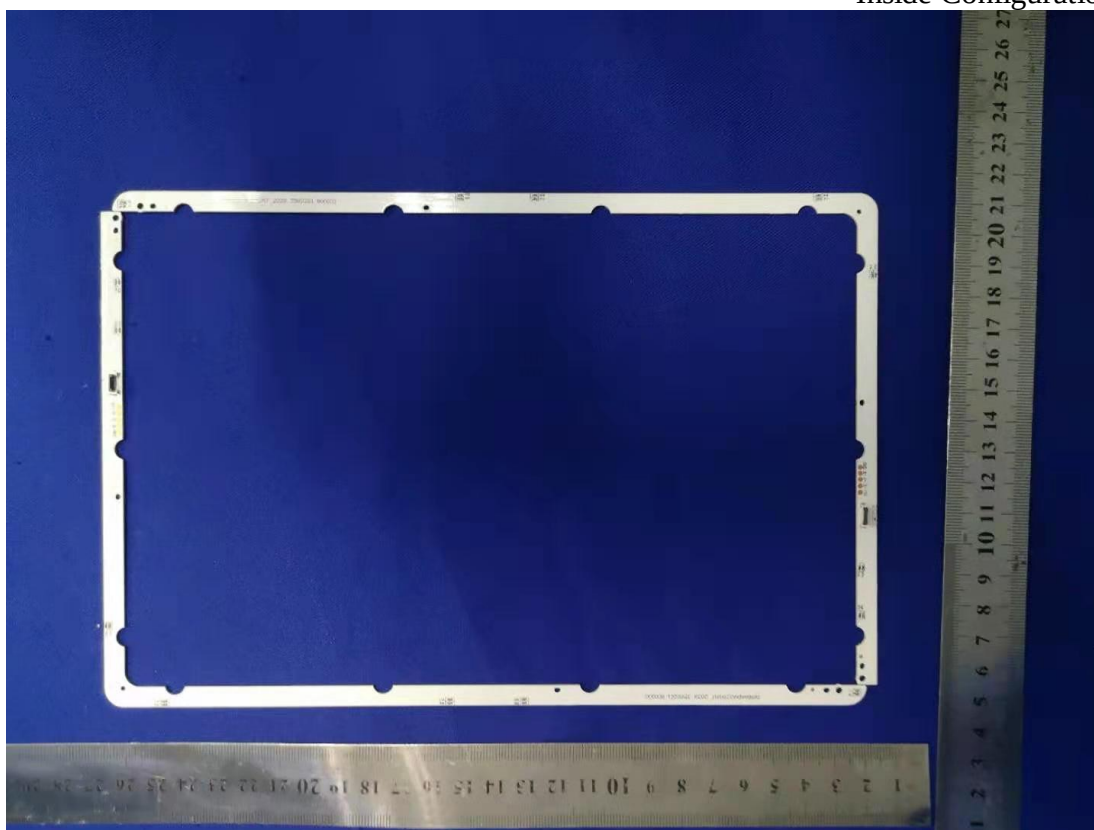


Figure 10
Inside Configuration of the EUT



Figure 11
Inside Configuration of the EUT



Figure 12
Inside Configuration of the EUT



Figure 13
Inside Configuration of the EUT

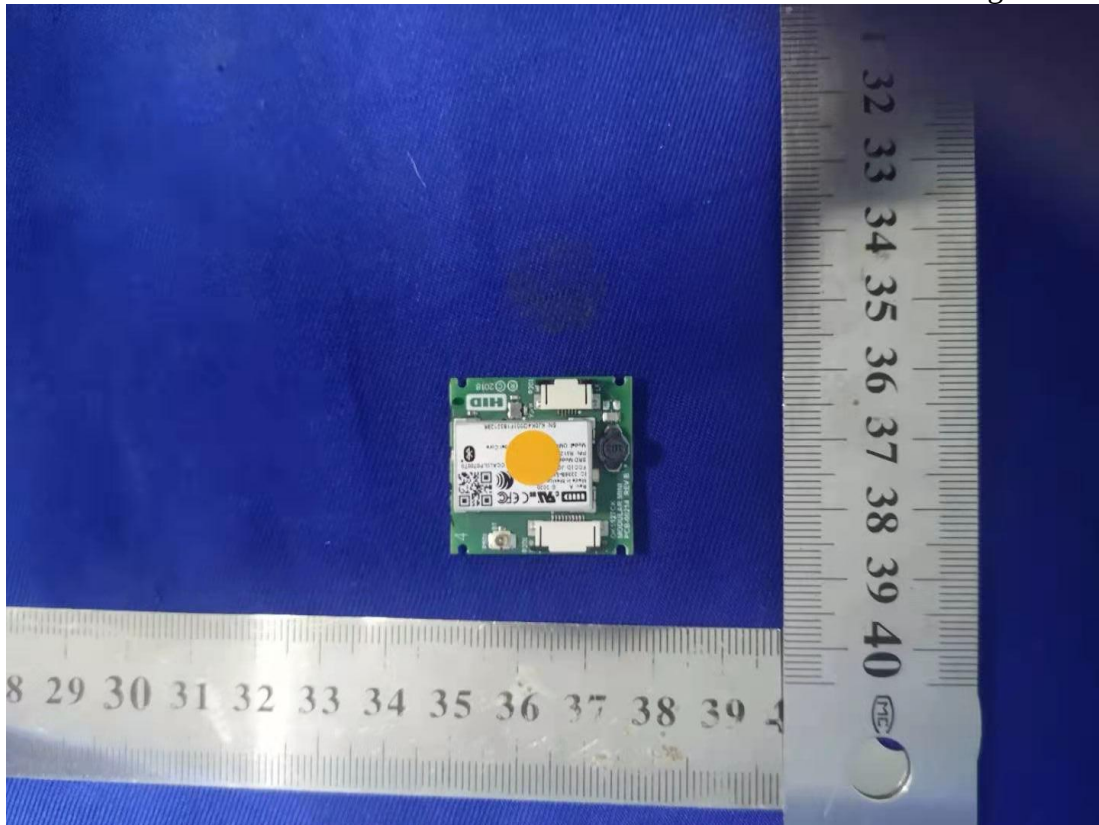


Figure 14
Inside Configuration of the EUT

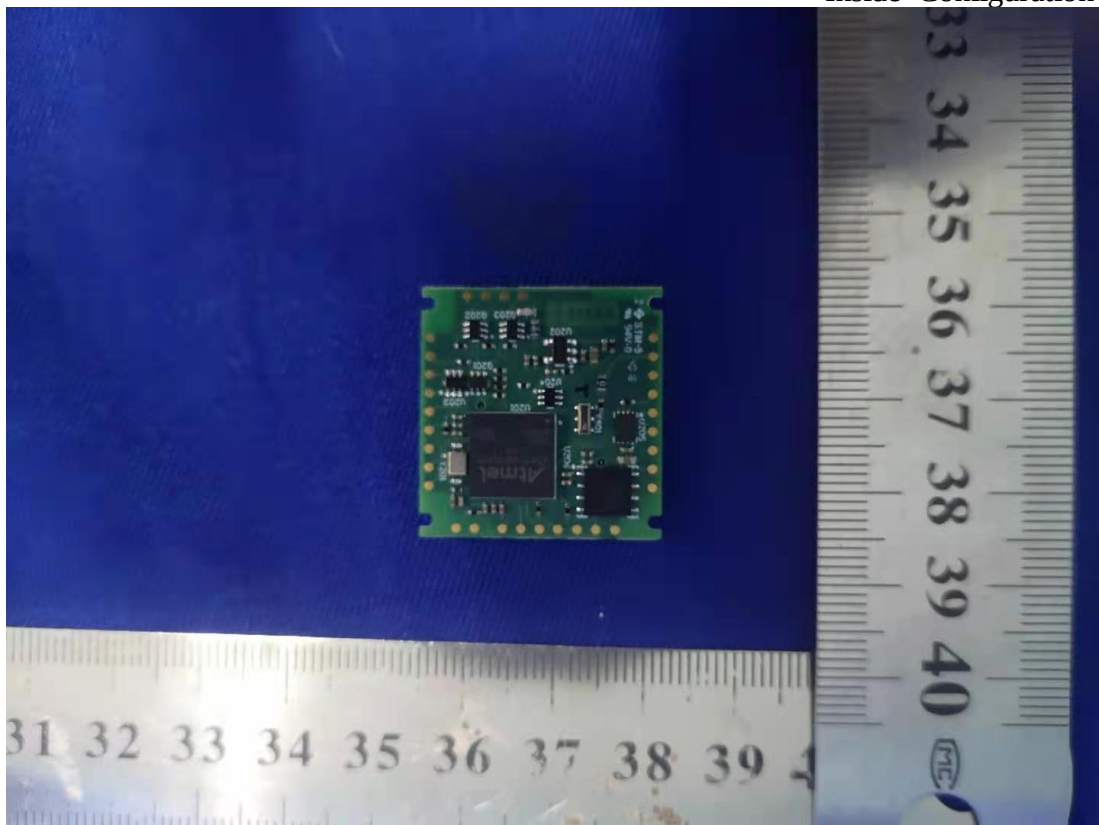


Figure 15
Inside Configuration of the EUT

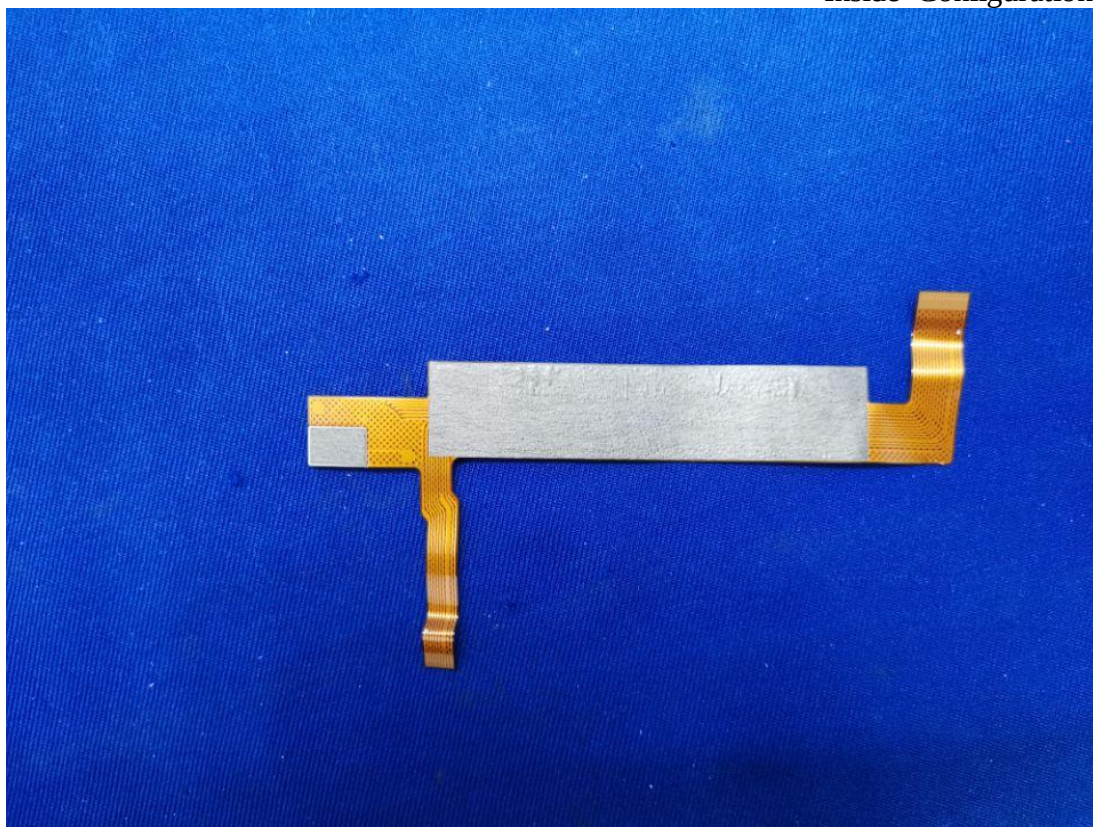


Figure 16
Inside Configuration of the EUT



Figure 17
Inside Configuration of the EUT

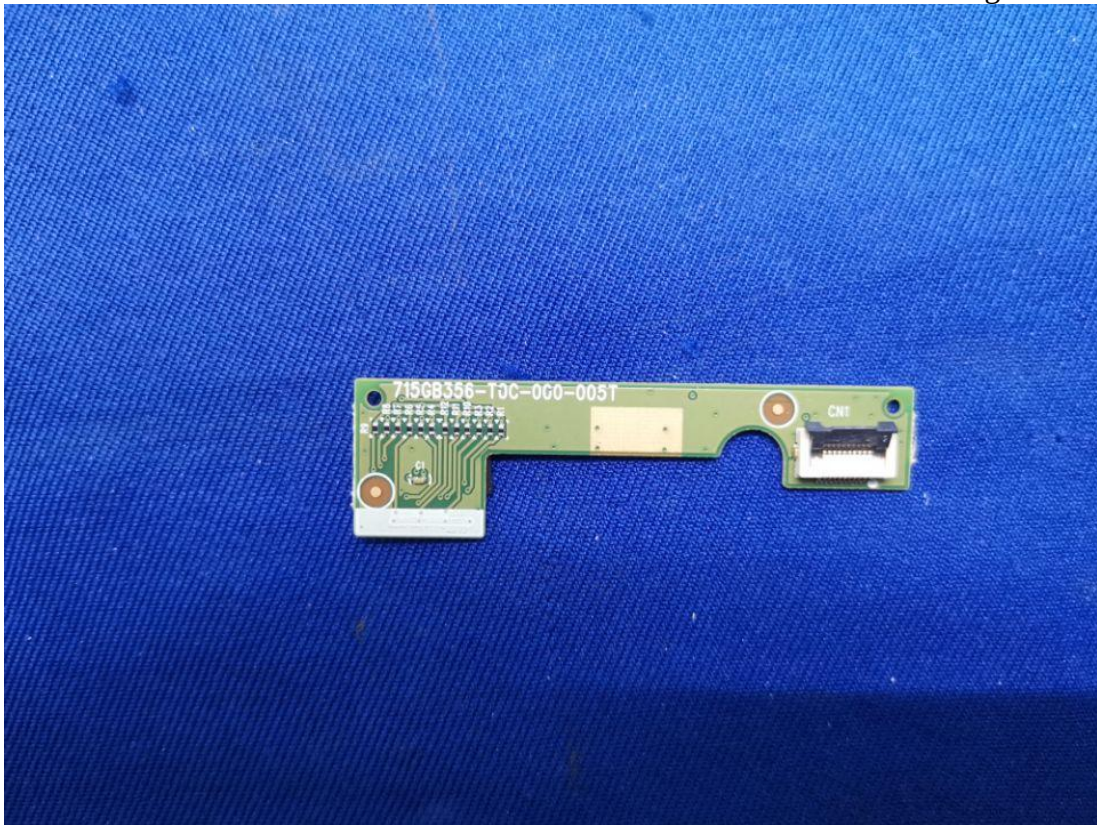


Figure 18
Inside Configuration of the EUT

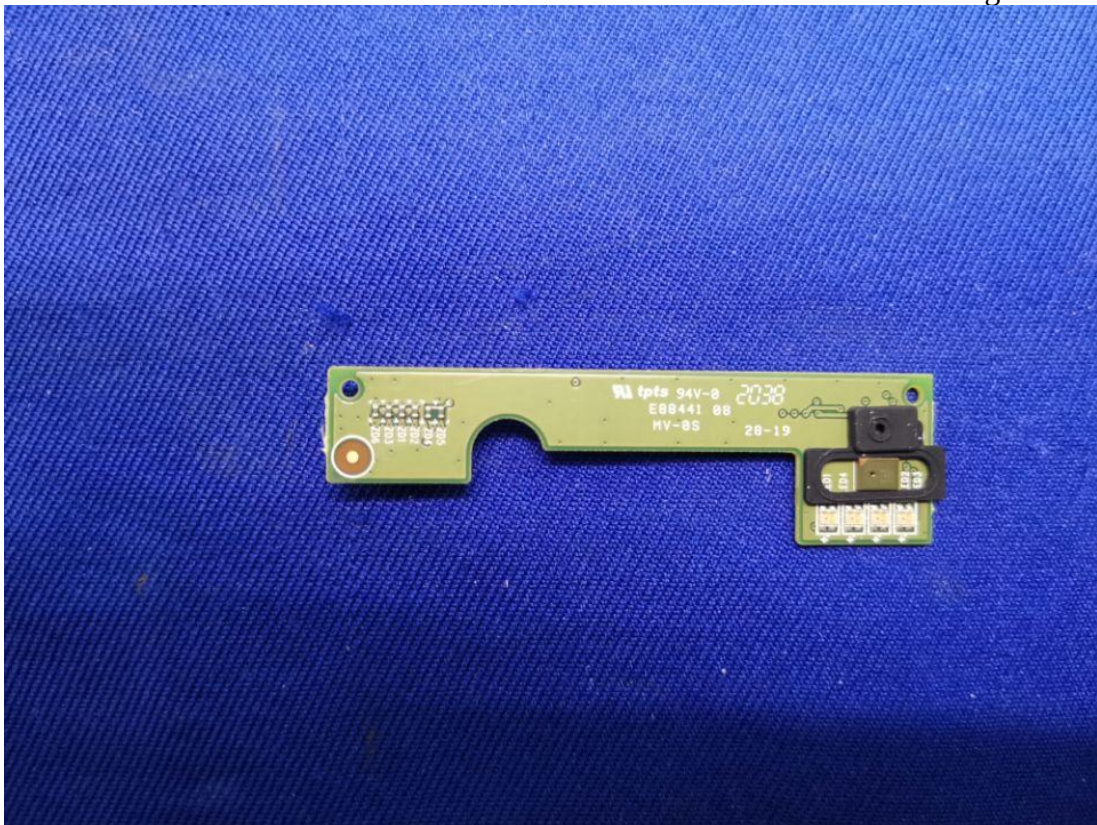


Figure 19
Inside Configuration of the EUT

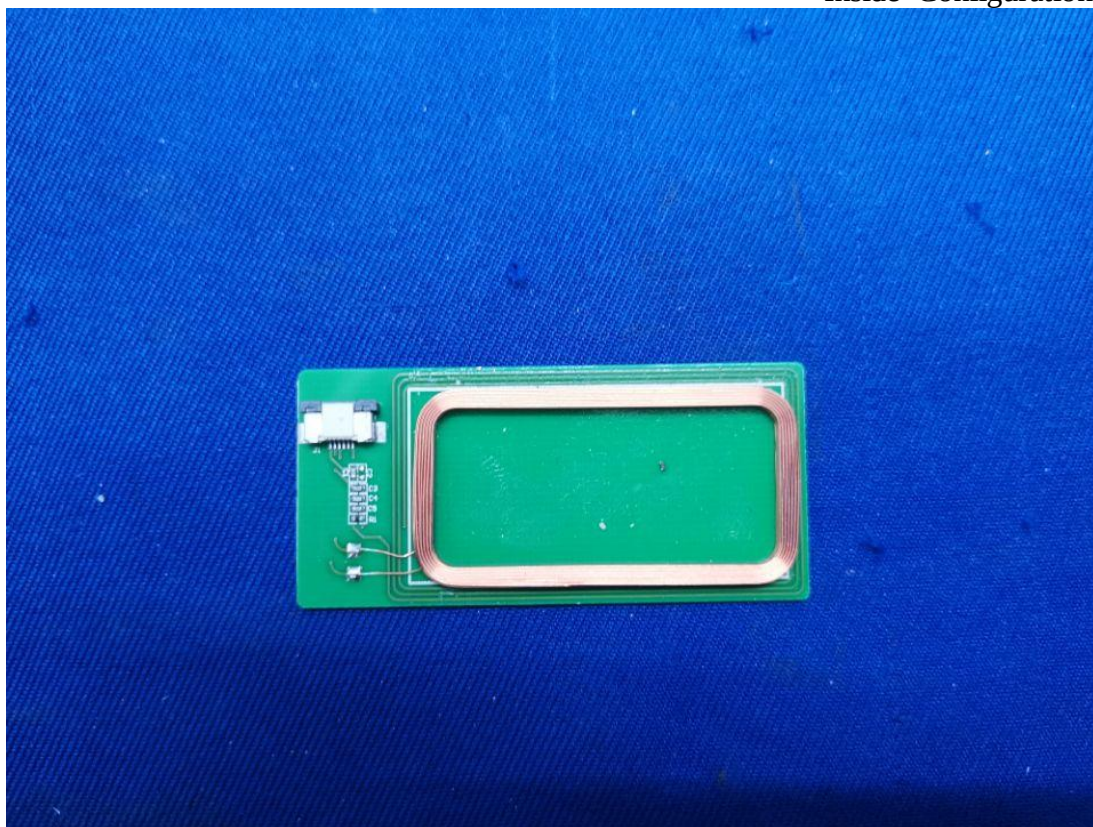


Figure 20
Inside Configuration of the EUT



Figure 21
Inside Configuration of the EUT

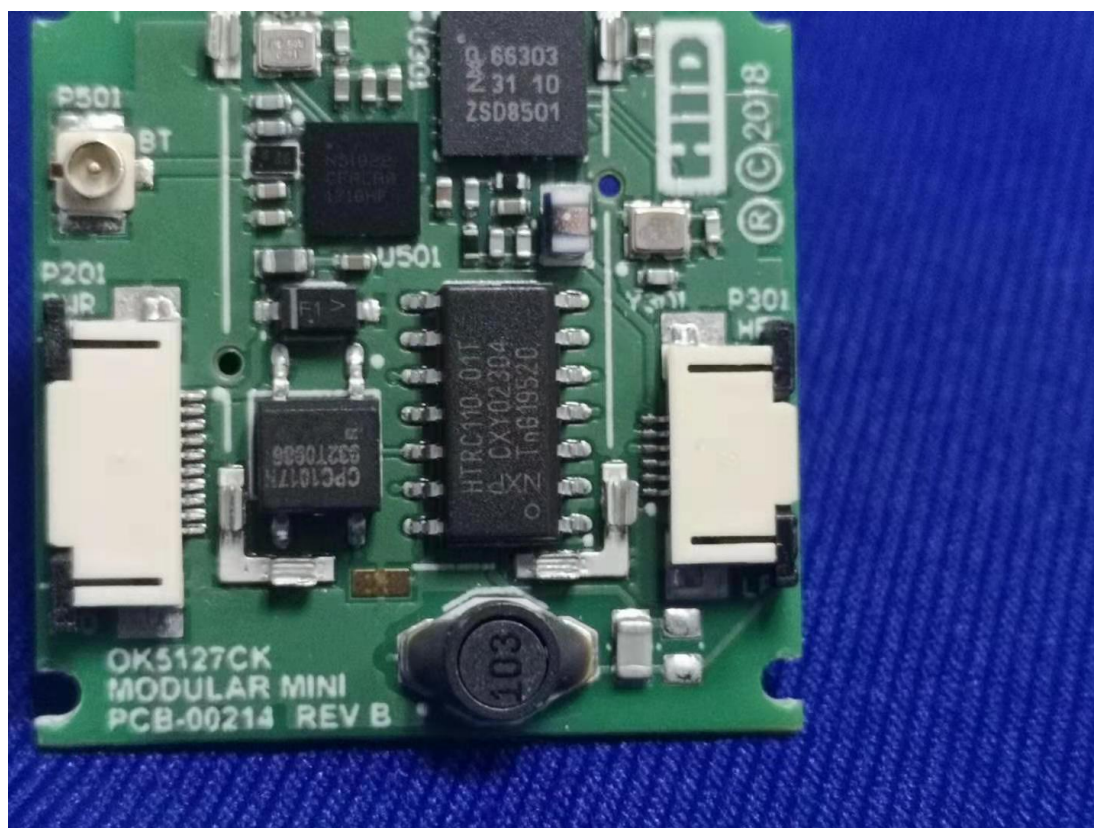


Figure 22
Inside Configuration of the EUT

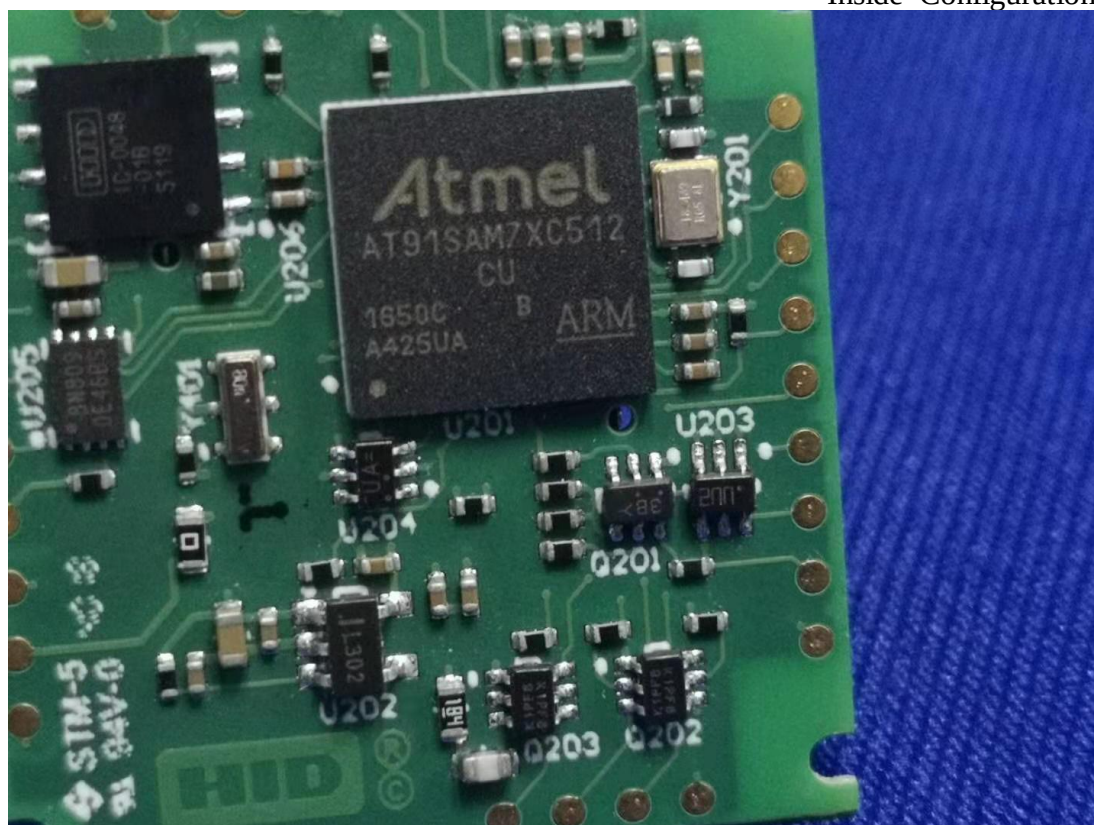


Figure 23
Inside Configuration of the EUT

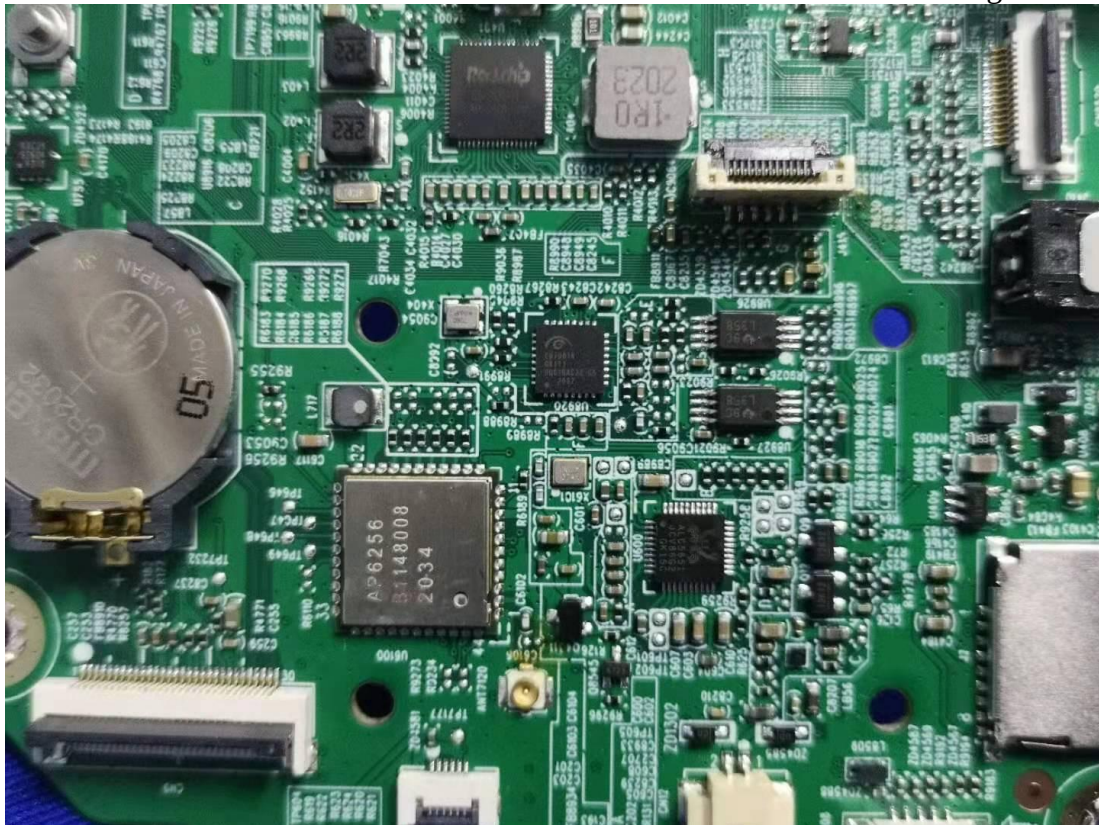


Figure 24
Inside Configuration of the EUT

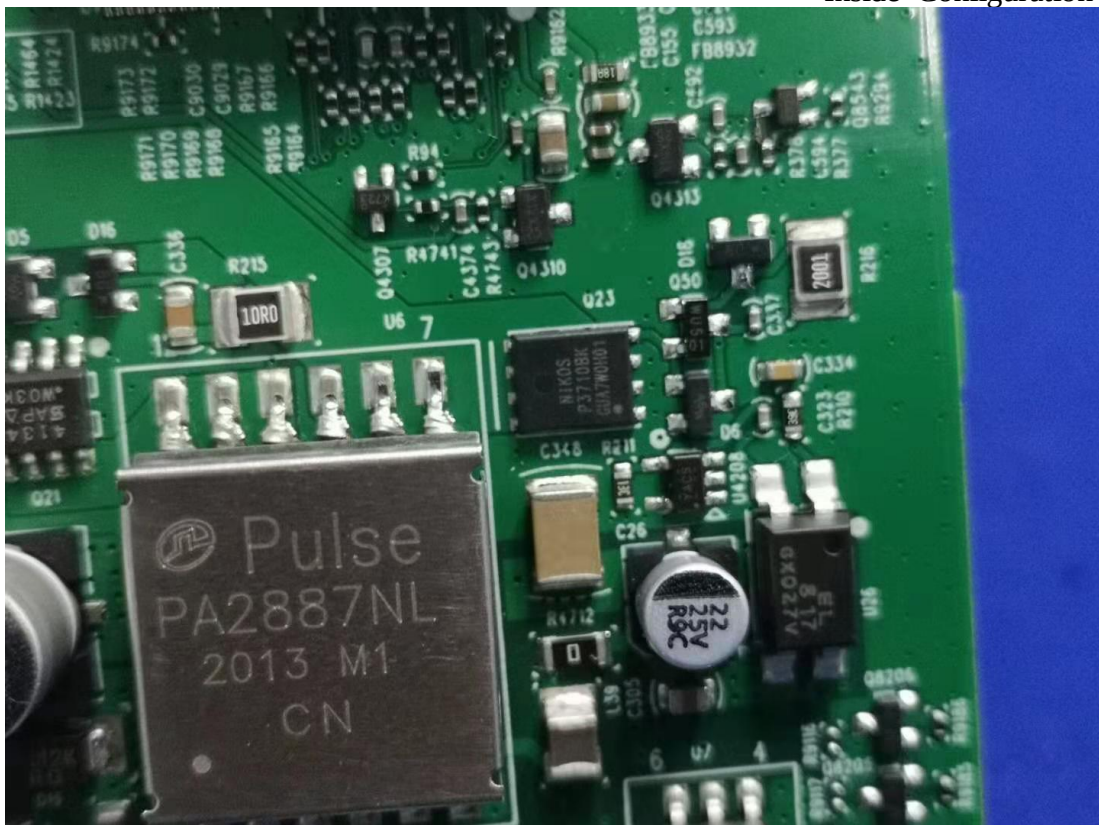


Figure 25

Inside Configuration of the EUT

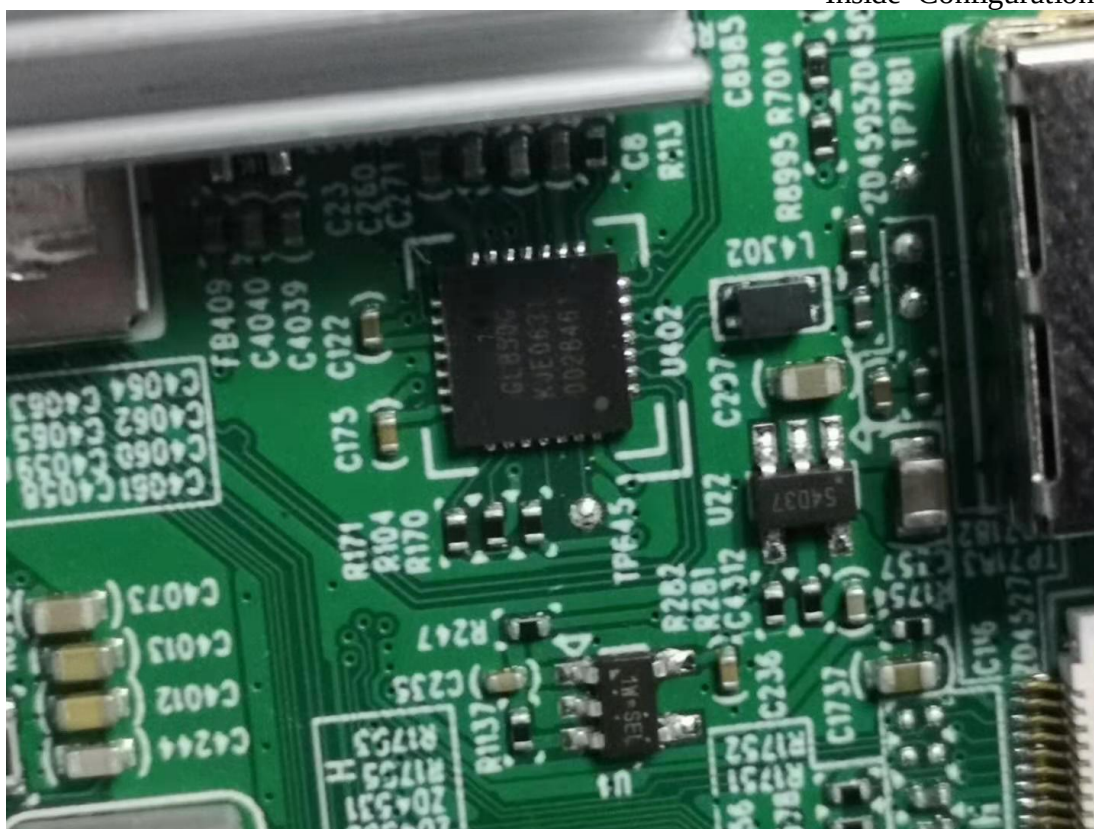


Figure 26
Inside Configuration of the EUT

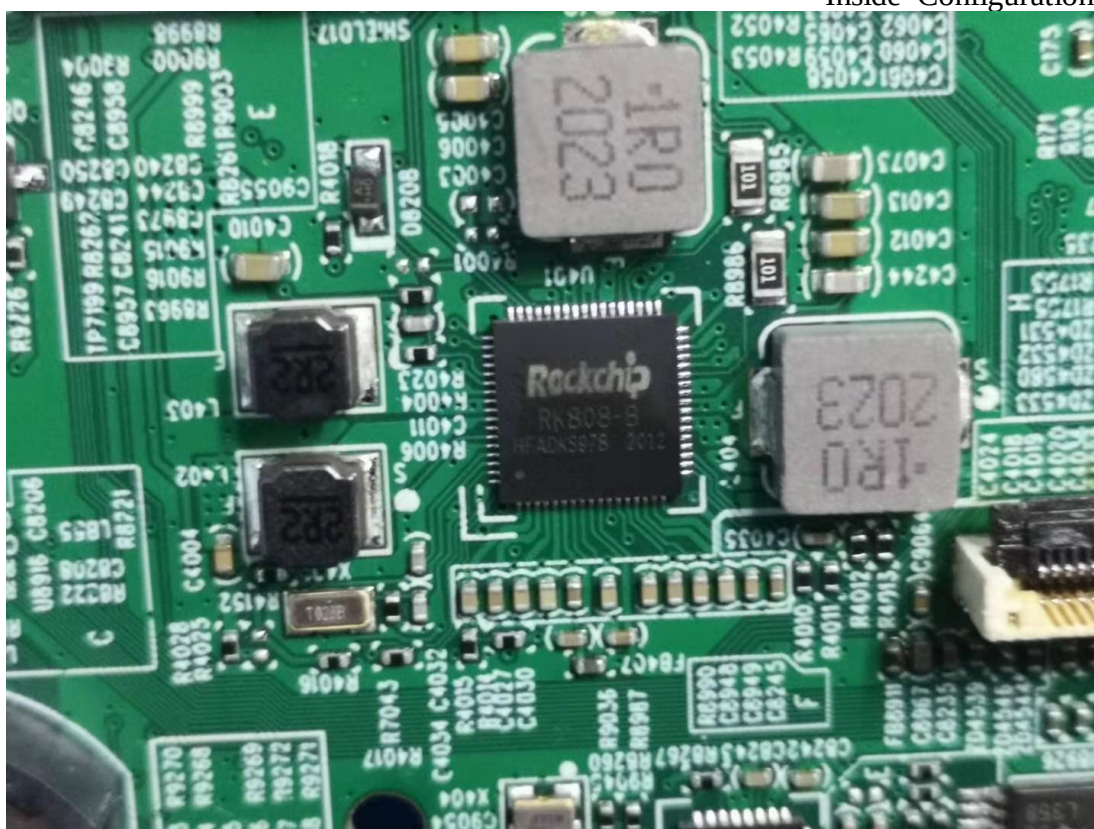


Figure 27
Inside Configuration of the EUT

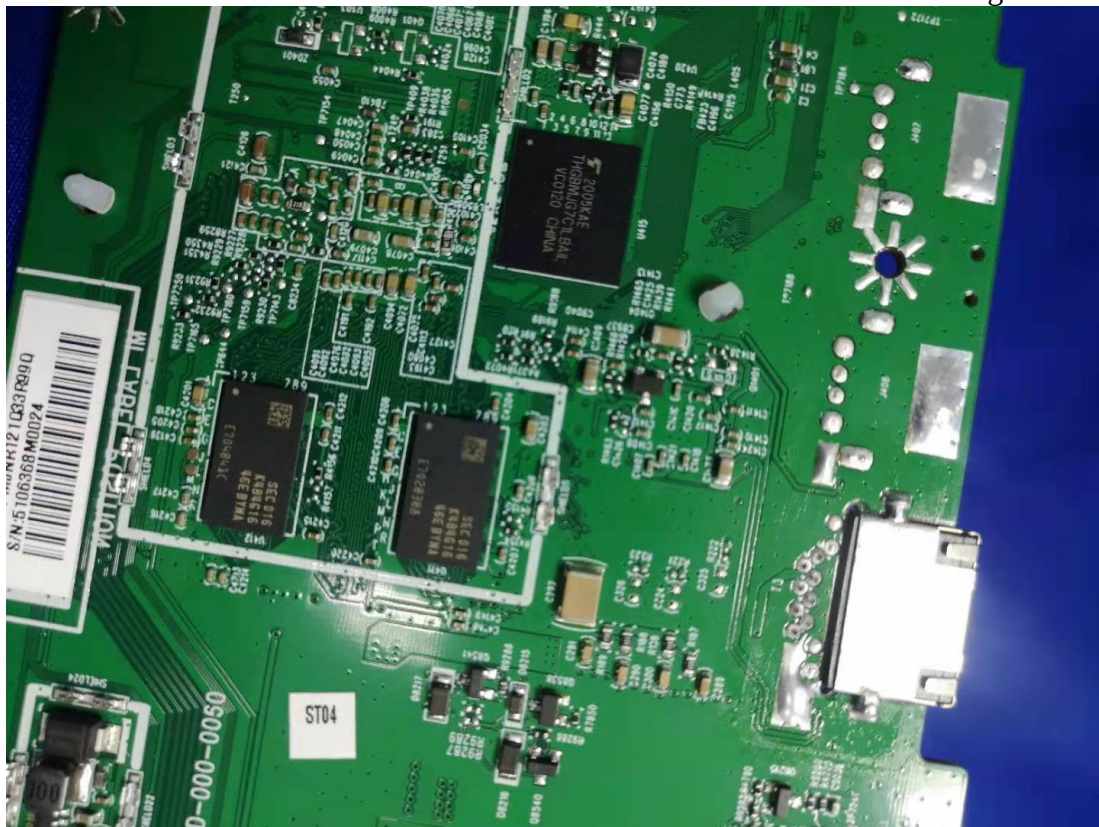


Figure 28
Inside Configuration of the EUT

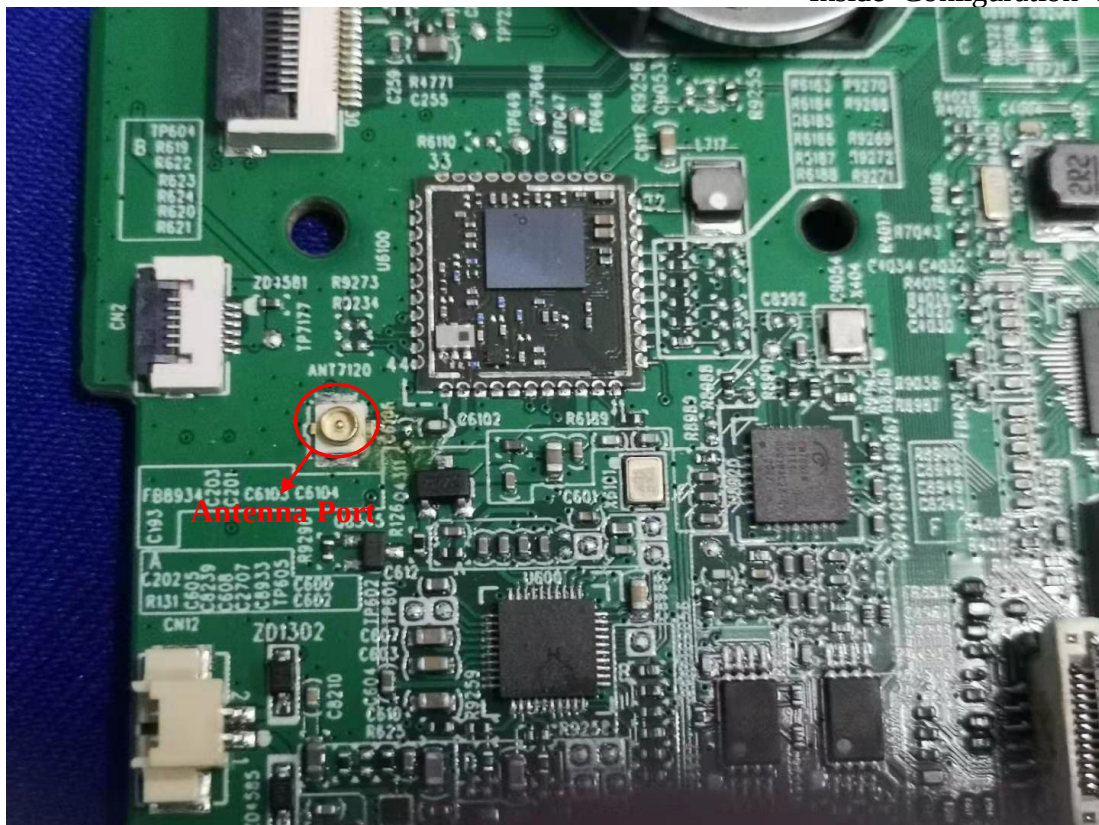


Figure 29
Adapter**Figure 30**
Adapter

Figure 31
Adapter



Figure 32
Adapter

