

Bluetooth Receiving Operation

1. Press the **M** button to switch to Bluetooth Receiving mode;
2. A voice prompt will be given saying "Bluetooth Mode", and the LED will display "BLUE" in flashing manner, indicating that the Bluetooth pairing is in process;
3. Enable the Bluetooth of your audio device (e.g., phone/tablet/computer), search for "**AirSound**", and connect.
4. Upon connection success, the "BLUE" character will be displayed: → **BLUE**
5. Play the music in the audio device, and that music will be transmitted to the CD player;
6. You can control your audio device using the **▶/⏮**, **⏮/⏭**, **▶** buttons.


Bluetooth Transmitting Operation

1. While playing a disc or the TF card, long-press the **M** button to switch to Bluetooth Transmitting mode;
2. The **📶** icon on the LED will flicker, indicating that the Bluetooth search mode is on;
3. Turn on the Bluetooth speaker or Bluetooth headphones, and put them into Bluetooth pairing mode;
4. After connection success, the Bluetooth icon **📶** will stop flickering. The connection process may take 20 - 60 seconds. → **8888**
5. To turn off the Bluetooth Transmitting mode, long-press the **M** button again, and the **📶** icon on the screen will disappear.

Auto Shutdown Explanation

1. After finishing playing the disc in sequential mode or manually pressing the stop button, the CD player will automatically shut down if there is no button operation within 3 minutes;
 2. In Bluetooth Receiving mode, if there's no connection for 10 minutes, the CD player will automatically shut down;
 3. Long-press the **⏮/⏭** button to set a timer for automatic shutdown: 30:00 minutes → 60:00 minutes → 90:00 minutes → OFF to disable shutdown timer;
- **30:00** → **60:00** → **90:00** → **OFF**

Back Panel Features

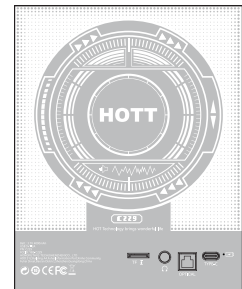

- TF** : TF card slot.
- : Headphone jack.
- OPTICAL**: Digital audio optical output port.
- TYPE-C**: USB-C charging interface.
- : Charging indicator light.

Charging instructions

- ※ **Important notes:**
- The power adapter for this product is of USB 5V-2A supply voltage. Using an adapter with a voltage higher than 5V to charge this product can damage the internal chip of the device, rendering it unusable.
1. When the screen displays Lo, please recharge the CD player as soon as possible;
 2. We recommend using a 5V-2A charging adapter and the provided USB cable to charge the CD player.
- During charging, the indicator light will turn constant red. When fully charged (approximately 5 hours), the indicator light will turn constant blue.

FAQs

Abnormality	Possible causes	Solution
Unable to power on the product	Low battery	Charge the product using the provided USB cable (adapter output 5V2A)
Unable to read discs	Check the disc for severe scratches, marks, cracks, fingerprints, or dirt Check if the disc format is one of those supported by the CD player	Replace the disc with a newer or cleaner one Substitute a format supported by the CD player
No sound	Headphones are not plugged into the jack properly Check if the volume of the CD player has been turned to the lowest	Re-plug or replace the headphones Turn up the volume by using the volume knob
Unable to charge	Poor quality of USB port or USB cable	Replace the USB cable
Unable to connect to Bluetooth devices	The device being paired is not in Bluetooth pairing mode The device being connected is beyond the effective connection range of Bluetooth	The CD player and the device paired should be in Bluetooth pairing mode concurrently Get the device closer and reconnect
The play stops or the device shuts down automatically Some songs are skipped	Check if the play mode is ALL (All song-on loop) Check if the disc is dirty or bears scratches	If it's not set, the CD player will stop or shut down automatically upon playing the songs Replace the disc
OPEN is displayed	The top cover is not closed	Close the top cover
NoCD is displayed	The disc is not read or is absent	Load the disc again

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
- This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

- These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation.
- Distance that has to be maintained between your body and the device.
- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antennas.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

FCC ID: Y182-C229