

Cortex M1 Label Locations

Serial and Certification Label

The Serial and Certification Label is found on the bottom of the M1 unit,



Figure 1 - Certification and Serial Label North America M1-USA



Figure 2 - Certification and Serial Label Europe M1-ROW

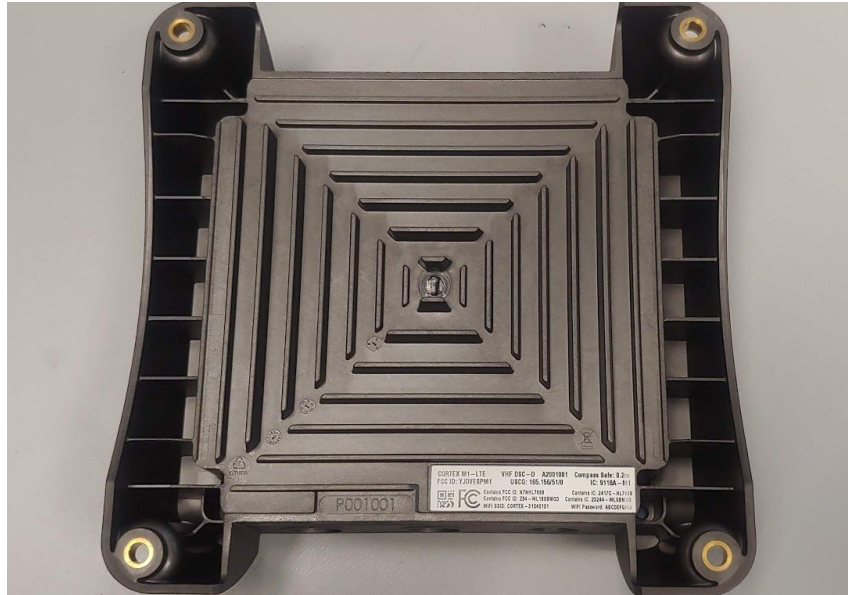


Figure 2 - Serial and Certification Label Location

Warning Label

The warning label is attached to the top side of the M1 so it is clearly visible when the product is first seen out of the box.

For customers in the USA: This device must be programmed with data corresponding to the vessel on which it will be installed. Programming must be carried out by a Vesper Marine dealer. The included instructions contain information on how to verify the correct programming.

WARNING: It is a violation of the rules of the Federal Communications Commission to input an MMSI that has not been properly assigned to the end user, or to otherwise input any inaccurate data in this device.

Figure 3 - Warning Label example



Figure 4 - Location of warning label