



4MP Indoor/Outdoor Battery Spotlight Camera (ADC-V731B) - Installation Guide

Pre-Installation Checklist

- ADC-V731B camera (included)
- ADC Universal Battery Pack (included)
- Wi-Fi (2.4 or 5 GHz) connection to broadband Internet (Cable, DSL, or Fiber Optic) Internet. For information about bandwidth requirements, see [What are the internet service and bandwidth requirements for Alarm.com video devices?](#)
- A computer, tablet, or smartphone with or Wi-Fi is required if the router does not have the Wi-Fi Protected Setup (WPS) feature

There are two options for connecting the ADC-V731B to the Wi-Fi network: Access Point (AP) mode or Wi-Fi Protected Setup (WPS) mode. AP mode is the recommended method to connect the camera to the network.

Note: Some Internet Service Providers disable the WPS feature on customer routers.

In the box


- ADC-V731B camera
- ADC Universal Battery Pack
- USB-C Cable
- Installation card
- Wall mount
- Wall plate
- Wall anchors & screws (2)

Pre-Installation

The following steps should be taken prior to the installation steps:


1. Unbox the unit. Carefully remove the device and all included components from the packaging.
2. To remove the battery pack:
 - a. Press the oval button located on the bottom of the device to release the housing.
 - b. Set the back housing aside and locate the black notch at the bottom of the battery pack.

- c. Press the notch inward and slide the battery pack downward to remove it.

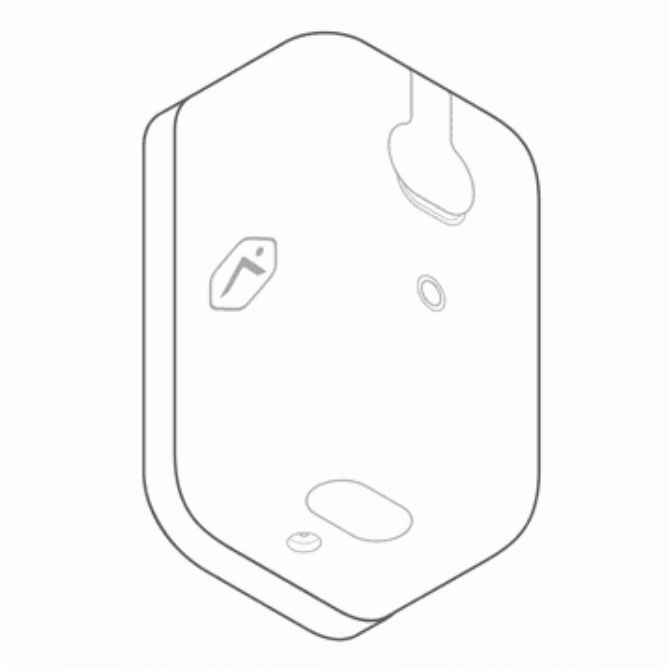

3. To reinsert the battery pack:

- a. With the battery pack removed, carefully peel off any protective film covering the device or components.
- b. Align the battery pack with the cradle and slide it back into place. Make sure you hear the notch click to confirm it is securely inserted.

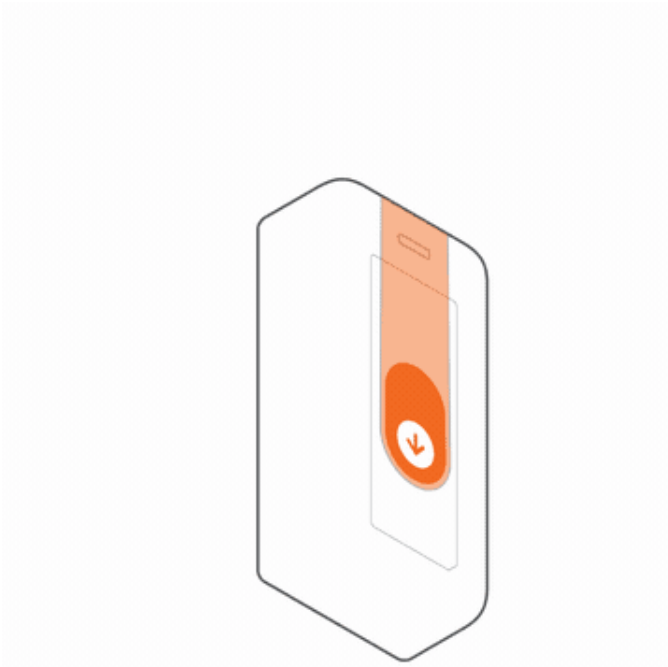

4. Verify the LED indicator on the front of the device goes into pairing mode (blinking white).

- a. When the device turns on, it begins blinking red to indicate the device is booting.

- b. If the device is new or has not been previously associated with a network, the LED should begin blinking white to indicate it has entered pairing mode. If the LED is blinking white, replace the housing by pressing the housing together with the camera body, and proceed to the next section of the guide.



- c. If the LED light does not blink white, press and hold the multi-purpose button located on the side of the device (accessible once the housing is removed) for 3 seconds, or until the LED begins blinking white. Once the LED starts blinking white, release the button and proceed to the next section of the guide.

Connect the camera to the Wi-Fi network

The ADC-V731B can be connected to the Wi-Fi network using AP or WPS modes.

For information about general video installation and maintenance guidelines, see [Video Installation Best Practices](#).

For information about setting up and using Two-Way Audio, see [Two-Way Audio Installation and User Guide](#).

Note: An installation tutorial can also be found on the enrollment page of the Partner MobileTech app, Alarm.com customer website, and Alarm.com app to walk through these steps.

[Expand all](#)

AP mode

^

To ensure a sufficient Wi-Fi signal, complete the following steps with the camera near its final location but prior to mounting.

1. Power on the camera. The camera's LED will begin to blink white. If the LED is not white after two minutes, press and hold the WPS/Reset button and release when the LED begins to blink white (about 3 seconds).

2. Connect to the camera's Wi-Fi network. On an Internet-enabled device, connect to the Wi-Fi network ADC-V731B (XX:XX:XX) where XX:XX:XX is the last six characters of the ADC-V731B's MAC address, which is located on the camera or on the packaging.
3. Access the camera setup page. On the same device, open a web browser and enter <http://v731binstall> or **192.168.1.1** in the URL field. Follow the on-screen instructions to add the ADC-V731B to the Wi-Fi network. During this process, the LED will briefly turn red before blinking green. The LED will turn solid green once the connection is successfully completed.
4. Once the LED is solid green, enroll the device to the account using the steps in [Enroll the camera to the account](#).

WPS mode

^

To ensure sufficient Wi-Fi signal, complete these steps with the camera near its final location but prior to mounting.

1. Open the camera's housing. Press the oval button located on the bottom of the device to release the housing.
2. Enter WPS pairing mode. Press and hold the multi-purpose button located on the side of the device (accessible once the housing is removed) for 6 seconds, or until the LED begins blinking blue. Once the LED starts blinking blue, release the button to enter WPS mode.
3. Activate WPS mode on the router. The camera will begin to connect to the Wi-Fi network. The LED will be solid green when the connection is complete.
4. Once the LED is solid green, enroll the device to the account using the steps in [Enroll the camera to the account](#).

Enroll the camera to the account

The camera can be enrolled to a customer account using the Partner MobileTech app, Alarm.com customer website, or Alarm.com app.

To enroll the camera using the Partner MobileTech app: ^

1. Log in to the Partner MobileTech app.
2. Find the customer account.
3. Tap + **Add Device**.
4. Tap **Video**.
5. In *Enter MAC Address*, enter the MAC address, which is located on the device or packaging.
6. Tap **Add**.
7. Enter a name for the device, then tap **Continue**.
8. Follow the on-screen instructions. An installation progress bar displays on the screen.

Once the installation is complete, move the camera to its final location. Prior to installing, verify the received signal strength using Partner MobileTech app or Alarm.com app. Once the signal strength has been verified, install the device with the included hardware.

To enroll the camera using the Alarm.com customer website: ^

1. Navigate to the *Video Device Setup* page by entering the following URL using a web browser: **www.alarm.com/addcamera**. The customer's username and password for the account are required to log in.
 - If the installation tutorial was used, it automatically navigates to this page after completing the tutorial.
2. Enter the MAC address of the camera, then click **Find**.
3. Enter a name for the camera, then click **Install**.
4. Follow the on-screen instructions to finish adding the camera. An installation progress bar displays on the screen.

Once the installation is complete, move the camera to its final location. Prior to installing, verify the received signal strength using Partner MobileTech app or Alarm.com app. Once the signal strength has been verified, install the device with the included hardware.

To enroll the camera using Alarm.com app: ^

1. Log in to the Alarm.com app. The customer's username and password for the account is required to log in.
2. Tap ≡.
3. Tap **Add Device**.
4. Tap **Video Camera**.
5. Tap **Enter MAC Address**, then enter the camera's MAC address.
6. Tap **Install** for the camera on the *Device Found* page.
7. Enter a device name, then tap **Next**.
8. Follow the on-screen instructions to finish adding the camera. The installation progress displays on the screen.

Once the installation is complete, move the camera to its final location. Prior to installing, verify the received signal strength using Partner MobileTech app or Alarm.com app. Once the signal strength has been verified, install the device with the included hardware.

Camera Mounting Overview

Important: Prior to mounting, verify the received signal strength using Partner MobileTech app or Alarm.com app. Once the signal strength has been verified, install the device with the included hardware.


The V731B features standard ¼" tripod screw threading, allowing compatibility with a variety of mounting options. A wall plate and wall mount are included in the box for flush surface mounting. Alternatively, the camera can be placed directly on a flat surface or used with a variety of third-party mounts and stands. Follow the instructions below to mount the camera to a flush surface.

1. Choose the mounting location. The camera should be mounted at least 8 feet above the ground on a flat surface (e.g., a wall or ceiling).
2. Verify there are no nearby obstructions that could interfere with the camera's performance, particularly night vision.
3. Verify the location minimizes glare and avoids capturing unwanted motion (e.g., swaying trees or vehicle traffic), as this may negatively impact battery life.

4. Mark and drill mounting holes. Use the included mounting plate to mark the desired locations for the mounting screws.
 - If mounting to drywall: Drill two 3/16" holes and insert the included wall anchors.
5. Attach the mounting plate. Align the camera's mounting plate with the drilled holes. Use the included screws to securely fasten the plate to the mounting surface.




6. Secure the mount to the plate. Align the mount with the mounting plate following the printed instructions on the plate. Turn the mount until it clicks securely into place.

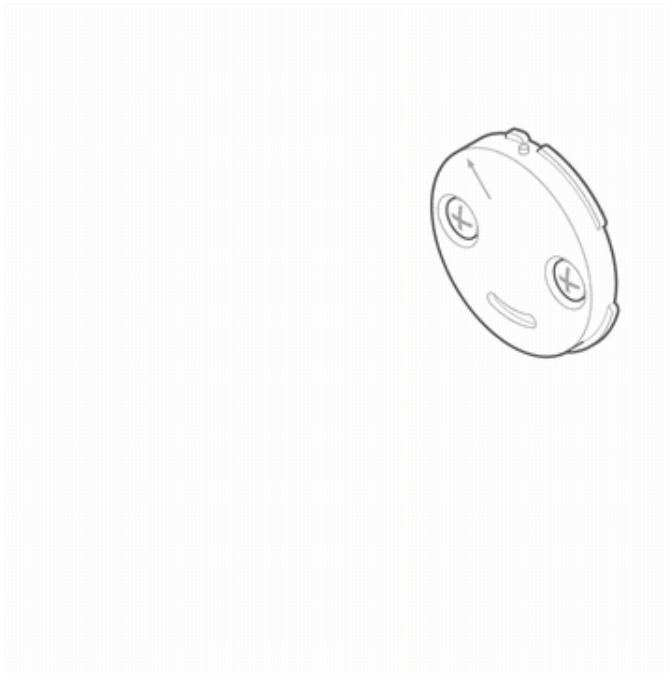

7. Attach the camera to the tripod screw.

- a. Remove the optional small security screw from the packaging and insert it into the bottom of the camera to prevent the camera and back housing from separating.
- b. Screw the camera onto the tripod screw threading until it is tight and securely fastened.

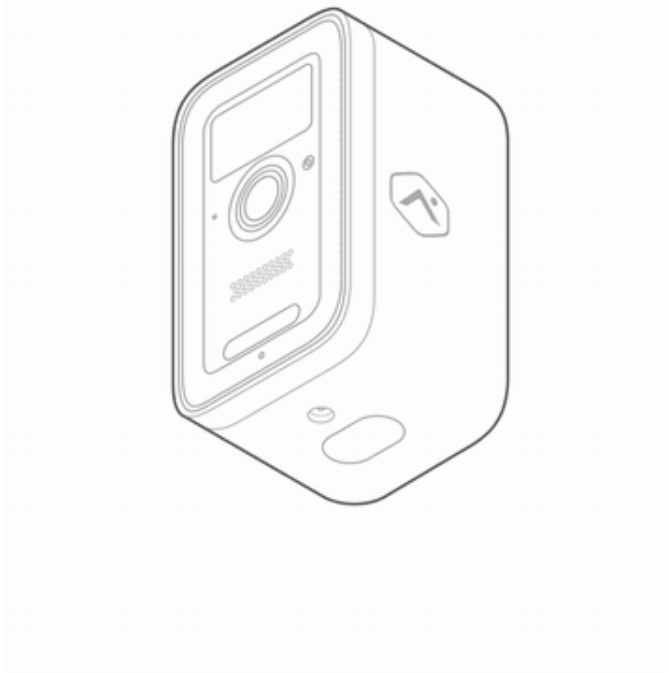

8. Adjust the camera angle. Loosen the collar on the mount to adjust the ball joint. Move the camera to point toward the area you want to monitor. Once the camera is positioned correctly, tighten the collar to secure it in place.

LED reference guide

When operating on battery power, the status LED will light up in response to motion or when the camera's state is altered (i.e., button press events, booting on, firmware upgrades, and deterrence responses).

LED pattern

Description

Off

Power off or standby



Solid green

Connected to Alarm.com



LED pattern	Description
Blinking green 	Local network connection
Blinking red 	Power on, camera booting
Solid red 	No local or internet connection
Solid blue 	Low battery
Blinking white 	Wi-Fi Access Point and Bluetooth Network Association modes (press and hold the button for 3-6 seconds)
Blinking blue 	WPS mode (press and hold button for 6-9 seconds)
Blinking yellow 	Power cycling (press and hold button for 9-12 seconds)
Blinking red and green 	Reverting to factory default settings (press and hold the button for 12-15 seconds)

LED pattern

Blinking green and blue



Description

Firmware updating

Charging

In-unit charging

LED pattern

Blinking yellow and green



Description

Charging

Blinking yellow and blue



Charging failed

Solid green



Charged and connected to Alarm.com

Battery pack charging

LED pattern

Description

Solid red

Charging



Blinking red and blue

Charging failed



Solid blue

Charged and connected to Alarm.com



Troubleshooting

1. If you have issues connecting the camera to the account, power cycle the camera and try again.
2. If issues persist, reset the camera to factory defaults. Press and hold the WPS/Reset button until the LED is flashing green and red (about 12 seconds), then release the button. The camera will reboot to factory default.

If the camera was previously installed on a different Alarm.com account, it will need to be deleted before it can be installed again.

Caution: Prolonged exposure to sunlight in extreme conditions may impact the camera's performance. The optimal installation location is in a shaded area such as under an eave.

Regulatory Statements

Operating Temperature: -4°F – 140°F (-20°C – 60°C)

Ingress Protection: IP65

FCC Statements

FCC Short Part 15 Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Long Part 15 Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure

This equipment complies with FCC and ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the equipment and your body. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter. Please contact intsupport@alarm.com for more information on Canadian RF exposure compliance.

FCC ID

FCC ID: YL6-143V731B

ISED Statements

Condition

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

The device operating in the 5150–5250 MHz band is intended for indoor use only.

Cet appareil contient des émetteurs/récepteurs sans licence qui sont conformes aux RSS sans licence d'Innovation,

Sciences et Développement économique Canada. L'exploitation est soumise aux deux conditions suivantes :

1. Cet appareil ne doit pas provoquer d'interférences.
2. Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

Le dispositif fonctionnant dans la bande de fréquences 5150–5250 MHz est destiné uniquement à une utilisation intérieure.

RF Exposure

Cet appareil est conforme aux limites d'exposition aux radiofréquences établies par la FCC et l'ISED pour un environnement non contrôlé. Cet appareil doit être installé et utilisé à une distance minimale de 20 centimètres entre l'appareil et votre corps. Cet appareil et son ou ses antennes ne doivent pas être situés ou fonctionner en conjonction avec une autre antenne ou un autre émetteur. Veuillez communiquer avec intsupport@alarm.com pour obtenir plus d'information sur la conformité aux exigences canadiennes en matière d'exposition aux radiofréquences.

IC ID

IC: 9111A-143V731B

EU Declaration of Conformity Statement

Hereby, Alarm.com Incorporated declares that the equipment type ADC-V731B is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://www.alarm.com/about/international/eu-red>