

Titan

Instruction Manual

Zena





Contents

Important Safety Instructions	2
Product Parts	8
Things To Know And Do Before Use	9
Operation Guide	13
Voice Broadcast	14
Cleaning And Maintenance	15
Troubleshooting	16
Specification	18
FCC Radiation Exposure Statement	19
Industry Canada Notice	20

Important Safety Instructions

Must be followed

These safety instructions must be strictly followed in use to avoid personal injuries and property damage :

■ All the safety instructions are described in compliance with degrees of the injuries or damage as a result of wrong use.

 Warning	Actions leading to cause serious injuries or death
 Caution	Actions leading to cause minor injuries or property damage

■ Pay attention to the symbols before safety instructions (an example is given below).

 Actions that must be absolutely forbidden	 Actions that must be done
---	---

 Warning	
 Must be followed	● IMPORTANT SAFETY INSTRUCTIONS When using this product, basic precautions should always be followed, including the following: Read all instructions before using (this product).
	● DANGER-To reduce the risk of electric shock: • Always unplug this product from the electrical outlet after using and before cleaning. • Never use unauthorized parts or hardware for this chair. No modifications are allowed. • Carefully examine the covering before each use. Carefully examine the upholstery from top to bottom. If there are any signs of cracking, blistering, rethreading or tearing, stop using the product and contact the manufacturer for a replacement or further instructions. Please unplug the chair from the power outlet. • This product must be kept in a climate-controlled area. 60-85 degrees Fahrenheit with very low moisture at ALL times.
	● WARNING-To reduce the risks of burns, fire, electric shock or injury to persons: • An appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before any authorized installs or alterations are being made. • Close supervision is required if you have any pets, children in the area when chair is being used. • Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer. • Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged or dropped into water. Contact the manufacturer for examination and repair. • Never pull on any cables wire on this product. • Keep the cord away from heat source like a vent or a humid area like a bathroom. • If any of the air hoses are plugged stop using the chair and contact the manufacturer and unplug power from the outlet. • Never allow for any object to fall into the chair or cracks of the chair. • This product is for indoor use only in a dry climate controlled area. • Do not operate where aerosol (spray) products are being used or where oxygen is being administered. • To disconnect, turn all controls off then remove plug from outlet. • Keep children away from this product as working parts can seriously injure a child or pet. • Connect this appliance to a properly grounded outlet only. See Grounding Instructions. • Carefully Monitor the heating areas of the chair. If there is any abnormality or discomfort, turn off the chair, unplug the power from the outlet and contact the manufacturer. • Do not operate this product using a blanket or pillow. Excessive heating can occur and cause fire, electric shock or injury to persons. • Any elderly, disabled person, children (under 18) or with any person with a medical must consult with a doctor if this product can be used. SAVE THESE INSTRUCTIONS
	● Any person with an implanted medical device or medical condition or under any treatment must get approval from your doctor before using this device.

⚠ Warning

	(1) Any person with a pacemaker cannot use this product. The chair may cause an electronic malfunction to the medical device; (2) Patients with malignant tumors; (3) Patients with heart disease; (4) Person unable to feel or insensitive to heat on their skin such as a diabetic patient; (5) Pregnant women or ones that have just given birth; (6) Persons with poor blood circulation such as a diabetic patient; (7) Osteoporosis patients, spinal fracture patients or persons with acute painful disease or injuries such as joint sprains or muscle strains; (8) Persons with any injuries should not use this product. (9) Persons with higher or lower regular body temperature, fever, inflammation, cold symptoms, high blood pressure or any poor health conditions should consult a physician before using this product; (10) Avoid falling asleep in this chair; (11) Any one with spinal or nerve conditions; (12) Persons with protrusion of intervertebral disc; (13) Do not wear loose clothing or jewelry as it might get caught with massage mechanism; (14) Keep long hair away from moving massage mechanism while in use. Otherwise discomfort or even physical injuries may occur.
 Must be followed	● If you feel unwell while using or after using the chair, stop immediately and contact your physician. Do not use the chair again unless approved by your doctor.
	● Before operating or adjusting the chair, be sure that there are no obstructions that can cause damage to your chair. No pets or persons, near, in front or under the chair to avoid serious injury.
	● Before using the chair, look behind the backrest pad and inspect the area where the massage rollers travel up and down for any tearing or abnormal wear. Be sure the middle nylon cover is not unzipped and has no signs of damage or tear caused by the roller heads. Using the chair while the roller heads are exposed could cause physical injury, electrical shock or breakage.
	● When using the chair for the first time, it is recommended that you select the “Demo” mode to get familiar with various massage features of the chair. ● Do not use the chair for more than 30 minutes each time. ● Do not massage a single part of your body for more than 5 minutes. Failing to follow these instructions, discomfort or even physical injuries may occur.
	● After using the chair, it is recommended that the chair is unplugged from the power outlet to avoid any surges caused by outages. It is HIGHLY ADVISABLE TO ALWAYS USE A SURGE PROTECTOR. Keep children or minors from using the chair without supervision to avoid misuse that could result in serious injuries.
	● Follow the local code and regulations about use of electrical products. ● Use a 110V-120V, 60Hz power supply. (Do not use the chair in a country that this product is not designed for or connect it with a transformer.) It may lead to electrical shock, product failure or internal components overheating causing fire hazard.
	● Make sure the power cable is firmly plugged into the outlet to avoid power surges, short and electrical shocks. Electrical shocks may cause internal component overheating causing fire hazard.
	● Wipe and clean the power plug regularly with dry cloth to avoid dirt or moisture built up.
 Must be followed	● In the case of any abnormality with functions of the chair, stop using the chair immediately and pull out the power plug to avoid smoke, fires and electric shocks. Abnormality and fault examples are: ● If the chair is plugged in and the power switch is in the “ON” position and if the chair is not responding. ● When the chair is turned off but still operating. ● If you detect any burning smell or abnormal sounds. ● If you detect any parts of the upholstery that seemed to have melted due to over heating. → In any of these listed issues have occurred STOP using the product and unplug from the power outlet. Have the product inspected by an authorized service center.
 Forbidden	● Do not put any cushions or obstructions between the backrest pad and the backrest. This may damage the mechanism and result in personal injury. ● When moving or handling the chair, be sure to hold onto the recommended supported area. Otherwise parts of the chair may break resulting in serious injury.

⚠ Warning

 Forbidden	● People with the following health issues should NOT use this chair: Persons for whom massage is not advisable by doctors. Such as persons with thrombosis, serious aneurysm, acute venous aneurysm, various skin inflammations (such as subcutaneous tissue inflammation) or various skin infections. Otherwise it may aggravate or cause serious injury. ● Anyone with physical injuries or poor health should NOT use this product. Persons with acute lumbago, protrusion of intervertebral disc or displacement of a lumbar vertebra. Otherwise it may aggravate or cause serious injury. ● Do not put hands, arms or feet into the traveling massage mechanism while the chair is operating. ● Keep small children away from the chair. Climbing could result in falls that could lead to serious injuries. ● Do not climb onto the backrest or the armrests. ● Do not apply excessive pressure leaning back on the backrest. ● Keep your head away from reachable areas of the backrest and the back cover. ● Young persons or persons with physical disabilities that can not operate the chair on their own, should not use this product or without supervision. Anyone with weakened physical conditions should consult a doctor before using the chair. ● When massaging the neck area, pay attention to the intensity of the massage and make sure it does not hurt the neck muscles or nerves. ● Do not damage the power cord. Do not damage, alter, bend, twist or use it with any extension cords. Do not place the power cord close to a heater. A damaged power cord may result in electric shocks, short circuit or fires. Please consult with the retailer/dealer from which you bought the product or a designated authorized service center about maintaining your power cord. ● When engaging the heat function of massage wheels, avoid prolong contact with the skin in one position. Otherwise low-heat burns may occur. Even if the temperature is relatively lower at 104°F~140°F, low-heat burns may happen in spite of no obvious hot or painful sensation.
 Wet-hand operation forbidden	● Do not insert or pull out the power plug when your hands are wet. Otherwise electric shocks may happen.
 Disassembly forbidden	● Do not refit, disassemble or repair the product without the help of an authorized service provider. Otherwise fires, abnormal movements or personal injuries may happen.

Caution

 
 Must be followed	● The following persons (even if they are physically healthy at present) should consult a physician before using the product. (1) Persons with muscular atrophy; (2) Persons with any spinal or back pain or spinal condition; (3) Persons suffer from sprains or bruising easily; (4) Persons with motion sickness; (5) Persons who received a heart operation or another vascular operation. It may cause serious injury if not addressed properly. Otherwise, it may cause serious injury. ● Before sitting on the product, make sure there is no foreign objects obstructing any part of the chair. (Make sure there are no foreign objects on the back cover, the backrest, the seat surface, the lower leg/foot massage section or inside surface of the back cushion.) Otherwise, accidents or injuries from product failure may cause serious injury. Before sitting on the seat, make sure the massage wheels are in the retracted positions. ● Turn off the massage function before you get off the chair. ● When the lower leg/foot massage section is not retracting after the massage, retract the footrest with the remote button. ● When unplugging the chair, hold onto the head of the to plug and not the cord to avoid damaging to the power cord. Damaged cord could result in electric shock and serious injuries. ● Before moving the chair, be sure the backrest is in the upright position and the footrest is retracted in default positions. Otherwise, injuries may happen or damage to the chair. ● When moving the product by dolly, lay mats on the floor to avoid markings or damage to the floor. Do not roll the chair on engineered wood or soft wood floorings. Otherwise marks and damage may occur. ● Keep the safety lock key. Keep children away the remote control. ● Before moving the chair, make sure there are no obstructions around. If lifting is required, make sure to lift from the steel frame of the chair. Be sure to keep the chair in the upright position when lifting the chair when moving. ● Symptoms such as skin inflammation, itching or swelling when using the chair, stop the using the product immediately and consult a physician.
 Forbidden	● Do not use the product with other electrical devices at the same time, such as a heating blanket. ● Do not place your hands, arms, feet or any parts of your body to massage area that are not designed for the body parts to avoid discomfort or injuries. ● Do not put the knees between the calf massager. This may cause serious injury. ● Do not fall asleep while using the product. ● Do not use the product after drinking alcohol. ● If the airbag on the seat is not completely deflated, do NOT attempt to deflate the air bag by force or using any tools. Contact the manufacturer to resolve the matter.

⚠ Caution

 Forbidden	● Do not put hands or feet between footrest and seat base. ● Do not put hands or feet between footrest and side panel. ● Do not put hands or feet between seat base and side panel. ● Do not put hands or feet between the upper and the lower part of the footrest. ● Do not put hands or feet in the gap of seat base. ● Do not put pets on the massage chair. ● Do not pull out the power plug or turn off the power switch suddenly during massage operation.
	● Do not stand or sit on the backrest. This may lead to serious injury and damage to the product.
	● Do not stand or sit on the armrests.
	● Do not stand or sit on the lower leg/foot massage section or the footrest.
	● Do not drag or push the product after it is installed.
	● Do not move the product while there is a person sitting on it.
	● Do not use the product with other heating devices such as electric blankets. Otherwise fires may occur due to overheating.
	● Do not leave the remote controller on the seat, always return it to its holder.
 Wet-hand contact forbidden	● Do not place this chair in locations with high humidity such as the bathroom. Moisture will destroy electrical components resulting in product failure or worst, electrical shock and other serious injuries.
	● Do not use any liquid aerosol sprays around the chair. Otherwise, electric shocks, fire, short circuit or product failure may happen.
 Pull out the power plug	● Before cleaning or maintaining the product, always unplug the power cord.
	● In the case of a power failure, pull out the power plug at once. It is highly recommended to plug chair into a surge protector to protect the chair from shorting during outages.
	● When the product is not in used, pull out the power plug.


Warning:

When using the massage chair, the arm should not be placed on the wireless charger. The minimum distance between the arm and the wireless charger is 3.15 inches. (80mm)

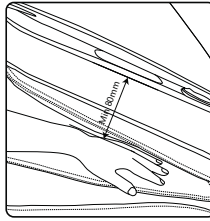


GROUNDING INSTRUCTIONS

 This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for the electric current to reduce the risk of electric shock. This product is equipped with a cord with an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances. **Danger-Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.**

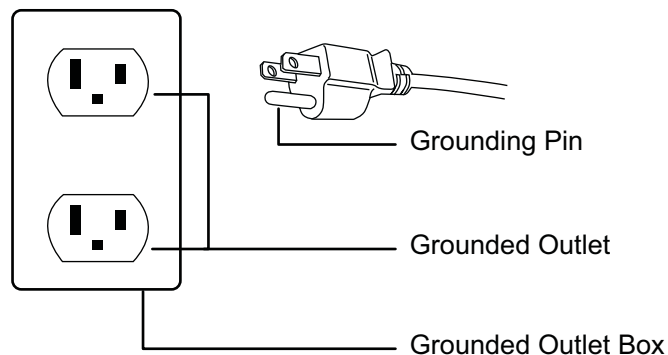


Product Parts

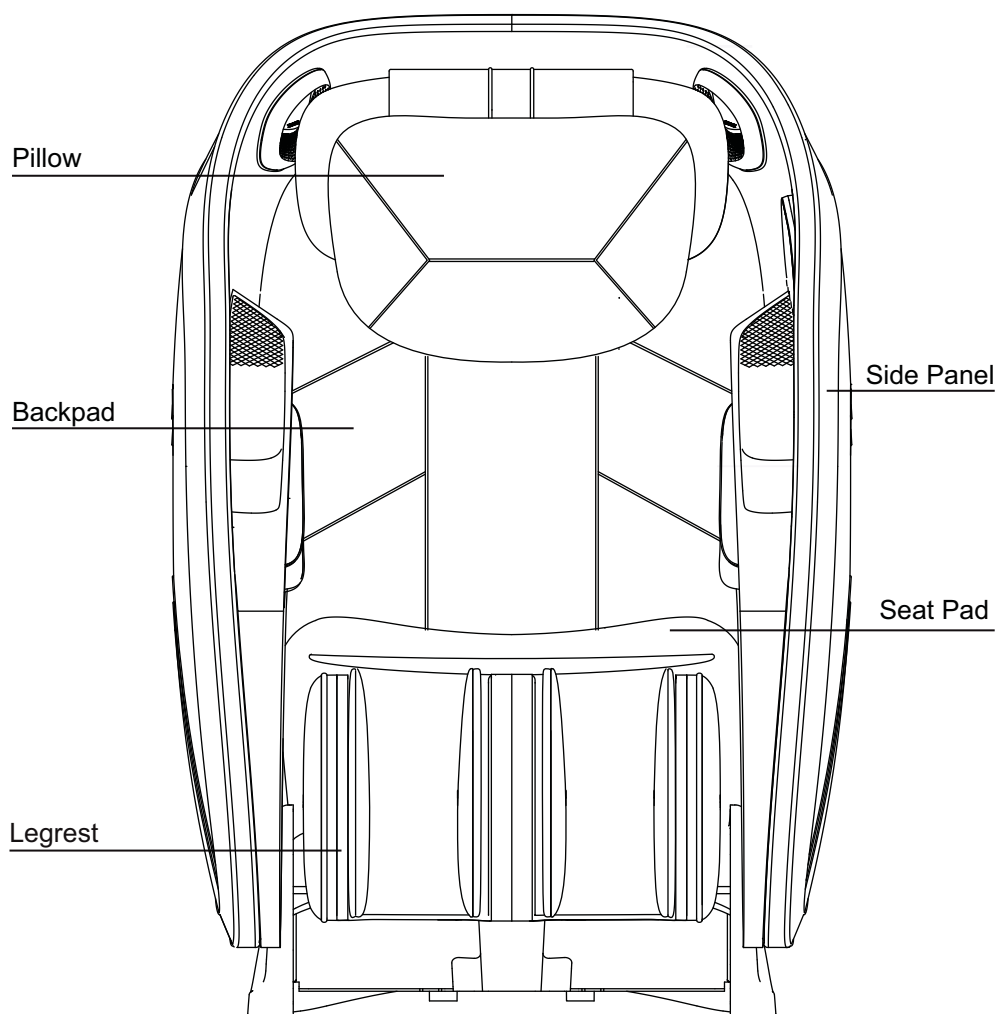 

Things To Know And Do Before Use


1 Installation position

 - Make sure there is enough space to recline the chair and for the user to get in and out of the chair freely.

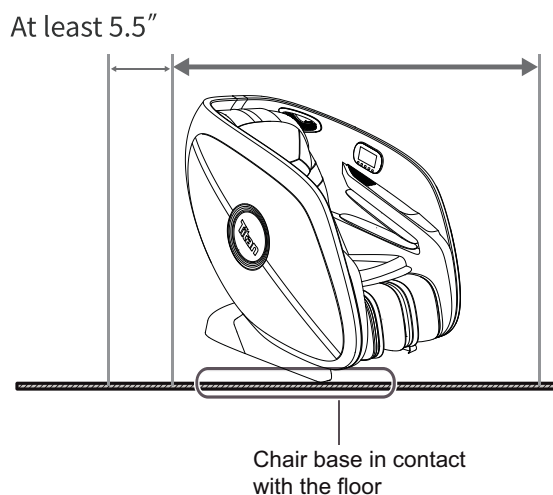


- Do not expose the product directly under the sunlight or in a high-temperature place. (e.g., in front of heating equipment or by a window where sunlight can cause the synthetic leather fade melt or crack)
- Install the product close to a power socket.

 2 Inspect the Space Around the Chair.

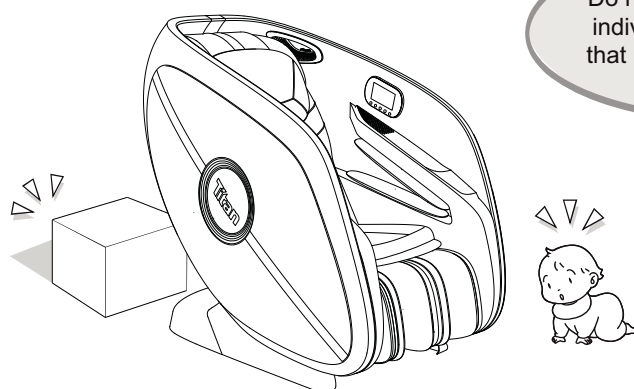

Do not place or use the chair near individuals, animals, or any items that might interfere with the chair's functionality.

 3 Ensure No Foreign Objects within the Seams of the Chair.

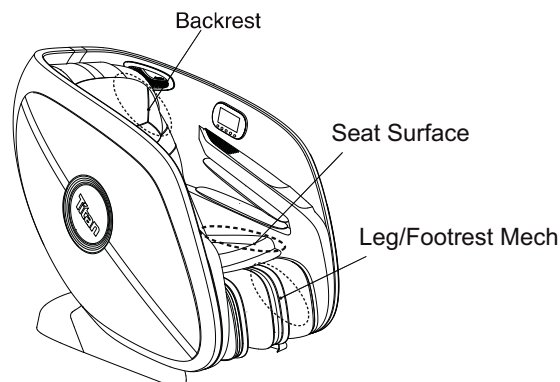

⚠ Caution

- Do not put hands or feet between footrest and seat base.
- Do not put hands or feet between footrest and side panel.
- Do not put hands or feet between seat base and side panel.
- Do not put hands or feet in the gap of seat base, otherwise injuries may happen.

4 Examine the Power Cord & Electrical Plug

⚠ Warning

- Inspect the power cord of dirt or dust that may have collected. Be sure the cord is kept clean and with NO visible damage.

Otherwise the lint and dust may lead to an electrical fire. Wipe down the plug with dry cloth.

- Do not damage the power line or the power plug.
- Do not bend or twist the power cord for any reasons.
- Do not place the power cable under heavy objects such as the chair itself. Keep the power cord away from any heating sources such as the heater vents, motors and anything that may generate heat.

A damaged power line or power plug may result in electric shocks, short circuits or fires.

Please consult the shop you bought the product or an authorized service center about maintenance method of the power line or the power plug.



Ensure the plug is fully inserted into the chair port, and keep the power cord untangled to prevent any potential damage.

5 Power on the Chair

 
- 1 Insert the power plug into the power outlet.
- 2 Turn the switch to the "I" (ON) position to activate the chair.

Warning

- Be sure the power cord is firmly and completely inserted into the power outlet. Otherwise electrical shocks or fires may occur because of overheating or power shorts.
- Abide by the regulations on use of the socket and the wiring devices strictly.
- Use a 110-120V~, 50/60Hz power supply. (Do not use the product in a foreign country or connect it with a transformer without permission.) Otherwise electric shocks, product faults or fires because of overheat may happen.
- Do not insert or pull out the power plug with wet hands. Otherwise an electric shock may happen.




6 Ensure that the massage rollers are correctly positioned

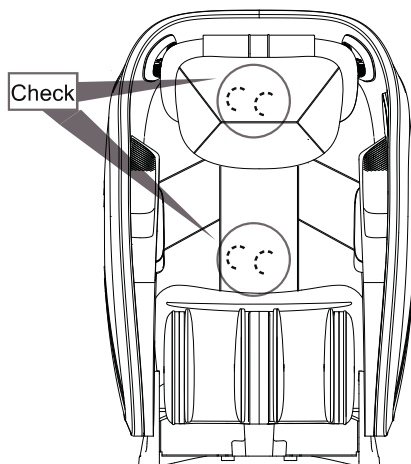

If rollers are not positioned correctly at the top of the backrest and at the waist of the backrest, press the power button to reset them to the default position.

7 Ensure that the Fabric is Not Damaged or Cracked.

 Examine the synthetic leather area where the massaging rollers move along the backrest, and make sure there is no damage or unusual wear.

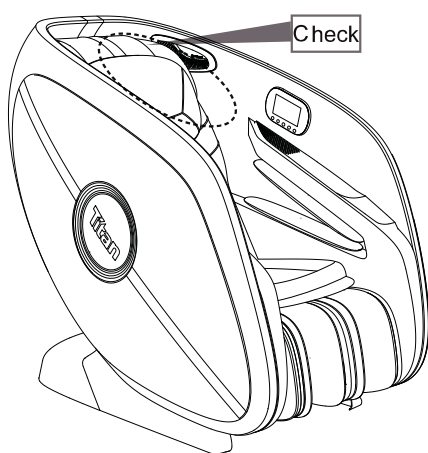

Warning

- Before use, raise the back cushion and check whether fabrics lining pointed out in the figure are undamaged. Even if the fabric is slightly damaged, stop using the product immediately. Pull out the power plug and send the manufacturer for a replacement cover. If the product is used when there is fabric damage, you may get injured or get an electric shock.

Operation Guide

1. Display screen button Instructions

- **On/Off/Power**

During massage, press the button to pause the massage session. Press again to continue massage.

- **Intensity**

3 levels of massage intensity adjustments.

- **Strength**

3 levels of massage strength adjustments.

- **Restore**

To adjust the backrest position, press the button to restore the backrest.

- **Recline**

To adjust the backrest position, press the button to recline the backrest.

2. Wireless Charger Instruction

Put the phone for wireless charging during the massage.

3. External Payment Box Instruction



External Payment Box Operation Guide

The external payment box is equipped with: Nayax POS Machine (card payments) and Bill Acceptor (cash payments)

- **When Using the Nayax POS Machine**

Initiate your massage in 4 simple steps:

- ① Select Chair: Choose either the Left or Right massage chair.
- ② Choose Duration & Price: \$3 for 9 minutes or \$5 for 15 minutes.
- ③ Confirm Selection: Press the OK button to proceed.
- ④ Swipe Card: Complete payment to start your massage.

- **When Using the Bill Acceptor**

Insert 1, 5, 10, or 20 bills (no coins accepted).

\$1 = 3 minutes of massage time.

The system will automatically begin once payment is received.

Voice Broadcast

 
- **Plays when the customer sits without making a payment for 30 seconds, and 40 seconds.**
“No payment detected. Chair adjusting”.
- **Plays when the customer sits without making a payment for 1 minute, and anti-occupation function to remove the customer starts.**
“No payment detected. Chair adjusting”.
- **Plays after payment is completed and the massage session begins.**
“Payment complete, Starting now.”
- **Plays if the customer moves during the massage.**
“Stay seated for safety. “
- **Plays when there is 1 minute remaining.**
“1 minute left. Thank you.”
- **Plays when the session ends.**
“Session over. Gather your belongings.”

Cleaning And Maintenance

Cleaning of the synthetic leather

Wipe the synthetic leather with a soft dry cloth.

- **Do not clean the product with solutions containing chemicals such as thinners, gasoline and alcohol.**
- **Be sure that leather cleaner will not harm the synthetic leather by reading the label.**
- **If the synthetic leather is very dirty, wipe it with the method below.**
 - ① Wet a soft cloth into water or 3% to 5% neutral detergent containing hot water and wring it out.
 - ② Be sure the soft cloth is well wrung out till there is NO water dripping from the cloth.
 - ③ Wipe surface of the synthetic leather with the soft cloth.
 - ④ Be sure to rinse out the cloth multiple times when wiping down.
 - ⑤ Have the synthetic leather dry naturally. Do not use dryer.
- **If it is difficult to remove the stains on the synthetic leather, try soak a piece of melamine foam into a neutral detergent to wipe down several times.**
- **Do not dry the surface by a hair dryer.**
- **Surface of the synthetic leather may fade or discolor if an inappropriate detergent is used. Test the cleaning solution in small section prior to fully applying.**
- **Do not clean the hard plastic parts with any alcohol, thinner or benzine based agents. This may cause discoloring or removal of the color all together.**

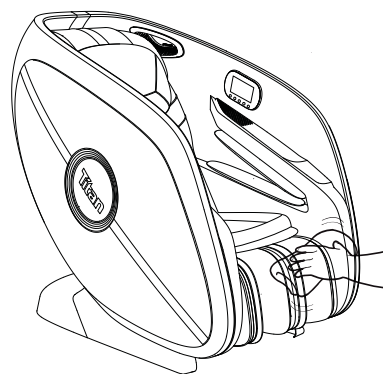

Cleaning of the plastic parts

 
1 Put a piece of soft cloth into water mixed with a neutral detergent contained hot water, wring it out and wipe the plastic parts.

- **Do not clean the product with chemicals such as thinners, gasoline and alcohol.**

2 Wipe down with a microfiber or soft cloth wrung out in clean water.

- **Be sure the cloth is well wrung out with no water dripping, leaving the cloth damp.**

3 Have the plastic parts dry naturally.

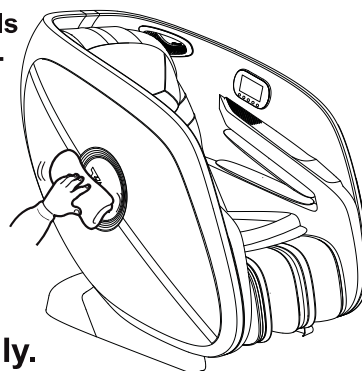

Troubleshooting

If an issue occurs, inspect and trouble shoot according to the corresponding method below.

If the problem is not solved, contact the manufacturer for further instructions or service.

Fault	Cause and elimination method
The massage chair won't operate after being plugged in.	(1) Check if the power plug is properly connected and receiving electricity. (2) Verify the power switch at the rear bottom of the chair is in the "I" (ON) position.
During use: Controller works but massage chair doesn't respond.	After prolonged use, if the massage chair motor overheats, the system will automatically activate temperature protection. Power off the chair and allow 30-50 minutes for the internal motor to cool down.
During use: Both controller and massage chair become unresponsive.	(1) When auto-timer function completes its cycle, press any button to reactivate operation. (2) Power off completely, then restart the massage chair.

 
If above solutions are not applicable, kindly refer to "Product Warranty Card" and contact service center.

Troubleshooting (Continued)

Expected sounds and feelings when using the massage chair.

If you experience any of the following sensations or sounds while using the chair, please note that they are normal functions and do not indicate a defect.

- When chair extends or retracts you will hear gears moving and clicking.
- A rubbing sound will be mildly heard when the massage heads are activated.
- When the massage heads are tapping you may hear a mild clicking sound.
- Friction sounds will be experienced as the rollers are activated.
- As the rollers move up and down the motor produce a sound.
- As the rollers are activated you will hear spinning of belts rotating.
- Motor sounds will be experienced.
- As the massage heads are squeezing, a mild squeaking sound will be heard.
- When sitting in the chair as the roller heads are tapping and rolling a mild squeaking sound may be produced from the joints.
- Common joints that may squeak would be from the side panels
- Friction sound between the massage wheels and the fabric.
- Motors will be heard from the pump when the airbags deflate.
- While the airbags are activated you will hear air valves alternating. When the legrest is moving, you will hear mild squeak and a motor operating.

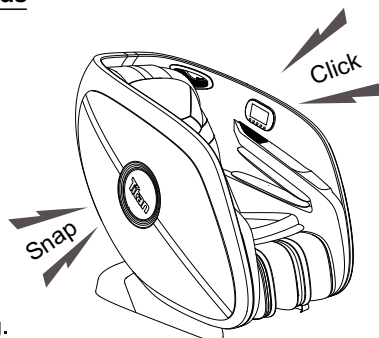

If the sound is loud, it is also possible that the product has failed.

- In this case, have the product inspected and repaired by an authorized service center.

Warning

- **Do not refit, disassemble or repair the product without permission.** Otherwise fires, abnormal movements or personal injuries may happen.

Warning

- **In the case of any abnormality or fault, stop the product immediately and pull out the power plug to avoid fuming, fires and electric shocks.**

<Abnormality and fault example>

- The product fails to work after the power switch is turned to the ON position;
- When the power cable is moved the chair will turn off and on.
- In use, the product gives off a burning smell or an abnormal sound;

The product upholstery is deformed or abnormally hot.

If any of these symptoms occur, have the product inspected and repaired by an authorized service center immediately.

Specifications

Description	Specifications
Model No.	Zena
Rated Voltage	110-120V~
Rated Frequency	60Hz
Rated current	1.4A
Dimension of Packing Carton(LxWxH)	Product carton: 56.7" x 34.1" x 50.4"
Weight	Product gross weight: 167.6 lbs
	Product net weight: 212.1lbs
Dimension(LxWxH)	Upright: 53.2" x 32.2" x 47.6"
	Recline: 61.7" x 32.2" x 39.5"
Usage condition	Environment temperture: 50°F-104°F
	Contrasting humidity: 30-85RH
Storage condition	Storage temperture: 68°F-140°F
	Storage humidity level: 30-85RH
Safety feature	Equipped with overheated and power surge safety protection.
Using benefits	Increasing blood circulation; Relieving muscular fatigue

This equipment contains a certified radio transmission module:
FCC ID: YMX-ES3218D1

FCC Radiation Exposure Statement

 
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 3.15 inches(80mm) during normal operation.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.



Industry Canada Notice

This device complies with Industry Canada licence-exempt RSS standard(s).

1. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

2.Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Avis d'Industrie Canada

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

1. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

2. Cet appareil numérique ne dépasse pas les Rèlements sur l'interférence radio par un appareil numérique de classe B stipulées dans les Règlement sur l'interférence radio d'industrie Canada.

