 


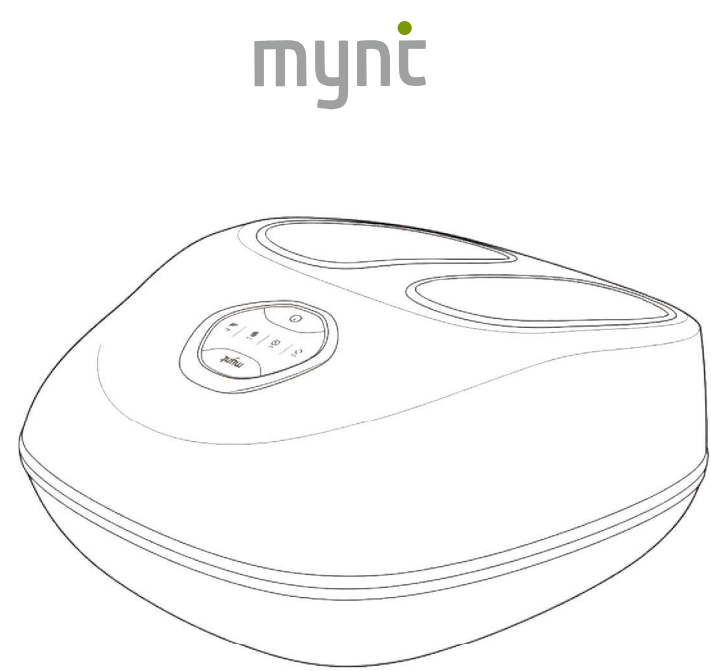

User's Manual
Electric Foot Massager with Heat
Model: MS0268



For FAQs and more information, please visit:
[HelloMynt.com](https://www.hellomynt.com)

IMPORTANT SAFEGUARDS

WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING: READ ALL INSTRUCTIONS BEFORE USING.

⚠ DANGER – TO REDUCE THE RISK OF ELECTRIC SHOCK, PLEASE

- Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- DO NOT reach for an appliance that has fallen into water. Unplug it immediately.
- NEVER use pins or other metallic fasteners with this appliance.

⚠ WARNING – TO REDUCE THE RISK OF BURNS, ELECTRIC SHOCK, FIRE OR INJURY TO PERSONS, PLEASE

- An appliance should NEVER be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts or attachments.
- Not for use by children.
- Close supervision is necessary when this unit is used by, on, or near children, invalids, or disabled persons.
- DO NOT use outdoors.
- Use this appliance only for its intended use as described in this manual. DO NOT use attachments not recommended by Mynt; specifically, any attachments not provided with the unit.
- DO NOT carry this appliance by the supply cord or use cord as a handle.
- NEVER operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return it to a Mynt Service Center for examination and repair.

- Keep the cord away from heated surfaces.
- NEVER operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- NEVER drop or insert any object into any opening.
- DO NOT operate where aerosol (spray) products are being used or where oxygen is being administered.
- DO NOT stand on or in appliance. Use only while seated.
- DO NOT operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- Use heated surfaces carefully. May cause serious burns. DO NOT use over insensitive skin areas or in the presence of poor circulation. The unattended use of heat by children or incapacitated persons may be dangerous.
- Keep long hair away from massager while in use.
- DO NOT use any other AC Adapter than what is supplied with the product. Use of any other AC adapter may damage the product and may increase risk of harm to user or property.

SAVE THESE INSTRUCTIONS

⚠ CAUTION – READ ALL INSTRUCTIONS CAREFULLY BEFORE OPERATING, PLEASE

- Consult your doctor prior to using this product, if:
 - You are pregnant
 - You have a pacemaker
 - You have any concerns regarding your health
- Not recommended for use by diabetics.
- NEVER leave the unit unattended, especially if children are present.
- NEVER cover the unit when it is in operation.
- If at any time, soreness, rash, or pain occurs, discontinue use and consult your physician.
- DO NOT use this product for more than 15 minutes at a time.

- Extensive use could lead to the product's excessive heating and shorter life. Should this occur, discontinue use and allow the unit to cool before operating.
- NEVER use this product directly on swollen or flamed areas or skin eruptions.
- DO NOT use this product as a substitute for medical attention.
- NEVER use this product while in bed.
- This product should NEVER be used by any individual suffering from any physical ailment that would limit the user's capacity to operate the controls or who has sensory deficiencies.
- This product should not be used by children or invalids without adult supervision.
- This product is intended for household use only.
- This product is not intended for use in automobiles.

Note:

This unit may turn off after an extended period of use. LED may remain on. If your unit overheats, unplug the unit and let cool for 30 minutes before plugging in again and continuing use.

⚠ CAUTION – TO AVOID INJURY AND IRREPARABLE DAMAGE, ALWAYS REMAIN SEATED WHEN USING THE MASSAGER. NEVER STAND ON THE UNIT

INSTRUCTIONS FOR USE



Fig.1



Fig.2

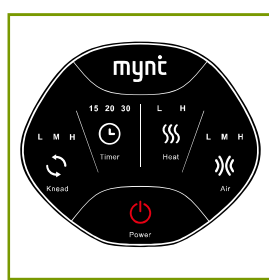 


Fig.3

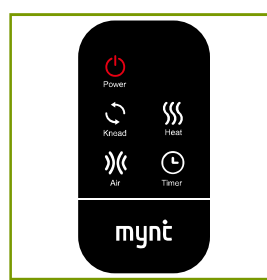 


Fig.4

1. Connect the adapter with the foot massager (Fig.1), then plug the adapter to the electric outlet.
2. It is highly recommended that you wear socks while using the foot massager. DO NOT use the massager with shoes on.
3. Place the massager on plain solid floor in front of your chair or sofa, and put your feet in the massager in a comfortable position (Fig.2).
4. To activate the massager, press the power button on the control panel or the remote control (Fig.3&4). The massage procedure will according to the default settings. You can adjust the settings to how you like with the control buttons (see the followings).

⌚ MESSAGE INTENSITY

There are three levels of massage intensity. Press the button to change the intensity: L-low, M-medium, H-high.

⌚ TIMER

You can choose the auto-off timer from 15 min, 20 min and 30 min by pressing the timer button.

⌚ HEAT

There are two levels of heating. Press the button to change the heating level: L-low, H-high.

⌚ AIR COMPRESSION INTENSITY

There are three levels of air compression intensity. Press the button to change the intensity: L-low, M-medium, H-high.

Note:

For your safety, heat can only be used with the massage function. When finished, turn the unit OFF by pressing the POWER BUTTON and unplug.

LOCATION OF PARTS AND CONTROLS

ROTATING MESSAGE NODES

For tired soles and arches.

RHYTHMIC AIR MASSAGE

Rhythmic air massages by squeezing feet in a rhythmic wavelike motion.

SOOTHING HEAT

Up to 149°F, customizable warmth for ultimate comfort.



REMOVABLE, WASHABLE INSERTS

Unzip the fabric to clean.

SPECIFICATIONS

Product Model	MS0268
Adapter Input	100-240V~ 50/60Hz
Adapter Output	12V $\approx$ 2.5A
Rated power	30W
Dimensions	14.1"12.8"6.5in / 375*325*165mm
Net Weight	6.17lbs / 2.8kg
Timer	15/20/30 mins
FCC ID	YMX-MS0268

FCC CAUTION

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

MAINTENANCE

TO STORE

Place massager in its box or in a cool, dry place. Avoid contact with sharp edges or pointed objects. To avoid breakage, DO NOT wrap the power cord around the unit. DO NOT hang the unit by the cord.

TO CLEAN THE MASSAGER

Unplug the unit and allow it to cool before cleaning. Clean only with a soft, slightly damp cloth. NEVER allow water or any other liquids to come into contact with the unit. Unzip and remove the washable sleeves to wash. For hygiene reasons, we suggest you hand wash the sleeves.

- DO NOT immerse in any liquid to clean.
- NEVER use abrasive cleaners, brushes, or strong chemicals that may or may not be flammable and/or damaging to the product to clean.
- DO NOT attempt to repair the massager. There are no user-serviceable parts. For service, contact Consumer Relations at the number listed in the Warranty section.

FAQs

1. What isn't covered by the warranty?
 - Purchases from unauthorized resellers
 - Improperly operated devices
 - Lost or stolen products
 - Purchases made over limited warranty time (unless otherwise stated)
 - Non quality-related issues (after 30 days of purchase)
 - Free products
2. When does the warranty begin?

Warranty begins from the day you place your order.
3. How do I claim the warranty?

Refer to the specific FAQs, send an email to support@hellomynt.com with your receipt.
4. What if I don't have any proof of purchase?

If you made your purchase through an authorized reseller, contact the reseller for a copy of receipt. If the product was a gift, ask the gifter for a copy of the receipt or claim the warranty on your behalf.
5. Will the warranty be renewed if my product is replaced?

No, it won't be renewed after a replacement has been provided.

Customer Service

- 12-Month Warranty
- Lifetime Technical Support
- [Support@hellomynt.com](mailto:support@hellomynt.com)

For purchases made through Mynt@Amazon:

30-Day Money-Back Guarantee for Any Reason
You may contact Amazon to return your undamaged product and packaging within 30 days of purchase to receive a FULL REFUND for any reason. If the reason for return isn't quality-related, the customer must pay the return shipping costs.
Long Warranty Time for Quality-Related Issues
We take care of all quality-related issues with a REPLACEMENT OR FULL REFUND – for 12 months.