 


FORTNITE

8+

ATK ALL TERRAIN KART USER GUIDE

 
CONTENTS:

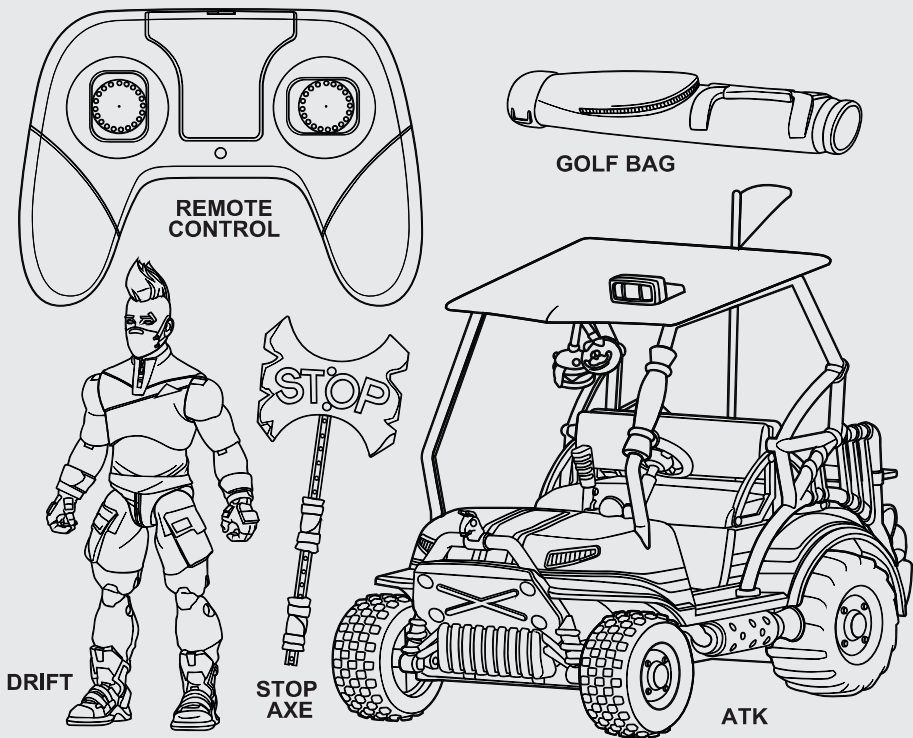





jazwares
FNT0118

Used with permission. Manufactured and Distributed by:
Jazwares, LLC, Sunning, FL 33326, USA
Jazwares, 104 Crane Grove, London, KY 40321, United Kingdom
Jazwares GmbH, Mönchberg-Str. 8, 64295 Darmstadt, Germany
www.jazwares.com / www.jazwares.de

© 2019 Epic Games, Inc. Fortnite and its logo are registered trademarks of
Epic Games, Inc. in the USA (Reg. U.S. Pat. & Tm. Off.) and elsewhere.
All rights reserved.

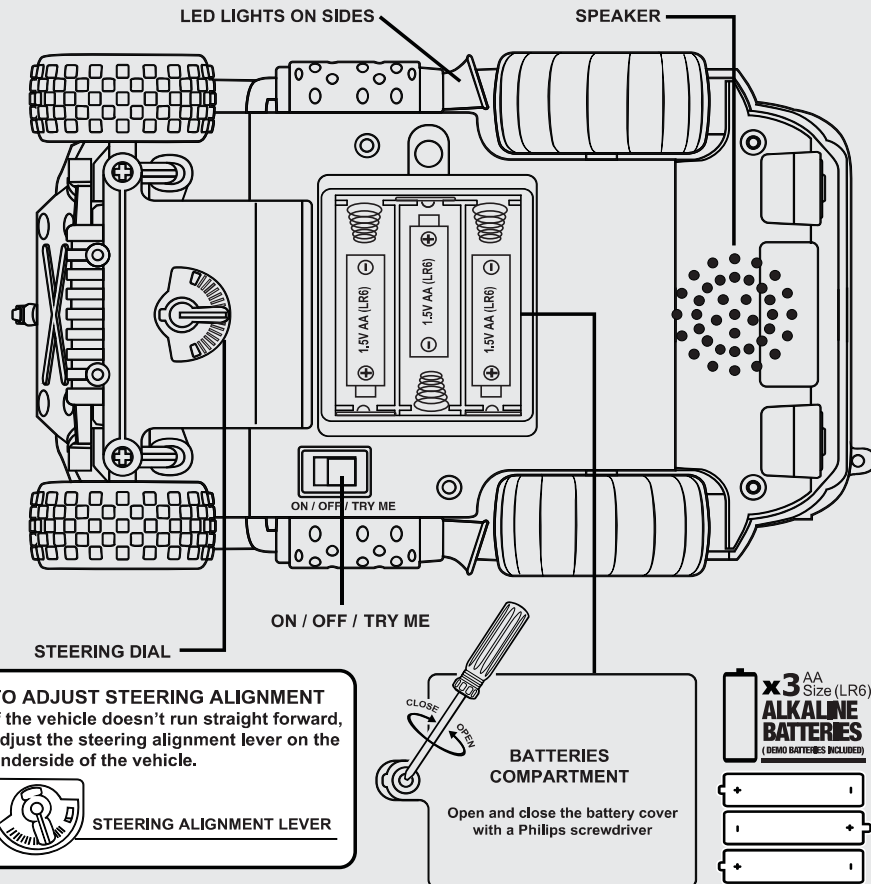

    TO ADJUST STEERING ALIGNMENT
If the vehicle doesn't run straight forward,
adjust the steering alignment lever on the
underside of the vehicle.

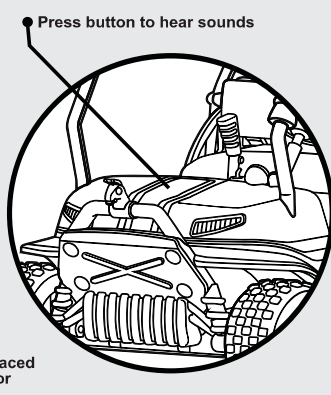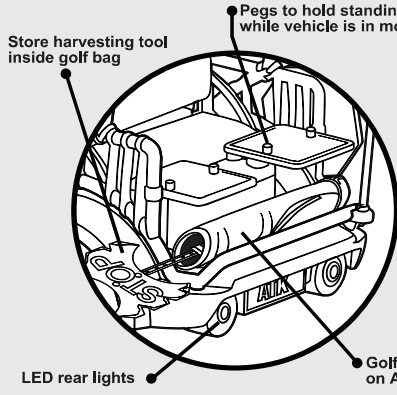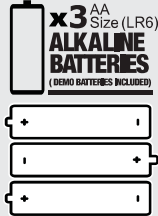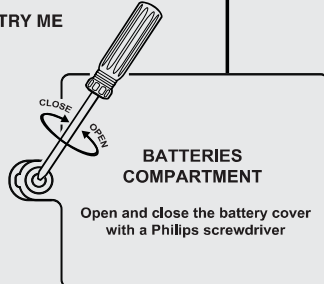

CE

Protect the environment by not disposing
of this product with household waste!
(2012/19/EU). Check your local authority
for recycling advice and facilities.

IMPORTANT:
Please save this instruction sheet.
It contains valuable product information.

PROBLEMS?
Please call us: 1.800.3.70.1827
(U.S. Customer Care)

HOW TO CLEAN YOUR ATK ALL TERRAIN KART

- Do not use chemical or abrasive cleaners.
- Do not submerge in water.
- To clean, wipe with a damp cloth. Use water only.

Conforms to toy safety standards CPSC, ASTM-F963 and EN71.

- Consult the dealer or an experienced radio/TV technician for help.
- is connected.
- Connect the equipment into an outlet on a circuit different from that to which the receiver
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Following measures:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

WARNING! Changes or modifications not expressly approved by the manufacturer responsible for interference received, including interference that may cause undesired operation.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference that may be received.

FCC ID: YN1JAZWAR18 FCC ID: YN1JAZWAR17

BATTERY WARNINGS:

1. Batteries are to be replaced by an adult.
2. Non-rechargeable batteries are not to be recharged.
3. Rechargeable batteries are only to be charged under adult supervision.
4. For best performance, only the recommended batteries or their equivalent are to be used.
5. Batteries must be inserted with correct polarity.
6. Do not mix new and used batteries.
7. Do not mix different types of batteries.
8. Do not mix different types of batteries.
9. Exhausted batteries are to be removed from the toy.
10. The supply terminals are not to be short-circuited.


PROBLEM	SOLUTION
Transmitter controller does not work	The controller light is off, its battery is drained. Replace the controller battery.
Vehicle does not respond properly	Major reason is out of range. Bring controller closer to the vehicle. If problem still happens, remove the controller batteries and replace with new batteries and restart (ON/OFF) the vehicle.
Vehicle does not move	1. Stop operation, switch off the power and rest your vehicle a few minutes. 2. Check the position of the batteries in the vehicle, they may have been knocked loose during play.
Vehicle does not drive straight.	1. Adjust the steering dial underneath the front axle, left or right, until the wheels point straight forward.
Vehicle does not respond to controls.	3. Interference from surrounding electrical machinery. Bring to a wide open space.
Vehicle will not START	1. Transmitter controller battery is drained. Replace the controller battery. 3. Batteries are drained. Charge batteries and/or install new batteries. 2. Batteries are installed with incorrect polarities. Check the + and - markings to make sure the batteries are properly aligned.

TROUBLE SHOOTING

Range of Play: 25 meters/82 feet.
Frequency band range: 2410-2473 MHz.
Maximum radio-frequency power: 0 dBm

HOW TO PLAY:

 1. Turn the vehicle **ON**, then turn the transmitter controller **ON** within 30 seconds.
2. The LCD on controller will start blinking.
3. Once the pairing is successful, the LED on controller will stop blinking and stay on.
4. If pairing is unsuccessful, turn the vehicle and controller **OFF** and try again.

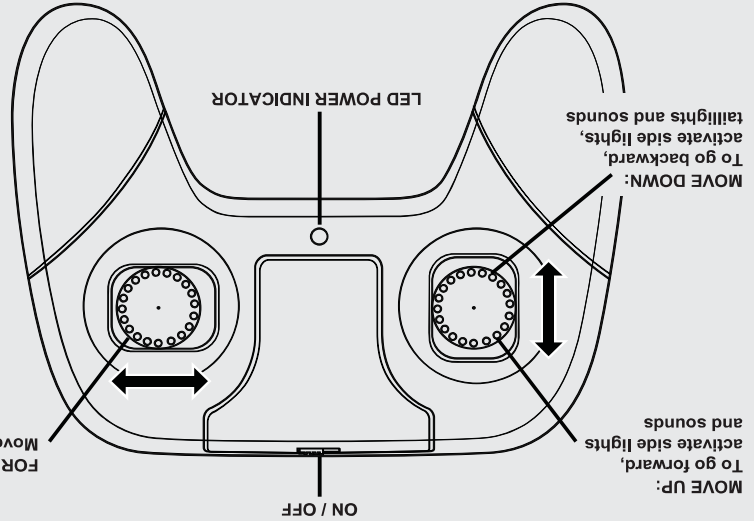

MOVE DOWN:
To go backward,
activate side lights,
tailights and sounds

MOVE UP:
To go forward,
activate side lights,
and sounds

FOR TURNS:
Move side to side

LED POWER INDICATOR

ON / OFF