

GV55CG User Manual

LTE/GPS Vehicle Tracker

Revision: R1.00



Document Title	GV55CG User Manual
Version	R1.00
Date	2026-06-30
Status	Release
Document Control ID	QSZTGV55CGUM001

General Notes

Queclink offers this information as a service to its customers, to support application and engineering efforts that use the products designed by Queclink. The information provided is based upon requirements specifically provided to Queclink by the customers. Queclink has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by Queclink within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

Copyright

This document contains proprietary technical information which is the property Queclink Wireless Solutions Co., Ltd. The copying of this document, distribution to others, and communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights are reserved in the event of a patent grant or registration of a utility model or design. All specifications supplied herein are subject to change without notice at any time.

Contents

Contents	3
Table Index	4
Figure Index	错误！未定义书签。
0. Revision History	4
1. Introduction	6
1.1 Reference	6
1.2 Terms and Abbreviations	6
2. Product Overview	6
2.1. Check Parts List	6
2.2. Parts List	7
2.3. Interface Definition	7
3. Get Started	9
3.1. Open the Case	9
3.2. Install a SIM Card	10
3.3. Power Connection	11
3.4. Ignition Detection	11
3.5. Digital Input	11
3.6. Analog Input	11
3.7. Digital Outputs	11
3.8. Device Status LED	12

Table Index

TABLE 1. GV55CG PROTOCOL REFERENCE 6

TABLE 2. TERMS AND ABBREVIATIONS6

TABLE 3. PARTS LIST 7

TABLE 4. DESCRIPTION OF PIN CONNECTIONS8

TABLE 5. GV55CG USER CABLE COLOR DEFINITION 错误！未定义书签。

TABLE 6. ELECTRICAL CHARACTERISTICS OF IGNITION DETECTION 11

TABLE 7. ELECTRICAL CHARACTERISTICS OF THE DIGITAL INPUTS 11

TABLE 8. ELECTRICAL CHARACTERISTICS OF DIGITAL OUTPUTS12

TABLE 9. DEFINITION OF DEVICE STATUS AND LED 13

0.Revision History

Revision	Date	Author	Description of change
----------	------	--------	-----------------------

1.00	2025-06-30	Finn Fu	Initial
------	------------	---------	---------

1.Introduction

The GV55CG is a powerful GPS locator designed for vehicle or asset tracking. It has superior receiver sensitivity, fast TTFF (Time to First Fix) and supports LTE. Its location can be monitored in real time or periodically tracked by a backend server or other specified terminals. It has Bluetooth. The GV55CG has multiple input/output interfaces that can be used for monitoring or controlling external devices. Based on the integrated @Track protocol pro, the GV55CG can communicate with a backend server through the LTE network to transfer reports of emergency, geo-fence boundary crossings, low backup battery and scheduled GPS position as well as many other useful functions. Users can also use GV55CG to monitor the status of a vehicle and control the vehicle by its external relay output. System integrators can easily set up their tracking systems based on the full-featured @Track protocol.

1.1Reference

Table 1.GV55CG Protocol Reference

SN	Document name	Remark
[1]	GV55CG @Track Protocol Pro	The air protocol interface between GV55CG and backend server.

1.2Terms and Abbreviations

Table 2.Terms and Abbreviations

Abbreviation	Description
Out1	Ouput1
Out2	Ouput2
IN	Input
IGN	Ignition Wire
GND	Ground
VIN	Power in

2.Product Overview

2.1.Check Parts List

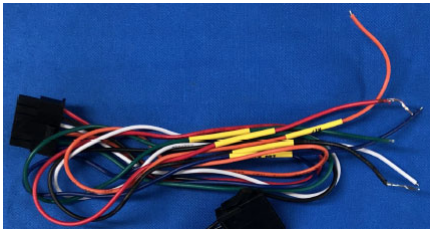
Before starting, check whether all the following items have been included with your GV55CG. If anything is missing, please contact your supplier.

Figure 1.Appearance of GV55CG



2.2.Parts List

Table 3.Parts List

Name	Picture
GV55CG tracker	86.75mm*46.37mm*18.14mm
Cable	

2.3.Interface Definition

The GV55CG has one 6 PIN interface connector. It contains the connections for power, IGN, Output1, Output2 etc are shown in the following figure:



Figure 2.The 6 PIN Connector on the GV55CG

Table 4.Description of 6 PIN Connections

Index	PIN Name	Description
1	Out1	Ouput1
2	Out2	Ouput2
3	IN	Input
4	IGN	Ignition Wire
5	GND	Ground
6	VIN	Power in

3. Get Started

3.1. Open the Case



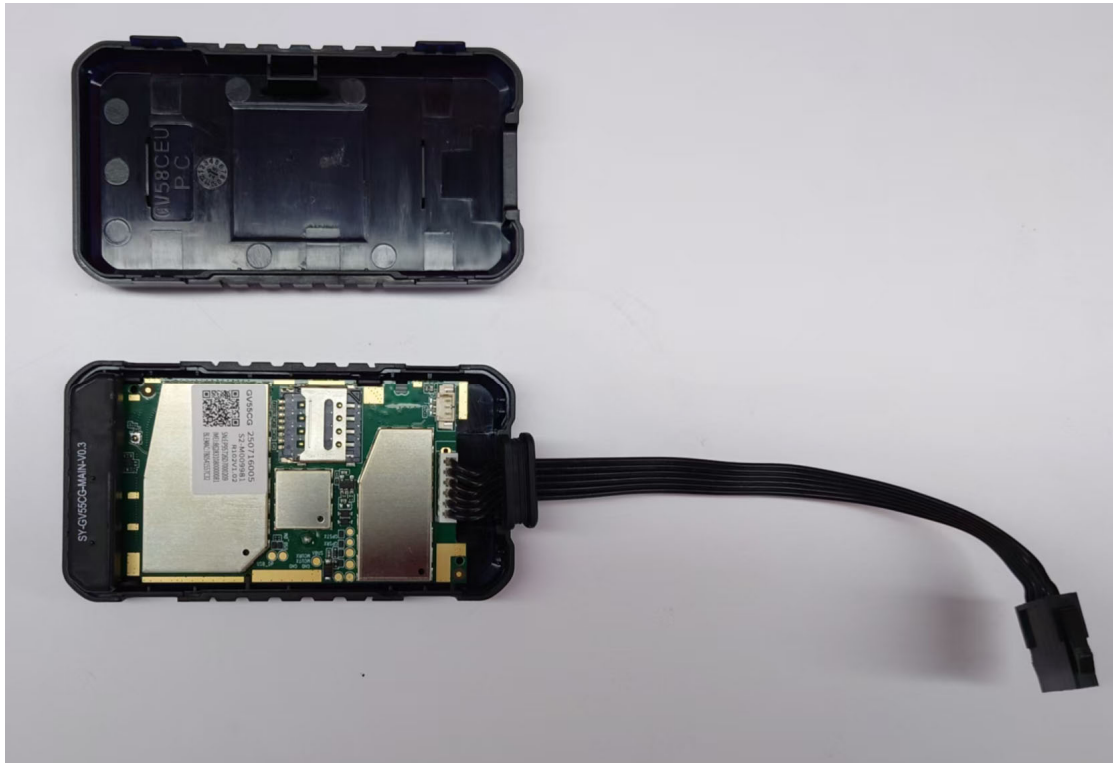


Figure 3.Open the Case

3.2.Install a SIM Card

Open the case and ensure the unit is not powered (unplug the 16Pin cable and switch the internal battery to the OFF position). Slide the holder right to open the SIM card holder. Insert the SIM card into the slot as shown below with the yellow colour contact area facing down. Take care to align the cut mark. Close the SIM card holder. Close the case.

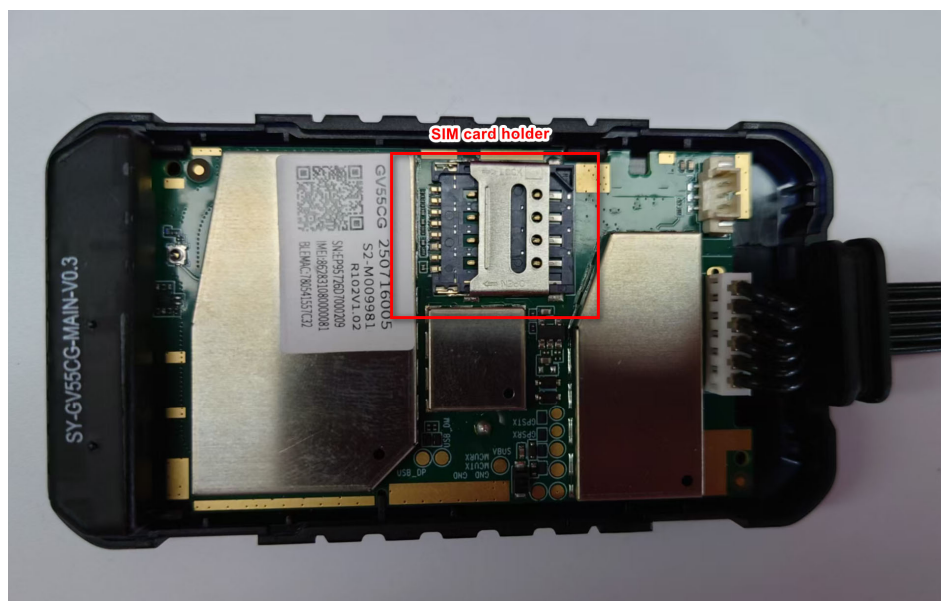


Figure 4.SIM Card Installation

3.3.Power Connection

VIN /GND is the power input pin. The input voltage range for this device is from 8V to 32V. The device is designed to be installed in vehicles that operate on 12V or 24V systems without the need for external transformers.

3.4.Ignition Detection

Electrical Characteristics of Ignition Detection

Logical status	Electrical characteristics
Active	5.0V to 32V
Inactive	0V to 3V or open

Figure 5.Typical Ignition Detection

IGN is used for ignition detection. It is strongly recommended to connect this pin to ignition key "RUN" position as shown above.

An alternative to connecting to the ignition switch is to find a non-permanent power source that is only available when the vehicle is running, for example, the power source for the FM radio.

IGN signal can be configured to start transmitting information to the backend server when ignition is on, and enter the power saving mode when ignition is off.

3.5.Digital Input

There are three general purpose digital input on GV55CG. It is negative triggers.

Table 5.Electrical Characteristics of the Digital Inputs

Logical status	Electrical characteristics
Active	0V to 0.8V
Inactive	Open

The following diagram shows the recommended connection of a digital input.


3.6.Analog Input

There are two analog inputs on GV55CG, and the analog input voltage range is from 0 to 32V. The following diagram shows the recommended connection.

3.7.Digital Outputs

There are two digital outputs on GV55CG for negative outputs (Out1 and Out2). One of them(can be configurable as positive outputs. As negative outputs, all are open drain type and GV55CG

the maximum drain current is 150 mA;

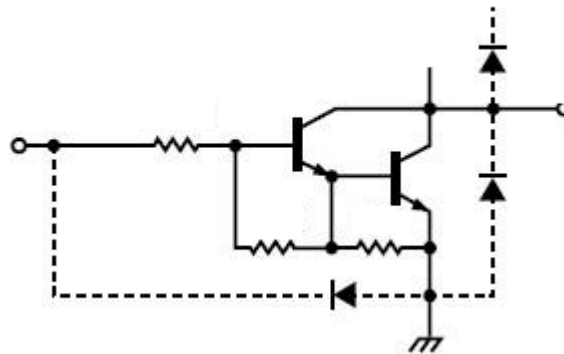

Digital Output Internal Drive Circuit

Electrical Characteristics of Digital Output

Logical status	Electrical characteristics
Enable	<1.5V @150 mA
Disable	Open drain

Typical Connection with LED (Positive Output)

Note:

1. OUT1 will latch the output state during reset.
2. Many modern relays come with a flyback diode pre-installed internal to the relay itself. If the relay has this diode, ensure the relay polarity is properly connected. If this diode is not internal, it should be added externally. A common diode such as a 1N4004 will work in most circumstances.

3.8.Device Status LED

Figure 6.GV55CG LED on the Case

LED	Device status	LED status
LTE (Note 1)	Device is searching LTE network.	Fast flashing (Note 3)
	Device has registered to LTE network.	Slow flashing (Note 4)
	SIM card needs pin code to unlock.	ON
GPS (Note 2)	GPS chip is powered off.	OFF
	GPS sends no data or data format error occurs.	Slow flashing
	GPS chip is searching GPS info.	Fast flashing
	GPS chip has gotten GPS info.	ON
PWR (Note 2)	No external power and internal battery voltage is lower than 3.35V.	OFF
	No external power and internal battery voltage is below 3.5V.	Slow flashing
	External power in and internal battery is charging.	Fast flashing
	External power in and internal battery is fully charged.	ON



Table 6. Definition of Device Status and LED

Note:

1. LTE LED cannot be configured.
2. GPS LED and PWR LED can be configured to turn off after a period of time by using the configuration tool.
3. Fast flashing: for GSM LED is about 60 ms ON/780 ms OFF; for GPS LED and PWR LED is about 100 ms ON/100 ms OFF.

GV55CG

4. Slow flashing: for GSM LED is about 60 ms ON/1940 ms OFF; for GPS LED and PWR LED is about 600 ms ON/600 ms OFF.

FCC regulatory conformance:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

RF Exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.