

User's Manual

Congratulations on your new purchase of a Headrest Entertainment System, Please take a moment to fully review this owner's manual thoroughly prior to the initial operation, which will provide you with the best understanding to properly opeate your new Headrest Entertainment System.

Description of Buttons

POWER	DIMMER	V.SEL	EXIT	⏮	⏭	⏩	■
-------	--------	-------	------	---	---	---	---


	DVD	USB	V.SEL
POWER	POWER ON/OFF		
DIMMER	DIMMER ON/OFF		
V.SEL	V.SEL MODE DISPLAY		V.SEL SCREEN OFF
EXIT		BACK TO PREVIOUS FOLDER	
⏮	PREV CHAPTER	FILE UP	UP
⏭	NEXT CHAPTER	FILE DOWN	DOWN
⏩	PLAY/PAUSE		SELECT
■ x1	STOP	STOP	
■ x2	DVD READY	USB/SD MAIN MENU	

○ AV	SMART	USB	○
------	-------	-----	---

AV	Front AV input port	🔌	Wired Earphone input
SMART	SMART LINK Input polt	USB	USB Slot & Smart Phone Charging

How to change VIDEO Sources

This unit has 6 different Modes. DVD, USB, AV, AV2, SMART, DTV

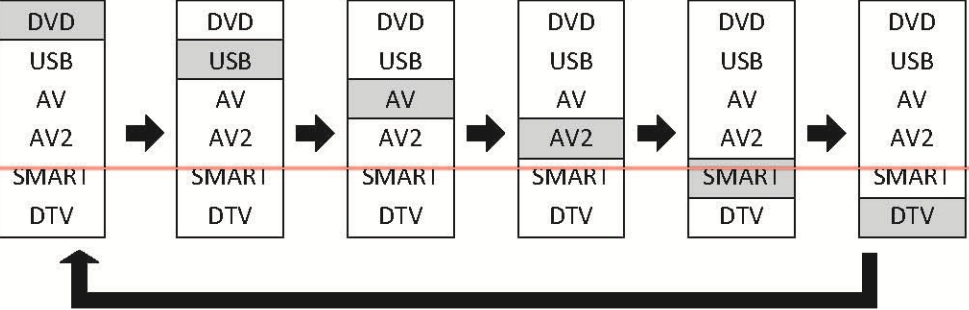

- DVD
 - Press OPEN button on the unit to load DVD or CD disc
 - Completely close the LCD flip until you hear the sound "Click"
 - DVD or CD disc will be playing automatically.
- USB
 - Put USB Memory on the slot locted on right bottom side (inside of folding flip)
 - Press V.SEL button on the unit or Remote to move cursor to USB on the screen
 - Select target file using |</>| buttons in the unit or </> button on the remote
 - Press"PLAY" button on the unit or remote to play & pause the file
 - Press"EXIT" button on the unit or remote to move to previous folder
- AV
 - AV input locate on the left bottom side of unit(Inside of folding flip)
 - You can simply connect Portable or Handheld devices to this front AV input
- AV2
 - AV2 input locate on the DIN to RCA cable (together with POWER and AV output)
 - This input designed for slave external devices such as TV tuner or Game console
- SMART
 - Please connect SMART LINK cable from external unit to Headrest's SMART input port.
 - Please change Video mode to SMART
 - Operate External device (especially video). Same picture as external device will be shown on the Headrest screen
- DTV
 - This input designed for Digital TV.
 - Only able to watching Digital TV Connect with TV-300 tuner box (sold seperately).
 - Defail Position method is explained on TV-300 Manual.

- * Smart phone Interface
- Basically, operation for SMART LINK function of Smart phone is same as above
 - To operate your Smartphone, please connect the specific cable shown below
 - Please make sure USB needs to be connected on the port to activate SMART LINK function on the smart phone

Description of Remote Control



1	POWER	POWER On/Off
2	V.SEL	Video Mode Selection
3	DIMMER	DIMMER On/Off
4	MENU	MENU OSD Display
5	ASPECT	Select from Normal/PS, Normal LB and Wide
6	MUTE	MUTE On/Off
7	INFO	Information of current playing file or Disc
8	REPEAT	Repeat playing of currently selected file
9	VOL-	Decrease volume level
10	VOL+	Increase volume level
11	⏮	Fast Forward(X2,X4,X8,X16)
12	⏭	Rewind(X2,X4,X8,X16)
13	⏮	Previous Chaper
14	⏭	Next Chaper
15	⏩	Play or Pause the file or Disc
16	■	Stop the file or Disc
17	EXIT	EXIT from Folder or MENU
18	SEARCH	Search Target position on the DVD or Media file
19	▲	Cursor Up
20	▼	Cursor Down
21	◀	Cursor Left
22	▶	Cursor Right
23	ENTER	Function Select
24	SET-UP	SET-Up MENU Display and EXIT
25	ZOOM	X2,X3,X4 time ZOOM up,1/2,1/3,1/4 times ZOOM Down
26	CH.LIST	DTV use only
27	EPG	DTV use only
28	1~0keys	Number keys
29	A-B	A-B
30	ANGLE	Angle adjust of picture (Only selected file or Disc)
31	DVD ROOT	Move to DVD ROOT Menu
32	DVD TITLE	Move to DVD TITLE Menu
33	SUB-TITLE	SUB-TITLE Selection
34	AUDIO	Audio mode for Mono,Mono Left,Mono Right and Stereo
35	TV/RADIO	DVB-T use only
36	RECALL	DVB-T use only
37	FAV	DVB-T use only
38	TTX	DVB-T use only
39	🔴	DVB-T use only
40	🟢	DVB-T use only
41	🟡	DVB-T use only
42	🟠	DVB-T use only

MENU

Color		
🌞	Brightness	50
🌞	Contrast	50
🌞	Hue	50
🌞	Saturation	50
🌞	Sharpness	50
🌞	Color Temp	Normal ▶
ENTER:Enter ◀Adjust ▶Select EXIT:Exit		

Function		
🌙	Language	English ▶
🌙	OSD Setting	▶
🌙	Display Ratio	16:9 ▶
🌙	IR	A ▶
🌙	FM TX	Off ▶
🌙	Reset	▶
ENTER:Enter ◀Adjust ▶Select EXIT:Exit		

Please refer Monitor MENU adjust as below

Color		
Menu	Value Adjust	Default Setting
Brightness	0~100	50
Contrast	0~100	50
Hue	0~100	50
Saturation	0~100	50
Sharpness	0~100	50
Color Temp	Warm, Normal, Cool	Normal

EXIT:Exit from the MENU

Function		
Menu	Value Adjust	Default Setting
Language	English, Chinese, French, German, Italian,Spanish, Portuguese, Russian	English
OSD Setting	OSD Timeout and Transparency	Setting
Display Ratio	16:9 and 4:3	16:9
IR	IR-A, IR-B, Off	IR-A
FM TX	88.1MHz~107.9MHz	Off
RESET	Back to factory setting	

EXIT:Exit from the MENU

SET-UP

SET-UP page is consist with 4 different settings. It's General Set up page,Audio Set up page, Video Set up page and Preference page.
* Preferece page only able to OPEN when DVD is completely "STOP" or "NO Disc" position
When DV is playing or only temporary stop, "Preference page" will not able to reach
Please press "STOP" 2 times tomake Disc completely stop or OPEN Monitor flip to reach "Preference page".

*Please use ◀,▶,▼,▲ buttons and ENTER button to go inside of detail MENU and exit from detail menu.

1.General Set up Page

MENU	DetailSelection	Default Setting
TV Display	Normal/PS , Normal/LB , Wide , Wide Squeeze	Normal/PS
Angle Mark	On , Off	On
OSD Lang	English, Chinese, French, German, Italian Spanish, Portuguese, Russian	English
Captions	On,Off	Off
Screen Saver	On,Off	On
Last Memory	On,Off	On

2.Audio Set up Page

MENU	Detail Selection	Default Setting
Downmix	LT/RT,Stereo,V SURR,Off	Stereo

3.Video Set up Page

MENU	Detail Selection	Default Setting
Dual Mono	Stereo,L-Mono,R-mono,Mix-Mono	Stereo

4.Preference Setup Page

MENU	Detail Selection	Default Setting
TV Type	PAL TV, Multi, NTSC TV	Multi
Audio	English, French, Spanish, Chinese, Japanese Korean, Russian, Thai	English
Subtitle	English, French, Spanish, Chinese, Japanese Korean, Russian, Thai	English
Disc Menu	English, French, Spanish, Chinese, Japanese Korean, Russian, Thai	English
Parental	KID,G,PG,PG 13,PGR,R,NC 17,ADULT	ADULT
Password	8888	8888
Default	RESET	RESET

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
--Increase the separation between the equipment and receiver.
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device is measured RF output power is less than the SAR exclusion threshold value for human head and body. Therefore, SAR test is not necessary.