

Wireless Trackball Mouse User Manual

Compliant model: M-IT10MR,
M-IT11MR, M-ER10

Precautions



This manual describes the important precautions you should take for safe operation of this product. Observe these precautions carefully to avoid personal injury, damage, fire, and other problems.

■ Meaning of symbols

WARNING

Failure to observe precautions carries the possibility of serious personal injury or death due to fire, electric shock, or other causes.

CAUTION

Failure to observe precautions may result in personal injury due to electric shock or other causes, and may damage other equipment.

- * Screenshots will be replaced with the target language version's when they are all ready.
- * XXX will be determined when they are all fixed.

 Prohibited action

 Mandatory action

 Situation that needs attention

 Notes and reference information



WARNING

 **If a foreign object (water, metal chips) enters this product, stop using immediately and remove the batteries.**

Continuing to use the product as it is may cause a fire or an electric shock.

 **If this product is generating heat, smoke, or an unusual odor, stop using immediately and shut down the connected devices. Also, be sure to confirm that there is no heat while being careful not to get burned, and then remove the battery from the product. Afterwards, please contact your dealer.**

Continuing to use the product as it is may cause a fire or an electric shock.

 **Please do not drop or hit this product.**

In the event that the product is damaged, cease usage immediately. Turn OFF the power and remove the batteries. Afterwards, please contact your dealer.

Fires or electric shocks may occur if this product is used when damaged.

 **Do not attempt to disassemble, modify, or repair this product or receiver unit.**

Doing so may cause a fire, electric shock, or product damage.

Such malfunctions are not covered under warranty.

 **Do not put this product in fire.**

Breakage may cause fire or injury.

 **Please do not insert or pull out the receiver unit with wet hands.**

It can cause a fire or electric shock.

 **The receiver unit presents a swallowing hazard for children, so be sure to store it in a place out of the reach of children.**



CAUTION

 **Do not place this product in any of the following environments:**

- In a car exposed to sunlight or a place exposed to direct sunlight.
- In a place that becomes hot, such as around a heater.
- In a moist place or a place where condensation may occur.
- In an uneven place or a place exposed to vibration.
- In a place where a magnetic field is generated (such as near a magnet.)
- In a dusty place.

 **This product does not have a waterproof structure. Use or store in a place not exposed to liquids such as water.**

Any liquid such as rain, water spray, juice, coffee, steam, and sweat, can cause this product to breakdown.



- Only use this trackball with PCs, smartphones, tablets, and video game systems.
- Do not use this product with any device that may be significantly affected in the case of this product malfunctioning.
- When you no longer need to use this product and the batteries, be sure to dispose of them in accordance with the local ordinances and laws of your area.

■ Batteries



CAUTION



Please use either an AA alkaline battery, AA manganese battery, or AA nickel-metal hydride rechargeable battery.



When not using this product for long periods of time, remove the batteries.

Not removing them may cause leakage or malfunction.

■ Cleaning the Product

If this product becomes dirty, wipe it with a soft, dry cloth.



Using a volatile liquid such as paint thinner, benzene, or alcohol can affect the material quality and/or discolor this product.

Please note the following for disinfection.



Gently soak a cleaning cloth, such as a microfiber cloth, in the disinfectant solution. Ensure there are no loose droplets and gently wipe the product using the cloth.
After wiping, dry thoroughly and wipe off any residual liquid.

*Do not spray any liquid onto the product directly. Doing so can cause electric malfunctions.

IMPORTANT

Do not spray any liquid onto the product directly.

Doing so can cause electric malfunctions.

Do not use organic solvents or ultraviolet lights.

Usage can result in deterioration of the housing components or paints, which can cause damage to the exterior.

We recommend using disposable gloves.

When using any alcohol-based products, please check that it is appropriate for the specific purpose and that it is used properly.

Please make sure to turn off any connected devices.

*When in sleep or hibernation mode, turn off connected devices.

*Please unplug the AC adapter and power cable from the power outlet.



- Please note that the customer is fully responsible for repair costs in the event that the product is damaged or operates abnormally due to the disinfection process.
- We recommend that you disinfect your hands before and after using PCs and peripheral devices that are used by multiple people in order to prevent the spread of infection through the equipment.

Cautions for Wireless Equipment

This product is a wireless device that can use the entire 2.4 GHz band, and is able to avoid the mobile entity identification device range. The GFSK method is adopted as the radio wave method, and the interference distance is 10 m. The 2.4 GHz band is also used in medical devices, Bluetooth, and wireless LAN devices of the IEEE 802.11b/11g/11n standards.

- Before using this product, check that there are no other "radio stations"* operating nearby.
- If electromagnetic interference occurs between this product and other "radio stations"*, use this product in another location or stop using this product.

*Other "radio stations" refer to industrial, scientific and medical devices using the 2.4 GHz band, the same as this product, other radio stations of this type, licensed radio station premises for a mobile object identification system that is used in factory production lines, certain non-licensed low power radio stations, and amateur radio stations.



WARNING



- Do not use with any equipment that may be significantly affected in the case of this product malfunctioning. There are rare cases in which an external radio wave at the same frequency, or the radio wave emitted from a mobile phone, causes this product to malfunction, slow down, or fail to operate.
 - Do not use this product in places where radio wave usage is prohibited, such as hospitals. Radio waves of this product may affect electronic devices and medical devices (for example pacemakers).
 - Due to the possibility of hindering safe navigation of aircraft, use of wireless trackball in aircraft is prohibited by the Civil Aeronautics Act. Turn off the power of the wireless trackball before boarding and do not use after boarding.
- *ELECOM is not liable for any accidents or any indirect or consequential damage incurred due to the failure of this product.

How to use



Items included in this package



The following items are included in this package. Verify the package to ensure all items are accounted for prior to using this product. While every effort has been made to ensure proper packaging, in the event that any shortage or damage is discovered, please contact the retailer where the product was purchased or ELECOM Product Support.

■ Product main unit

- Trackball main body × 1
- ELECOM Bridge E USB receiver unit × 1

 
■ Consumables

- Ball (36 mm) × 1
- Support parts × 3
- AA alkaline battery for confirming operability × 1
- Removal tool × 1



The ball, support parts, battery, receiver unit, and removal tool are already installed on the trackball body. Please remove the battery insulating pull tab before use. Also, take out the receiver unit and removal tool as needed.

■ Trackball

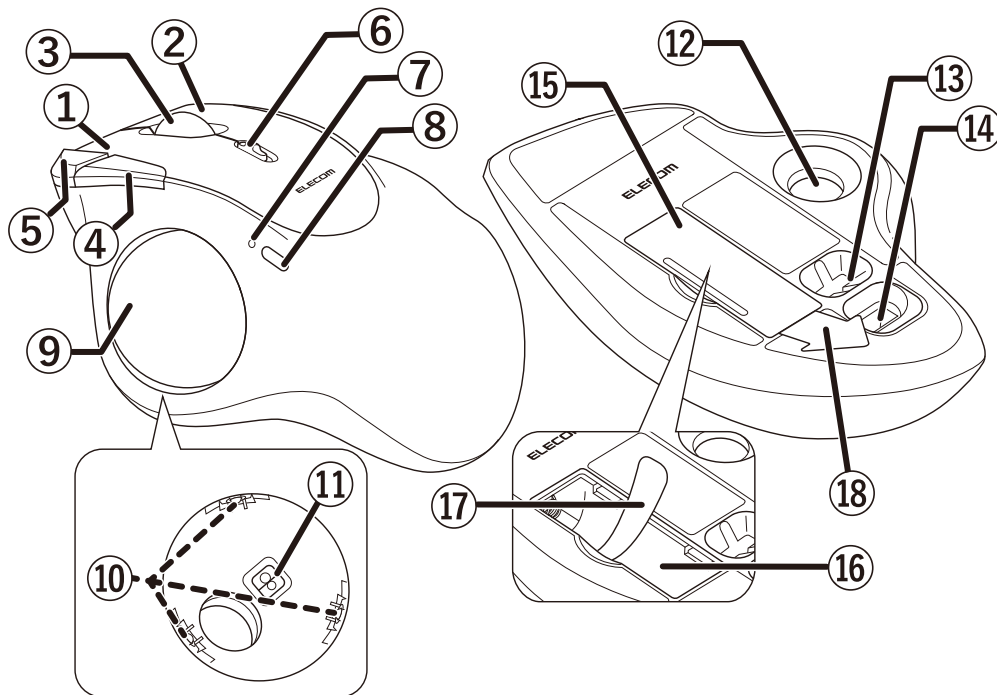

① **Left button**

To left click on your PC.

② **Right button**

To right click on your PC.

③ **Wheel**

 
Rotate forward and backward or click like a button to operate your PC.

④ **“Back” button**

Performs the “Back” function on the Web browser.


⑤ **“Forward” button**

Performs the “Forward” function on the Web browser.



“Forward” button

 Continue to next page.



“Back” button

Return to previous page.



You will need to install the “ELECOM Mouse Assistant 6” from our website to use the “Back” and “Forward” button on Mac. Refer to [“Install ELECOM Mouse Assistant 6”](#).

⑥ Power switch

Turn the trackball power ON and OFF.

⑦ LED light

- The LED will light up for a period of time when the trackball is switched ON.
- It blinks in the pairing mode.
- It notifies when the battery needs to be replaced. The LED starts blinking for a while when the battery level is low.
- When the connection channel (1ch/2ch/3ch) is switched, the LED will light up in the following color for a period of time.
 - 1ch: White
 - 2ch: Blue
 - 3ch: Green

*The ELECOM Bridge E USB receiver unit is factory paired with 3ch.

⑧ Connection channel switching/pairing button

- Each short press of the button switches the connection channel (1ch/2ch/3ch).
The factory default is 1ch.
- Press and hold the button for three seconds or longer to enter the pairing mode.

⑨ Ball (36 mm)

Rotate using your fingertips to move the cursor.



Separately sold ball

- [Replacement 36 mm ball \(M-B10SV\)](#)

⑩ Support parts

Support the ball.

Support parts are consumables. Compatible support parts can be purchased separately to replace existing support parts.



Optional Parts

- [Replacement XXXX support parts \(M-RS10\)](#)
- [Replacement bearing support parts \(M-BS10\)](#)

⑪ Optical sensor (under the ball)

This sensor will detect the trackball's movements when you move the trackball.

 
⑫ Ball removal hole

Push the ball out from here to clean the support parts in the housing.

*See "[How to clean the trackball](#)" for details.


⑬ Removal tool storage compartment

The removal tool can be stored here.

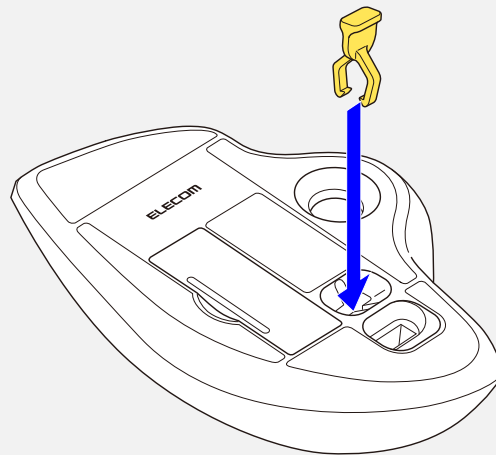

⑭ Receiver unit storage compartment

 The ELECOM Bridge E USB receiver unit can be stored here when the trackball is not used.

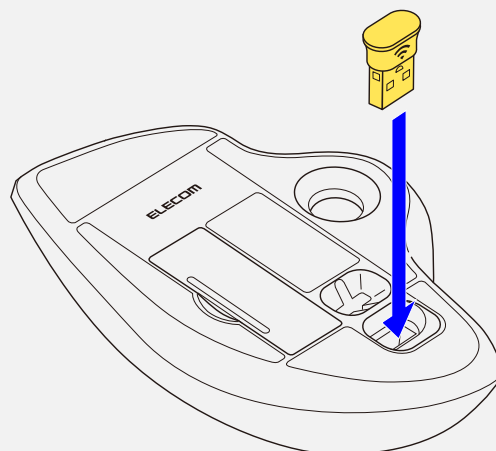

⑮ Battery cover

Remove this cover and insert a battery.

⑩ Battery storage compartment

The battery is stored here.

 
⑪ Battery removal tab

Use this tab to remove the battery from the storage compartment.

⑫ Battery insulating tab

Remove this tab before using.

■ ELECOM Bridge E USB receiver unit

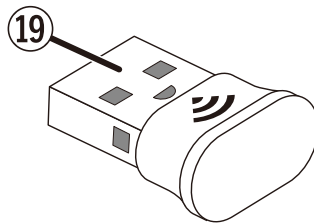

⑬ USB Type-A plug

 
Connects to the PC USB-A port.



- Each connection channel (1ch/2ch/3ch) can be paired with the ELECOM Bridge E USB receiver unit, sold separately or included with another product.
*Download and install “ELECOM Mouse Assistant 6” from our company website. Refer to “[Install ELECOM Mouse Assistant 6](#)”.
- To connect via a USB 2.4 GHz wireless connection, separately from the ELECOM Bridge E USB receiver unit included with this product, purchase an additional ELECOM Bridge E USB receiver unit.

[ELECOM Bridge E USB receiver unit \(M-ER10\)](#)

■ Removal tool

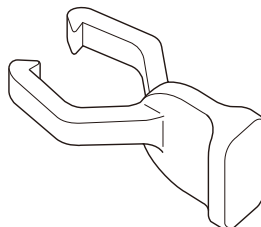

*See “[How to replace support parts](#)” for details.

Connecting and Configuring the Trackball

 


Windows®




1. Removing the battery insulating tab


1) Remove the battery cover.

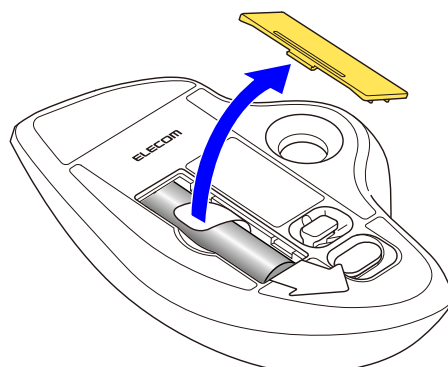

 2) Remove the battery insulating tab.

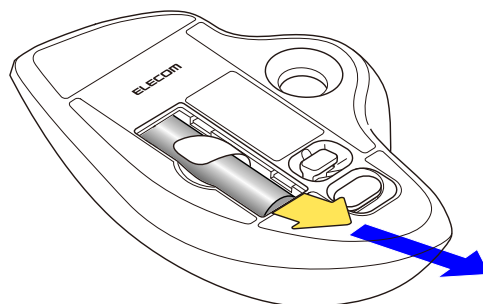


 3) Put the battery cover back on.

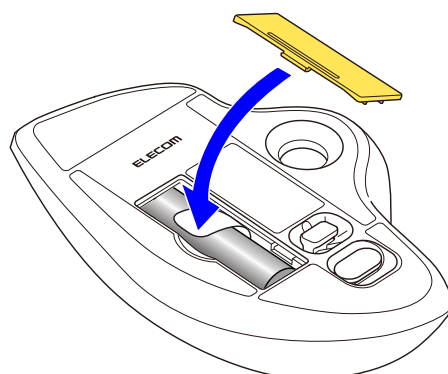


Replacing the batteries...

 1) Remove the battery cover.

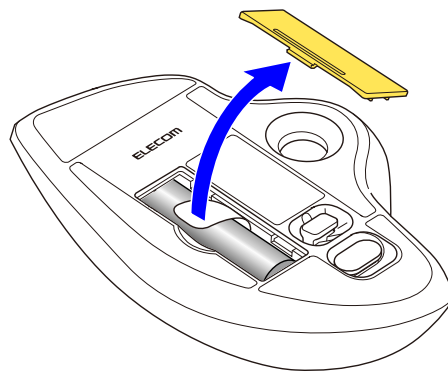


2) Remove the batteries.

 Pull the battery removal tab to remove the battery.

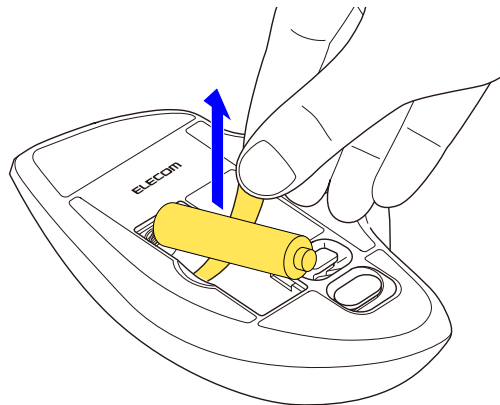


 3) Insert the battery according to the marks indicated in the battery compartment.

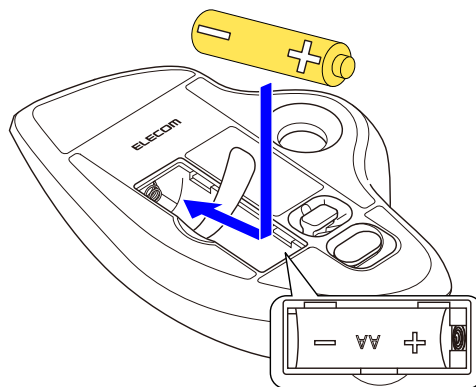


Insert the battery in the correct positive (+) and negative (-) polarity direction.

 4) Put the battery cover back on.

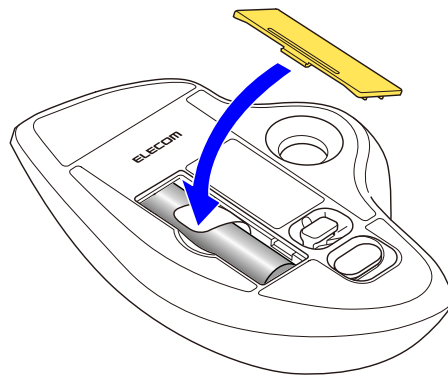

2. Turning the power ON

 1) Slide the power switch to the ON position.

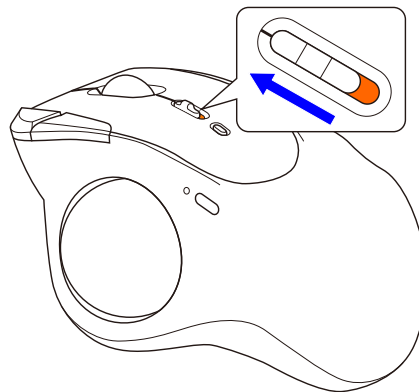


The LED lights up for a period of time.

*When the battery level is running low, the LED will blink for a period of time.

• When the power is turned on for the first time

The LED blinks white, and the trackball enters the pairing mode, allowing pairing with the PC.

 When the following window appears, refer to [step 3 of "■ When pairing using Swift Pair"](#).

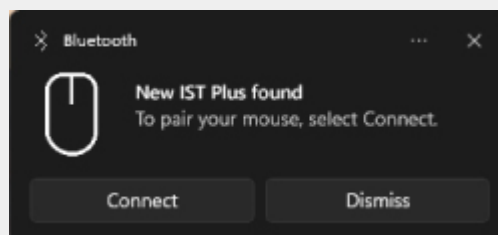

If the above window does not appear, refer to [step 1 of "■ When pairing from the Settings page"](#).



Power-saving mode

When the trackball is left untouched for a fixed period of time while the power is ON, it automatically shifts to power-saving mode.

Moving the trackball restores it from energy saving mode.

*For two to three seconds after restoring from power-saving mode, trackball operation may be unstable.

3. Pairing with a PC

- Pairing involves registering Bluetooth devices (in this case, this product and your device) with each other, and authorizing a connection between them.
- This section covers Windows standard Bluetooth functions. Depending on your device or Bluetooth adaptor, unique Bluetooth functions may be used. Please read the respective manuals for each function.
- Use your current mouse or the touchpad on your device to operate your device until pairing is complete.
- The following instructions are for Windows 11 (24H2).

■ When pairing using Swift Pair

This product supports Swift Pair. If you are using a PC or a Bluetooth dongle that supports Swift Pair, you can quickly pair the trackball with the PC by putting it in the pairing state.

 
- 1) Press the connection channel switching/pairing button to select the connection channel (1ch/2ch/3ch).**
- 2) Press and hold the connection channel switching/pairing button for three seconds and then release it.**

The trackball enters the pairing mode, and the LED will blink.


○1ch: White

●2ch: Blue

●3ch: Green

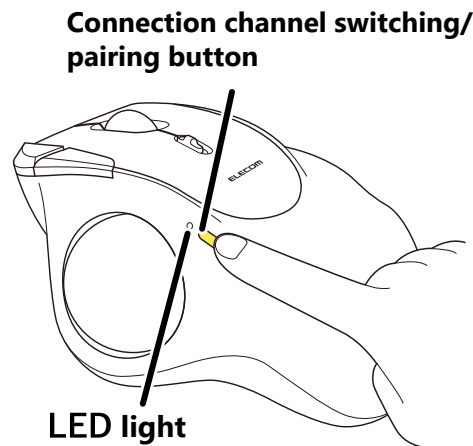


 - 3) When the following window appears in the lower right of the screen, click "Connect".**

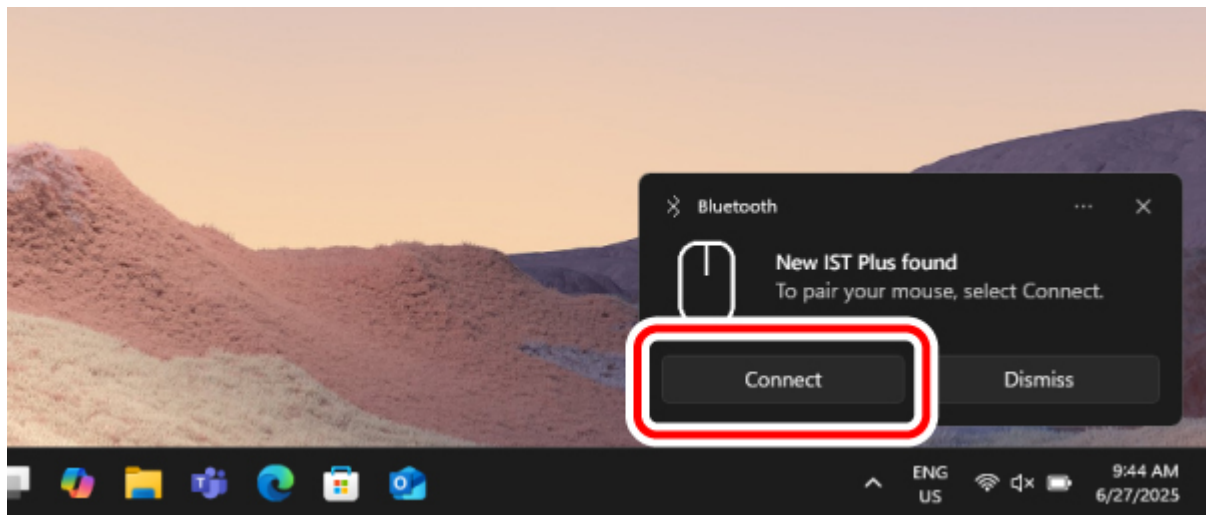

If the above window does not appear, check whether the Swift Pair notifications are turned on. Refer to [“Turning on the Swift Pair notifications”](#) for details.

 4) When the message “IST Plus connected” appears, pairing is completed.

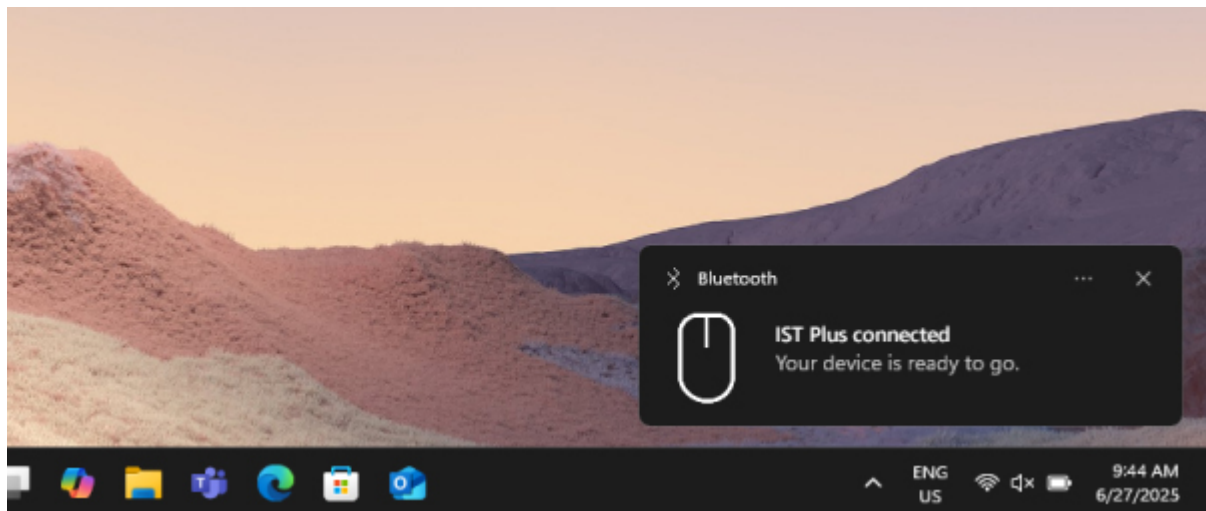

The LED will turn off.

 
You can now use the trackball.

•Turning on the Swift Pair notifications


If Swift Pair is still not possible after putting the trackball into the pairing mode, turn on the Swift Pair notifications as follows:

1) Right click on “Start” on the bottom of the screen and then, select “Settings”.


The “Settings” page will appear.

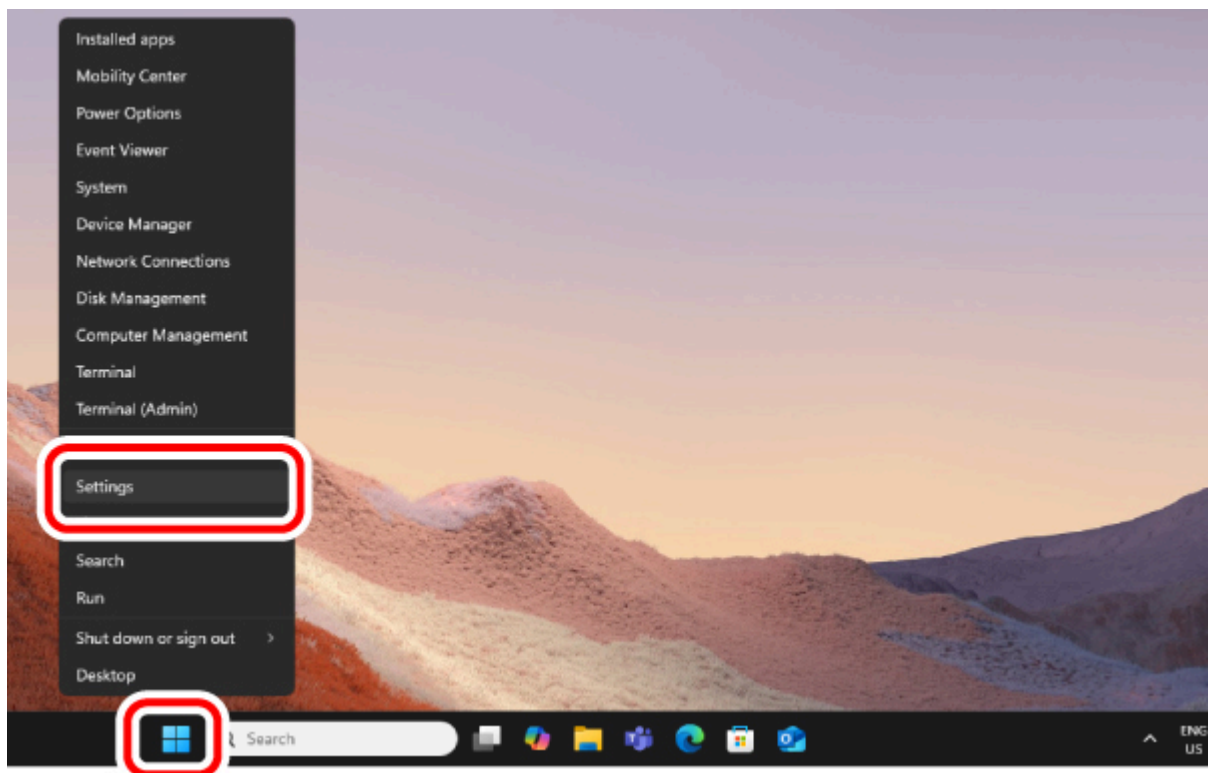

 2) Select “Bluetooth & devices” and then “View more devices”.

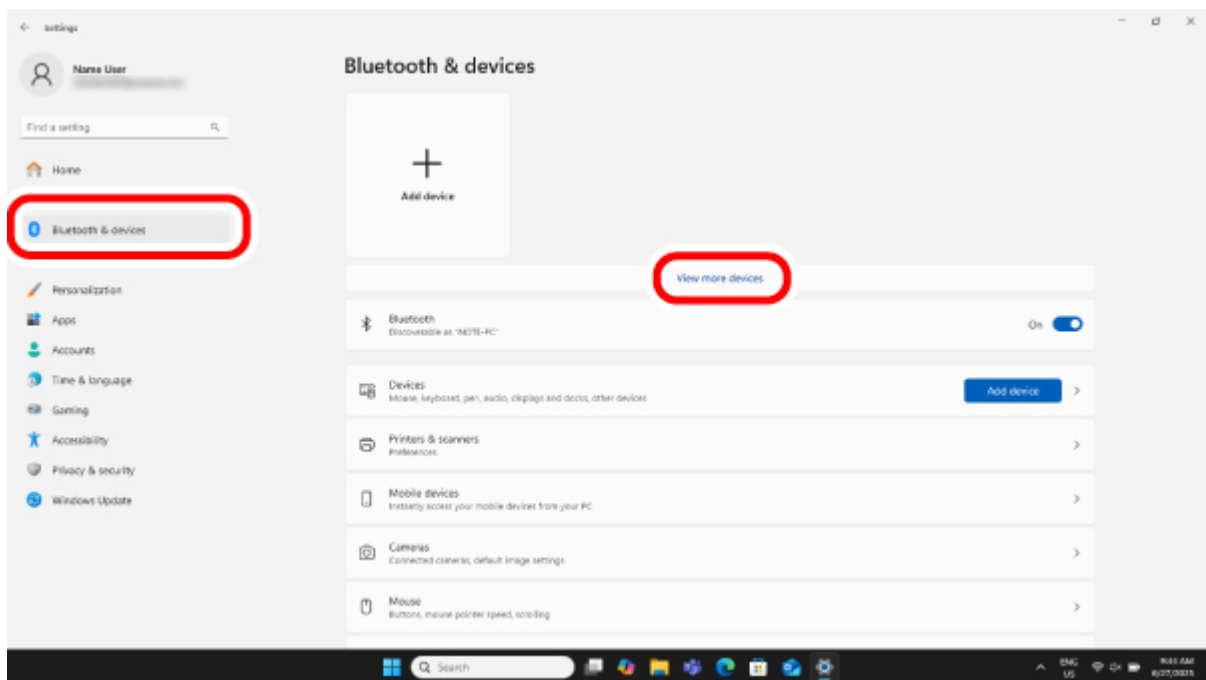

 3) Click “Show notifications to connect using Swift Pair” to turn it on.

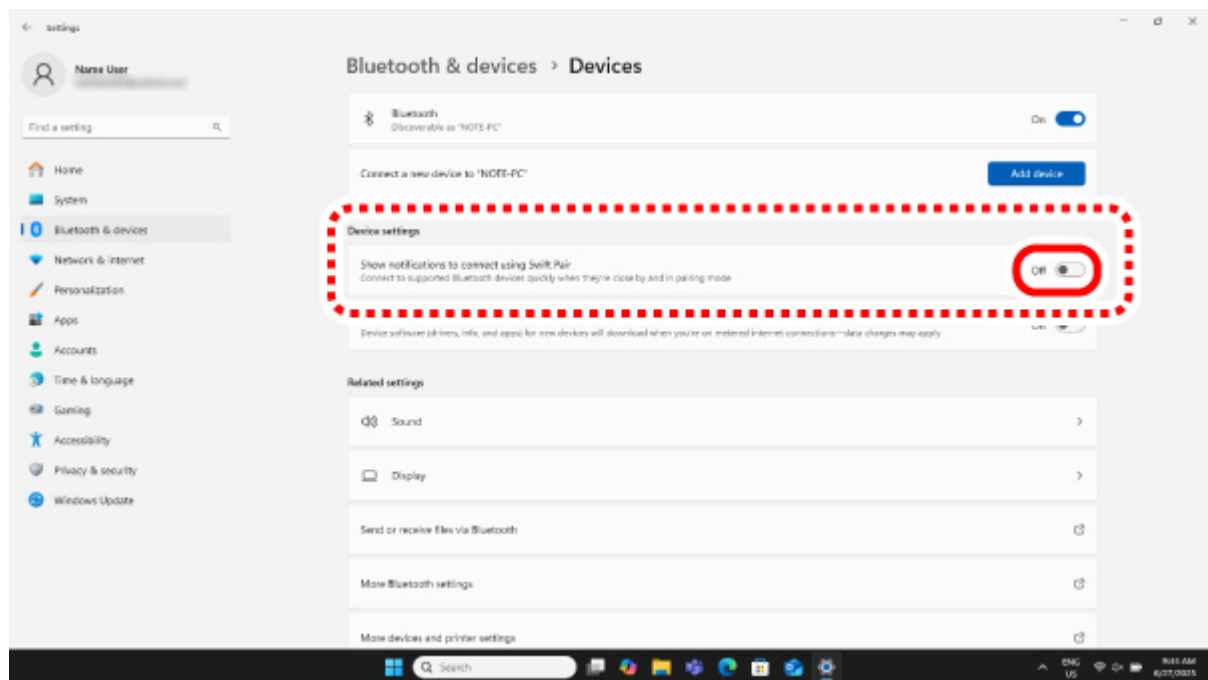

You can now use Swift Pair.

 


If "Show notifications to connect using Swift Pair" is not displayed, either the PC or Bluetooth dongle does not support Swift Pair. In this case, perform pairing from the Settings page. Refer to "[■ When pairing from the Settings page](#)" for details.

■ When pairing from the Settings page


1) Right click on "Start" on the bottom of the screen and then, select "Settings".

The "Settings" page will appear.

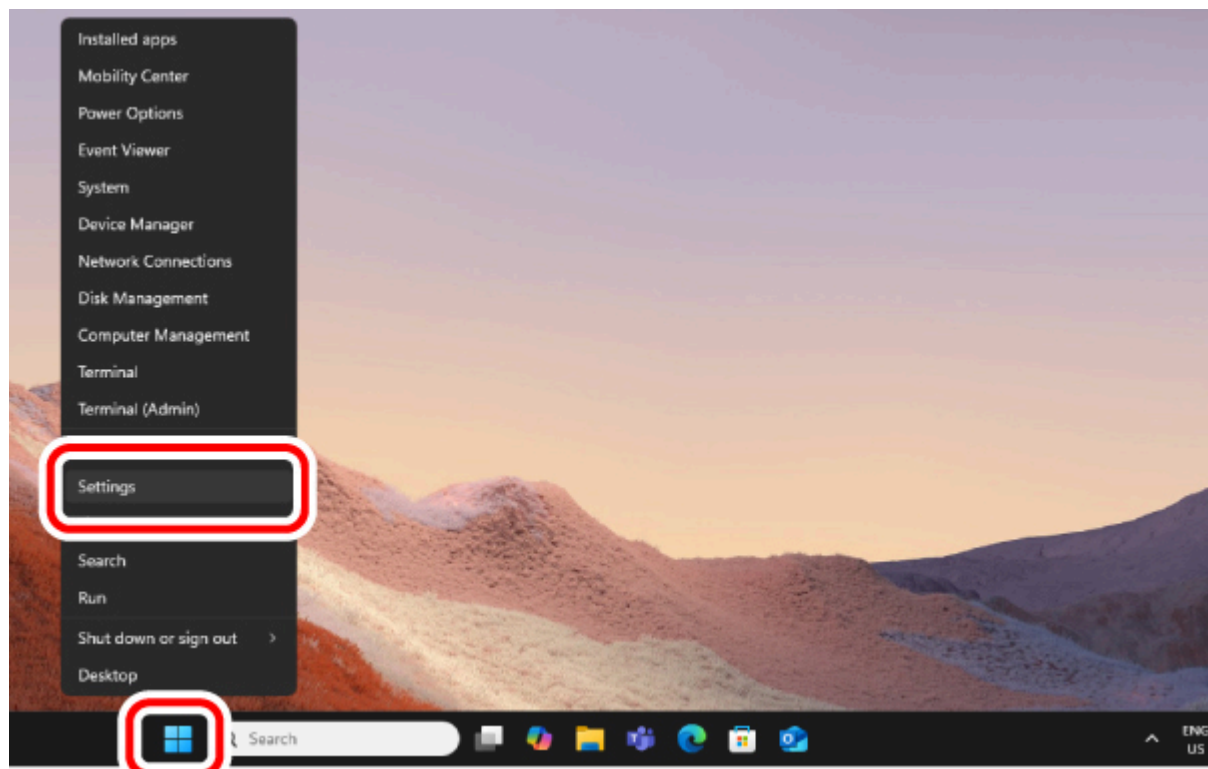


2) Under "Home", select "Add device" under "Bluetooth devices".

 
The "Add a device" page will appear.

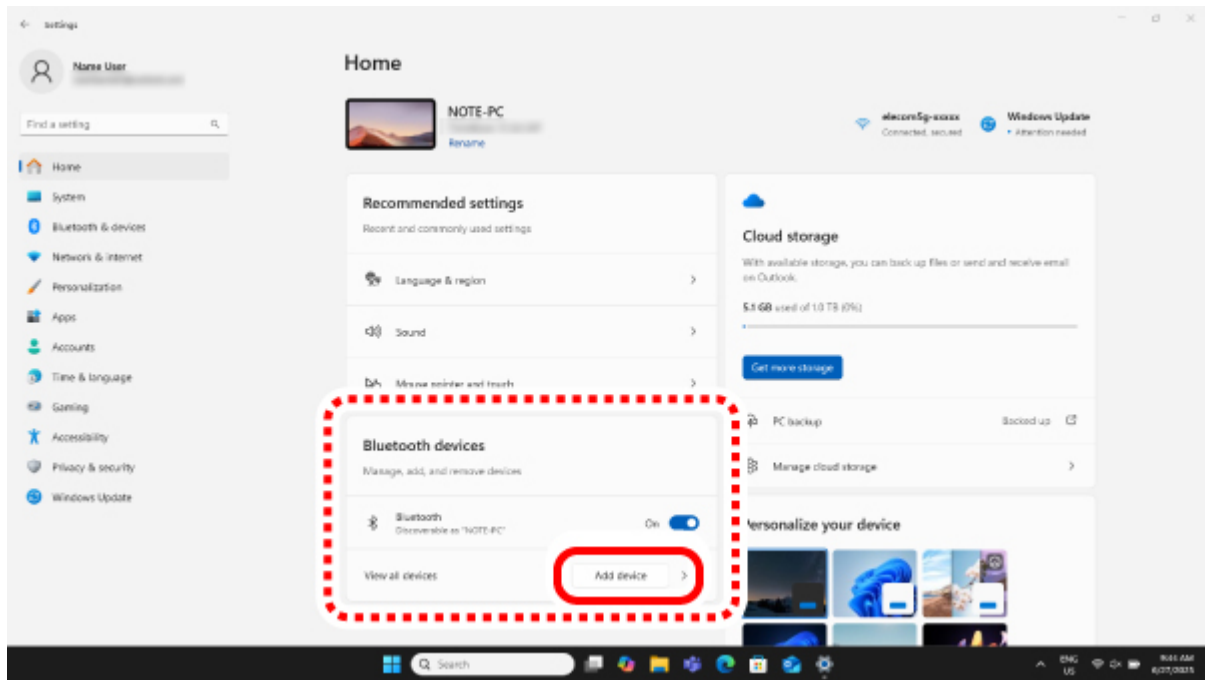

If "Bluetooth" is off, turn it on.

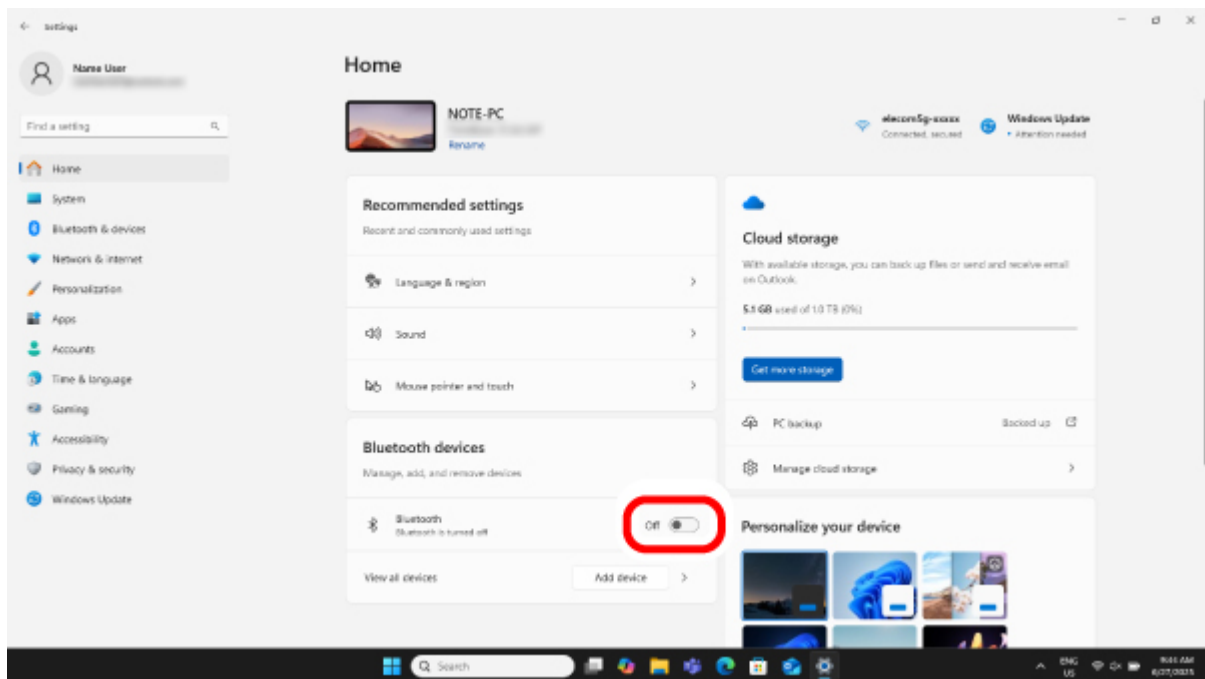 

 3) Click "Bluetooth".

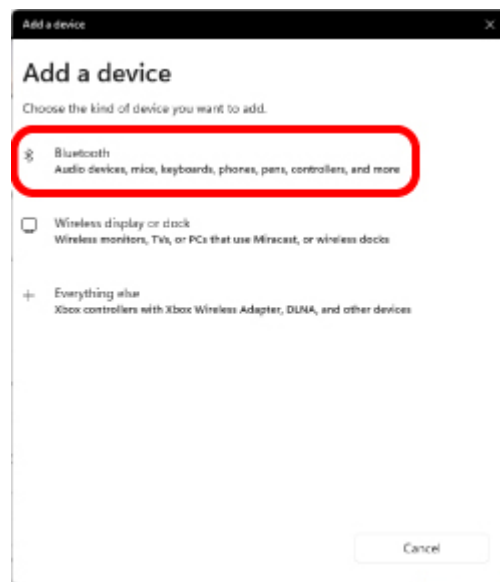

4) Press the connection channel switching/pairing button to select the connection channel (1ch/2ch/3ch).

5) When the “Add a device” page appears, press and hold down the connection channel switching/pairing button of this product for three seconds and then release it.

The trackball enters the pairing mode, and the LED will blink.

 
○1ch: White

●2ch: Blue

●3ch: Green




Connection channel switching/ pairing button

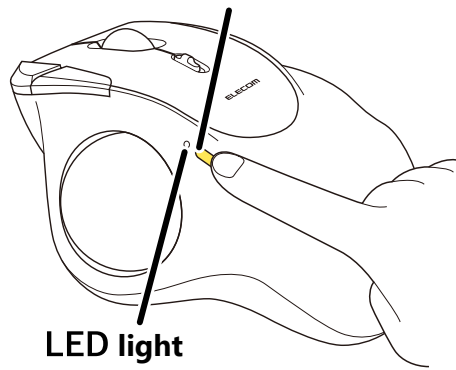


6) Select "IST Plus-1".

 Pairing begins.

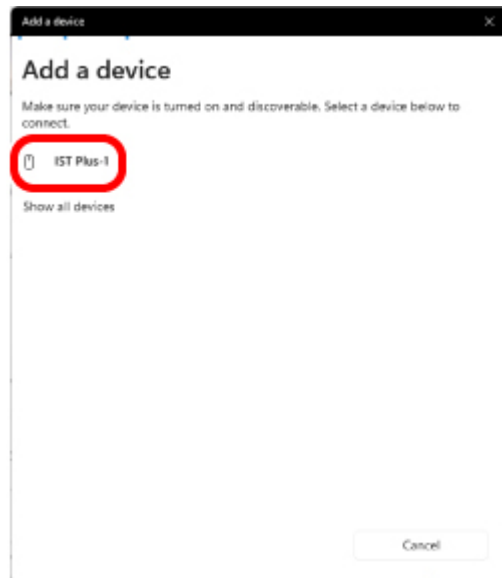


The above description is for when "1ch" is selected as the connection destination. When the connection destination is "2ch", "IST Plus-2" is displayed. When the connection destination is "3ch", "IST Plus-3" is displayed.

 7) When the message changes to "Your device is ready to go!", select "Done".

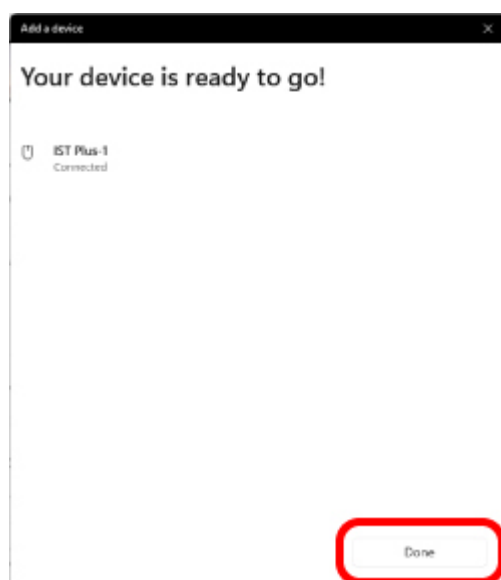

8) Pairing is complete when this product is added to “Bluetooth devices” and the status is “Connected”.

 The LED will turn off.

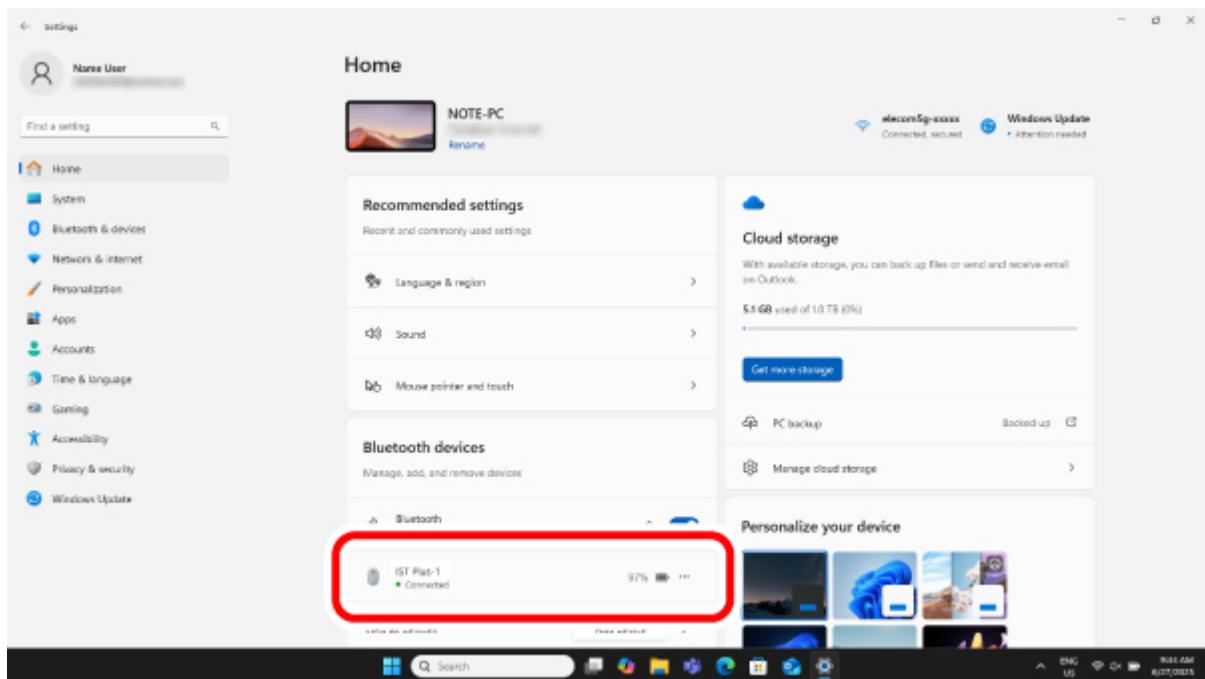


You can now use the trackball.

By downloading and installing the “ELECOM Mouse Assistant 6” from our company website, you can assign functions to buttons, assign keyboard input, use the gesture function, and switch profiles. Please proceed to “[Install ELECOM Mouse Assistant 6](#)”.


When connecting with the ELECOM Bridge E USB receiver unit

1. Removing the battery insulating tab

 
1) Remove the battery cover.

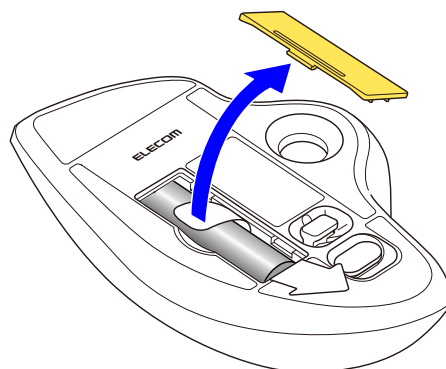

 2) Remove the battery insulating tab.

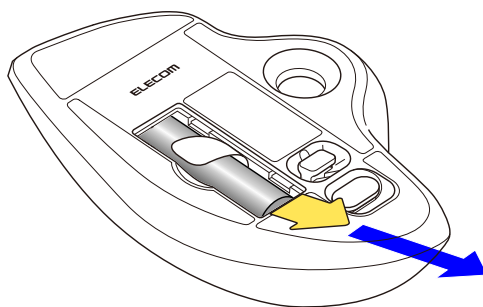


 3) Put the battery cover back on.

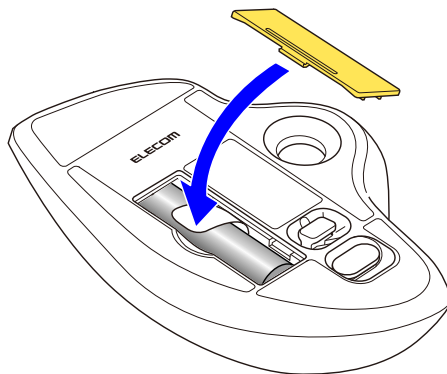


Replacing the batteries...

 1) Remove the battery cover.

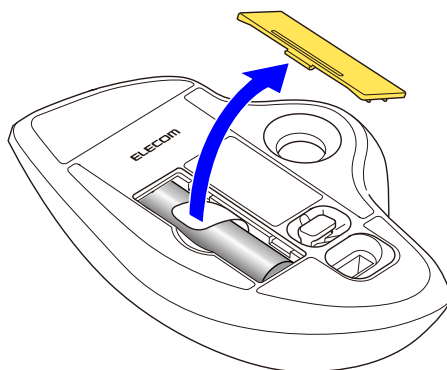


2) Remove the batteries.

 Pull the battery removal tab to remove the battery.

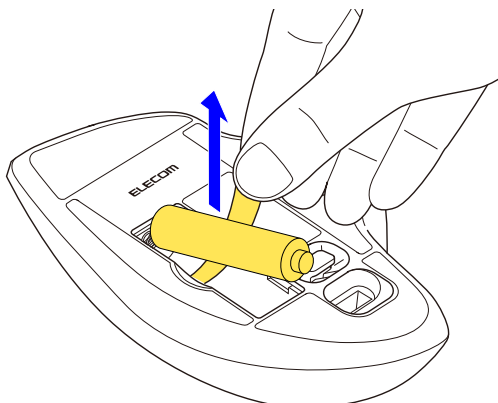


 3) Insert the battery according to the marks indicated in the battery compartment.

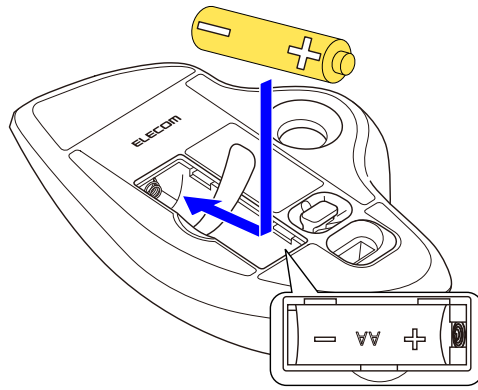


Insert the battery in the correct positive (+) and negative (-) polarity direction.

 4) Put the battery cover back on.

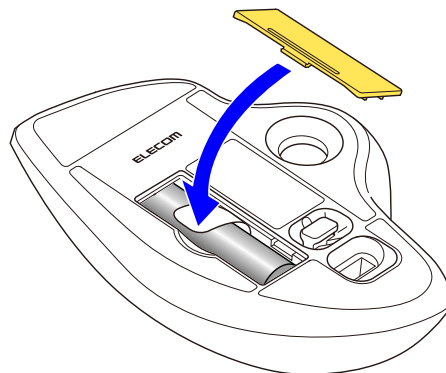

2. Turning the power ON

 1) Slide the power switch to the ON position.

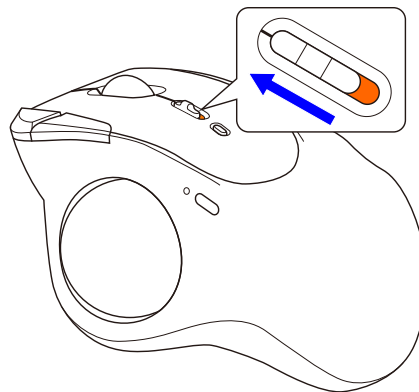

The LED lights up green for a period of time.

The ELECOM Bridge E USB receiver unit included with this product is factory paired with the connection channel: 3ch.

*When the battery level is running low, the LED will blink for a period of time.



Power-saving mode

When the trackball is left untouched for a fixed period of time while the power is ON, it automatically shifts to power-saving mode.

Moving the trackball restores it from energy saving mode.

 
*For two to three seconds after restoring from energy saving mode, trackball operation may be unstable.

3. Connecting to a PC

■ When using the trackball in the factory default state

*The ELECOM Bridge E USB receiver unit included with this product is factory paired with the connection channel: 3ch.


1) Remove the ELECOM Bridge E USB receiver unit from the receiver unit storage compartment.

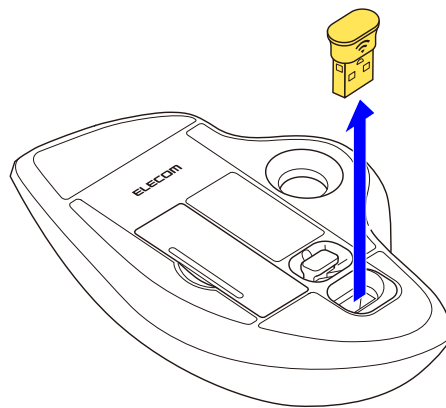

2) Start up your PC.

Please wait until the PC has started up and can be operated.

 3) Insert the ELECOM Bridge E USB receiver unit into the USB-A port on the PC.

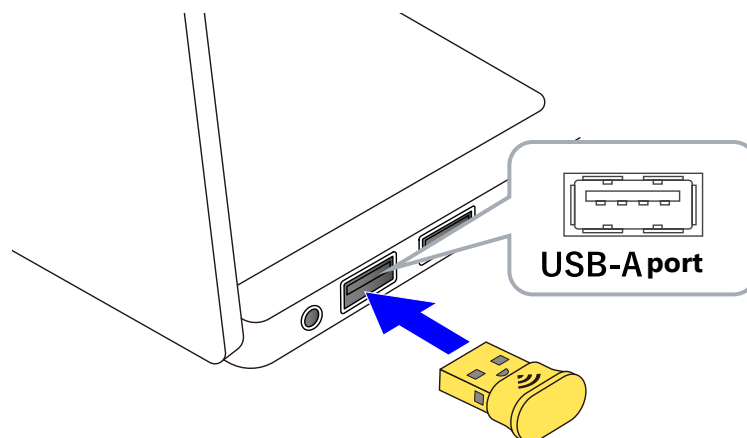

You may use any USB-A port.



- Ensure that the connector is correctly oriented to the port.
- If there is strong resistance when inserting, check the shape and orientation of the connector. Forcibly inserting the connector may damage the connector, and there is a risk of injury.

· Do not touch the terminal portion of the USB connector.



When removing the ELECOM Bridge E USB receiver unit

This product supports hot plugging. The ELECOM Bridge E USB receiver unit can be removed even while the PC is running.

4) Press the connection channel switching/pairing button to select the connection channel: 3ch (green LED).



When removing the ELECOM Bridge E USB receiver unit

 
This product supports hot plugging. The ELECOM Bridge E USB receiver unit can be removed even while the PC is running.

5) The driver is automatically installed and the trackball can be used.

You can now use the trackball.

■ When using ELECOM Mouse Assist 6 to pair the ELECOM Bridge E USB receiver unit with any specific channel


1) Remove the ELECOM Bridge E USB receiver unit from the receiver unit storage compartment.

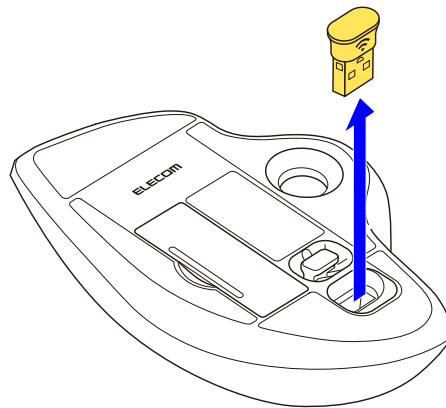

2) Start up your PC.

Please wait until the PC has started up and can be operated.

 3) Insert the ELECOM Bridge E USB receiver unit into the USB-A port on the PC.

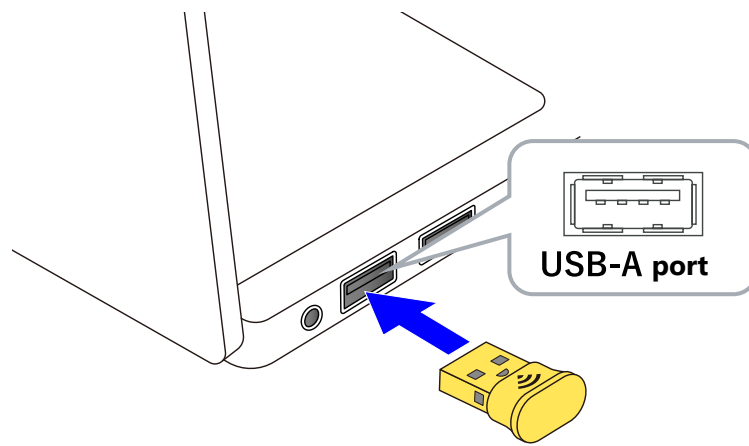

You may use any USB-A port.



- Ensure that the connector is correctly oriented to the port.
- If there is strong resistance when inserting, check the shape and orientation of the connector. Forcibly inserting the connector may damage the connector, and there is a risk of injury.
- Do not touch the terminal portion of the USB connector.



When removing the ELECOM Bridge E USB receiver unit

This product supports hot plugging. The ELECOM Bridge E USB receiver unit can be removed even while the PC is running.

4) Start ELECOM Mouse Assistant 6.

5) On the ELECOM Mouse Assistant 6 screen, double-click this product (ELECOM Bridge E), and then click “Register Device”.

6) Press the connection channel switching/pairing button to select the connection channel you want to pair with.

7) Press and hold the connection channel switching/pairing button for three seconds to enter the pairing mode.

8) Select “IST Plus-1” on the ELECOM Mouse Assist 6 screen.



The above description is for when “1ch” is selected as the connection destination. When the connection destination is “2ch”, “IST Plus-2” is displayed. When the connection destination is “3ch”, “IST Plus-3” is displayed.

9) When the message “IST Plus-1” changes to “Your device is ready to go!”, select “Done”.

10) When this product is added to “ELECOM Bridge E” and the status changes to “Connected”, pairing is completed.

You can now use the trackball.

By downloading and installing the “ELECOM Mouse Assistant 6” from our company website, you can assign functions to buttons, assign keyboard input, use the gesture function, and switch profiles. Please proceed to “[Install ELECOM Mouse Assistant 6](#)”.

Change the mouse pointer speed

 
Adjust the mouse pointer movement speed on your PC if the mouse pointer moves too fast or too slow.

■ For Windows 11


1) Click on “Start” on the bottom of the screen and select “Settings”.

The “Settings” page will appear.

2) Select “Bluetooth & devices” and then “Mouse”.

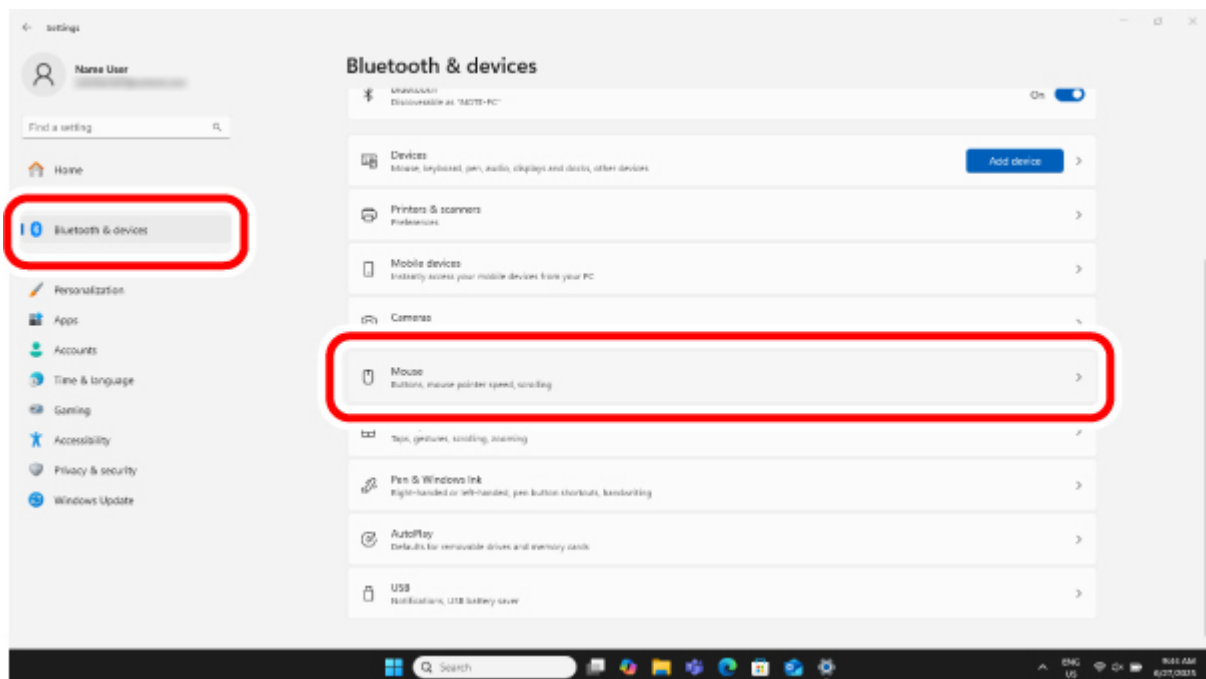

 3) Adjust the “Mouse pointer speed” slider bar to adjust the mouse pointer movement speed.

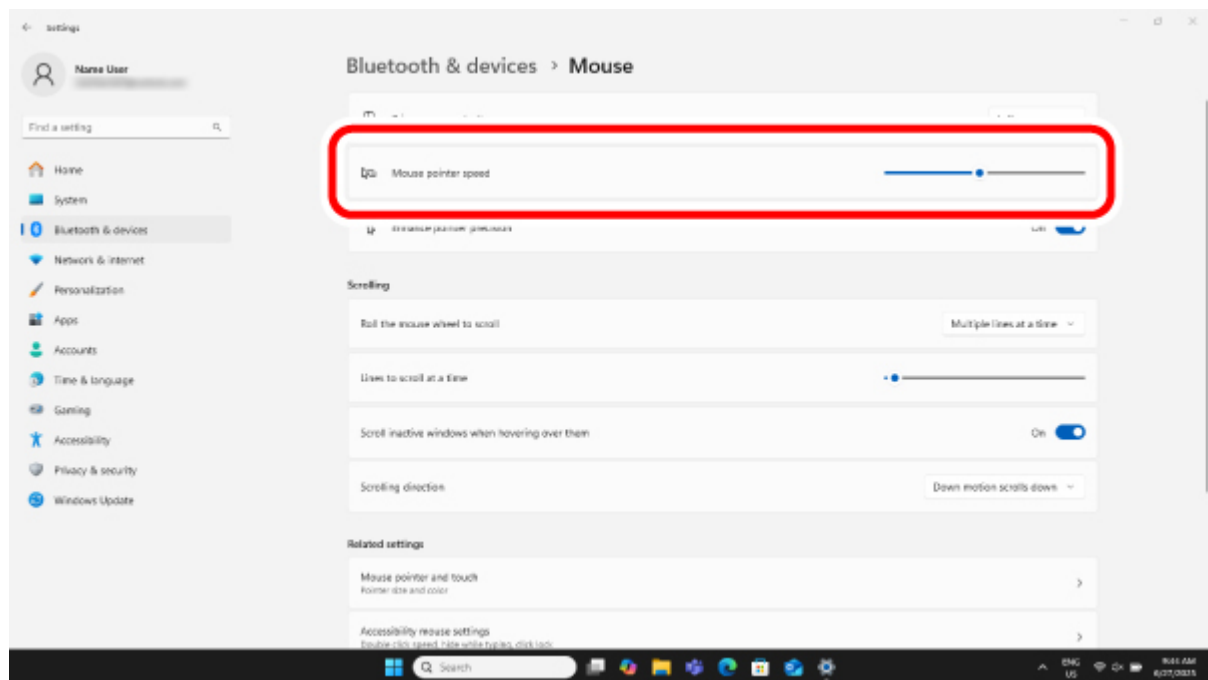


■ For Windows 10

1) Open “Mouse” properties.

From the start menu, select the Settings icon, select “Devices” → “Mouse”, then select “Additional mouse options” under “Related Settings”.

2) Select the “Pointer Options” tab.

 3) Adjust the “Select a pointer speed” slider bar to adjust the mouse pointer movement speed.

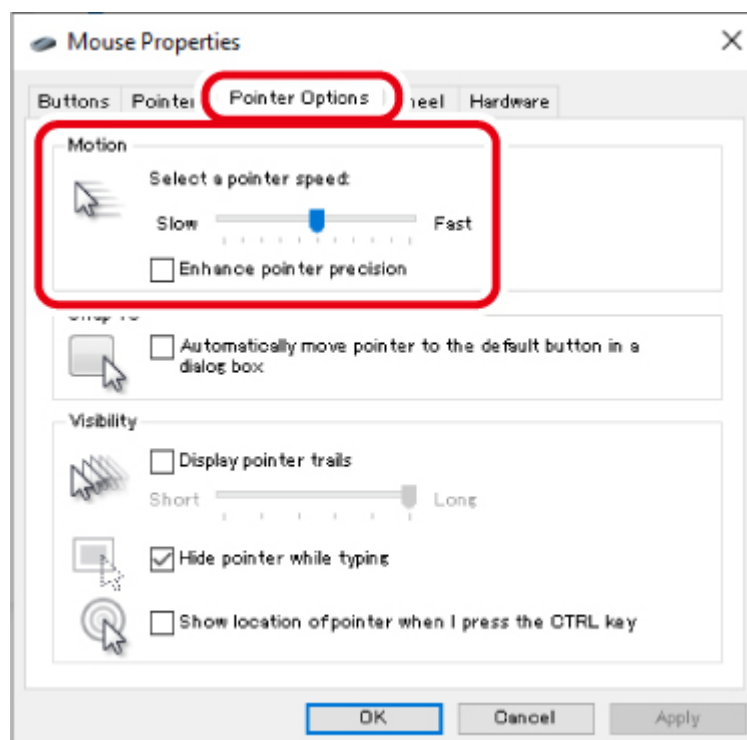


Change the number of lines scrolled in one wheel turn

■ For Windows 11


1) Click on “Start” on the bottom of the screen and select “Settings”.

The “Settings” page will appear.

 2) Select “Bluetooth & devices” and then “Mouse”.

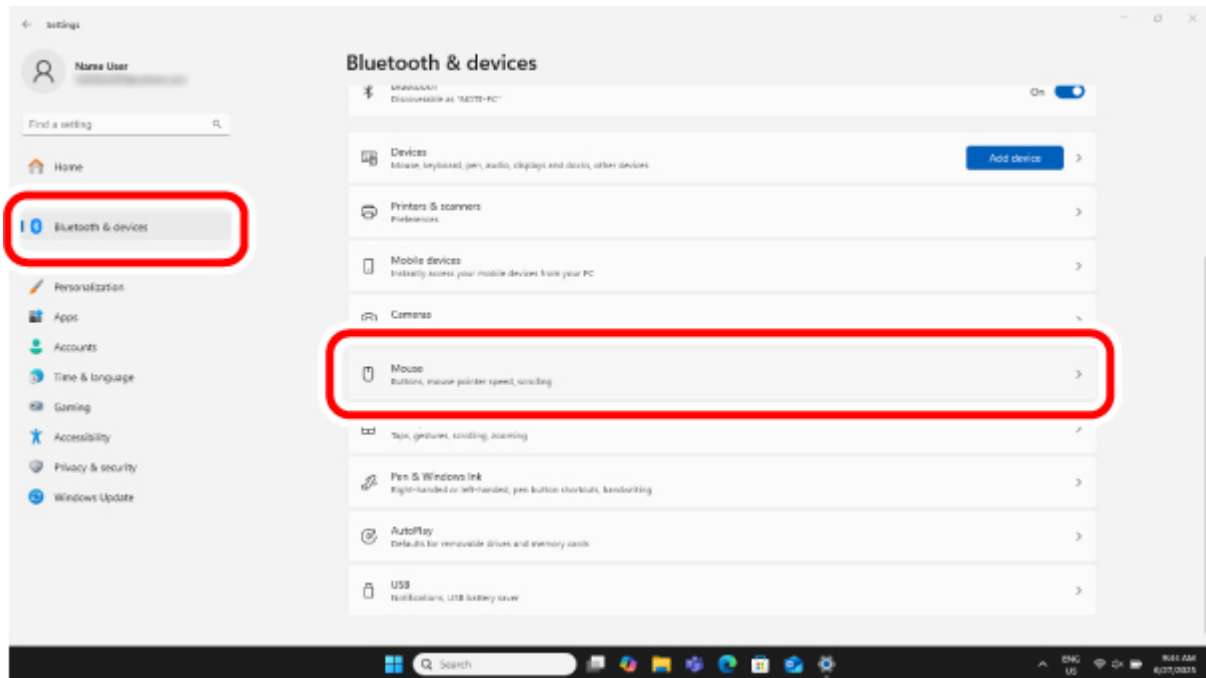

 3) Adjust the “Lines to scroll at a time” slider bar to adjust the number of lines per scroll.

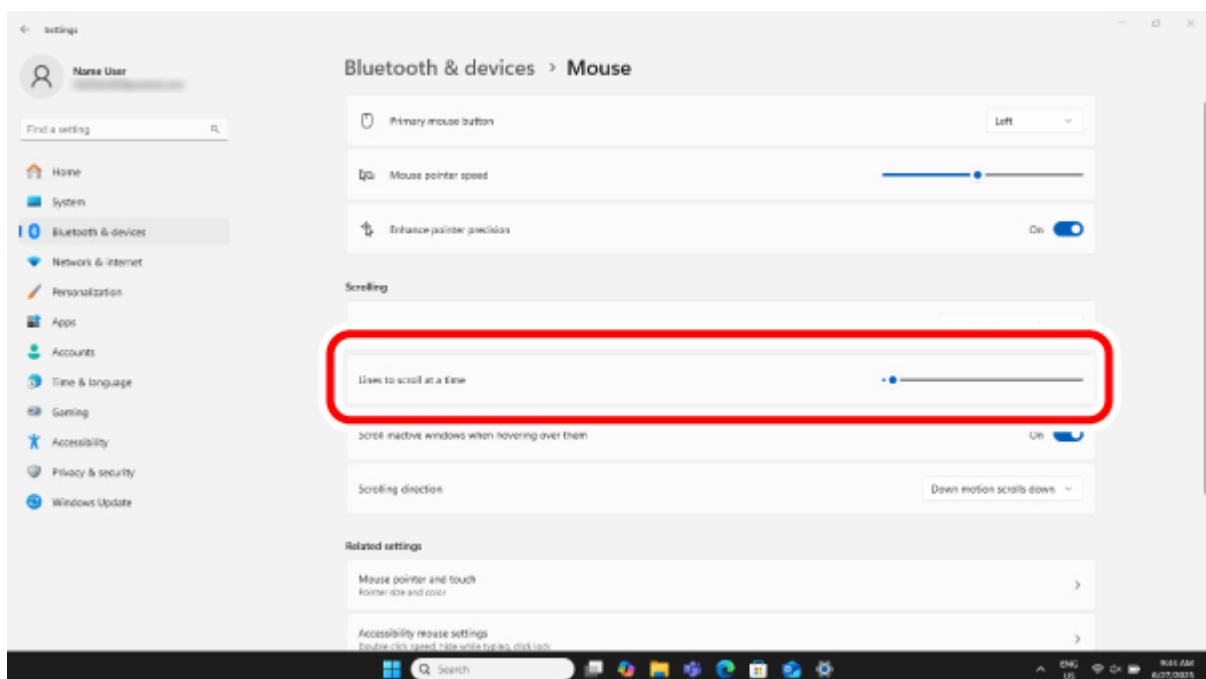


■ For Windows 10

1) Open “Mouse” properties.

From the start menu, select the Settings icon, select “Devices” → “Mouse”, then select “Additional mouse options” under “Related Settings”.

2) Select the “Wheel” tab.

 3) Change the value of “The following number of lines at a time” under “Roll the wheel one notch to scroll”

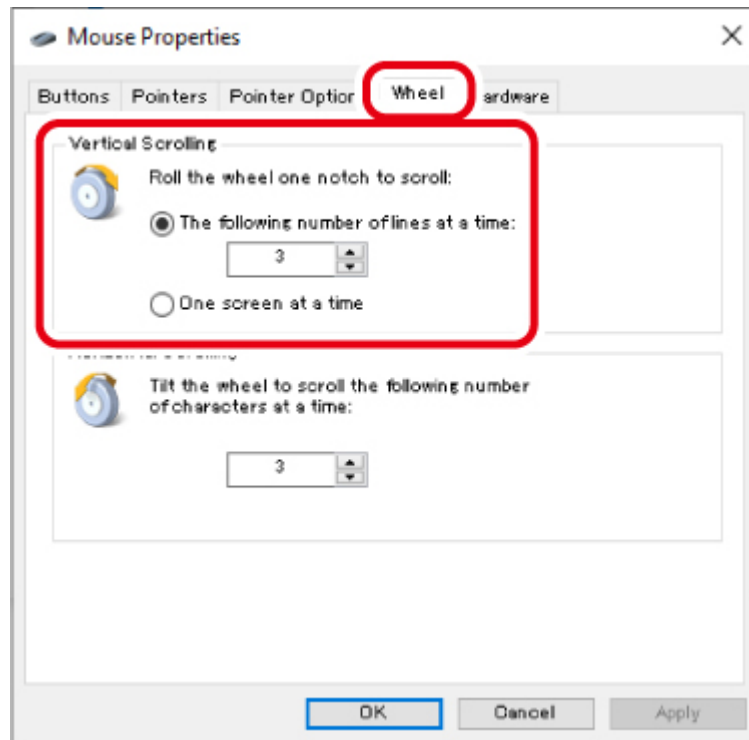


Change the scrolling direction (Windows 11 only)

Change the scrolling direction when the wheel is turned.


1) Click on “Start” on the bottom of the screen and select “Settings”.

The “Settings” page will appear.

 2) Select “Bluetooth & devices” and then “Mouse”.

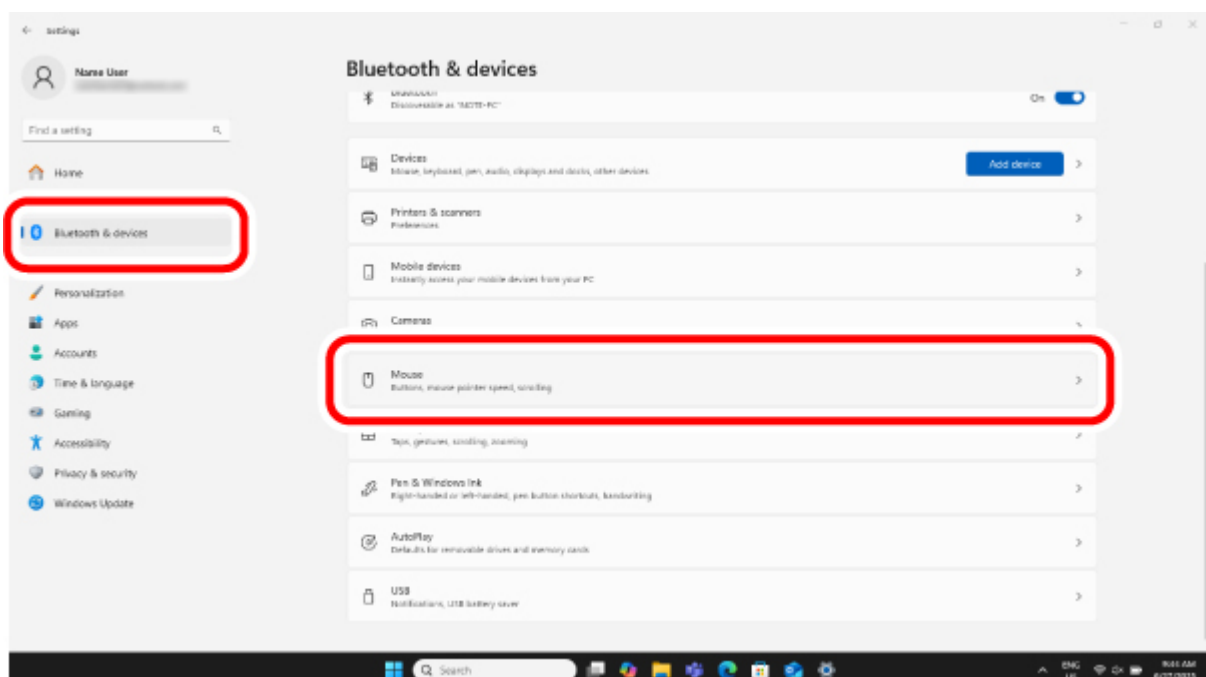

 3) In “Scrolling direction”, click to change the scrolling direction.

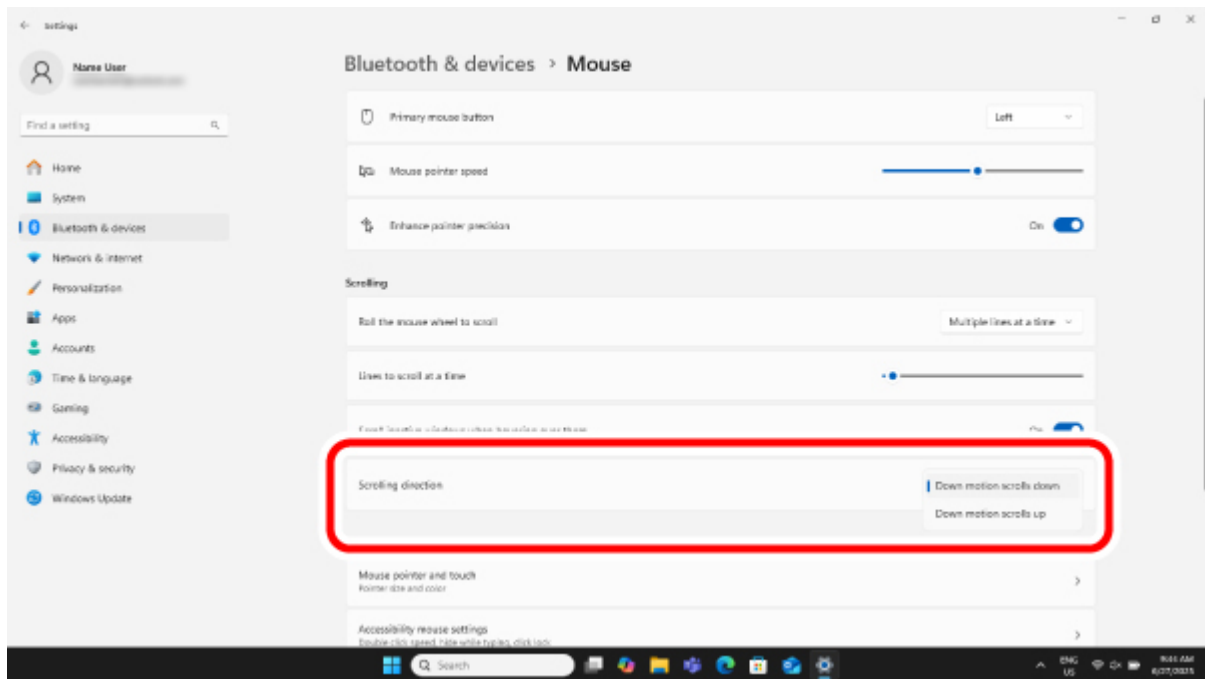

Selecting “Down motion scrolls up” allows you to scroll in the direction opposite to the up and down movement of the wheel.

 
Connecting with the ELECOM Bridge E USB receiver unit at Security Level 4



1) Start up your PC.

Please wait until the PC has started up and can be operated.

2) Insert the ELECOM Bridge E USB receiver unit into the USB-A port on the PC.

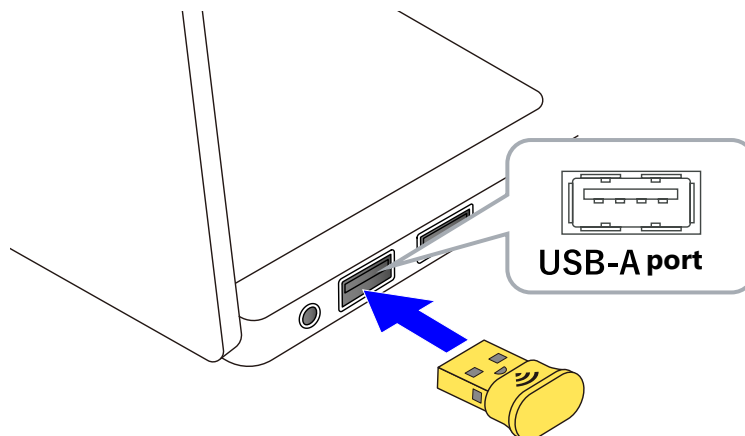

You may use any USB-A port.



- Ensure that the connector is correctly oriented to the port.
- If there is strong resistance when inserting, check the shape and orientation of the connector. Forcibly inserting the connector may damage the connector, and there is a risk of injury.

· Do not touch the terminal portion of the USB connector.



When removing the ELECOM Bridge E USB receiver unit

This product supports hot plugging. The ELECOM Bridge E USB receiver unit can be removed even while the PC is running.

3) Start ELECOM Mouse Assistant 6.

4) On the ELECOM Mouse Assistant 6 screen, double-click this product (ELECOM Bridge E), and then click "Register Device".

5) Press the connection channel switching/pairing button to select the connection channel you want to pair with.

6) Press and hold the connection channel switching/pairing button for three seconds to enter the pairing mode.

7) While the LED is blinking, press and hold the right and left buttons at the same time for three seconds or longer to switch the security level from 2 to 4.

*When the security level is switched to 4, the LED blinks faster.

8) Select "IST Plus-1" on the ELECOM Mouse Assist 6 screen.



The above description is for when "1ch" is selected as the connection destination. When the connection destination is "2ch", "IST Plus-2" is displayed. When the connection destination is "3ch", "IST Plus-3" is displayed.

9) The left-button click or right-button click indication will appear six times on the ELECOM Mouse Assist 6 screen. Operate according to the indications on the screen.

*When the operation is completed six times as indicated, the screen will prompt you to finally click the left and right buttons at the same time. Operate according to the instructions on the screen.

10) When the message "IST Plus-1" changes to "Your device is ready to go!", select "Done".

11) When this product is added to "ELECOM Bridge E" and the status changes to "Connected", pairing is completed.

You can now use the trackball.

Install ELECOM Mouse Assistant 6



"ELECOM Mouse Assistant 6" must be installed to customize settings and operations and assign functions.

■ Get ELECOM Mouse Assistant 6

Please visit our homepage below and download the latest version of the application.

> The download page is [here](#)

Specifications



Connection method	USB 2.4 GHz wireless/Bluetooth® wireless
Connector type	Receiver unit: USB-A plug
Bluetooth standard	Bluetooth Low Energy
Compatible model (USB)	Model running Windows OS, macOS, or ChromeOS with a USB port or supporting Bluetooth Low Energy
Compatible model (Bluetooth®)	Model running Windows OS, macOS, ChromeOS, Android, iOS, or iPadOS with a USB port or supporting Bluetooth Low Energy
Supported OS	Windows 11/10, macOS Tahoe 26, iOS 26/iPadOS 26, ChromeOS, Android 16
Radio frequency	2.4 GHz
Radio wave range	Maximum length approx. 10 m (32.8 ft) *May vary depending on the environment.
Connected device switching function	Supported (Bluetooth or ELECOM Bridge E USB receiver unit × 3)
Ball diameter	Diameter approx. 36 mm (XX in.)
Support type	XXXX
Receiver unit storage compartment	Supported
Power source	Either one AA alkaline battery, one AA manganese battery, or one AA nickel-metal hydride rechargeable battery
Battery life	Maximum duration approx. XX months (approximate life when using an alkaline battery)

	*May vary depending on the usage conditions.
External dimensions	Approx. WXX × LXX × HXX mm (WXX × LXX × HXX in.)
External dimensions (receiver)	Approx. W16 × L19 × H9 mm (WXX × LXX × HXX in.)
Weight	Approx. X g (XX oz) *Without battery
Mass (receiver unit)	Approx. 2 g (XX oz)
Operating environment conditions	Temperature: 5 °C to 40 °C (41 °F to 104 °F); humidity: up to 90 %RH (without condensation)
Storage environment conditions	Temperature: -10 °C to 60 °C (14 °F to 140 °F); humidity: up to 90 %RH (without condensation)
Contents	Trackball main body × 1, ELECOM Bridge E USB receiver unit × 1, AA alkaline battery for confirming operability × 1, removal tool × 1, Quick Start Guide × 1

Compliance status



Model/모델명/设备型号/型號: M-IT10MR, M-IT11MR, M-ER10

www.elecom.co.jp/global/certification/

▼ China / 中国

设备型号: XXXXXXXXXXXX

CMIIT ID: XXXXXXXXXXXX

RoHS Compliance (产品中有毒有害物质或元素的名称及含量)

https://www.elecom.co.jp/global/certification/pdf/RoHS_China.pdf

▼ Taiwan / 台灣



BSMI RoHS Compliance (限用物質含有情況標示聲明書)

https://www.elecom.co.jp/global/certification/pdf/RoHS_Taiwan.pdf



型號 **M-IT10MR, M-IT11MR**: XXXXXXXXXXXXXXXX

型號 **M-ER10**: XXXXXXXXXXXXXXXX

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

▼ **US**

FCC ID: YWO-M-IT10MR, YMO-M-IT11MR

FCC ID: YWO-M-ER10

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE; This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

NOTICE: The manufacture is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. Such modifications could void the user's authority to operate the equipment.

In order to make improvements to this product, the design and specifications are subject to change without prior notice.

FCC Caution: To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 0.5 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The antennas used for this transmitter must be installed to provide a separation distance of at least 0.5 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

Responsible party

ELECOM USA, Inc.

2102 Business Center Drive, Irvine, CA 92612 USA

elecomusa.com