 
 


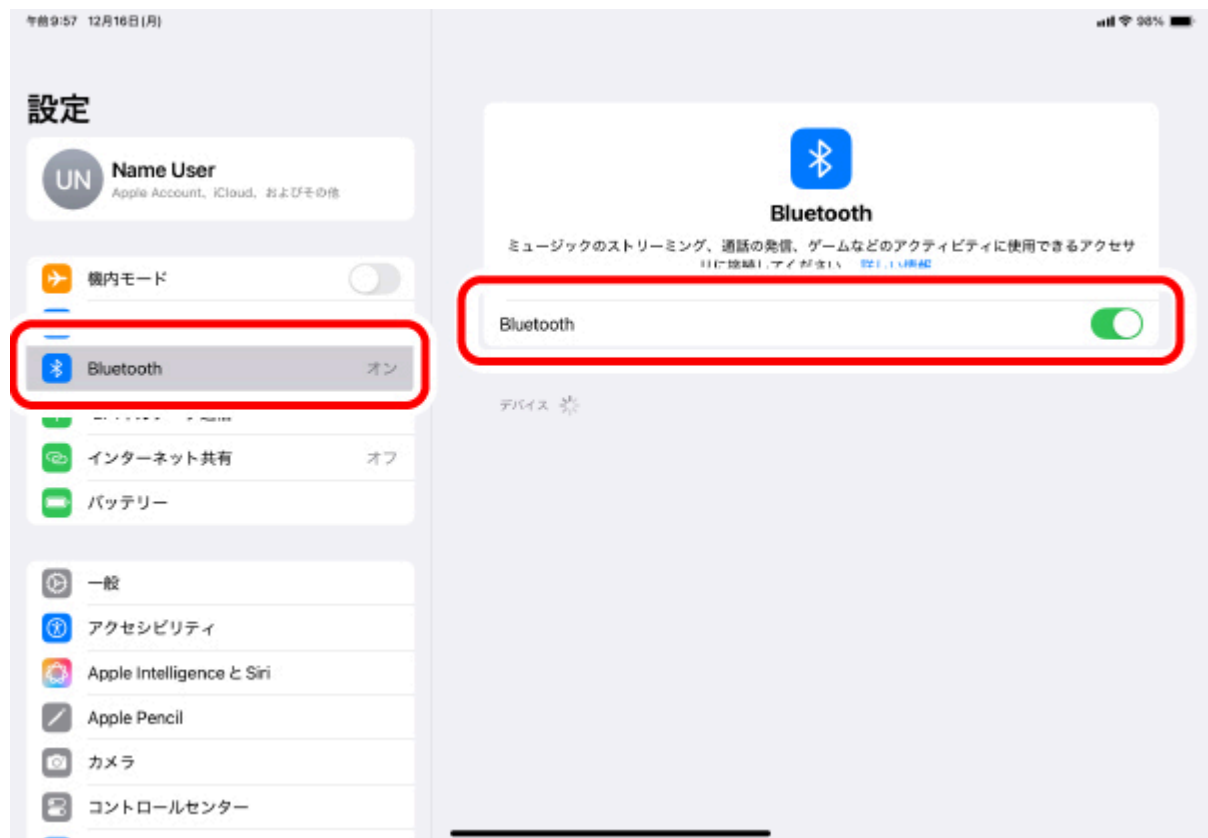


5) Tap on “bitra” when it is detected under “DEVICES”.

Pairing begins.

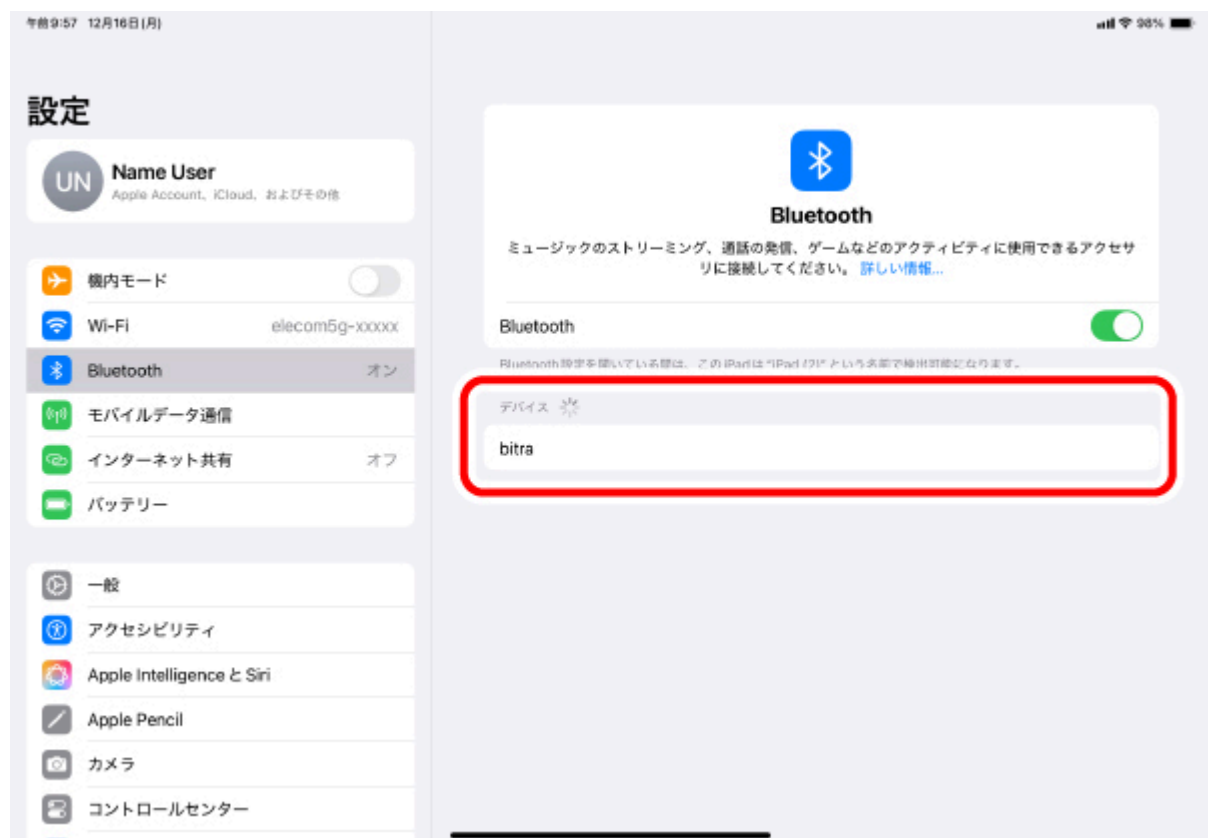


 6) When the “Bluetooth Pairing Request” page loads, tap on “Pair”.

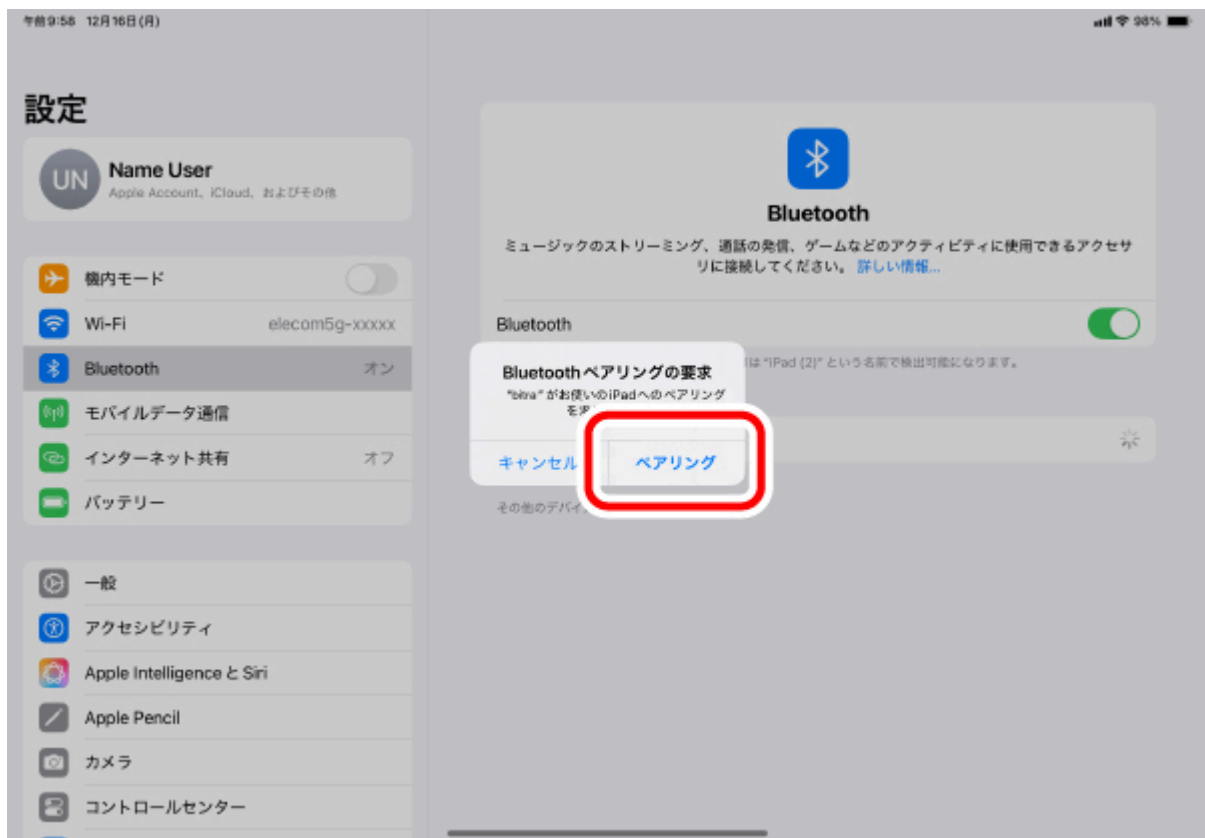

7) You can use the mouse when the status shows "Connected"

 After the area around the wheel lights up for 5 seconds, it turns off.

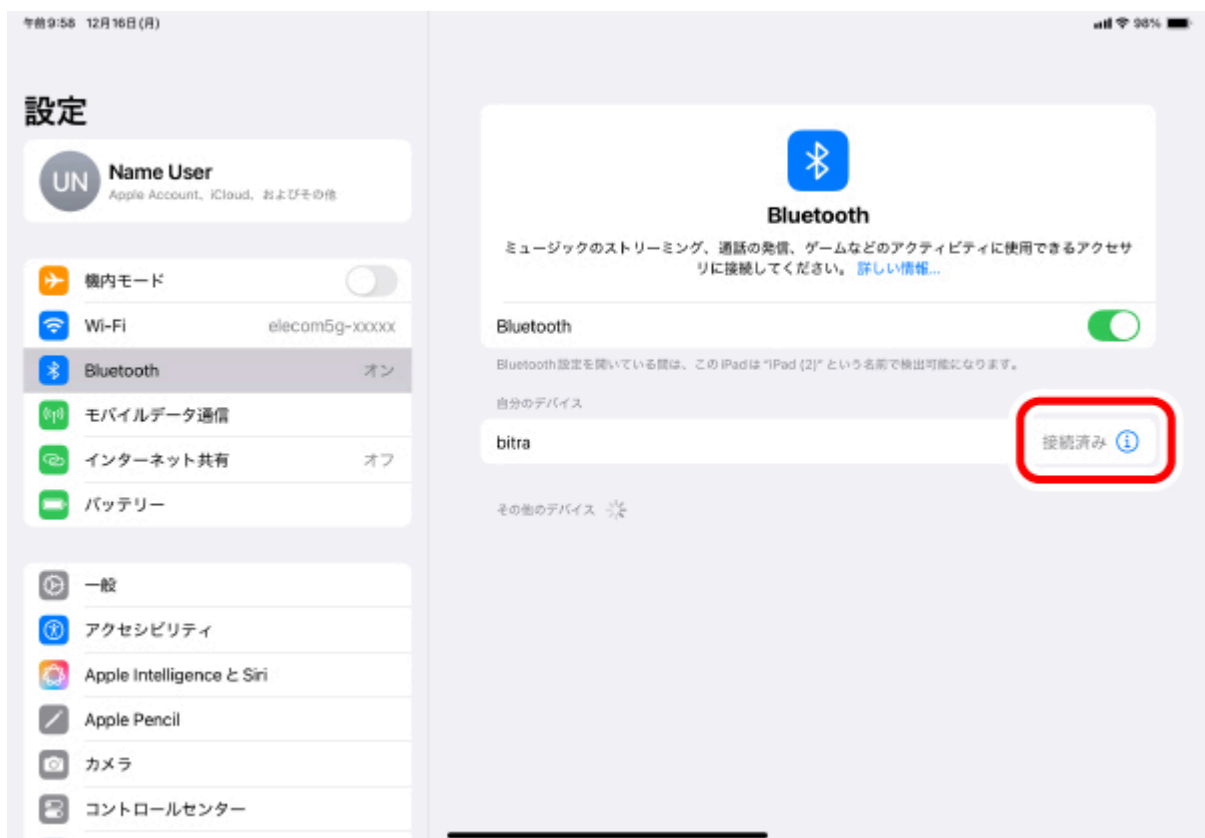

You can now use the trackball.

Register custom actions to the buttons.

Only the 2 buttons and the wheel can be used under the initial settings.

- Button 1: Single-Tap
- Button 2: Secondary Click

Follow the steps below to assign all other button functions.

1. Turn ON AssistiveTouch.

1) Select “Accessibility” under “Settings”.

 
2) Select “Touch”.



3) Select “AssistiveTouch”.




4) Select "AssistiveTouch" to turn ON.

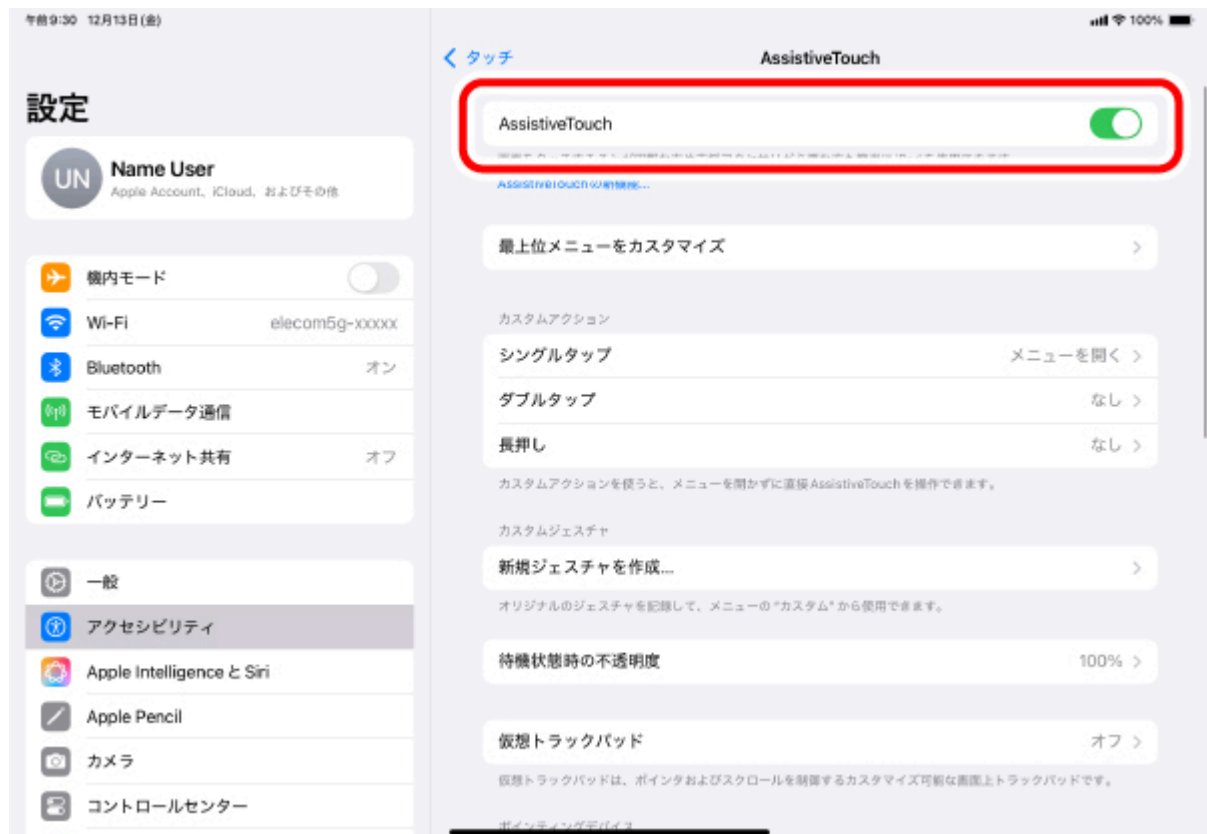


2. Assign custom actions to the buttons.

 
1) Select "Devices" under "POINTER DEVICES".

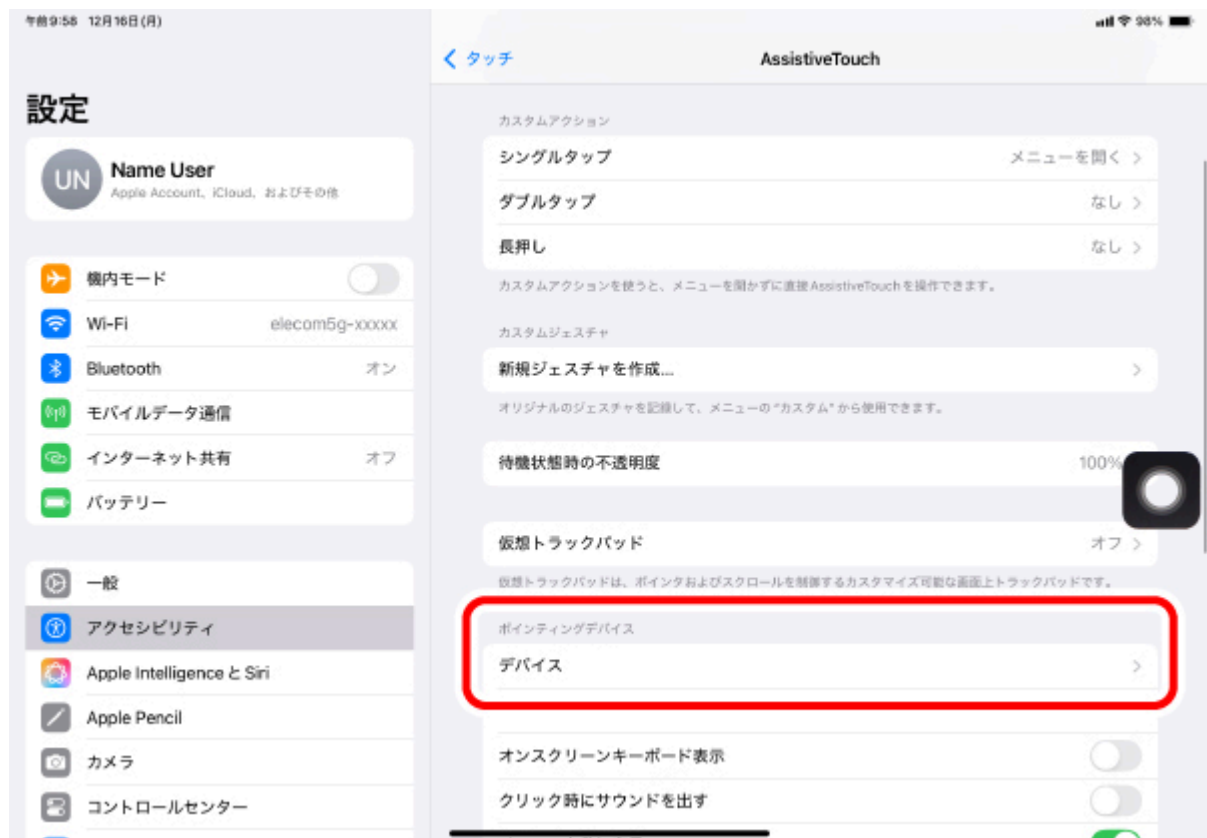

 2) Tap on “bitra”.

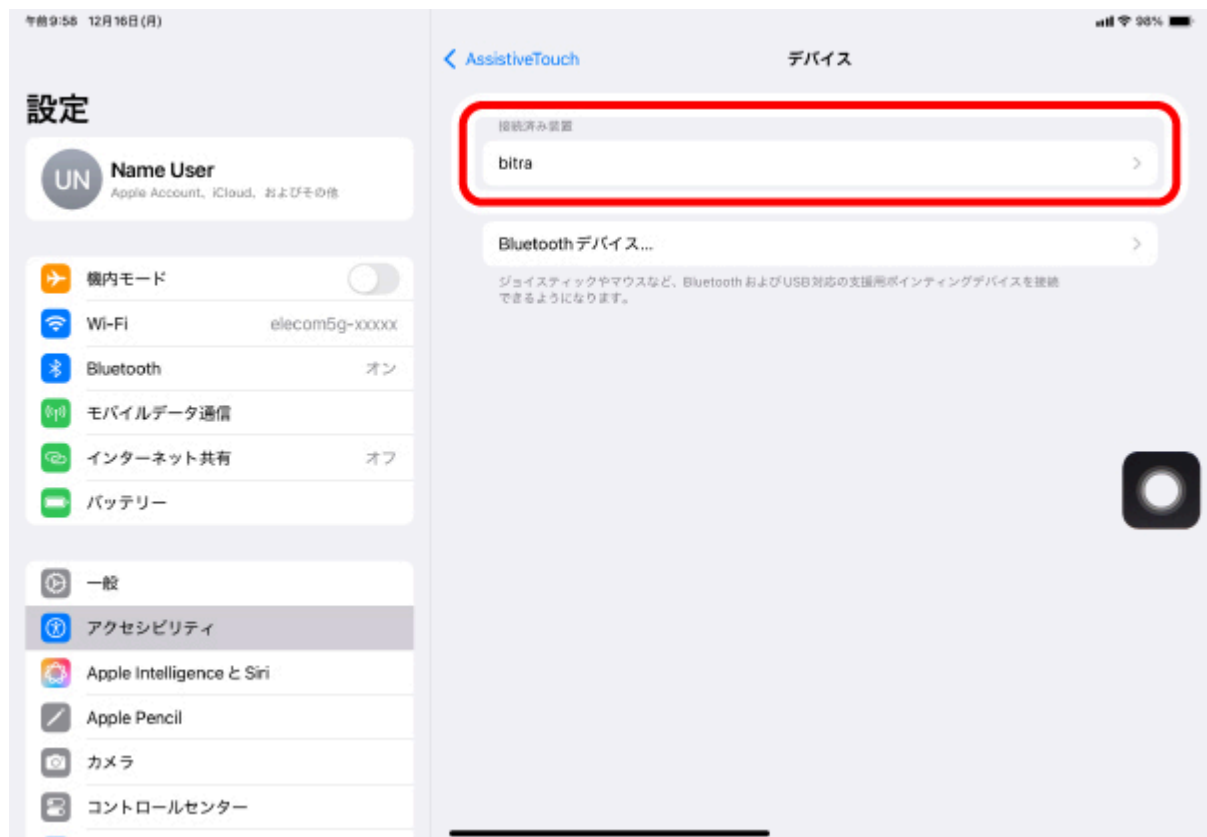

 3) Select “Customize Additional Buttons...”.

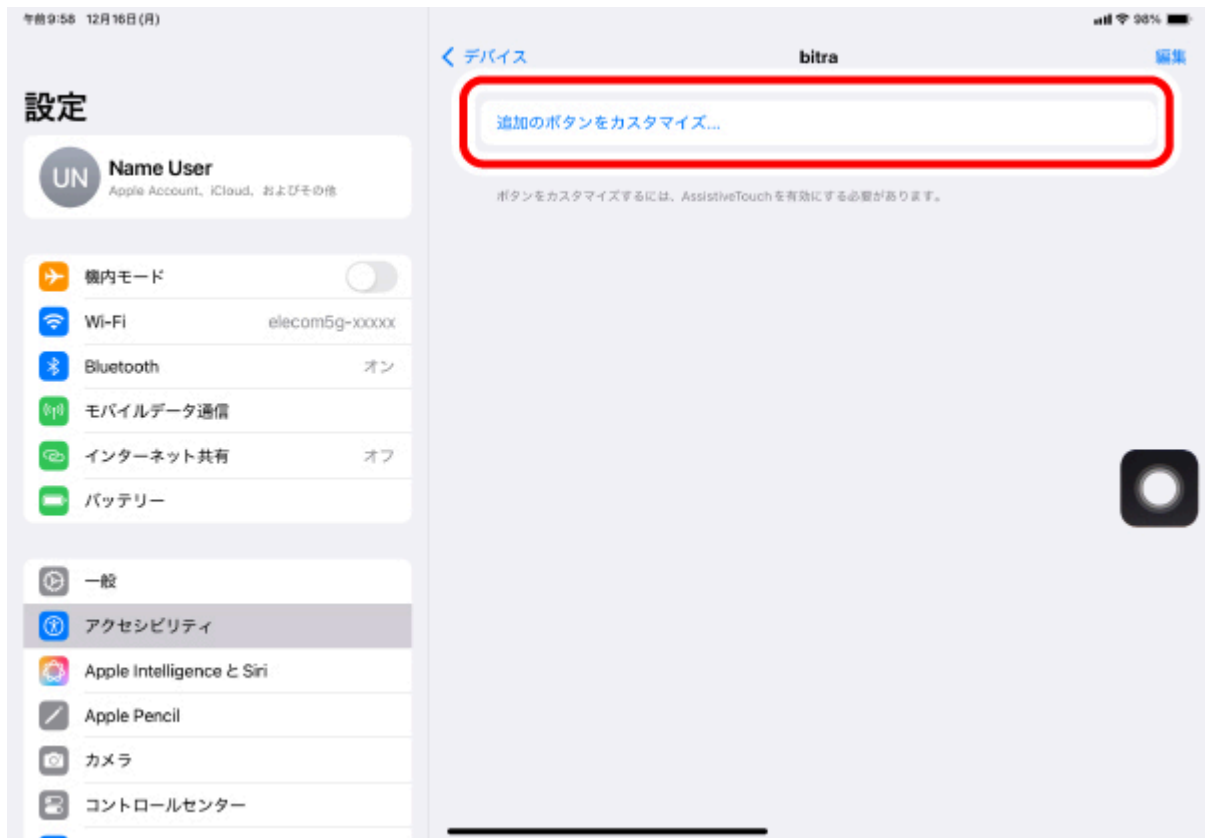


4) When the “Customize Button” page loads, click on the button on the trackball to be added.



*When adding “Button 3”.

 Button 3

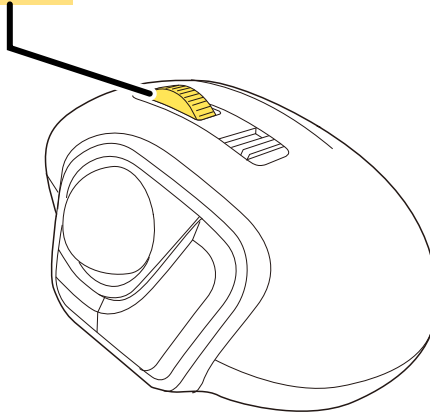


5) A list of all assignable functions loads. Select the desired function to assign.

*When assigning "Screenshot" to "Button 3".



 6) The function has been assigned to the button. To assign a function to another button, repeat the steps above.

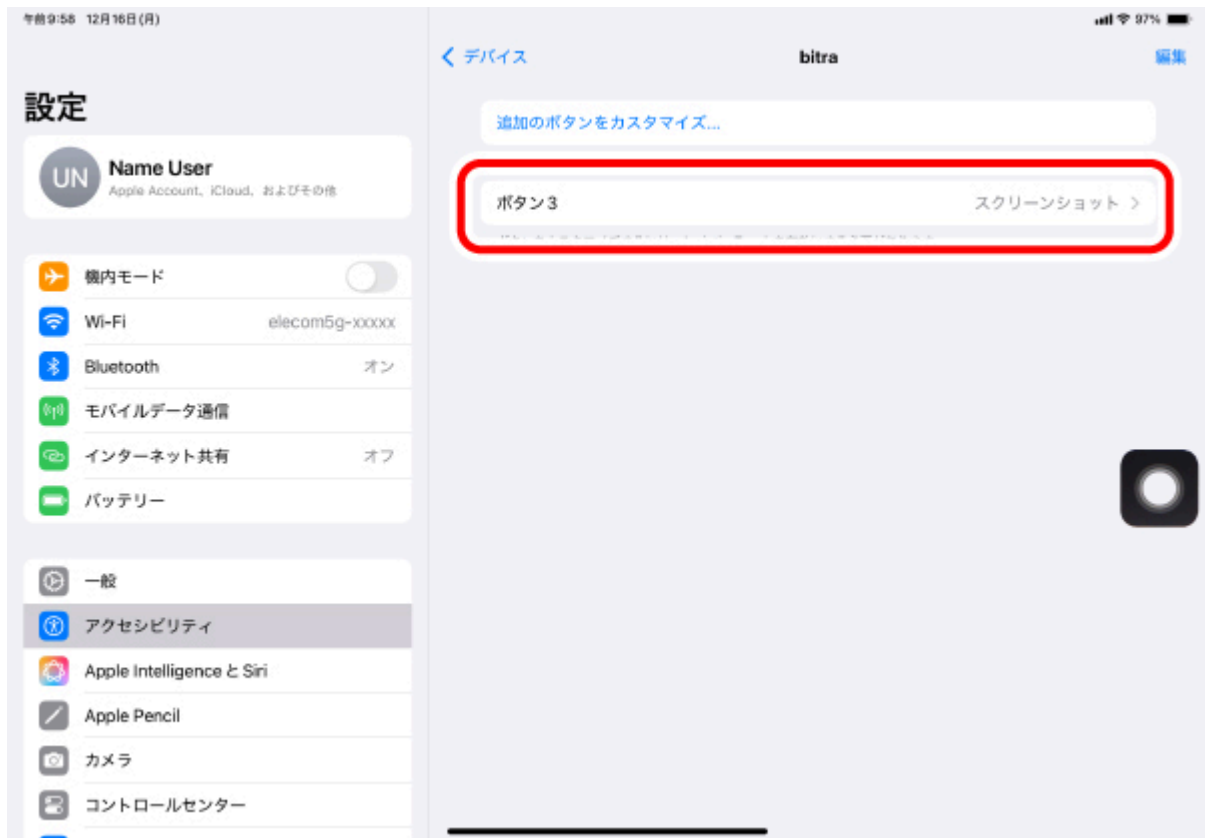


When AssistiveTouch is OFF, the Custom Action function is disabled and only the initial right click, left click and wheel scroll functions may be used.

Change scroll direction

Change the scroll direction for when the scroll wheel on the mouse is moved.

 1) Select “General” under “Settings” from the home page.

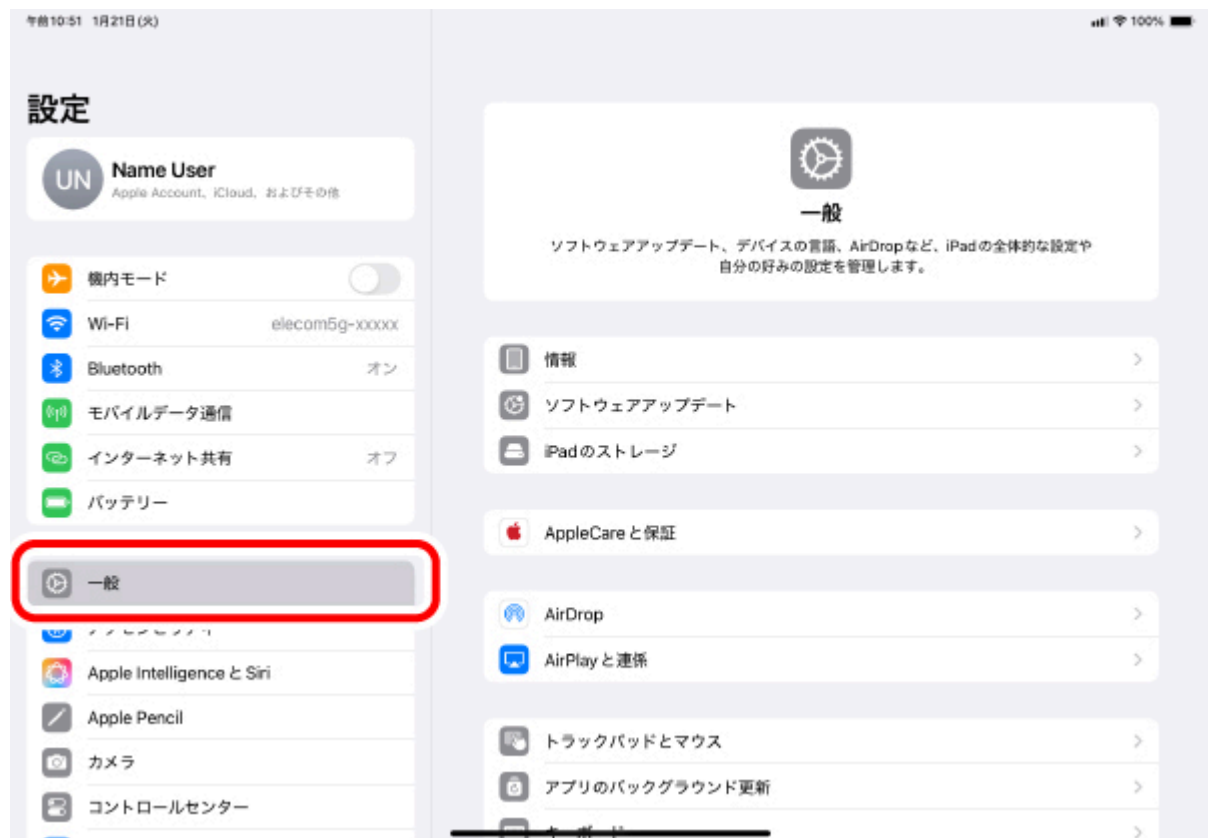

2) Tap on “Trackpad & Mouse”.



3) Tapping “Natural scrolling” to turn it on or off changes the scroll direction.



When "Natural scrolling" is turned off, the scroll direction is the same as the direction of the scroll wheel movement.

Android

 


Using Bluetooth connection




1. Remove the battery insulating tab.


1) Remove the battery cover.

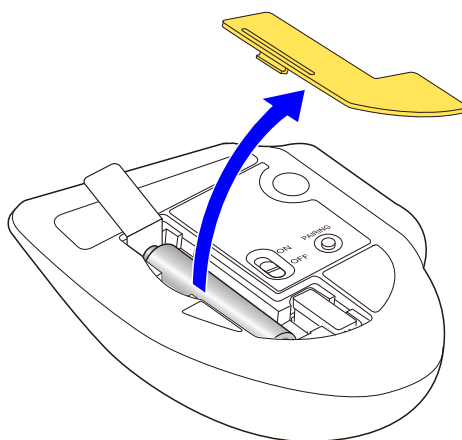

 2) Remove the battery insulating tab.

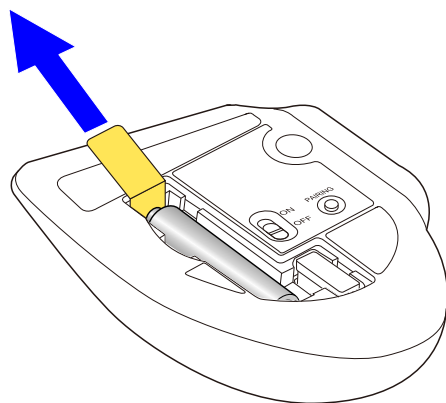


 3) Put the battery cover back on.

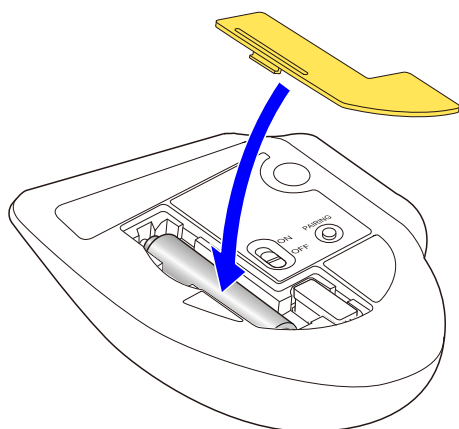


Replacing the battery...

 
1) Remove the battery cover.

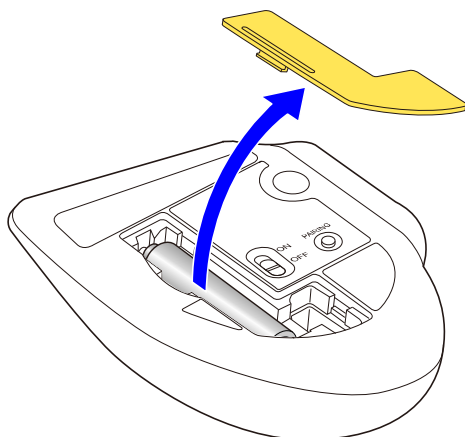

 2) Remove the old battery.

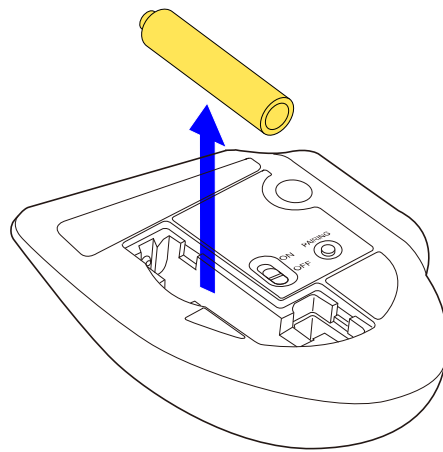


 3) Insert a new battery according to the instructions on the battery compartment.

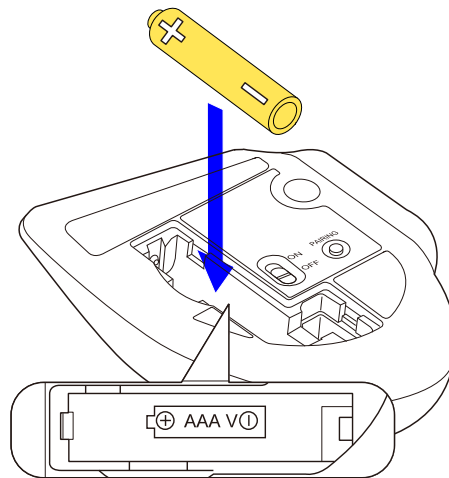


Ensure that the battery is inserted with the positive (+) and negative (-) terminals oriented correctly.

 4) Put the battery cover back on.

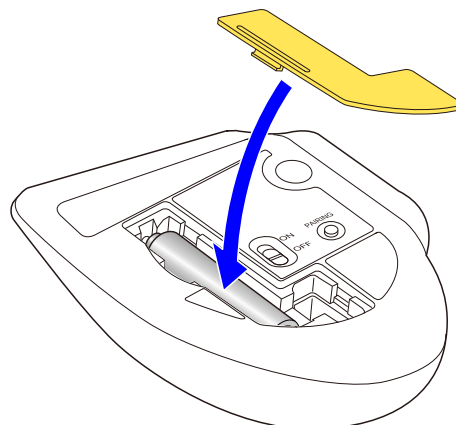

2. Turn the power ON

 1) Slide the power switch on the underside of the product to the ON position.

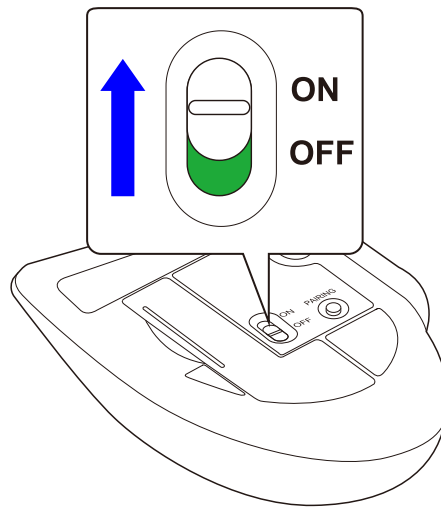

The area around the wheel lights up blue for 5 seconds.

*When the battery is running low, the LED blinks white 10 times every second.

- **When turning on the power for the first time**

The device enters pairing mode, and the area around the wheel rapidly flashes blue. You can now pair it with your computer.

If you wish to pair, refer to Step 3 in ["3. Pairing with an Android Device"](#).



Power-saving mode

When the trackball is left untouched for a fixed period of time while the power is ON, it automatically shifts to power-saving mode.

The trackball returns from power-saving mode when it is moved.

*Trackball operation may be unstable for 2-3 seconds after returning from the power-saving mode.

3. Pairing with an Android device.

 
- Pairing involves registering Bluetooth devices (in this case, this product and an Android device) with each other, and authorizing a connection between them.
- Tap to operate the Android device until pairing is complete.
- Instructions for the Pixel Tablet (Android 15) are as follows. There may be differences depending on the OS version or device.

1) Slide the connection switch downward to select the Bluetooth connection.

The area around the wheel lights up blue for 5 seconds.

2) Press and hold the pairing button on the bottom of the product for 3 seconds, then release it.

The device enters pairing mode, and the area around the wheel rapidly flashes blue.

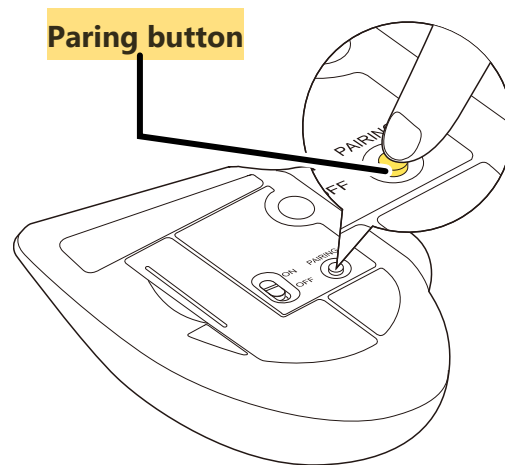

3) Select "Settings" from the home page.

4) Select "Connected devices".



5) Select "Pair new device"



6) Tap on “bitra” under “Available devices”.



7) Select “Pair”.



Pairing begins.

8) Pairing is complete when this product is added to “Other devices”.

 
After the area around the wheel lights up for 5 seconds, it turns off.




You can now use the trackball.

1. Remove the battery insulating tab.


1) Remove the battery cover.

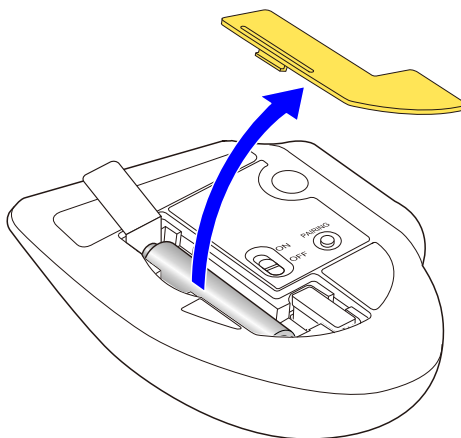

 2) Remove the battery insulating tab.

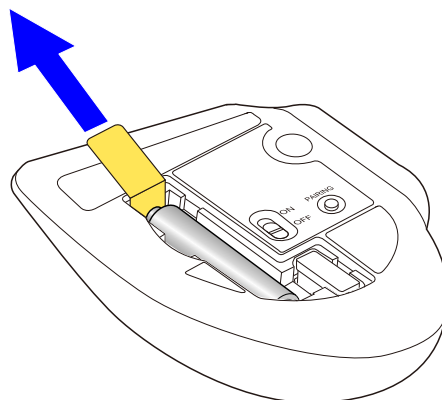


 3) Put the battery cover back on.

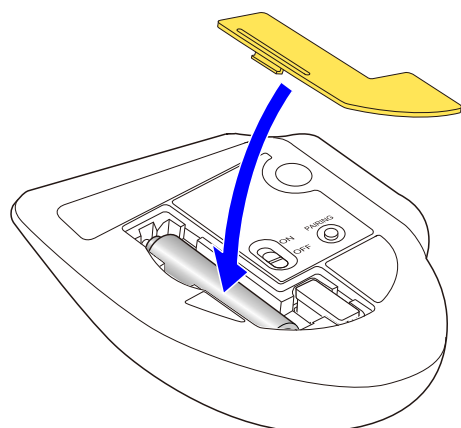


Replacing the battery...

 
1) Remove the battery cover.

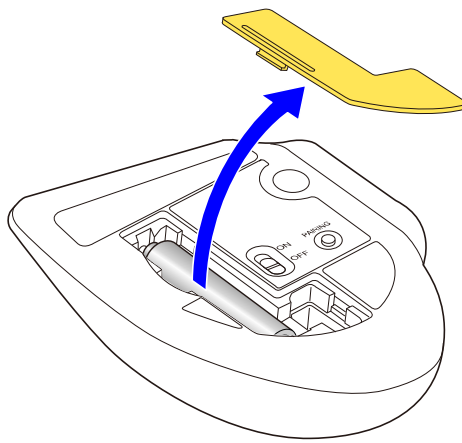

 2) Remove the old battery.

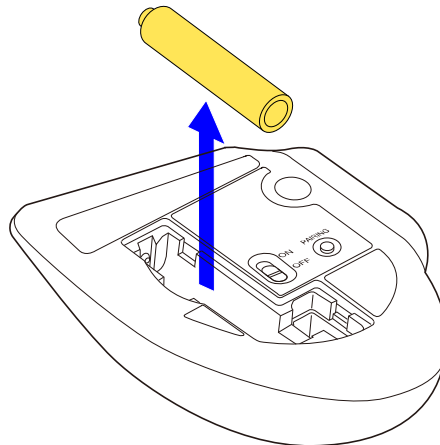


 3) Insert a new battery according to the instructions on the battery compartment.

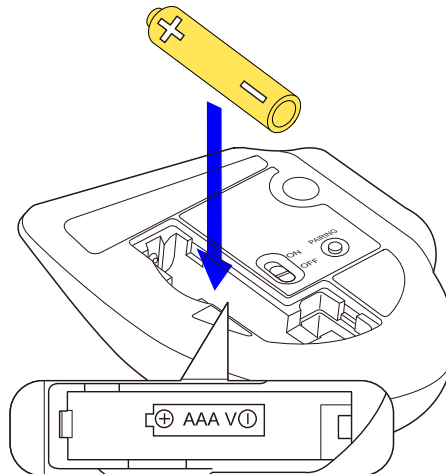


Ensure that the battery is inserted with the positive (+) and negative (-) terminals oriented correctly.

 4) Put the battery cover back on.

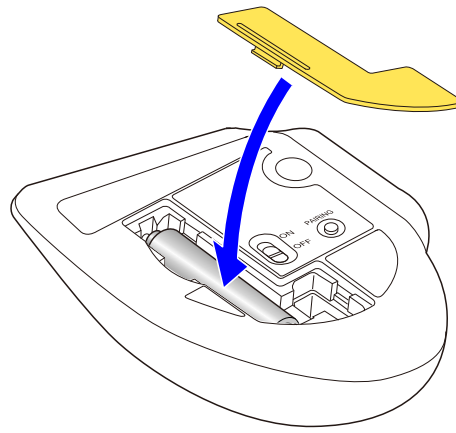

2. Turn the power ON

 1) Slide the power switch on the underside of the product to the ON position.

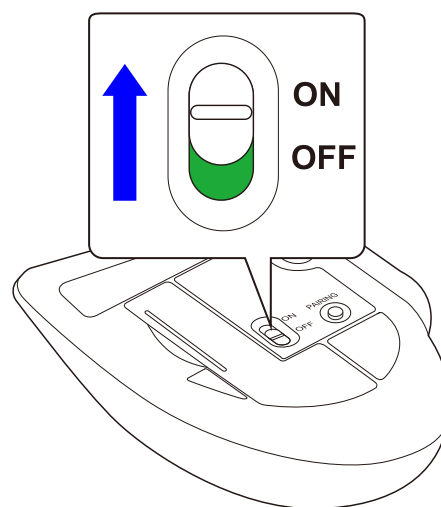

The area around the wheel lights up blue for 5 seconds.

*When the battery is running low, the LED blinks white 10 times every second.

- **When turning on the power for the first time**

The device enters pairing mode, and the area around the wheel rapidly flashes blue. You can now pair it with your computer.

If you wish to pair, refer to Step 3 in ["3. Pairing with a PC"](#).



Power-saving mode

When the trackball is left untouched for a fixed period of time while the power is ON, it automatically shifts to power-saving mode.

The trackball returns from power-saving mode when it is moved.

*Trackball operation may be unstable for 2-3 seconds after returning from the power-saving mode.

3. Pairing with a PC

- Pairing involves registering Bluetooth devices (in this case, this product and your device) with each other, and authorizing a connection between them.

 
- This section covers Chrome OS standard Bluetooth functions. Depending on your computer, unique Bluetooth functions may be used. Please read the respective manuals for each function.
- Use your current mouse or the touchpad on your device to operate your device until pairing is complete.
- The following instructions are for Chrome OS (130.0.6273.126).

1) Slide the connection switch downward to select the Bluetooth connection.

The area around the wheel lights up blue for 5 seconds.


2) Press and hold the pairing button on the bottom of the product for 3 seconds, then release it.

The device enters pairing mode, and the area around the wheel rapidly flashes blue.

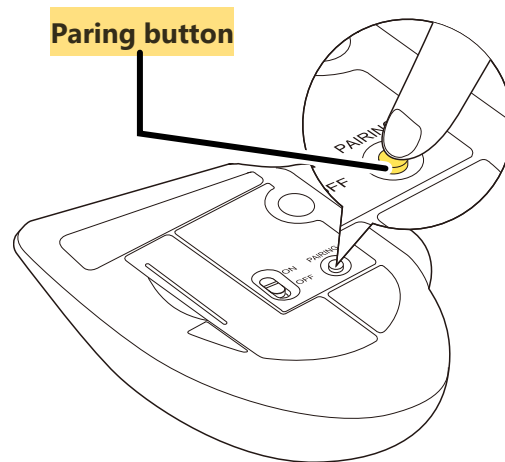


3) Select the battery icon at the bottom right.

 4) Click Bluetooth on the Quick Settings panel.

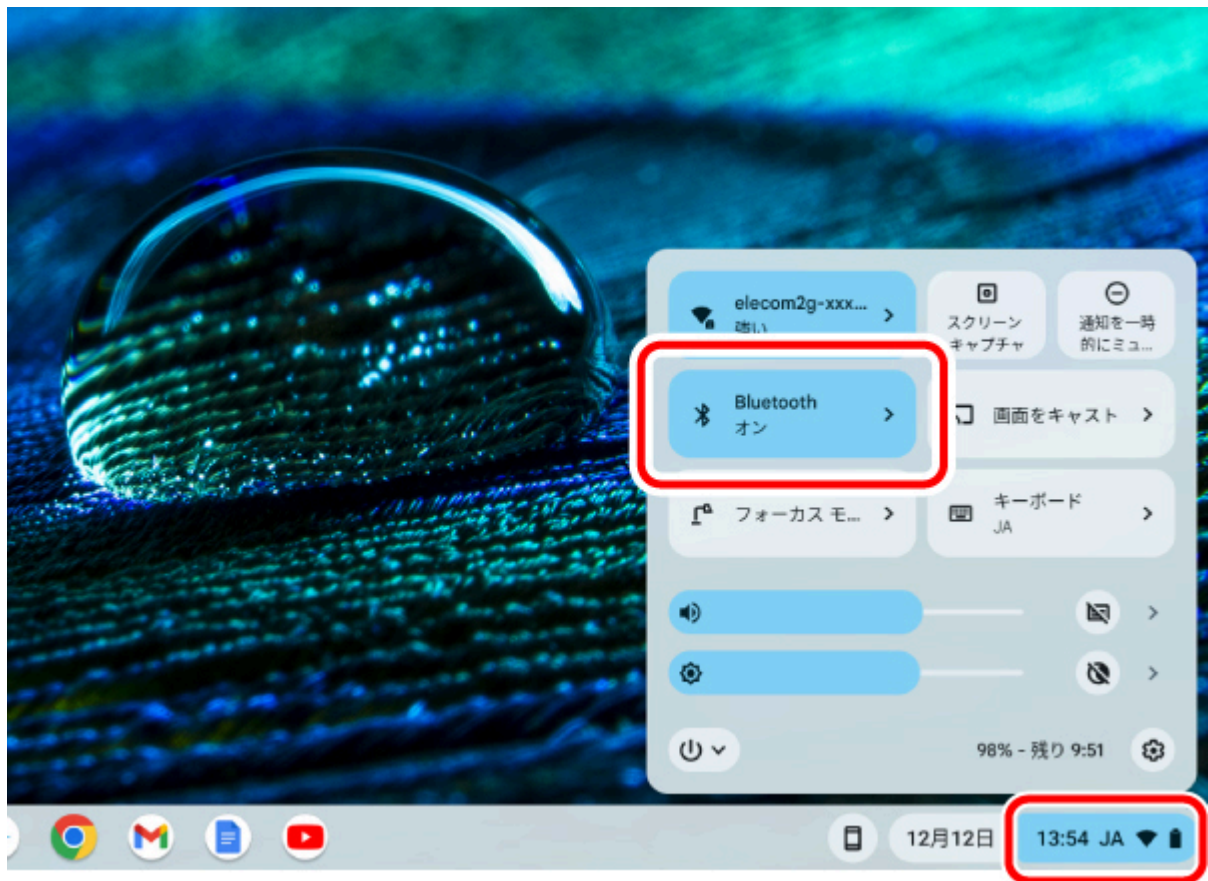

 5) Under “Bluetooth”, select “Pair new device”.

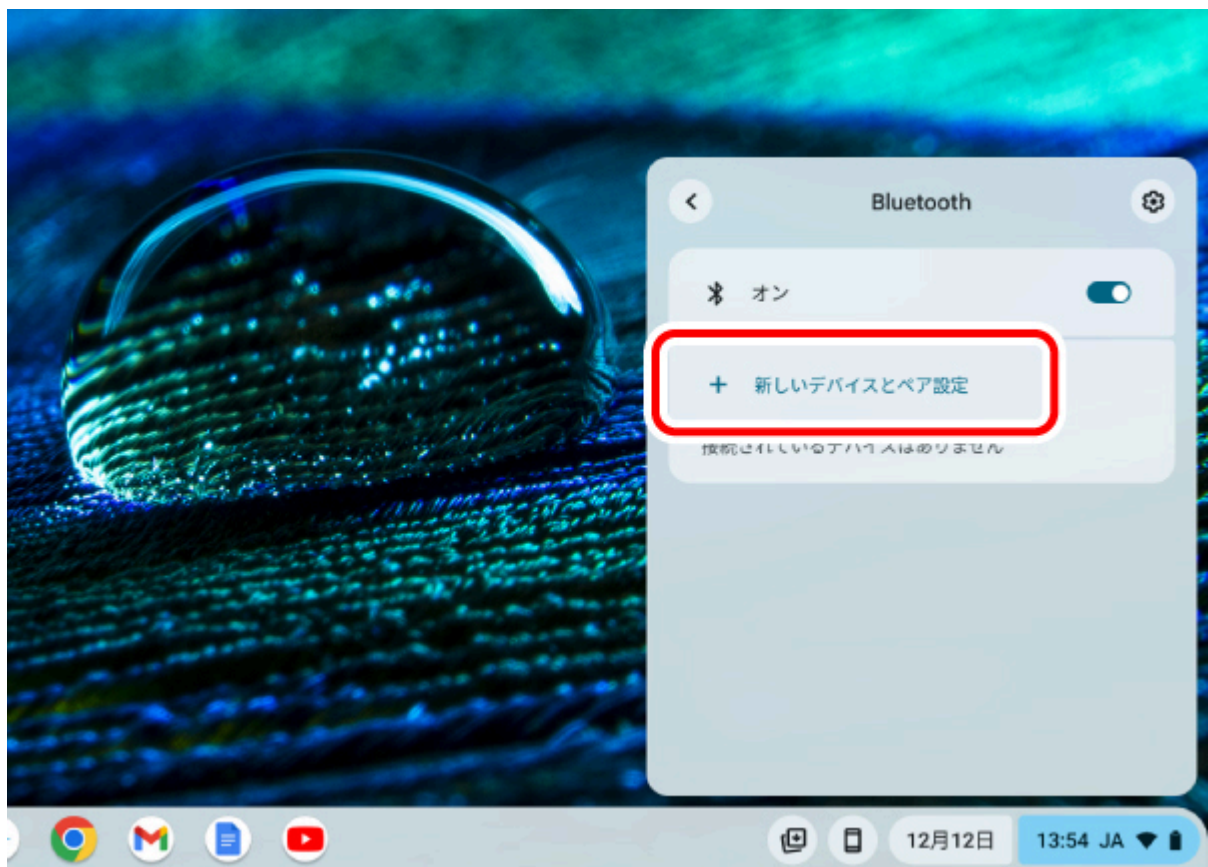

6) Start scanning for devices.



7) Click on "bitra".

Pairing begins.

 


8) "bitra connected" is displayed at the bottom right of the screen.

After the area around the wheel lights up blue for 5 seconds, it turns off.




4) Click "Bluetooth" like in step 2. Pairing is complete when "bitra" appears under "Currently connected".

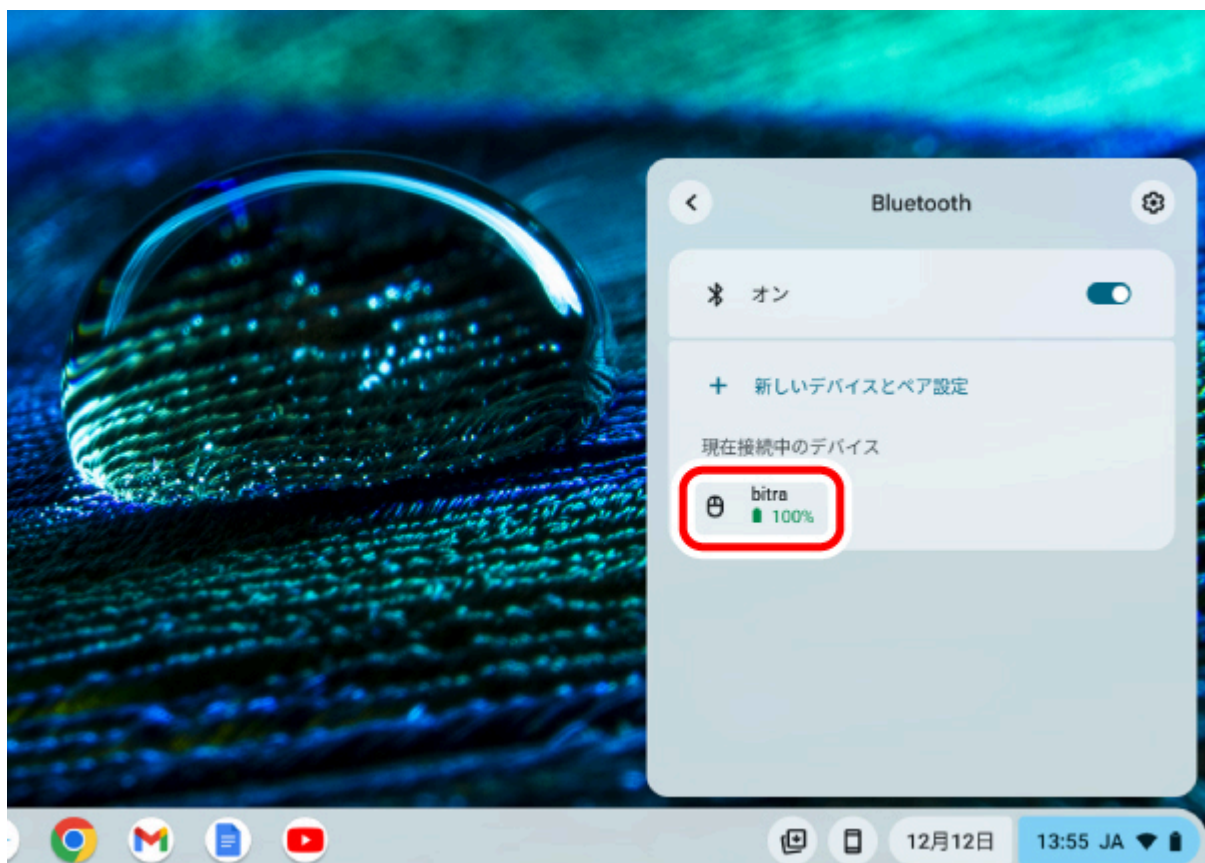


You can now use the trackball.

1. Remove the battery insulating tab.

 
1) Remove the battery cover.

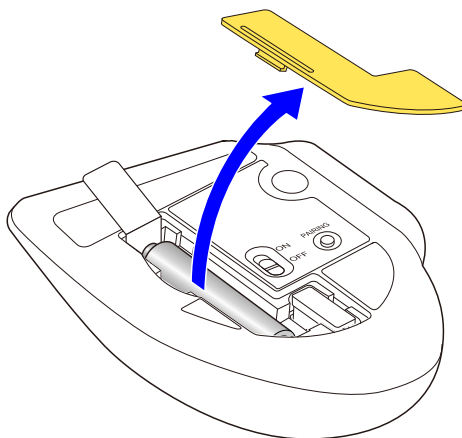

 
2) Remove the battery insulating tab.

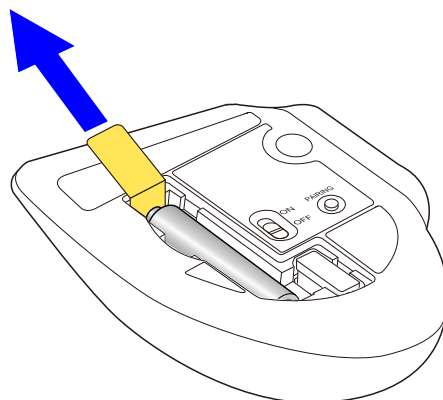

 3) Remove the receiver unit.

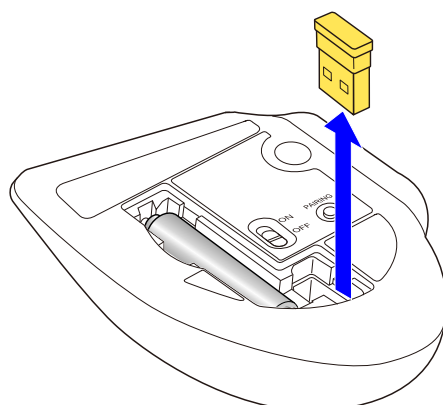


 4) Put the battery cover back on.

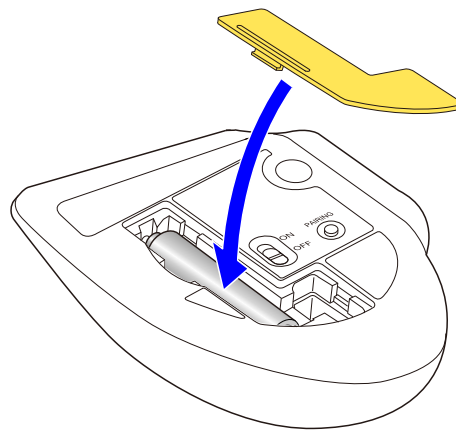


Replacing the battery...

 
1) Remove the battery cover.

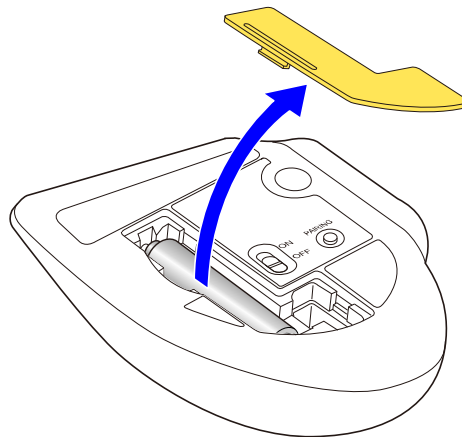

 2) Remove the old battery.

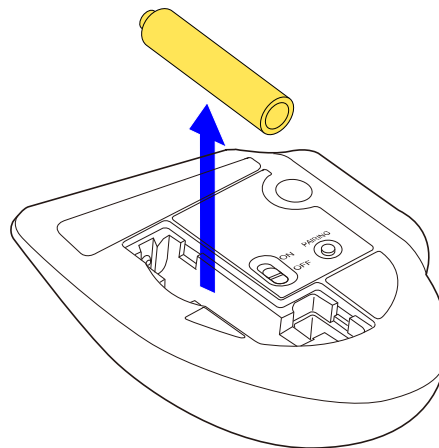


 3) Insert a new battery according to the instructions on the battery compartment.

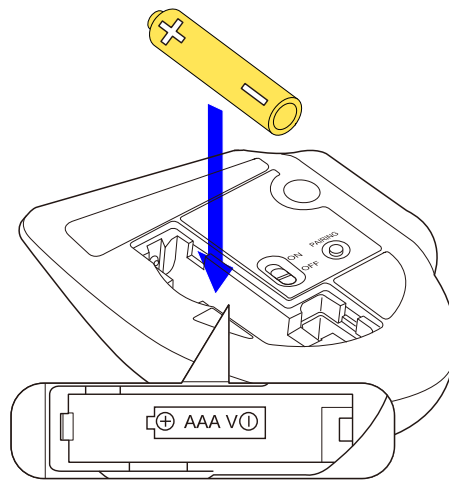


Ensure that the battery is inserted with the positive (+) and negative (-) terminals oriented correctly.

 4) Put the battery cover back on.

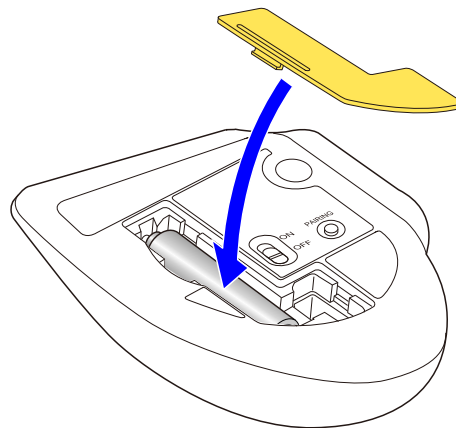

2. Turn the power ON.

 1) Slide the power switch on the underside of the product to the ON position.

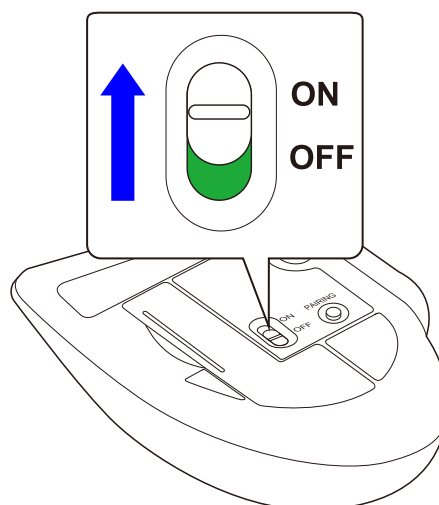

The area around the wheel lights up white for 5 seconds.

*When the battery is running low, the LED blinks white ten times every second.



Power-saving mode

When the trackball is left untouched for a fixed period of time while the power is ON, it automatically shifts to power-saving mode.

The trackball returns from power-saving mode when it is moved.

 
*Trackball operation may be unstable for 2-3 seconds after returning from the power-saving mode.

3. Connect to a PC

1) Start up your PC.

Please wait until the PC has started up and can be operated.


2) Insert the receiver unit into the PC's USB-A port.

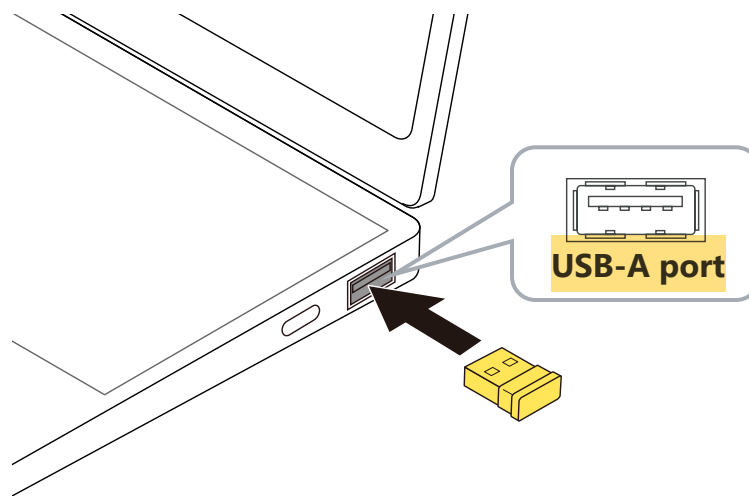

You may use any USB-A port.



 ▪ For devices that do not have a USB-A port, please use a USB Type-C hub.

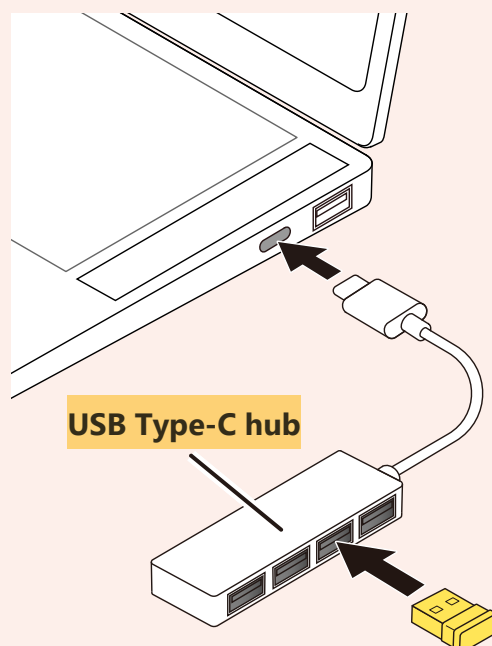

▪ Ensure that the connector is correctly oriented to the port.

- If there is strong resistance when inserting, check the shape and orientation of the connector. Forcibly inserting the connector may damage the connector, and there is a risk of injury.
- Do not touch the terminal portion of the USB connector.



When removing the receiver unit

This product supports hot plugging. The receiver unit can be removed while the PC is on.

3) The driver is automatically installed, and then you are able to use the mouse.
You can now use the trackball.

 
Change the mouse pointer speed

Adjust the mouse pointer movement speed on your PC if the mouse pointer moves too fast or too slow.

1) Select the battery icon at the bottom right.

2) Select  (settings) on the Quick Settings panel.

The settings page appears.

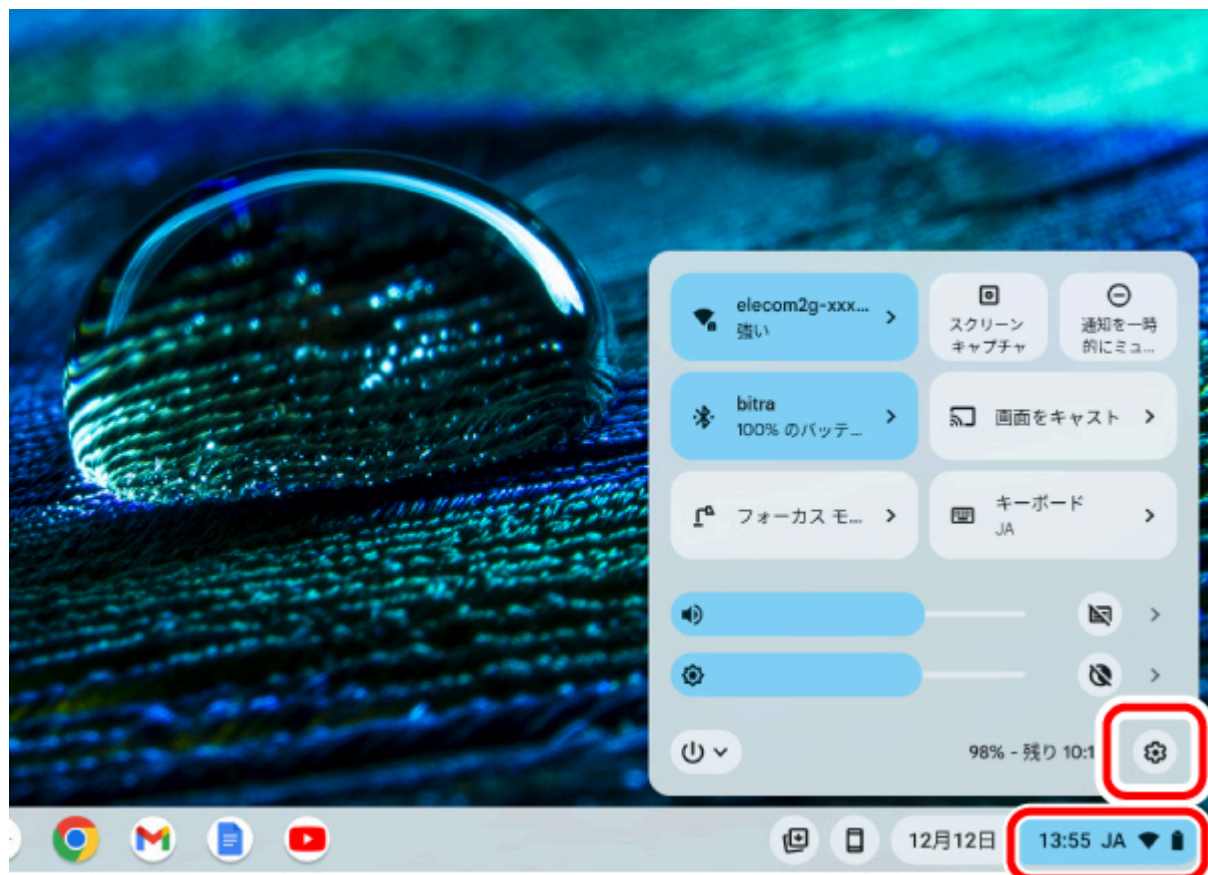

3) Select “Mouse” under “Device”.



4) Adjust the speed of the mouse pointer using the "Cursor speed" slider on this product.

The display name of this product changes depending on the device to its connection.

- Bluetooth connection: bitra
- USB 2.4GHz wireless connection: ELECOM Mouse

 


Change the number of lines scrolled in one wheel turn

1) Select the battery icon at the bottom right.

2) Select  (settings) on the Quick Settings panel.

The settings page appears.

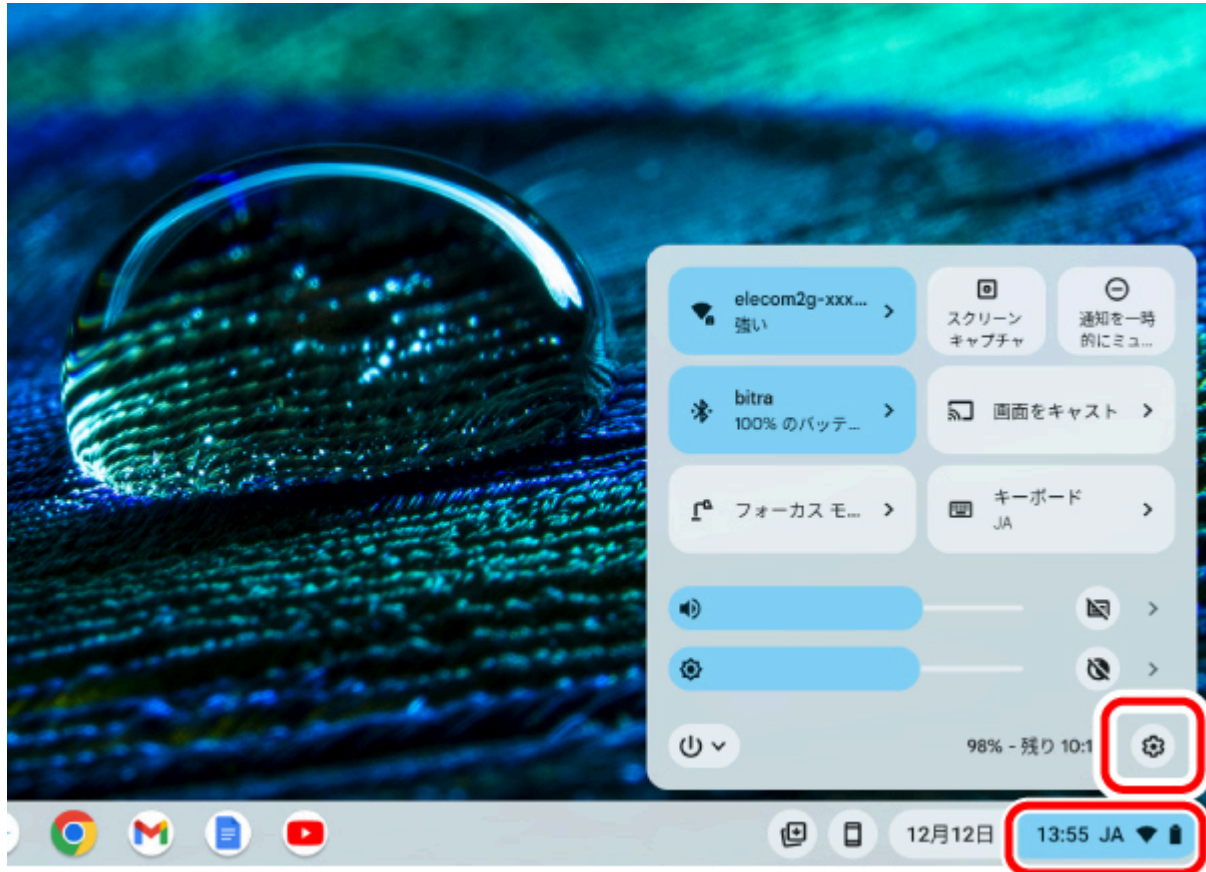

3) Select “Mouse” under “Device”.



4) If "Controlled scrolling" for this product is disabled, click to enable it.

The display name of this product changes depending on the device to its connection.

- Bluetooth connection: bitra
- USB 2.4GHz wireless connection: ELECOM Mouse



5) Adjust the “Scrolling speed” slider bar for this product to adjust the number of lines per scroll.

 


Change scroll direction

Change the scroll direction for when the scroll wheel on the mouse is moved.

- 1) Select the battery icon at the bottom right.
- 2) Select  (settings) on the Quick Settings panel.

The settings page appears.

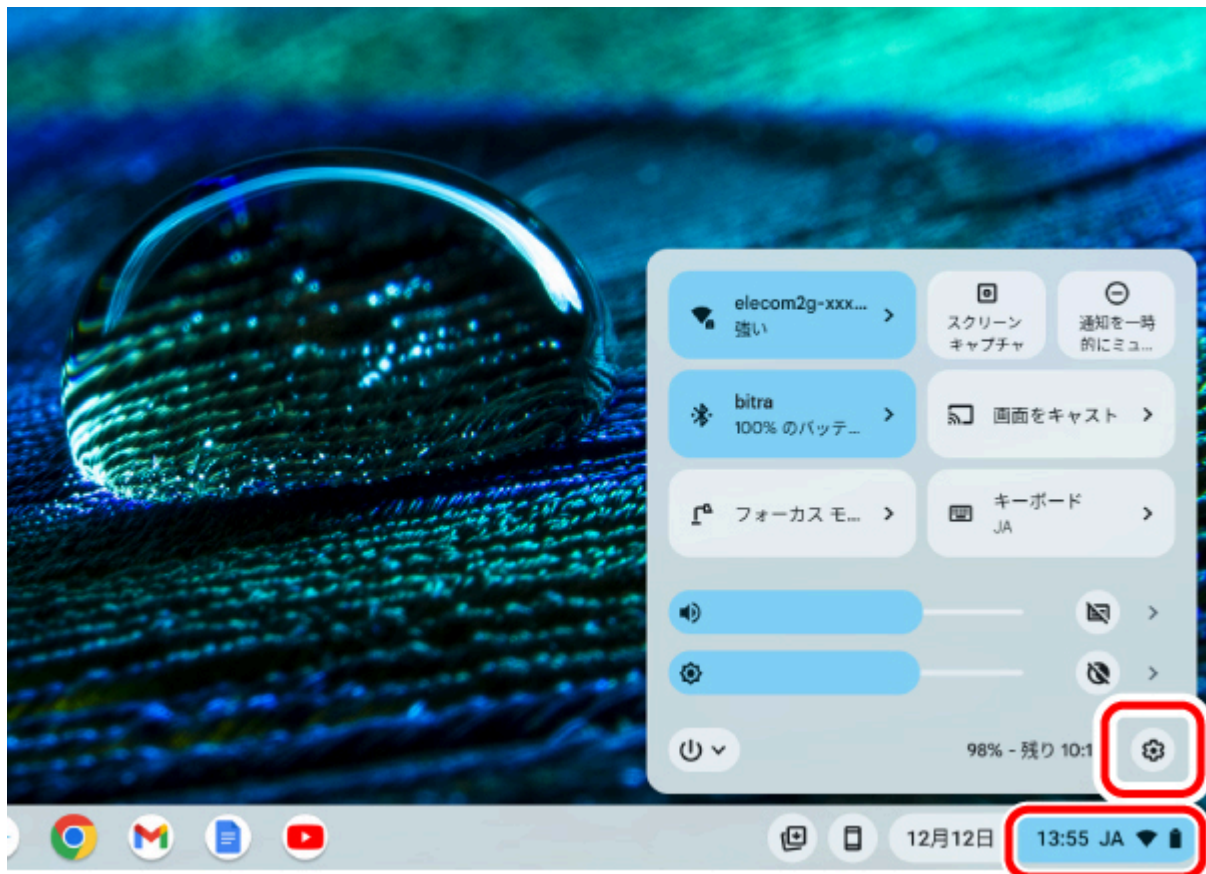

3) Select "Mouse" under "Device".



4) Click "Reverse scrolling" for this product to enable or disabled scrolling in the reverse direction.

The display name of this product changes depending on the device to its connection.

- Bluetooth connection: bitra
- USB 2.4GHz wireless connection: ELECOM Mouse



The scroll direction is the reverse of the direction of the scroll wheel movement when “Reverse scrolling” is turned on.

Specifications



Connection method	USB 2.4GHz wireless/Bluetooth® wireless
Connector type	USB-A plug
Bluetooth® standard	Bluetooth Low Energy
Compatible models (USB)	WindowsOS, macOS, and ChromeOS devices equipped with a USB port or supporting Bluetooth Low Energy
Compatible models (Bluetooth)	WindowsOS, macOS, ChromeOS, Android, iOS, and iPadOS devices equipped with a USB port or supporting Bluetooth Low Energy
Supported OS	Windows 11/10, macOS Sequoia 15, iOS 18/iPad OS 18, ChromeOS, Android 15

Radio frequency	2.4GHz band
Radio wave range	Maximum length approximately 10 m/32.9 ft *May vary depending on the environment.
Connection destination switching	Supported (USB 2.4GHz wireless: 1 unit/Bluetooth: 1 unit)
Sensor type	IR LED
Sensor resolution	xxxDPI
Buttons	5 *Including the wheel button
Number of wheels	1 Port
Ball diameter	Approximately 25 mm/0.99 in
Ball support type	Artificial ruby
Receiver unit storage compartment	Supported
Power source	One AAA alkaline dry cell, manganese dry cell, or nickel-metal hydride rechargeable battery
Battery life	Maximum approximately xx months (when an AAA alkaline dry cell is used) *May vary depending on the usage conditions.
External dimensions (main unit)	Approximately W74 x D90 x H41 mm/W3 x D3.55 x H1.62 in
External dimensions (receiver)	Approximately W15 x D18 x H6 mm/W0.6 x D0.71 x H0.24 in
Weight (main unit)	Approximately xx g/xx oz *Excluding a battery
Weight (receiver)	Approximately 2 g/0.08 oz
Operating environment conditions	Temperature: 5 °C to 40 °C/41 °F to 104 °F, humidity: 90 % RH (without condensation)

Storage environment conditions	Temperature: -10 °C to 60 °C/14 °F to 140 °F, humidity: 90 % RH (without condensation)
Contents	Trackball unit x 1, receiver x 1, AAA alkaline dry cell (for operation check) x 1

Compliance status



Model/设备型号/型號: MMT1MRS, E02C

www.elecom.co.jp/global/certification/

▼ China / 中国

设备型号: XXXXXXXXXX

CMIIT ID: XXXXXXXXXX

RoHS Compliance (产品中有毒有害物质或元素的名称及含量)

https://www.elecom.co.jp/global/certification/pdf/RoHS_China.pdf

▼ Taiwan / 台灣



BSMI RoHS Compliance (限用物質含有情況標示聲明書)

https://www.elecom.co.jp/global/certification/pdf/RoHS_Taiwan.pdf



型號 XXXXXXXX: XXXXXXXXXXXXXXXX

型號 XXXXXXXX: XXXXXXXXXXXXXXXX

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。



FCC ID: YWO-MMT1MRS
FCC ID: YWO-E02C

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver

US

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

NOTICE: The manufacture is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. Such modifications could void the user's authority to operate the equipment.

In order to make improvements to this product, the design and specifications are subject to change without prior notice.

FCC Caution: To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 0.5 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The antennas used for this transmitter must be installed to provide a separation distance of at least 0.5 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

Responsible party
ELECOM USA, Inc.
2102 Business Center Drive, Irvine, CA 92612 USA
elecomusa.com

Support information



ELECOM CO., LTD.

Fushimimachi 4-1-1, Chuo-ku, Osaka City

Go to Global Site

Global Support

Please contact the shop where you purchased this product if you have any feedback or questions about the contents of this manual.

Specifications and external appearance of this product may be changed without prior notice for the purpose of product improvement.

ELECOM is not responsible for any damages to, or failure of other devices caused by using this product. The images are for illustration purposes only and may differ from your actual product.

When exporting this product, check the export regulations for the country of origin.

A customer who purchases outside Japan should contact the local retailer in the country of purchase for enquiries. In "ELECOM CO., LTD. (Japan)", no customer support is available for enquiries about purchases or usage in/from any countries other than Japan. Also, no foreign language other than Japanese is available. Replacements will be made under stipulation of the ELECOM warranty.

Bei Fragen zum Inhalt dieses Handbuchs wenden Sie sich bitte an das Geschäft, in dem Sie dieses Produkt erworben haben.

Die technischen Daten und das äußere Erscheinungsbild dieses Produkts können zum Zweck der Produktverbesserung ohne vorherige Ankündigung geändert werden.

ELECOM haftet nicht für Schäden oder Ausfälle an anderen Geräten, die durch die Verwendung dieses Produkts verursacht werden.

Die Abbildungen dienen nur der Veranschaulichung und können vom tatsächlichen Produkt abweichen. Prüfen Sie bei der Ausfuhr dieses Produkts die Ausfuhrbestimmungen für das Herkunftsland.

Ein Kunde, der außerhalb Japans kauft, sollte sich für Rückfragen an den örtlichen Händler im jeweiligen Erwerbsland wenden. Bei „ELECOM CO., LTD. (Japan)“ steht, außer in Japan, kein Kundendienst für Anfragen zum Kauf oder zur Verwendung in/aus anderen Ländern zur Verfügung. Zudem ist keine andere Fremdsprache als Japanisch verfügbar. Ersatz wird im Rahmen der ELECOM-Garantie geleistet.

Por favor, póngase en contacto con la tienda en la que adquirió este producto si tiene algún comentario o pregunta sobre el contenido de este manual.

Las especificaciones y la apariencia externa de este producto pueden modificarse sin previo aviso con el fin de mejorar el producto.

ELECOM no se hace responsable de los daños o fallos de otros dispositivos causados por el uso de este producto.

Las imágenes son solo para fines ilustrativos y pueden diferir del producto real.

Al exportar este producto, compruebe la normativa de exportación del país de origen.

Los clientes que compran fuera de Japón deben ponerse en contacto con el distribuidor local del país de compra para realizar consultas. En “ELECOM CO., LTD. (Japón)”, no se brinda servicio de atención al cliente para consultas sobre compras o uso en/desde otros países que no sean Japón. Además, no está disponible ninguna otra lengua extranjera que no sea el japonés. Los reemplazos se efectuarán bajo la estipulación de la garantía de ELECOM.

Veuillez contacter le magasin où vous avez acheté ce produit si vous avez des commentaires ou des questions sur le contenu de ce manuel.

Les spécifications et l’aspect extérieur de ce produit peuvent être modifiés sans préavis dans le but d’améliorer le produit.

ELECOM n’est pas responsable des dommages ou des défaillances d’autres appareils causés par l’utilisation de ce produit.

Les images sont fournies à titre d’illustration uniquement et peuvent différer du produit réel.

Lorsque vous exportez ce produit, vérifiez les réglementations d’exportation du pays d’origine.

Un client qui achète hors du Japon doit contacter le détaillant local du pays d’achat pour toute question. Chez « ELECOM CO., LTD. (Japon) », aucun support client n’est disponible pour les questions relatives aux achats ou à l’utilisation dans/à partir de tout pays autre que le Japon. De

même, aucune langue étrangère autre que le japonais n'est disponible. Les remplacements seront effectués conformément aux dispositions de la garantie ELECOM.

Entre em contato com a loja onde você comprou este produto se tiver alguma sugestão ou dúvida sobre o conteúdo deste manual.

As especificações e aparência externa deste produto podem ser alteradas sem aviso prévio para fins de melhoria do produto.

A ELECOM não é responsável por quaisquer danos ou falhas de outros dispositivos causados pelo uso deste produto.

As imagens são apenas para fins ilustrativos e podem diferir do produto real.

Ao exportar este produto, confira os regulamentos de exportação para o país de origem.

Um cliente que compra fora do Japão deve entrar em contato com o revendedor local no país de compra para obter informações. Na "ELECOM CO., LTD. (Japão)", nenhum suporte ao cliente está disponível para consultas sobre compras ou uso em/de quaisquer outros países além do Japão. Além disso, nenhum outro idioma estrangeiro está disponível além do japonês. As trocas serão feitas sob estipulação da garantia ELECOM.

如果您对本手册内容有任何反馈或疑问，请与购买本产品的零售商联系。

本产品的规格及外观如有变更以对产品进行改进，恕不另行通知。

因使用本产品而造成其他设备故障或问题时，ELECOM概不负责，敬请知悉。

图片仅供参考，您所收到的实际产品可能有所差异。

出口本产品至海外时，请检查原产国的出口法规。

在日本境外购买产品的客户应与当地的的零售商联系进行咨询。“ELECOM CO., LTD. (日本)”不对日本之外的其他国家的客户提供有关购买或使用的咨询服务。另外，公司不提供日语之外的其他外语服务。产品如需更换，需要在 ELECOM 保修期规定范围之内。

若您對本手冊的內容有任何回饋或疑問，請聯絡您購買本產品的商店。

為了改進產品，本產品的規格和外觀可能會發生變化，恕不事先通知。

ELECOM 對因使用本產品而造成的其他裝置損壞或故障不承擔責任。

圖片僅用於說明目的，可能與您的實際產品有所出入。

出口這款產品時，需檢查原產國的出口規定。

客戶若在日本以外地區購買本產品，如有任何問題，應聯絡購買當地的經銷商。對於在日本以外的任何其他地區購買的產品，或於此類地區使用產品，「ELECOM CO., LTD.(Japan)」皆不針對相關問題提供支援。與此同時，除日語以外，不提供其他的外國語言服務。您可以根據ELECOM的規定於保固期間要求更換產品。

본 취급설명서는 설명서에 대한 의견 또는 질문이 있으신 경우 본 제품을 구매한 대리점으로 문의하시기 바랍니다.

본 제품의 사양 및 외관은 제품 개선을 위해 사전 통지 없이 변경될 수 있습니다.

본 제품의 사용에 따른 다른 기기의 고장이나 트러블에 관해서는 책임을 지지 않으므로 양해 바랍니다.

일부 형태가 달라지는 경우도 있습니다.

본 제품을 수출할 때, 원산지의 수출 규정을 확인합니다.

일본 외 다른 국가에서 구입하는 고객은 문의 사항이 있는 경우 제품 구입 국가의 대리점에 연락하십시오. 'ELECOM CO., LTD.(일본)'는 일본 이외의 국가에서 구입 또는 사용 문의에 대한 고객 지원을 제공하지 않습니다. 또한 일본어 이외의 외국어는 지원되지 않습니다. 제품의 교환은 ELECOM 보증 규정에 따라 이루어 집니다.

Silakan hubungi toko tempat Anda membeli produk ini jika Anda memiliki masukan atau pertanyaan tentang isi manual ini.

Spesifikasi dan tampilan luar produk ini dapat berubah tanpa pemberitahuan sebelumnya untuk tujuan peningkatan produk.

ELECOM tidak bertanggung jawab atas segala kerusakan atau kegagalan perangkat lain yang disebabkan oleh penggunaan produk ini.

Gambar-gambar yang tertera hanyalah untuk ilustrasi dan mungkin berbeda dari produk asli.

Saat produk diekspor, harap periksa dengan saksama semua peraturan ekspor negara asal.

Pelanggan yang membeli di luar Jepang harus menghubungi peritel lokal di negara pembelian untuk pertanyaan apa pun. Di "ELECOM CO., LTD. (Jepang)", tidak tersedia dukungan pelanggan untuk pertanyaan tentang pembelian atau penggunaan di/dari negara lain selain Jepang. Selain itu, tidak tersedia bahasa asing lain selain Jepang. Penggantian akan dilakukan sesuai dengan ketentuan garansi ELECOM.

Sila hubungi kedai tempat anda membeli produk ini jika anda mempunyai sebarang maklum balas atau pertanyaan tentang kandungan manual ini.

Spesifikasi dan rupa luaran produk ini boleh diubah tanpa notis awal untuk tujuan penambahbaikan produk.

ELECOM tidak bertanggungjawab ke atas sebarang kerosakan, atau kegagalan peranti lain yang disebabkan oleh penggunaan produk ini.

Imej adalah bagi tujuan ilustrasi sahaja dan mungkin berbeza daripada produk sebenar anda.

Apabila mengeksport produk ini, periksa peraturan eksport bagi negara asal.

Pelanggan yang membeli di luar Jepun harus menghubungi peruncit tempatan di negara pembelian untuk pertanyaan. Di "ELECOM CO., LTD. (Jepun)", tiada sokongan pelanggan yang disediakan untuk pertanyaan mengenai pembelian atau penggunaan di/dari mana-mana negara selain Jepun. Selain itu, tiada bahasa asing yang tersedia selain daripada bahasa Jepun. Penggantian akan dibuat di bawah penetapan jaminan ELECOM.