

Quick Start Guide

Your Phone

- 3.5mm Headphone Jack
- Rear Camera
- Volume Key
- Power Key
- 5.5 inch Touch Screen
- Charger / USB Connector
- Back Camera
- B.O.H.
- Flash
- Back Cover
- Speaker

Key

- Back** - Back to the previous screen or exit.
- Home** - Return to the Home screen.
- Menu** - Open options menu available.
- Volume** - Volume up/down. Continuously press to turn to silent and vibrate mode. Adjust the volume. Adjust the music playback volume.
- Power** - Press short to turn on/off the screen display. Press 3s to turn on/off the phone. Press 15s to enter the phone.

Open the Recent Applications

Press and hold the home key to open and quick access the recent applications. Slide left or right in the list to delete the applications.

Take a Screenshot

Press the power and volume keys at the same time to take a screenshot for current page.

Call Note

Press the power or volume key to turn off the ring when there is a call.

Insert SIM Card and Micro-SD Card

Note

Please power off the phone and pull out the battery before you are ready to insert the SIM card. If not, the SIM card might be damaged.

Home Screen

Notification Bar

Slide down the notification bar you can read detail notice. Slide up or press the Back Key you can get the notification bar back.

Status Icon

Quick to Settings

Quick to Delete All Notice

Quick to Turn Off Network

Detail Notice

Press to Check the Applications

Slide Left or Right to Delete this Notice

Call on hold

You have a missed call

New SMS or MMS

New Email

Mi Fi is activated

Bluetooth is activated

Connected to PC

Low power mode is activated

There is no Micro-SD card in the phone

The headset is plugged into the phone

Error occurred or caution required

People

This section allows you to manage your daily contacts by storing their name, number even personality portrait in your People.

People entries can be sorted by name, entry, or group.

Adding a New Contact

You can enter the contact name or a short continuous phone number in your contact list for speed dialing.

Press the button at bottom right to add a new contact in the contact list.

Call

From the Home screen, tap and use the dialpad on screen to enter the number you wish to dial, or make the call from the People.

Making a Call Using Speed Dial

You can enter the contact name or a short continuous phone number in your contact list for speed dialing.

Press the button at bottom right to add a new contact in the contact list.

Message

You can check each message in the conversation for all contacts in your phone.

Creating a New Message

From message list, tap at the bottom right of the screen to enter a new message.

Replying a Message

Choose and enter a conversation you wish to reply, tap the "Type message" and then tap to send back.

Deleting Messages / Conversations

Choose and hold the message / conversation in the screen display delete choice. At the delete prompt, tap to delete or to cancel.

[illegible]