




HEAVY-DUTY TIRES FOR
OFF-ROAD ACTION

radio controlled vehicle off-road explorer

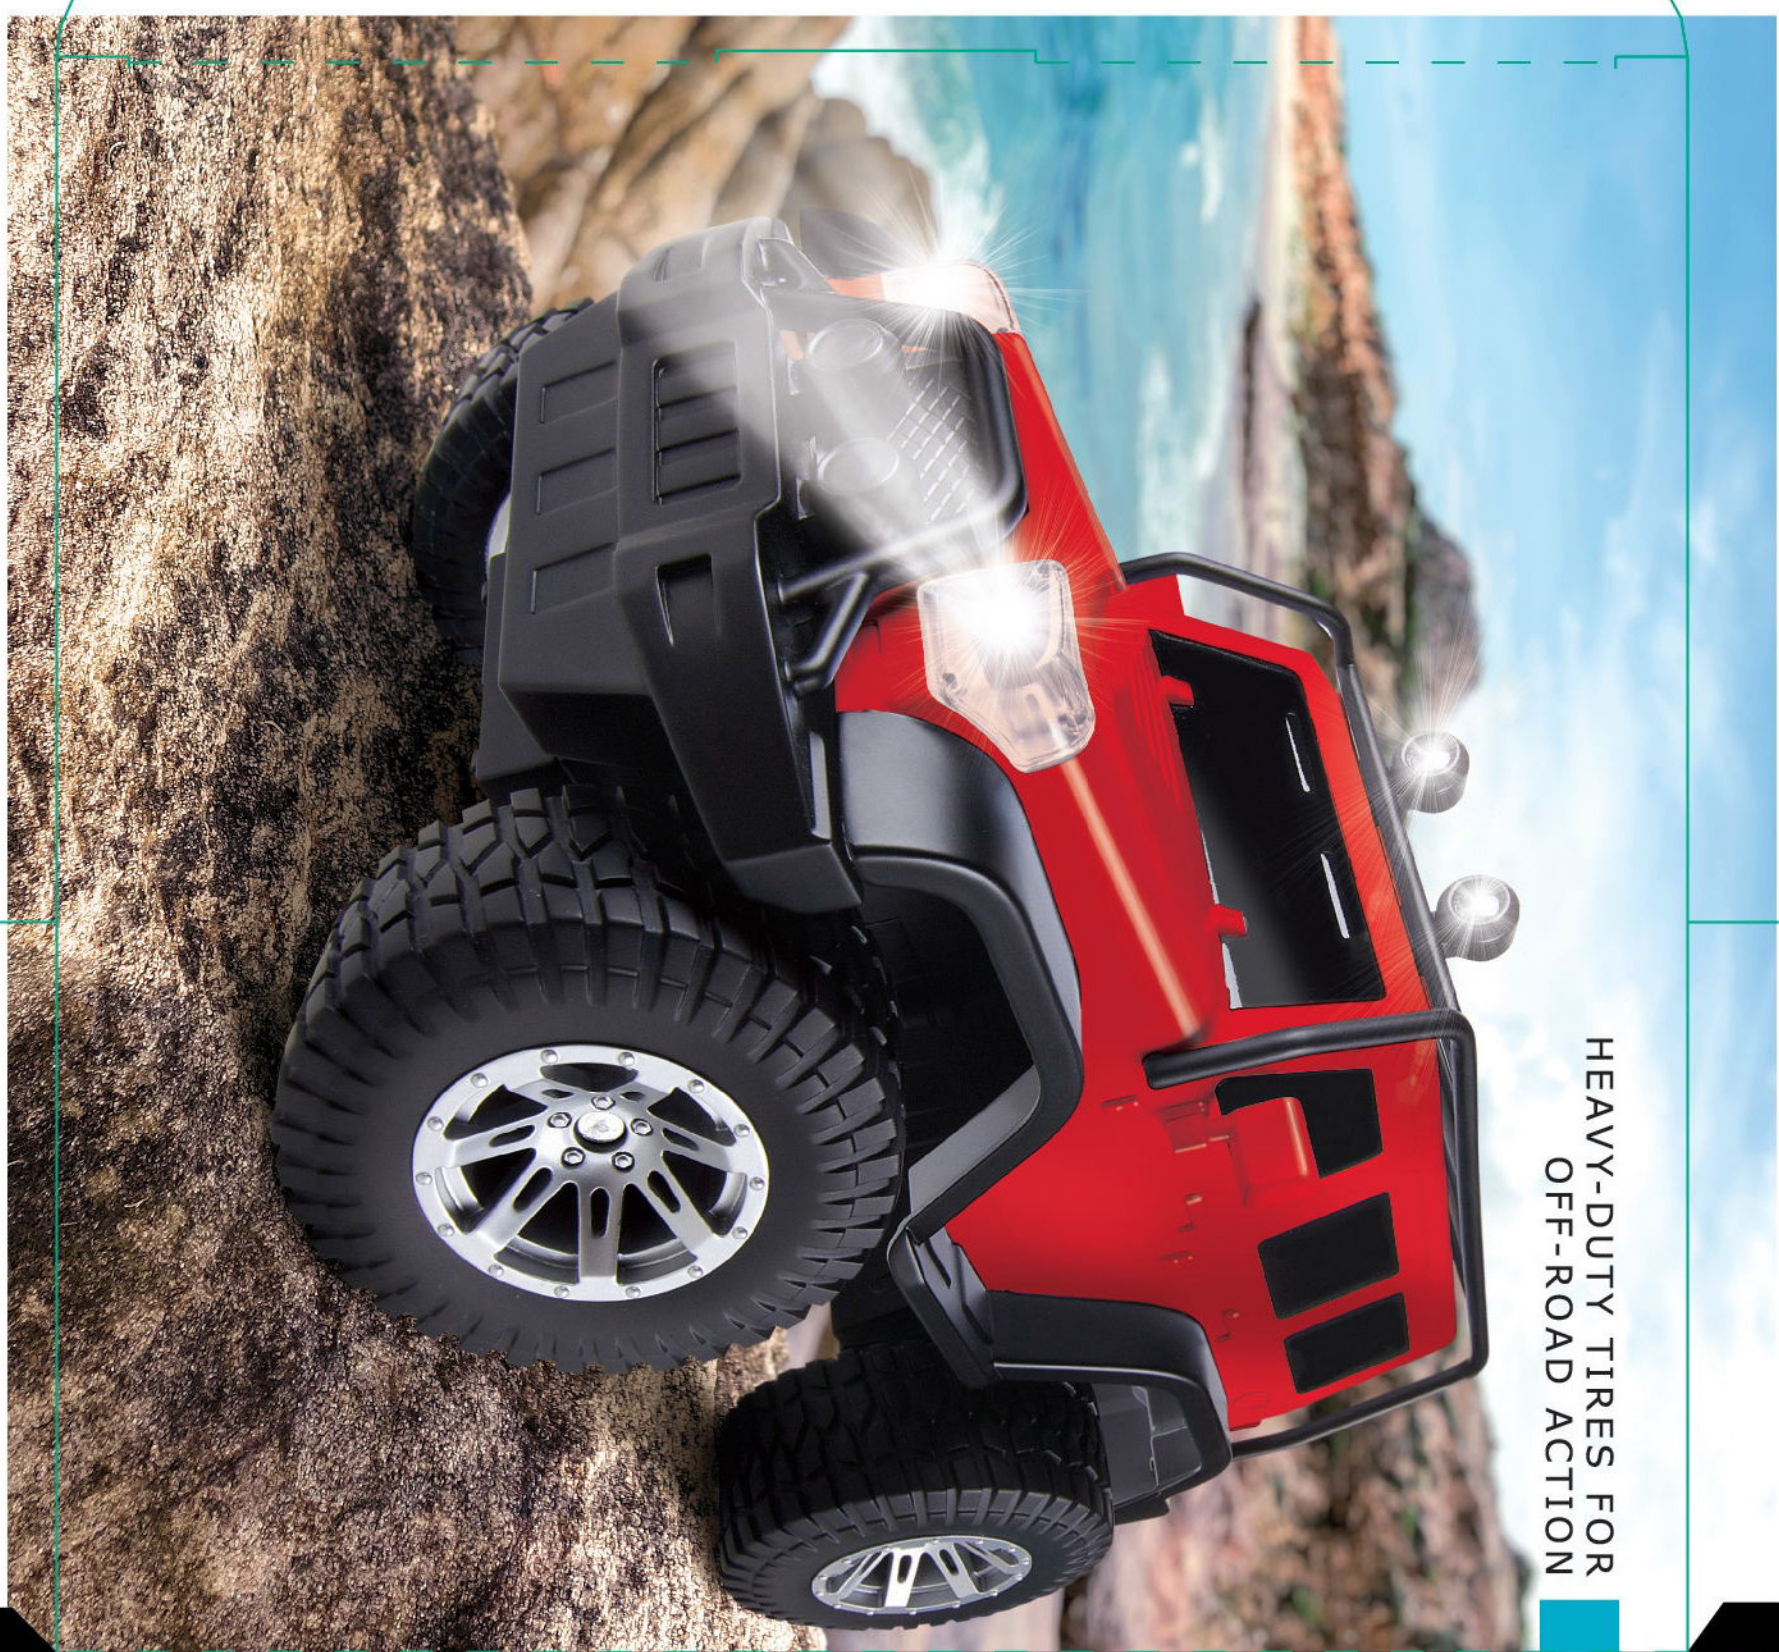

BATTERY INSTALLATION

The vehicle requires 5 "AA" 1.5V batteries (not included). The controller requires one 9V battery (included). When changing batteries, adult supervision is required. Use alkaline batteries for the best performance.

- Carefully remove items from the package.
- Locate the battery door on the bottom of the vehicle.
- Pull the latch on the door to the left and lift up to access the battery compartment. Insert 5 "AA" batteries while observing the correct polarity (Fig. 1).
- Replace the battery compartment door.
- Slide the battery door on the back of the controller down to open.
- Insert one 9V battery while observing the correct polarity (Fig. 2).
- Replace the battery compartment door.
- Switch both the vehicle and controller power switches to the "ON" position.
- Adjust the steering alignment lever located on the bottom of the vehicle (between front wheels) if the vehicle does not run straight when moving forward.

SAFETY PRECAUTIONS

- Do not operate during thunderstorms or rain.
- Avoid water, sand and snow when operating your vehicle.
- Do not submerge vehicle or controller in water.
- Never operate your vehicle on the street or highway.
- Adult supervision is recommended when operating this vehicle.
- Remove all batteries when not in use to avoid accidental operation.
- Never operate your vehicle in a confined or crowded area, and do not use people or animals as obstacles.
- Do not run your vehicle into furniture, objects or hard surfaces, as this will cause damage to both the objects and the vehicle.
- Keep fingers, hair and loose clothing away from the tires, gears and motor while the vehicle is switched to "ON".
- Do not leave vehicle or controller near sources of heat or under direct sunlight for long periods of time.
- Do not leave vehicle or controller outside overnight. Damages is harmful to interior components.

BATTERY WARNING:

- Do not use old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Insert batteries using the correct polarity. Do not short-circuit the supply terminal.
- Remove batteries when not in use. Recycle or dispose of exhausted batteries according to federal, state, and local laws. Do not dispose of batteries in a fire - they may leak or explode.
- Only use manufacturer specified battery(ies), charger(s) and/or adapter, if applicable, specified by the manufacturer.
- Always use, replace, and recharge (if applicable) batteries under adult supervision.

KEEP THIS PACKAGE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION

OPERATING CONTROLS

LEFT JOYSTICK: FORWARD & REVERSE

RIGHT JOYSTICK: LEFT & RIGHT

ON/OFF SWITCH

ON/OFF SWITCH IS LOCATED ON FRONT OF CONTROLLER

RIGHT CONTROLLER USES ONE "9V" BATTERY (INCLUDED)

Fig. 1

Fig. 2

NOTE: For best operation, use the vehicle on a hard surface.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

©2018 MerckSource, LLC. The Black Series and all associated logos are trademarks of MerckSource, LLC. All rights reserved.

MerckSource, LLC, Irvine, CA 92618

FRONT VIEW

For technical support, please visit www.mercksource.com or call 1-800-574-5744.

The artwork and design of this package are protected by © copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to photocopy or reproduce any trademark or copyright notice from this package.

radio controlled vehicle off-road explorer



6 LED lights plus knobby tires for off-road adventures!

6
LED
LIGHTS

THE BLACK SERIES

radio controlled vehicle

off-road explorer

Spring-Loaded SHOCKS FOR OFF-ROAD ACTION!

Two FREQUENCIES FOR COMPETITIVE RACING

Knobby tires for rugged off-road performance

Toy R-Off Road Explorer
FL2013E

BATTERY OPERATED PLAY VEHICLE

AGES 6 AND UP

WARNING!
CHOKING HAZARD - Small parts. Not for children under 3 years.

Spring-Loaded SHOCKS FOR OFF-ROAD ACTION!

AVAILABLE IN 2 FREQUENCIES!

BOX CONTAINS TWO REMOTE FREQUENCIES:

☐ 27 MHz

☐ 49 MHz

THE BLACK SERIES

radio controlled vehicle off-road explorer



LED lights on front, end, top and rear for night driving

Spring-loaded shocks for rugged bumps and turns

Knobby tires for rugged off-road performance



MULTI-DIRECTIONAL operation

SEE BOTTOM PANEL FOR COMPLETE OPERATING INSTRUCTIONS.
Carries two AAA batteries and a 9V battery.
Requires five AA (1.5V) batteries (not included) and one 9V battery (included).

VERSATILE
OFF-ROAD TIRES PLUS LED LIGHTS
FOR DRIVING IN THE DARK

COMPETITIVE
AVAILABLE IN 2 FREQUENCIES
FOR TWO-PERSON PLAY

WIRELESS
REMOTE CONTROL FOR FULLY
FUNCTIONAL WIRELESS RACING

6
LED
LIGHTS