

Rechargeable 2.4GHz MICRO DRONE

GETTING TO KNOW YOUR DRONE

PLEASE READ ALL WARNINGS AND INSTRUCTIONS PRIOR TO USE. KEEP THIS DOCUMENT AS IT CONTAINS IMPORTANT INFORMATION ABOUT YOUR DRONE.

1. CHARGING

- Drone must be charged before each use (able included)
- Indicator light will turn off once fully charged
- Install batteries in remote

2. PAIRING

Before each flight pair the remote with the drone:

1. Turn your drone on and place on a flat, level surface
2. Turn on the remote on and move the left joystick down, then up, then down again
3. The beep will indicate successful pairing

3. DIRECTIONAL LIGHTS

- White lights indicate the front of the drone
- Red lights indicate the back of the drone
- Not applicable in auto-orientation mode

4. REMOTE CONTROL OVERVIEW

Practice flying your drone below 100 feet and at low speeds until comfortable with all controls to avoid unnecessary damage or injury

• Left joystick:

- Up/Down controls elevation
- Left/Right controls spin
- Right joystick: controls flight direction
- Direction Taps: use to eliminate drift

To cut power to drone, move left joystick to down position

QUESTIONS OR CONCERNS?
PLEASE GIVE US A CALL... WE'RE HERE TO HELP

CUSTOMER SERVICE

(800) 374-2744

Before cutting please locate the 10-digit code printed on the back of your remote



CHOKING HAZARD - Small parts. Keep away from children under 3 years.

Rechargeable 2.4GHz MICRO DRONE

INTRODUCTION

Congratulations on your purchase of the Rechargeable 2.4 GHz Micro Drone. Get ready to soar to new heights. Master the art of drone flying with remote control maneuverability. This lightweight micro drone will provide hours of fun.

SPECIFICATIONS

Drone Battery: 100 mAh Li-Po
Remote Controller Battery: 2 x 1.5V AAA
Charging Time: Approximately 30 minutes
Maximum Recommended Altitude 65 ft.

TABLE OF CONTENTS

General Warnings

Page 1

Contents and Remote Battery Installation

Page 2

Charging LiPo and Drone Storage

Page 3

Blade Guard Installation

Page 4

Remote Control and Drone Overview

Page 5

Operating Drone

Page 6

Modes and Replacing Propellers

Page 7

Troubleshooting and FCC Warning

Page 8

Rechargeable 2.4GHz MICRO DRONE

READ ALL WARNINGS AND PRECAUTIONS BEFORE USE

SAFETY WARNINGS:

- Not recommended for children under 12 years of age. As with all electrical products, precaution should be observed during handling and use to reduce the risk of electrical shock.
- Adult supervision is required at all times.
- Before each use, an adult should review the product and battery to determine that no damage or hazards exist.
- **DO NOT TOUCH SPINNING PROPELLERS.**
 - Do not allow anything to intentionally make contact in any way with spinning propellers.
 - Prevent contact with spinning blades by turning off remote prior to handling drone.
- Use caution and pay attention to your surroundings while operating drone.
- Do not fly drone into animals, people, or inanimate objects.
- Keep drone away from power lines, buildings, trees, public areas, and any other potentially hazardous areas.
- Do not operate in rain, heavy wind, and/or any type of severe weather.
- Do not land drone on wet surfaces.
- Never touch or allow others to touch drone while it is flying.
- Always turn drone off when it is not in use.
- Always fly drone in large open areas.
- Never fly drones above or near people, sudden changes in wind or other conditions could lead to unexpected crashes.
- Always use caution when flying drone vehicles, obey relevant laws, respect the privacy and property rights of others.
- The drone shall never be modified or used for anything except its intended purpose.





PLEASE RECYCLE OR
DISPOSE OF ELECTRONICS
PROPERLY RECYCLING
INFORMATION IS AVAILABLE AT
MISCUSTOMERCARE.COM

Page 1

Rechargeable 2.4GHz MICRO DRONE

  CONTENTS



REMOTE BATTERY INFORMATION

1. Unscrew the battery door with screw driver. Slide open battery compartment.
2. Install 2 "AAA" batteries as shown in diagram shown above.
3. Replace and close battery compartment.

LITHIUM-POLYMER BATTERY WARNING

There is a risk of fire and personal injury if Li-Po battery is punctured, damaged or misused.

- Never expose battery to extreme temperatures or moisture.
- Always keep battery away from flammable materials.
- Only use manufacturer specified batteries, chargers, and/or adapters, if applicable, specified by the manufacturer.
- Battery is not serviceable.
- Let battery cool to room temperature before charging.
- While charging, never leave battery unattended.
- Recycle or dispose of battery according to federal, state and local laws.

KEEP THIS INSTRUCTION MANUAL FOR REFERENCE

BATTERY WARNING

Do not use old, damaged, swollen, or rechargeable batteries. Do not use batteries that are not properly charged. Do not use batteries that are not properly charged. Do not use batteries that are not properly charged. Do not use batteries that are not properly charged.

KEEP THE PACKAGE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION

Page 2

Rechargeable 2.4GHz MICRO DRONE

CHARGING BATTERY

 
Note: The Battery Charger will light up when it is charging the battery and turn off when the battery is fully charged. Charge time is approximately 30 minutes.

Turn off the drone before charging.


Carefully connect the Drone to USB charging cord as the connector. Connector is delicate and must be handled with care.

Connect USB connector to power source.


Please note the plug direction when plugging in the drone:



 Connect the Battery Charger to the Drone



 Carefully unplug the charging cord from the drone:




Page 3

Rechargeable 2.4GHz MICRO DRONE


BLADE GUARD INSTALLATION

Blade guards should be installed prior to flying the drone. The blade guards will help protect your drone and bystanders from the spinning propellers. They will protect the propellers if the drone is dropped or has a rough landing. The blade guards will also allow you to see the drone while it is in flight. Please see below on how to properly install the blade guards.



 
BEFORE INSTALLATION:

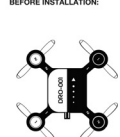

AFTER INSTALLATION:

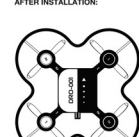 


INSTALLING BLADE GUARDS

   

Page 4

Rechargeable 2.4GHz MICRO DRONE

 REMOTE CONTROL OVERVIEW

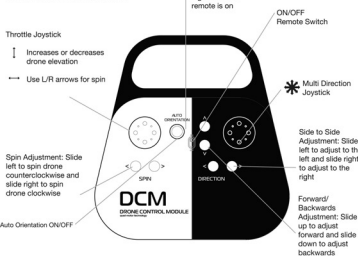

DRONE OVERVIEW



Page 5

Rechargeable 2.4GHz MICRO DRONE

OPERATING DRONE

Step 1 - Pre Flight Checklist

 
1. Read all warnings and instructions
2. Install remote batteries, page 2
3. Make sure that drone and remote are powered off.
4. Charge battery, page 3.

Step 2 - Choosing a location

- Drone is designed to be flown indoors only.
- Always make sure you have enough space to fly drone.
- Always follow warnings, page 1.

Step 3 - Starting Drone

1. Making sure your remote is off, slide drone switch to ON. Drone lights will begin to flicker.
2. Choose a flat even surface and follow the diagram.
3. Turn remote on. Bring the throttle all the way up then bring it all the way down. Remote will beep and drone lights will flicker rapidly then turn on permanently once paired.
4. Drone is ready for flight.

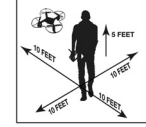

Step 4 - Lift Off

1. Slowly and carefully bring the Throttle up. Propellers will begin to spin and drone will begin to elevate. You can compensate for some of the drone drifting by using the Multi Directional Button or by following step 5. You may need to practice this step several times before successfully getting drone into the air.

Step 5 - Drone Begins to Drift

Follow this step if your drone begins to drift while take off or during flight:

- Drone drifts backwards: Slide the Forward/Backwards Adjustment up.
- Drone drifts forward: Slide the Forward/Backwards Adjustment down.
- Drone drifts left: Slide the Side to Side Adjustment to the right.
- Drone drifts right: Slide the Side to Side Adjustment to the left.
- Drone spins clockwise (viewing drone from top): Slide the Spin Adjustment to the left.
- Drone spins counter-clockwise (viewing drone from top): Slide the Spin Adjustment to the right.

Always turn off remote prior to retrieving or picking up drone. This will help you avoid accidentally activating propellers.

Step 6 - Operating Drone in Flight

The drone range is approximately 100 feet.

- Read and be aware of all warnings found on page 1.
- Maintain your desired elevation by using the Throttle.
- Use the Throttle joystick in a circle motion to spin the drone
- Use the Multi Directional joystick to move forwards, backwards, and side to side
- Review step 5 if your drone begins to drift.

Page 6

Rechargeable 2.4GHz MICRO DRONE

 
MODES

Auto Landing

- Make sure you have achieved level, balanced flight, where the drone is neither climbing nor descending. This mode will activate when the remote loses signal or when remote is turned off or when battery gets too low.
- The ideal auto landing height is 10ft.
- This mode allows you to safely and slowly land your drone without having to control the speed. It is done for you automatically.

Auto Orientation

- Auto Orientation default setting is off. To enter this mode press Auto Orientation button. Remote will beep twice and the LED will light up.
- After drone successfully paired, the 2 white LED lights forward orientation will be the original forward orientation, when drone is in auto orientation mode, whatever the drone spin, the forward orientation will be previous original forward orientation.
- Remote will beep every five seconds to indicate the drone is in Auto Orientation mode.
- To exit mode, press the button again, the LED will light off. Remote will sound 1 long beep indicating that it has exited Auto Orientation mode.

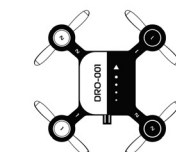

REPLACING PROPELLERS

1. Follow diagram to the right.
2. Make sure you installed the correct blade. Each blade has a letter written on it.

NOTE: Blade 1 turns counter clockwise and Blade 2 turns clockwise

Page 7

Rechargeable 2.4GHz MICRO DRONE

CUSTOMER SERVICE
(800) 374-2744

TIPS

- Do not crash drone into sand or dirt. Drone gears may become clogged
- When first learning to fly, practice flying off and landing
- Stay away from trees and buildings
- Always Press Throttle all the way down after crashing or when something gets stuck in propellers
- Never fly drone above or near people, sudden changes in wind or other conditions could lead to unexpected crashes.
- Always use caution when flying drone vehicles, obey relevant laws, respect the privacy and property rights of others.
- The drone shall never be modified or used for anything except its intended purpose.

WARNING: Charges or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

TROUBLESHOOTING:

When remote (Drone) is turned on, the remote light does not illuminate

1. Check that the batteries are installed correctly OR
2. Replace with new batteries

During drone flight, the remote LED is flashing

1. Remote batteries are low; replace them with new batteries

Drone and remote properly pair, but the drone will not fly off

1. Drone LiPo needs charging. Use charging cable to connect the drone to power source.

After turning on the drone, the drone light is very unstable and cannot fly properly:

1. One or more blades are most likely damaged.
2. Turn off the drone and remote.
3. Replace the damaged or broken propeller with a new one.

After inspect, the drone is unstable:

1. Put the left remote control lever to the left bottom and put the right remote control lever to the right bottom at the same time which connected by the drone (diagram to right).
2. If the above does not resolve the issue, reboot the drone and controller and pair again.

Remote Controller and Drone can not be paired:

1. Check Point: Remote Controller must be closed to Drone, not exceed 4 meters.

Note: If there are 2 sets of Drone within 4 meters for Pairing, you must pair one successfully before pairing the second set.



KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.

©2017 MISCUSTOMER, LLC. All rights reserved.

Distributed by MISCUSTOMER, LLC. www.MISCUSTOMER.COM

1-800-374-2744

The product and design of the manual are protected by copyright law.

All rights reserved. No part of this manual may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without prior written permission from MISCUSTOMER, LLC.

Due to continuous product improvements, the pictures on the manual may differ slightly from actual product.

NEAREST PERFORMING

Printed in China

Page 8