 



onn

Large Rugged Speaker

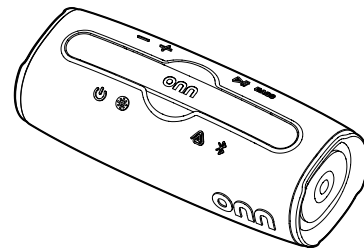

AABLK36017624 AACAM36017624  
AANVY36017624 AATAN36017624

## What's in the Box?

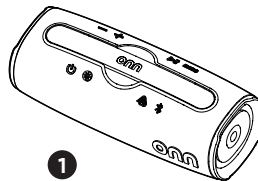 

1



2



1. Bluetooth Speaker  
2. Charging Cable



3

3. Quick Start Guide


## Get to Know Small Rugged Speaker

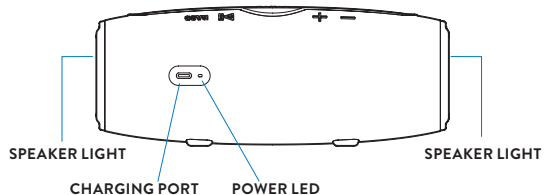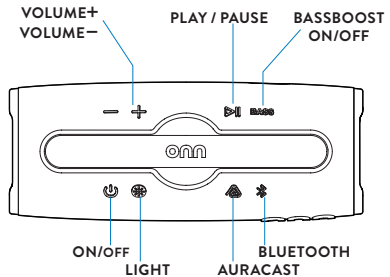  

## Power on/off & Bluetooth Pairing


### 1. POWER ON/OFF

 Press the button to turn on or turn off

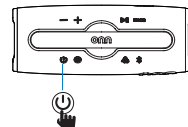


### 2. BLUETOOTH PAIRING

 Press "" button to activate the Bluetooth device (Support Google Fast Pair)

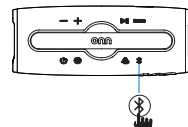

### 3. SEARCH ON DEVICE

 Select "onn Rugged Speaker L" on device



### 4. PLAY AUDIO

 
From device

### 5. VOLUME



Controlled by device or volume button

## Play music / Light mode

Press "" button to execute play and pause.  
Press volume "" button to increase volume.  
Press and hold volume "" button for 3 seconds to skip to the next song.  
Press volume "" button to reduce volume.  
Press and hold volume "" button for 3 seconds to skip to the previous song.  
Press "" button to switch the light effects.  
Press and hold "" button for 3 seconds to turn off the light effects.  
Press "**BASS**" button to turn bassboost ON/OFF.



Play/pause/resume playback

  

Light

Light

For product assistance:

WE CAN HELP

1-888-516-2630

7 DAYS/WEEK 7:00am- 9:00pm CST

### SEE USER GUIDE FOR:

- What's in the Box?
- Get to Know Small Rugged Speaker
- Power on/off & Bluetooth Pairing
- Play music / Light mode
- TWS
- Auracast
- USB audio playback via laptop
- Remove pairing and reset the speaker
- Charging the speaker
- Warning

Find more at [Walmart.com](https://www.walmart.com)

 
Manufactured in Vietnam for Walmart Inc.

## TWS

### TWS PAIRING

Press and hold the “” button for 3 seconds to pair two speakers of the same model. Connect speaker via Bluetooth. This speaker is the primary.

When powering on the 2nd speaker (in pairing mode), it will connect to the primary automatically.

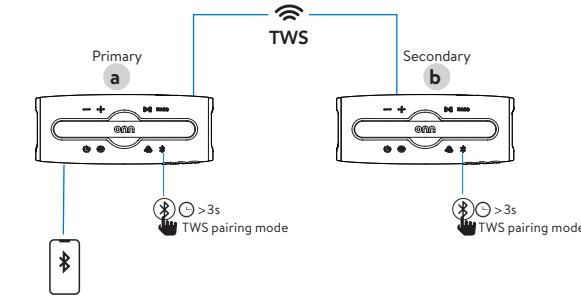

: Press and hold the “” button for 3 seconds to break the current TWS connection.

## Auracast

 
### 1. CREATE AN AURACAST BROADCAST

Connect the 1st speaker to your device. This speaker is the primary.

Press the “” button to enter Auracast mode.

### 2. JOIN AN AURACAST BROADCAST

Press the “” button to pair two or more speakers.

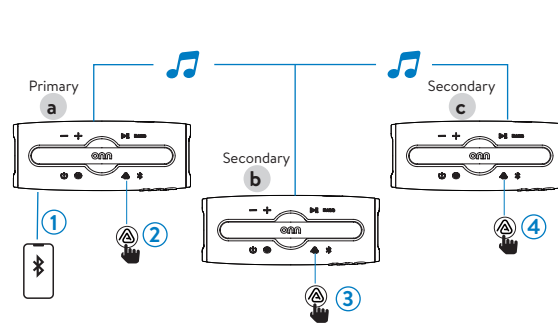

## USB audio playback via laptop

### 1. POWER ON

Press the  button to turn on.

### 2. CONNECT

Connect the speaker to the laptop via a USB-C cable with data transmission.

 
### 3. LAPTOP SETTING

In the laptop's audio settings, select the speaker “**onn Rugged Speaker L**” as the output device.

### 4. PLAY AUDIO

Play audio from the device, and the sound will output through the speaker.


 To use the USB audio playback function, a USB cable that supports data transmission (USB Data Cable) is required.

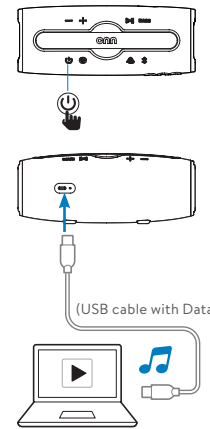

## Remove pairing and reset the speaker


Press and hold “” and “” buttons for 3 seconds. All pairing will be removed and volume restored to default setting.

 Press and hold “” button for 10 seconds. The speaker is now reset.

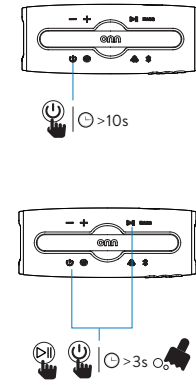

## Charging the speaker

 If you store the speaker for a long time, charge it once every six months to ensure optimal battery performance. It takes about four hours to fully charge.

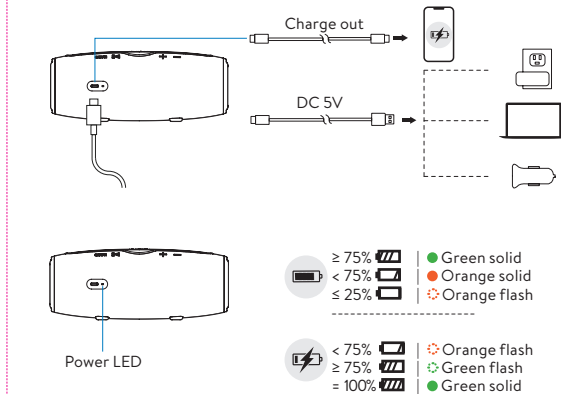

## Warning

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES (B) / NMB (B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:  
This device may not cause interference.

This device must accept any interference, including interference that may cause undesired operation of the device.  
L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The Auracast™ word mark and logos are trademarks owned by Bluetooth SIG, Inc. Any use of such marks by Walmart Inc. is under license. Other trademarks and trade names are those of their respective owners.

