

Please read and understand this manual
before attempting installation of the product.



X Series

User Manual

Jan, 2016

V1.3

Statement

If the user manual doesn't help you to solve the problem, please call our technology center for technical support.

Notice

1. Installation Environment

-  Keep away from the places for high-temperature, heat source and direct sunlight;
-  Keep away from water and if wet, power off immediately.
-  Avoid using in the damp environment; the reference range for operation humidity is below 85%RH.
-  Avoid using in too hot or too cold environment, the reference range for operation temperature is -10°C ~ +40°C
-  Please install it horizontally or wall mount, avoid strenuous vibration and do not place other items on top of the unit.

2. Transport and Handling

-  Please handle the item carefully.
-  Do not move the item between too hot and too cold areas.
-  Please disconnect the item from the mains before moving.



Notice:

1. Do not fall down the camera or beat it strongly.
2. Do not touch the optical components for the image sensor, such as the lens, if necessary, please place a clean and moistened cloth with alcohol and wipe the dirt gently; When not in use, please place the dust cover onto the item to protect the image sensor.
3. Do not aim the camera directly into the sun or at other intense light sources that could affect the image quality, this will also shorten the service life for the image sensor.
4. Keep away from laser when it is working, otherwise the image sensor can be damaged.
5. If the equipment is not working properly, please contact the store or the service centre, do not disassemble or modify the equipment in any way.

Index

1	Product Introduction.....	4
1.1.	Product Overview	4
1.2.	Product Exposition	4
2	Device Connection	6
2.1.	Connection Diagram	6
2.2.	Wi-Fi Setting.....	6
2.2.1.	configure via network cable connection	6
2.2.2.	WPS/QSS One key configure Wi-Fi	6
2.2.3.	Mobile Phone Setting.....	7
3	View Video by Browser.....	8
3.1.	Access to camera webpage and install Plug-in	8
3.2.	Browse Video	9
4	Query and Playback SD Record by Browser	10
4.1.	Playback Video	10
5	Device Configuration and Local Setting.....	10
5.1.	Device Configuration.....	10
5.1.1.	System	10
5.1.2.	Network	13
5.1.3.	Audio and Video	16
5.1.4.	Safety	18
5.1.5.	Alarm	19
5.1.6.	Storage.....	21
5.1.7.	Log.....	22
5.2.	Local Setting.....	23
	Warning.....	24

1 Product Introduction

1.1. Product Overview

Thank you for choosing X series high definition SmartP2P IP Camera, the IP Camera combines a high definition digital video camera with network connectivity and a powerful web server to bring high definition video to your desktop from anywhere on your local network or over the Internet. It includes indoor HD PTZ camera, indoor HD cube camera, outdoor HD waterproof camera etc. It is very suitable for home, shops, offices and so on.

Product features:

- Support High profile H.264 encoding, 3 kinds of resolution video stream simultaneously, suitable for Local, Internet and Cross-platform view;
- Support Wi-Fi protocol 802.11b/g/n;
- Support WPS/QSS one key Wi-Fi configuration;
- Support one touch Wi-Fi configuration on mobile phone before connect to the network;
- Support max. 64G SD/TF card storage for the alarm video and pictures, timing snapshot and recording, support MP4 format;
- Built-in web server, use one port to send all the data, users can facilitates network setting;
- Support IE/Firefox/Chrome/Safari browser to view video and configure device;
- Support P2P private network through transmission via manufacturer cloud platform;
- Provide IOS/Android mobile phone Apps;
- Provide Windows/Mac OS PC client software.

1.2. Product Exposition

Please check carefully if all listed items are included in the package, it includes camera, power adapter, network cable, installation bracket. If anything missing, please contact vendor in time.

The camera functions maybe different due to different product model, the main functions as below:


- **Main chip and sensor:** Due to main control chip and sensor is different, so the camera support different resolution: 720P, 1080P and above;
- **Power input port:** Check power supply if 5V or 12V. Plug right power supply, or it will damage the camera or cannot run. We suggest to use the default power adapter.
- **RJ45 Port:** Network port;
- **Wi-Fi function:** The device features Wi-Fi function, built-in Wi-Fi module and antenna. The Wi-Fi antenna includes built-in Wi-Fi antenna, integration antenna, separated antenna and so on. The separated antenna would be packed with the camera in the gift box, users should install it to camera before it works.
- **IR-CUT:** A filter switching device, from day and night to switch to a different filter, then forbid or allow the infrared light in, which make the picture more true;
- **Lens:** Due to focus length of lens is different, so vision angle of lens is different. Please twist the

lens for best effect if the video is fuzzy;

- **PTZ:** Control PTZ remotely, view video from several vision angle. Some device have PTZ function and some device have not PTZ due to the product cover is different, and PTZ moving angle maybe different;
- **SD socket:** Some product use SD socket and some use MicroSD socket due to the products cover are different, Max support 64GB memory card;
- **MIC inside:** Can collect the sound from camera workplace;
- **Speaker inside:** can play sound from device start, talking and alarm;
- **Audio in port:** If the camera without MIC in it, you can connect extra MIC to collect sound;
- **Audio out port:** If the camera without speaker in it, you can connect extra sound systems;
- **Alarm in port:** Connect with switchable sensor, check sensor signal if high or low to judge if detect any event;
- **Alarm out Port:** Connect with external alarm device, control device alarm action when detect any event;
- **Reset button:** After the camera started, press and hold the reset button for at least 10 seconds, it restores default settings and reboot; press and hold the reset button for 3 seconds to set up the Wi-Fi by using WPS/QSS; press the reset button briefly, the Wi-Fi indicator will flashes for a few seconds while the camera was connecting with Wi-Fi connection, you can assess Wi-Fi signal intensity by the flash frequency, the faster flash, the stronger signal;
- **Wi-Fi indicator:** Blue LED for Wi-Fi indicator that be used to display Wi-Fi work state, such as off, slow flash, fast flash, steady work etc;
- **Work status indicator:** Red LED is operation indicator that displays the state of equipment, there are off, slow flash and flashlights flash, when someone access video, otherwise slow flash;
- **POE function:** The function that supply power to camera through network cable. But you need the camera with POE module. the device connect to POE switcher by a network cable and POE switcher supply power for device through the network cable;
- **PIR function:** The device with PIR sensor, used for detect the human movement, it trigger alarm if detect any abnormal.

2 Device Connection

2.1.Connection Diagram

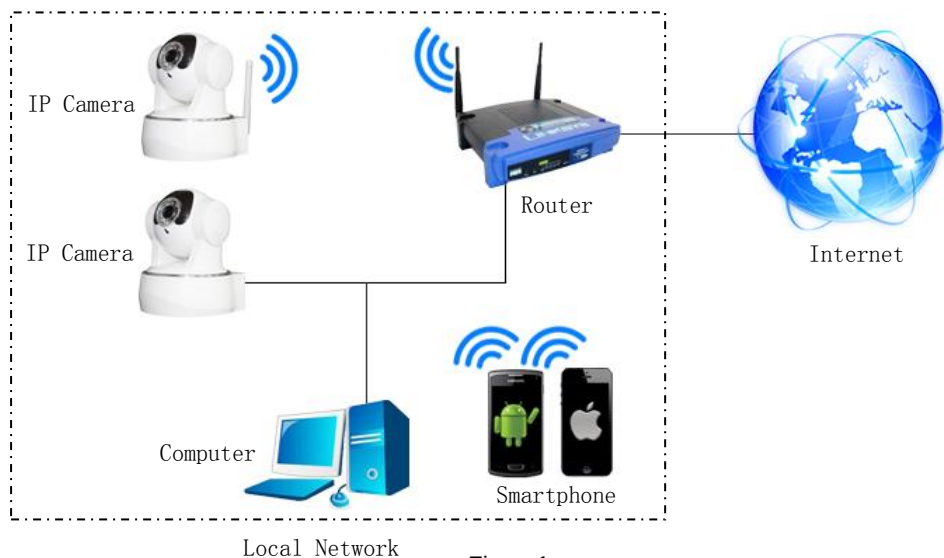

Power on the camera by attaching the power adapter, and then connect the camera and router by network cable, so you can visit the camera via computer in LAN and view camera video as <<3. View video by browser>>

You can also connect camera and router by Wi-Fi, you need to configure Wi-Fi of the camera as<<[2.2 Wi-Fi Setting](#)>>.

2.2.Wi-Fi Setting

You can setting up the Wi-Fi as the following three way.

2.2.1. Configuration via network cable connection

Connect the camera and router by network cable as Figure1, please login the camera as <<3.View video by browser>>, access to system configuration interface to finish the setting as<<[5.1.2.3 Wi-Fi setting](#)>>.Pull up the network cable, then you can connect the router by Wi-Fi.

2.2.2. WPS/QSS One key configure Wi-Fi

Power on the camera and wait for 1 minute, the camera started, hold on reset button 3 seconds, and then click “WPS/QSS” button of the router, the camera and router will be configured Wi-Fi as WPS/QSS protocol, after configuration successfully, the blue Wi-Fi indicator of the camera will quickly flash several times, and then it will be connected to router automatically and the blue indicator will be always on.

Notice: Due to some router do not support WPS/QSS function, so you can not use the configuration way.



Figure2

2.2.3. Mobile Phone Setting

Install the iSmartViewPro App in android phone or iPhone at first. Open the App, access to **More** interface, select “One key configure Wi-Fi” and fill in Wi-Fi SSID and password, and then click configure to finish the setting as Figure3.



Figure3

Tips:

- Before configuration, please power on the camera, after 5 minutes, you can configure the camera (blue Wi-Fi indicator flash slowly), otherwise you can't configure, and must power on the camera again;
- Move mobile phone speaker to camera MIC, click **Configure**; (please confirm if the camera have MIC, otherwise the configuration will be unsuccessfully)
- After configuring successfully, the blue Wi-Fi indicator will flash several times quickly, and then connect to router automatically and the blue indicator is always on. You can click **Configure** several times when the configuration is unsuccessfully.

3 View Video by Browser

3.1. Access to camera webpage and install Plug-in

Double click to Open the “SearchPro” in the attached CD and click **Search** as Figure4.

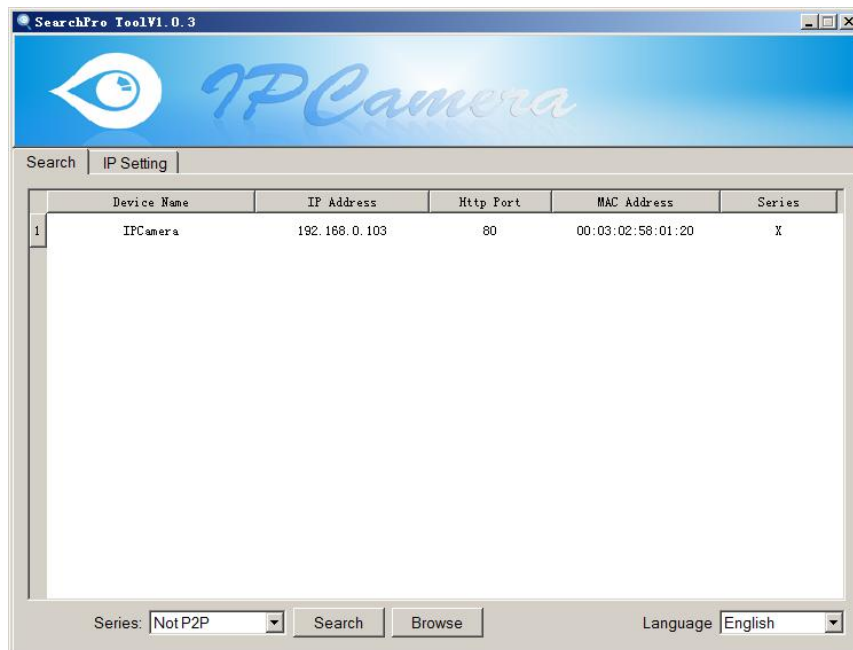


Figure4

Select the founded device and double click it to open to view in the browser, enter user name and password at popup dialog to login camera webpage as Figure5.

Tips: default username/password:admin/12345, please modify the password for safety.

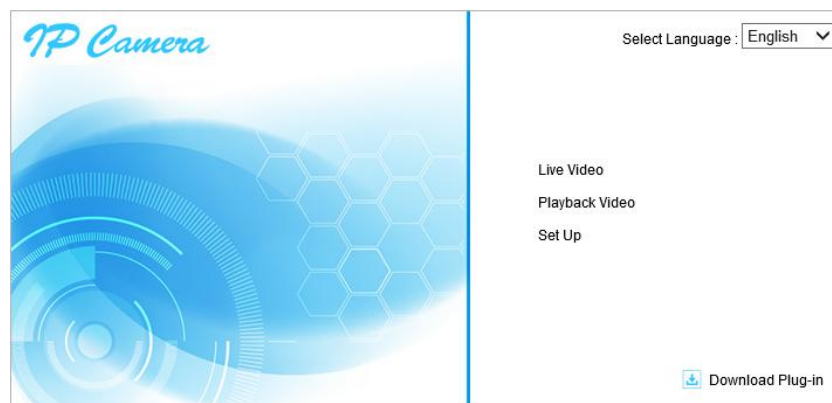


Figure5

- Need to download plug-in when first use, click “download plug-in” as figure 6, click **Run** to install it.

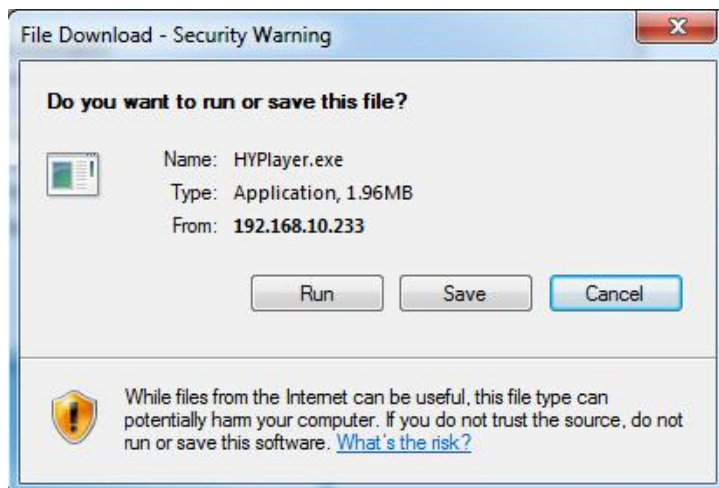


Figure6

3.2.View Live Video

Access to Live Video interface, it plays video automatically as Figure7.


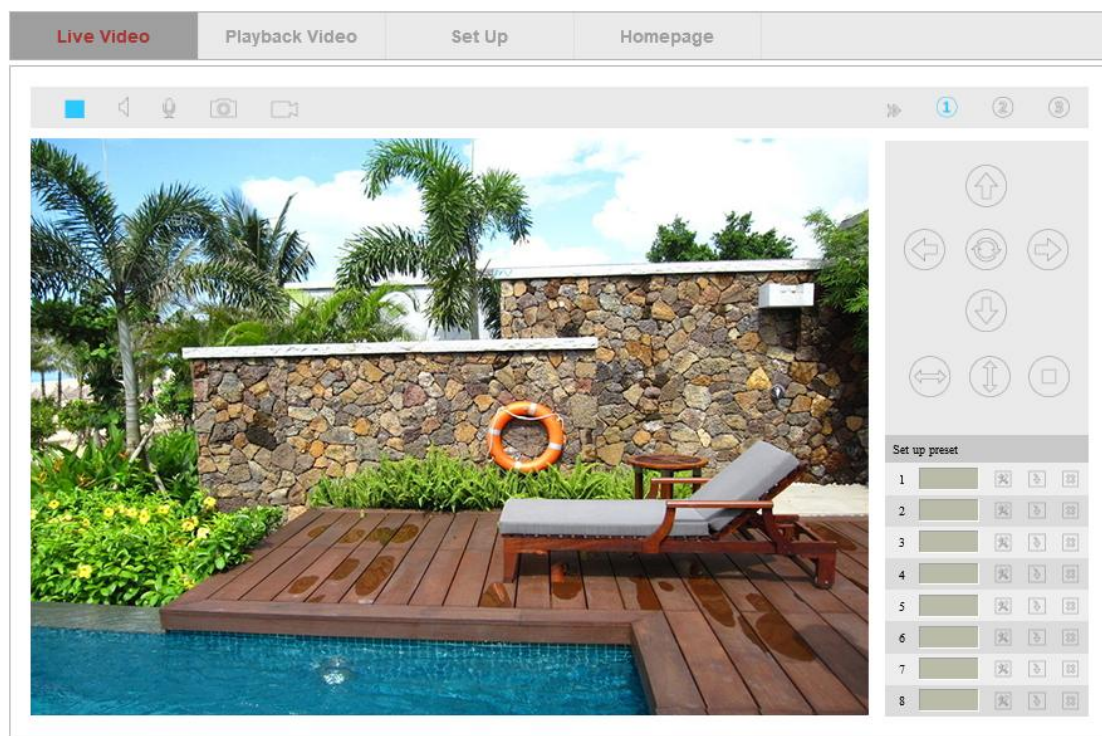


Figure7

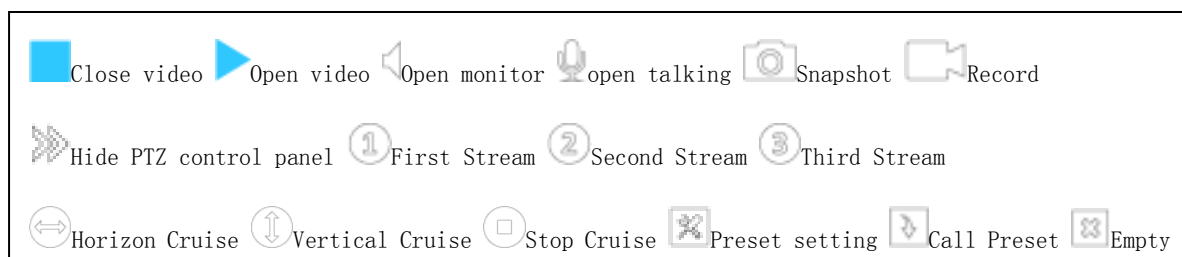

4 Query and Playback SD Record by Browser

4.1.Playback Video

Click Playback Video to access to SD record playback interface, click record date which you want to query ,click **Search** to list recording file, select one to playback it, also can click download button to download the file as Figure8.

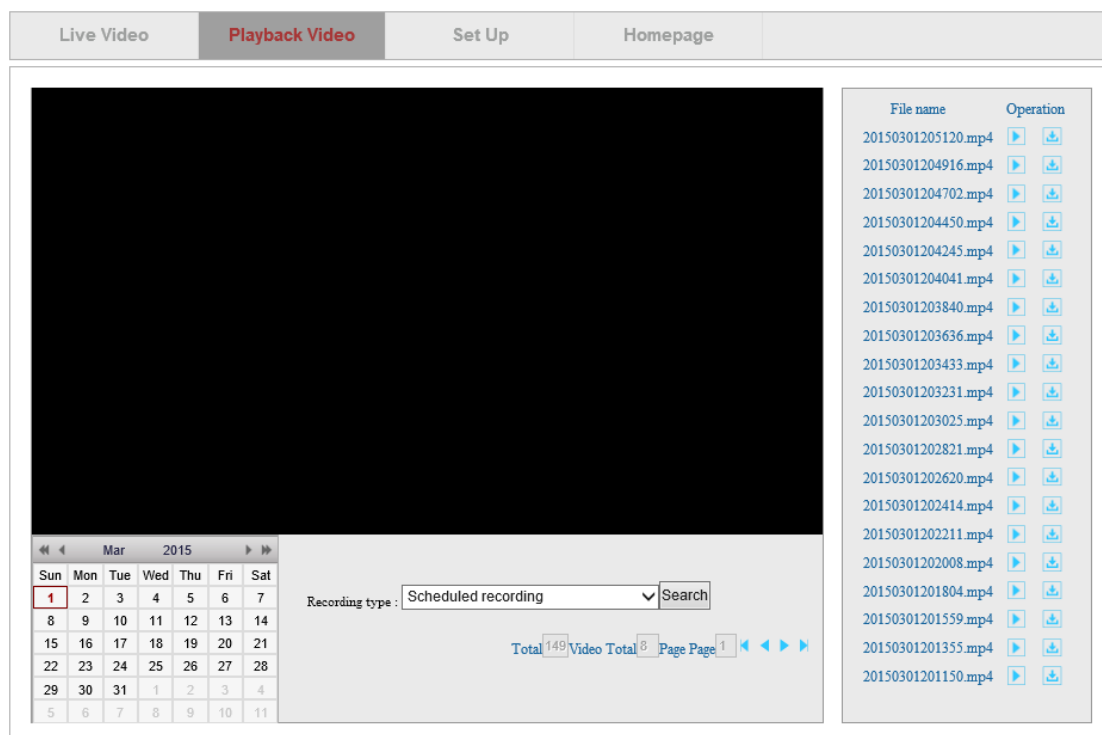


Figure8

5 Device Configuration and Local Setting

5.1.Device Configuration

5.1.1. System

5.1.1.1. Device Status

You can view current user, network connection way, Mac address, SD status and internet ip address of the camera as Figure9.

Device Status	
Current users	0
Network connection	Wired
MAC address	D8:A3:C3:A4:D5:AD
Recording status	in scheduled recording
SD status	SD valid, Total capacity : 3844 MB, Remaining capacity : 644
Internet IP address	Check internet IP

Figure9

5.1.1.2. Time Setting

Current time	2015-03-01 20:59:48
--------------	---------------------

Time setting	
Timezone	(GMT+08:00) Beijing, Chongqing, HKSAR, Urumchi ▼
Sync. with PC	Confirm

NTP service	
Enable NTP	☒
NTP server	time.nist.gov ▼

Figure10

5.1.1.3. PTZ Setting


You can set up PTZ speed, cruise circles (1-10 turns) and disable motion detection when PTZ moving as Figure11.

Pan&Tilt setting	
Pan&Tilt speed	Fast spe ▼
Cruise circles	1 ▼
Auto-check after booting	☒ ON ☐ OFF
Go centre	☒ ON ☐ OFF
☒ Disable motion detection when PTZ moving	

Figure11

5.1.1.4. Other Setting

You can turn off the status LED and WPS LED of the camera in other setting as Figure12.

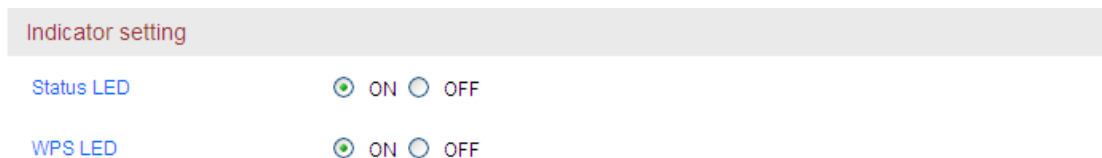


Indicator setting	
Status LED	☒ ON ☐ OFF
WPS LED	☒ ON ☐ OFF

Figure12

5.1.1.5. System Maintenance

The system maintenance includes system setting and timing reboot setting. You can set up reboot, backup setting, restore backup setting, upgrade camera and timing reboot etc as Figure13.

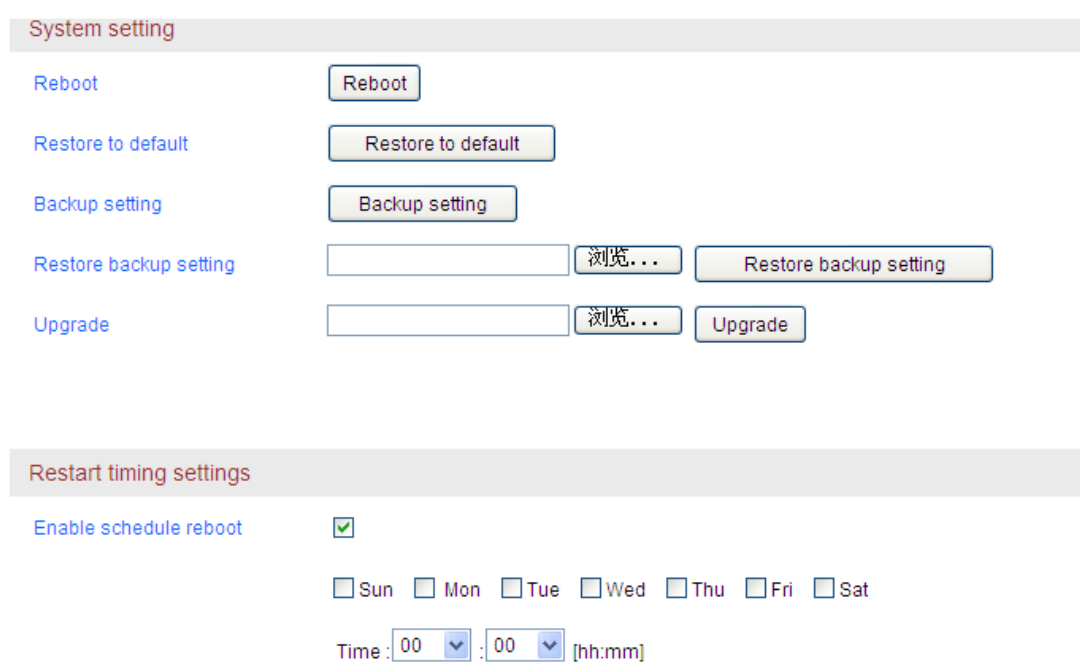


System setting	
Reboot	<button>Reboot</button>
Restore to default	<button>Restore to default</button>
Backup setting	<button>Backup setting</button>
Restore backup setting	<button>浏览...</button> <button>Restore backup setting</button>
Upgrade	<button>浏览...</button> <button>Upgrade</button>

Restart timing settings	
Enable schedule reboot	☒
	☐ Sun ☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat
Time :	00 : 00 [hh:mm]

Figure13

5.1.1.6. Device Information

You can modify device name and check system firmware version, system firmware time and Web UI firmware here as Figure14.

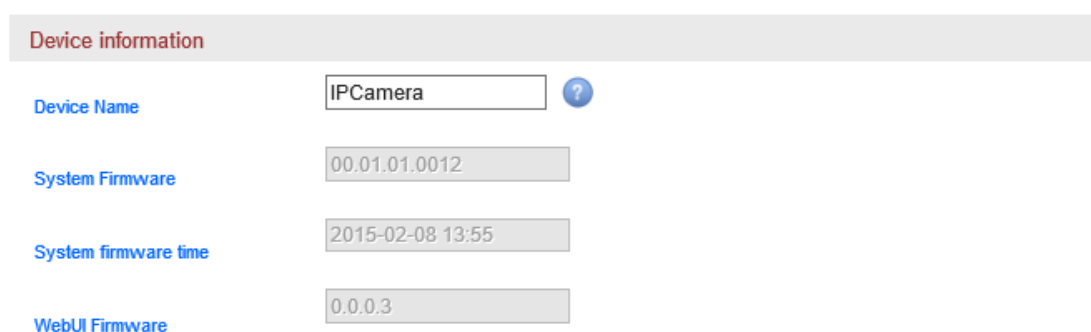


Device information	
Device Name	IPCamera ?
System Firmware	00.01.01.0012
System firmware time	2015-02-08 13:55
WebUI Firmware	0.0.0.3

Figure14

5.1.2. Network

5.1.2.1. IP Address Setting

You can modify IP address of the camera etc, the default is DHCP, achieve automatically as Figure15.

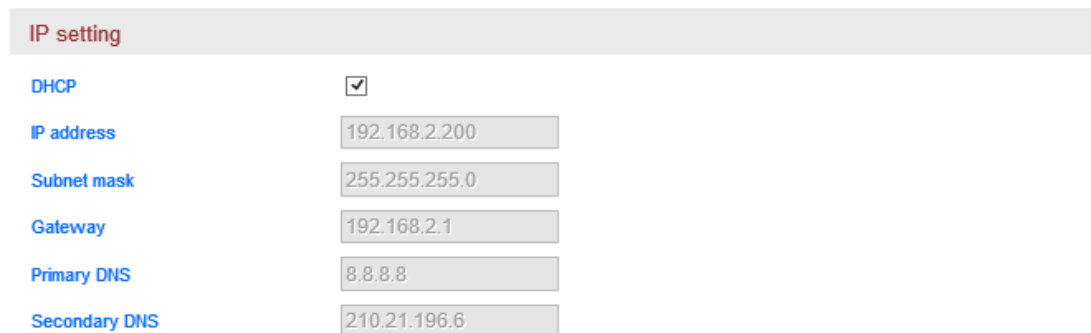


IP setting	
DHCP	☒
IP address	192.168.2.200
Subnet mask	255.255.255.0
Gateway	192.168.2.1
Primary DNS	8.8.8.8
Secondary DNS	210.21.196.6

Figure15

5.1.2.2. Port Setting

 You can change webpage http port here as Figure16.



Port setting	
HTTP port	80

Figure16

5.1.2.3. Wi-Fi Setting

Click **Search**, and switch on enable Wi-Fi, select the wireless router you want to connect, enter password of the router, click **Save** to finish the Wi-Fi configuration. Click **Test** to test if it can be connected to the router after finishing the configuration as Figure17.

Wireless Network List :

100%--11--[ipcamera]--AES--WPAPSK

Search

Enable Wi-Fi : ☒ ON ☐ OFF

SSID :

Authorization :

Encryption :

Key :

Test

Save

Figure17

5.1.2.4. Port Forwarding

Access to port forwarding, you can enable UPNP port forwarding and check the status of it as Figure18.

UPNP setting

UPNP port forwarding ☒ ON ☐ OFF


UPNP status ?

Port type	Port	Status
http	80	Success
rtsp	554	Success

Figure18

5.1.2.5. DDNS Setting

You can enable manufacturer's DDNS and set up third party DDNS (the third party DDNS support 3322.org/Dyndns.org/No-ip.com now, the manufacturer provide a free DDNS for every camera.

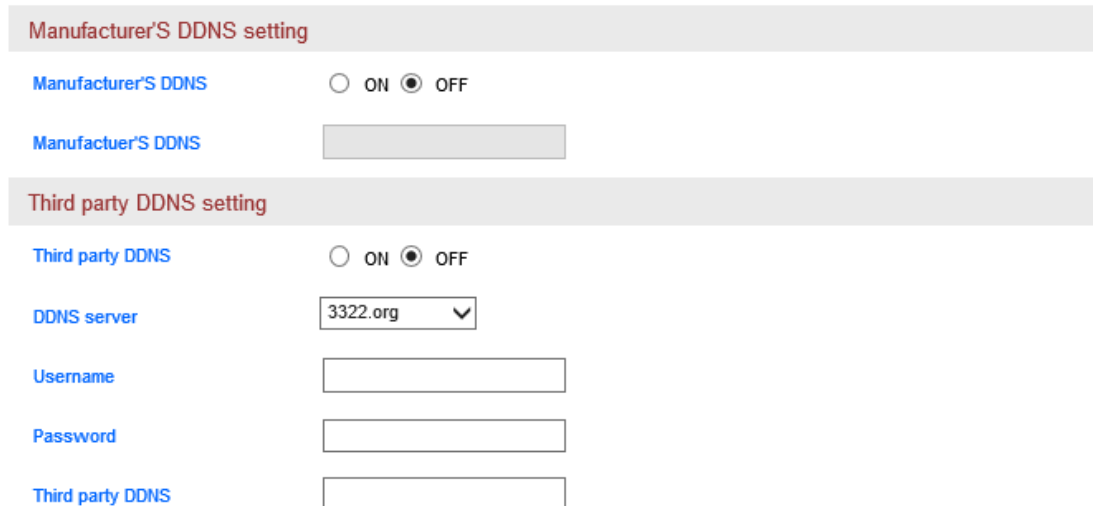


The screenshot shows two sections for Dynamic DNS (DDNS) configuration. The first section, 'Manufacturer'S DDNS setting', has a header bar. Below it, the 'Manufacturer'S DDNS' option is set to 'OFF' with radio buttons. A text input field for the 'Manufacturer'S DDNS' is empty. The second section, 'Third party DDNS setting', also has a header bar. The 'Third party DDNS' option is set to 'OFF'. A dropdown menu for 'DDNS server' is set to '3322.org'. Below this are three empty text input fields for 'Username', 'Password', and 'Third party DDNS'.

Figure19

5.1.2.6. RTSP Setting

You can set up RTSP port, also can close RTSP authentication as Figure20.

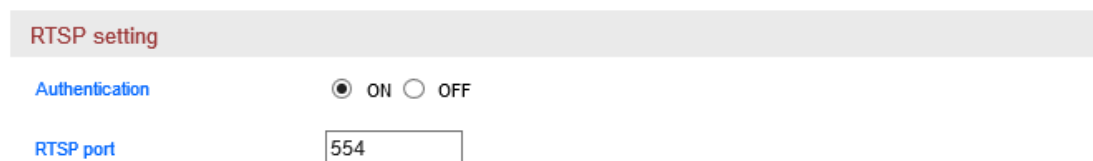

The screenshot shows the 'RTSP setting' section with a header bar. The 'Authentication' option is set to 'ON' with radio buttons. The 'RTSP port' is set to '554' in a text input field.

Figure20

You can view video by some general RTSP stream media software, for example, VLC. The visit link as below:

First stream: rtsp://user:password@IP:rtsp port/live/ch0

Second stream: rtsp://User:password@IP:rtsp port/live/ch1

Third stream: rtsp://user:password@IP:rtsp port/live/ch2

5.1.2.7. FTP Setting

Access to FTP setting, please fill in relative FTP parameters as the following case to achieve the FTP transfer as Figure21.



The screenshot shows the 'FTP setting' section with a header bar. It contains five text input fields: 'FTP server address' with '192.168.2.3', 'Server Port' with '21', 'Username' with 'admin', 'Password' with three dots, and 'Path' with a forward slash '/'.

Figure21

5.1.2.8. SMTP (E-mail) Setting

Please fill in relative parameters as the following case to achieve the E-mail transfer, as Figure22.

Email setting	
SMTP server address	smtp.gmail.com
Server Port	25
Security connection	SSL/TLS
Authentication	☒ ON ☐ OFF
Username	etest1990@gmail.com
Password	••••••••
Sender address	289893348@qq.com
Receiver address #1	lilong19901017@163.com
Receiver address #2	97199004@qq.com
Mail subject	alarm
Mail content	alarm
Test Save Refresh	

Figure22

5.1.3. Audio and Video

5.1.3.1. Video Encoding Setting

Access to Video Encoding setting, you can set up AC frequency and video stream as Figure23.

AC frequency: 50HZ and 60HZ optional;

Video stream: Bit rate (256~4096kbps), frame rate (1~30fps), video encoding control etc;

Tips: you can set up the video with audio or not.

AC frequency	
AC frequency	50HZ

Select stream	☒ First stream ☐ Second stream ☐ Third stream
Resolution	1920*1080
Bit rate	3072kbps
Frame rate	25
Stream control	Variable bitrate
Stream type	With audio

Figure23

5.1.3.2. Volume Setting

Access to Volume setting, you can adjust the volume of MIC and speaker as Figure24.

Volume setting

MIC volume

70

Speaker volume

70

Figure24

5.1.3.3. Image Setting

Access to Image Setting, you can flip and mirror the image, also can adjust the brightness, contrast, saturation and hue of image for getting best color effect as Figure25.



Brightness :

128

Contrast :

128

Saturation :

128

Hue :

128

☐ Flip

☐ Mirror

Figure25

5.1.3.4. OSD Setting

Access to OSD setting, you can overlay the time and name in Live video as Figure26.

OSD setting

Overlay Time

☒ ON ☐ OFF

Overlay Name

☒ ON ☐ OFF

Name setting

Figure26

5.1.3.5. Night vision Settings

Access to **Night vision Settings**, you can set up IR LED and IRCUT as Figure27.

The screenshot shows the 'Night vision Settings' interface. It has two main sections: 'IR LED setting' and 'IRCUT Setting'. In the 'IR LED setting' section, there is a label 'Turn Off IR LED' followed by a checked checkbox. In the 'IRCUT Setting' section, there is a 'Shift mode' section with three radio buttons: 'Auto' (selected), 'Manual', and 'Timing'. Below this is a 'Brightness' section with a text input field containing the number '20' and a blue circular help icon with a question mark.

Figure27

5.1.4. Safety

Access to User management, you can add or edit the user as Figure28.

Username	Password	User authorization
admin	•••••	Administrator
user	••••	Operator
guest	•••••	Viewer

Figure28

Tips: After setting up, click save and refresh button, the entering info will display in the webpage.
Also you can set up the IP filtering to allow or deny some IP address to visit the device as below.

The screenshot shows the 'IP filtering' settings interface. At the top, there are two tabs: 'User' and 'IP filtering', with 'IP filtering' being the active tab. Below the tabs, there are two main sections: 'Whitelist' and 'Blacklist'. Each section contains three input fields: 'Start IP address', 'End IP address', and 'Allow list' (for Whitelist) or 'Deny List' (for Blacklist). To the right of the 'End IP address' field in the Whitelist section is an 'Add' button. To the right of the 'Allow list' field in the Whitelist section is a 'Delete' button. Similarly, to the right of the 'End IP address' field in the Blacklist section is an 'Add' button, and to the right of the 'Deny List' field is a 'Delete' button. The 'Allow list' and 'Deny List' fields have a dropdown arrow on the right side.

5.1.5. Alarm

5.1.5.1. IO Detect

Access to IO detector, can enable detect function and set up input signal type as Figure29.

IO setting

IO detector ☐ ☒ ?

Sensor type ☒ close is valid ☐ open is valid

Figure29

5.1.5.2. Motion Detection

Access to motion detection, you can set up Max 4 detection area, also can set up the sensitivity for every area as Figure30.



☐ Window 1
Sensitivity :

☐ Window 2
Sensitivity :

☐ Window 3
Sensitivity :

☐ Window 4
Sensitivity :

Figure30

5.1.5.3. Audio Detection

Access to audio detection, you can enable audio detection and set up sensitivity of it as Figure31.

Audio setting

Audio detection ☒ ON ☐ OFF

Sensitivity

Figure31

5.1.5.4. Linkage alarm setting

You can set up IO detect, motion detection and audio detect, it can linkage to trigger the action: snapshot to Email or FTP server or SD card, recording to FTP server or SD card, and trigger IO output as Figure32.

Tips: The usage for combination of alarm trigger in alarm trigger type:

For example, you enable the audio detection and motion detection, so the camera is enabled combination of alarm trigger, it will perform the action in alarm action setting when the audio detect and motion detection detect any change.

Alarm action setting

☒ Snapshot to Email
☒ Snapshot to FTP server
☒ Recording to FTP server
☒ Snapshot to SD
☒ Recording to SD
☒ Trigger IO output Alarm duration : Second
☒ Trigger preset Preset :
☒ Trigger speaker Alarm duration : Second

Alarm trigger type

Alarm trigger type

☒ Trigger independently ☐ Trigger jointly ?

Figure32

5.1.5.5. Protected duration setting

After setting up alarm detect type and alarm trigger linkage, you need to set up protected duration. You must set up it, then the camera perform trigger linkage; the time format is 7 days, 24 hours per day, 15 minutes per a block as Figure33.

Protected duration All the time Clear the time


	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Sunday																			
Monday																			
Tuesday																			
Wednesday																			
Thursday																			
Friday																			
Saturday																			

Figure33

5.1.6. Storage

5.1.6.1. SD Management

Access to SD management, you can check and download recording and snapshot file in SD card, and check SD card remaining capacity, format SD as Figure34.

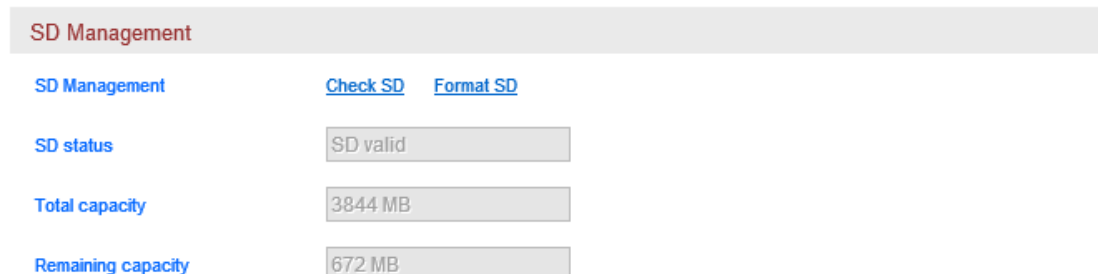


The screenshot shows the 'SD Management' section of a web interface. It includes a title bar 'SD Management' and two links: 'Check SD' and 'Format SD'. Below these are three rows of status information: 'SD status' showing 'SD valid', 'Total capacity' showing '3844 MB', and 'Remaining capacity' showing '672 MB'.

Figure34

5.1.6.2. SD card snapshot setting (Timing Snapshot)

Access to setting of timing snapshot to SD card, you can enable SD snapshot, you can set up snapshot time interval and snapshot duration; time format is 7 days, 24 hours per day, 15 minutes per a block as Figure35.

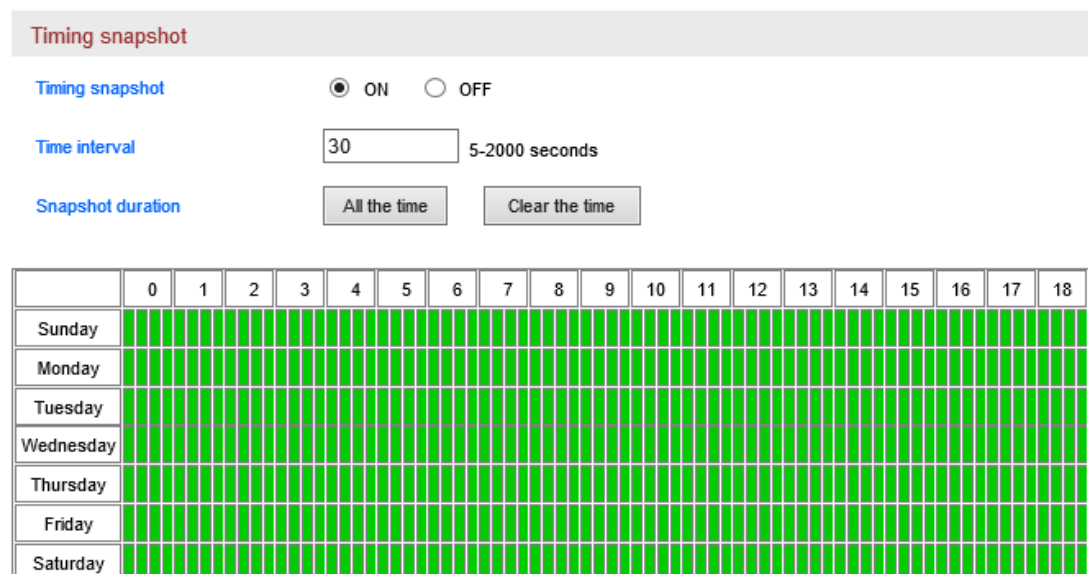

The screenshot shows the 'Timing snapshot' settings interface. It includes a title bar 'Timing snapshot' and three main settings: 'Timing snapshot' with radio buttons for 'ON' (selected) and 'OFF'; 'Time interval' with a text input field containing '30' and a range indicator '5-2000 seconds'; and 'Snapshot duration' with two buttons: 'All the time' and 'Clear the time'. Below these settings is a calendar grid showing days of the week (Sunday to Saturday) and hours (0 to 18). The grid is filled with green cells, indicating that snapshots are scheduled for all days and hours.

Figure35

5.1.6.3. SD Card Recording Setting

Access to SD Card Recording Setting, you can enable SD recording and set up recording duration for every file; time format is 7 days, 24 hours, 15 minutes per a block as Figure36.

Tips: it will overlay SD recording file automatically by default; it will overlay previous recording file when the SD space is full.

Scheduled recording

SD Recording
☒ ON
 ☐ OFF

Recording duration

 Recording file duration (15-900 seconds)

Recording bit rate

Recording duration

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Sunday																			
Monday																			
Tuesday																			
Wednesday																			
Thursday																			
Friday																			
Saturday																			

Figure36

5.1.7. Log

Access to Log menu, you can check the user operation log as Figure37.

IP Camera

Live Video
Playback Video
Set Up
Homepage

Device Configuration

- System
- Network
- Video&Audio
- Security
- Alarm
- Storage
- Log

Local Configuration

Log

Log

2015-03-02 11:09:35,admin,set mac address

2015-03-02 11:11:00,admin,set mac address

2015-03-02 11:39:26,admin,set net attr

2015-03-02 11:40:33,admin,set http port

Time 14 : 39 : 1

Figure37


22 / 23

5.2. Local Setting

Access to local setting, you can set up recording path, snapshot path and recording duration as Figure38.

Tips:

- You must use administrator to run the browse, then recording path and snapshot path can be save successfully at above IE9; the default recording path is D:\HYRec.
- You can enable show motion detection frame when viewing video.

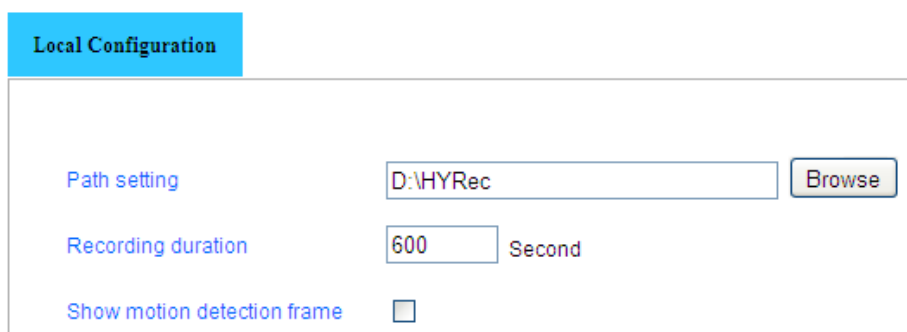

Local Configuration

Path setting

Recording duration Second

Show motion detection frame ☐

Figure38

Warning:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The distance between user and products should be no less than 20cm