

TC975;Le Pan III

User Manual

FCC Notice

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

TABLE OF CONTENT

GENERAL INFORMATION	3
BATTERY CARE	3
CARE AND MAINTENANCE.....	3
IMPORTANT SAFETY INFORMATION	4
BASIC INFO	5
GETTING TO KNOW YOUR TABLET AND ACCESSORIES.....	5
<i>Inside the box (pls fill in upon the final package).....</i>	<i>5</i>
INSTALLING THE STORAGE CARD.....	5
<i>Battery.....</i>	<i>5</i>
CHARGING THE BATTERY.....	5
TABLET CONTROLS.....	6
<i>Settings.....</i>	<i>6</i>
<i>Search.....</i>	<i>6</i>
GETTING AROUND YOUR TABLET	7
<i>Touch.....</i>	<i>7</i>
<i>Touch and hold.....</i>	<i>7</i>
<i>Swipe or slide.....</i>	<i>7</i>
<i>Drag.....</i>	<i>7</i>
<i>Rotate.....</i>	<i>7</i>
GETTING STARTED.....	8
TURN YOUR TABLET ON AND OFF	8
HOME SCREEN	8
<i>Extended Home screen.....</i>	<i>8</i>
TABLET STATUS AND NOTIFICATIONS	9
<i>Status bar</i>	<i>9</i>
<i>Notification icons</i>	<i>9</i>
<i>Status icons</i>	<i>9</i>
<i>Notifications panel</i>	<i>9</i>
SETTINGS	10

General information

Battery care

Your tablet is powered by a rechargeable battery.

- The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, you should buy a new battery at the time.
- Unplug the charger when not in use, and don't leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime.
- Overcharging may shorten its lifetime, and if left unused a fully charged battery may discharge itself over time.
- Temperature extremes can affect the ability of your battery to charge.
- Do not use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- Extreme temperatures will affect the charging capacity of your battery.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter condition.
- Do not short-circuit the battery. Short-circuiting the terminals may damage the battery or the connecting object.
- Dispose of batteries according to local regulations. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Read this information before using your tablet.

Your tablet is a highly sophisticated electronic device. When using your tablet, battery, charger or any accessory, please read this first.

Product care

- Keep your tablet and all its parts out of young children's reach.
- Keep your tablet dry.
- Avoid exposing your tablet to extreme hot or cold temperatures.
- Avoid placing your tablet close to lit cigarettes, naked flames or any heat source.
- Do not attempt to disassemble it. Non-expert handling of the device may damage it.
- Do not drop, knock or shake it. Rough handling can break internal circuit boards.
- Do not paint your tablet as the paint could obstruct the earphone, microphone or any moveable parts and prevent normal use.
- Treat your tablet with care, keep it in a clean and dust free place.
- Do not use the tablet if the antenna is damaged. If a damaged antenna contacts skin, it may cause a light burn.
- Do not touch the antenna unnecessarily when the tablet is switched on. Contact with the antenna affects call quality and may cause the tablet to operate at a higher power level than needed and shorten talk and standby

times.

Important safety information

Potentially explosive atmospheres

Turn off your tablet when in any area with a potentially explosive atmosphere and obey all signs and instructions. It is rare, but your tablet or its accessories could generate sparks. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fuelling areas, such as petrol station, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.; and any other area where you would normally be advised to turn off your vehicle engine.

Basic Info

Getting to Know Your Tablet and Accessories

Inside the box (pls fill in upon the final package)

The product package includes the following items and accessories:

- USB cable
- Power adapter
- User manual

Installing the Storage Card

To store your pictures, music, and applications, must install the supplied microSD card into your tablet. This tablet can support up to 32GB microSD card.

To install the storage card

1. Make sure the tablet is turned off.
2. Insert the microSD card into the slot with its gold contacts facing down.

Battery

Your tablet embedded with a rechargeable Lithium-ion battery and is designed to use only manufacturer-specified original batteries and accessories. Battery performance depends on many factors, including network configuration, signal strength, the temperature of the environment in which you operate your tablet, the features and/or settings you select and use, items attached to connecting ports, and your voice, data, and other program usage patterns.

Note Battery life is subject to the usage of functions.

Warning ! To reduce risk of fire or burns:

- Do not crush, puncture, short external contacts, or dispose of in fire or water.
- Do not expose to temperatures above 60°C (140°F).
- Replace only with the battery pack designated for this product.
- Recycle or dispose of used battery as stipulated by local regulations.


Charging the Battery


New batteries are not charged when shipped. Before start using your tablet, please charge the battery for 8 hours at least.

To charge the battery

1. Plug the system connector of the power adapter with your tablet
2. Plug in the power adapter to an electrical outlet to start charging the battery.

Note You can also charge your tablet via 30pin cable as well.

As the battery is being charged while the tablet is on, the charging battery icon  is displayed in the status bar of the Home screen.

After the battery has been fully charged, a full battery icon  displays in the status bar of the Home screen.

Warning:

 
- Do not remove the battery from the tablet while you are charging it using the AC or car adapter.
- As a safety precaution, the battery stops charging when it overheats.

Tablet Controls


Settings

- Press **HOME**, then open the Applications tab, and then touch **Settings**.

Search



Press **Search** bar while in the Home screen or Browser to launch Google Search™ and search information on the web, applications and music..

You might also use speech to text feature to search information by voice input by touching 

Getting Around Your Tablet

There are different ways to navigate around the Home screen, menus and application screens on your tablet. You can also change the screen orientation of the tablet as well..

Touch

When you want to type using the onscreen keyboard, select items onscreen such as application and settings icons and touch them with your finger.

Touch and hold

To open the available options for an item (for example, contact or link in a webpage), simply touch and hold the item.

Swipe or slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.

Drag

Touch and hold your finger with some pressure before you start to drag. While dragging, do not release your finger until you have reached the target position.

Rotate

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the tablet sideways. When entering text, you can turn the tablet sideways to bring up a bigger keyboard.

Getting Started

Once you've installed your SIM card, battery, and microSD card, you can turn on your tablet and start using it.

Turn your tablet on and off

To turn on the tablet

Press the **POWER** key on the top right side of the tablet.

To turn off the tablet

- 1 Press and hold the **POWER** key until the options menu opens.
- 2 On the options menu, touch **Power off**.
- 3 Touch **OK** when prompted to turn off the tablet.

Set up your tablet for the first time

When you turn on the tablet for the first time, you will be requested to sign-in your Google account if any. Please follow the instruction showed on the tablet.

Turn off the screen when not in use

To save battery power, the tablet automatically turns off the screen when you leave it idle after a certain period of time.

You can also turn off the screen by short pressing the **POWER** key. Pressing the **POWER** key again will turn on your tablet screen.

Home Screen

The Home screen is your starting point for using the applications on your tablet. You can customize the Home screen to display application icons, shortcuts, folders, and widgets.

To setup the home screen

Extended Home screen

The Home screen extends beyond the screen width to provide more space for adding icons, widgets, and more. Slide your finger horizontally across the screen to go to the left or right side of the extended Home screen, then press Home key to back the main screen. Your tablet support 5 home screen.

Tablet Status and Notifications












Status bar

On top of the tablet screen is the status bar. The left side of the status bar displays notification icons while the right side of the status bar displays the tablet status.

The bar can be pulled down to indicate information, including call log, messages info, ongoing event or notifications.















Notification icons

These are the icons that may appear on the left side of the status bar:

<i>Icons showed in the boxed area</i>			
	New email message		More (not displayed) notification
	Upcoming event		
	Song is playing		Uploading data
	Problem with sign-in/sync		Downloading data
	Storage card is full		Content downloaded
	Wi-Fi is on and wireless networks are available		Tablet connected to computer via USB cable

Status icons

These are the icons that may appear on the right side of the status bar:

<i>Icons showed in the boxed area</i>			
	Connected to a Wi-Fi network		Battery is very low
	Bluetooth is on		Battery is low
	Connected to another Bluetooth device		Battery is full
	Alarm is set		Battery is charging
	Speaker on		GPS is on
	Tablet speaker is mute		GPS is connected
	Tablet microtablet is mute		Data is syncing

Notifications panel

Notification icons report the arrival of new messages, calendar events, alarms set and ongoing settings such as when call forwarding is on or the current call status. You can open the Notifications panel to open the message, reminder, or event notification and see the service provider name.

To open the Notifications panel

When a new notification icon displays in the status bar, touch and hold the status bar, then slide your finger downward to open the Notifications panel.

If you have several notifications, you can scroll down the screen to view more notifications.

You can also open the Notifications panel on the Home screen by pressing MENU and then touching Notifications.

To close the Notifications Panel

Touch and hold the bottom bar of the Notifications panel, then slide your finger up the screen or press BACK.

Settings

Control and customize tablet settings on the Settings screen.

Wireless & networks	Configure your tablet's wireless connections, such as WLAN and Bluetooth
Sound	Set the notification ring tones
Display	Set the screen brightness and screen timeout.
Location & security	Select the GPS location source to use, set the screen unlock pattern, or enable the SIM card lock.
Applications	Manage applications and installation of new programs
Accounts & sync	Sync your data with Google services.
Privacy	Backup the personal settings and other application data, restore the backed up and back to the factory setting
SD card & tablet storage	Check the available storage card and tablet memory, reset the tablet to its factory default settings, or format the SD card.
Language & keyboard	Set the operating system language and region. You can also set onscreen keyboard options.
Voice input & output	Set the speech synthesizer controls and default settings. Before using this feature, you are also requested to sign-up your Google account if any. This tablet support only English.
Accessibility	Extra plug-in is requested to download through the Android market.
Date & time	Set the date, time, time zone, and date or time format.
About tablet	View the tablet status such as the network type, signal strength, battery power level, and network name. You can also view the legal information and software version of your tablet.