

Bluetooth Keyboard User's Manual

Version

ID NO:

About This Manual

This manual is designed to assist you in installing and using the Bluetooth Keyboard. Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice.

Edition

1st Edition,

Copyright

© Copyright 2016

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer.

Trademarks

All trademarks and registered trademarks are the property of their respective owners.

FEDERAL COMMUNICATIONS COMMISSION STATEMENT

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

This Equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to

radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ◆ Reorient or relocate the receiving antenna.
- ◆ Increase the separation between the equipment and receiver.
- ◆ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ◆ Consult the dealer or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:

1) this device may not cause interference and

2) This device must accept any interference, including interference that may cause undesired operation of the device.

FCC RF Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Caution:

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN
INCORRECT TYPE.

DISPOSE OF USED BATTERIES ACCORDING TO THE
INSTRUCTIONS.

Introduction

Thank you for purchasing the **Bluetooth Keyboard**

This User's Manual contains information that will help to operate the device as well as answering questions about certain special keys and buttons. Please keep this manual in a safe place for future reference.

System Requirements

- MAC OS X.
- Build-in Bluetooth module or Bluetooth dongle.

Package includes

Main unit, Manual, USB cable

Device pairing

1. Turn on the Bluetooth connection on the device
2. Turn on the keyboard power and press the “” button. (Please make sure the blue LED is flashing)
3. The device will search automatically. When “Bluetooth Keyboard” shows, choose “Connect”.
4. Enter the pin code that display on the device and

press “Enter”.

5. Start using the Bluetooth keyboard.

Note: 1. After 10 minutes non-operation, the keyboard will go to sleep mode. Please press any key to wake up.

2. Batteries are not needed when USB cable is plugged for connection

3. Quickly switch between , ,  and  by pressing Fn+”1”~”4”

4. The buttons print in blue that all need to press the “Fn” key with the key to enable the function.

Hot key function:

Function Name		Function Description
	Dim	Dims the display
	Brighten	Brightens the display
		
		
	Pre-track	Switches to the previous media track. Press once for each preceding media track.

	Play/Pause	Switches between Play and Pause. Once Pause is pressed, pressing this button again resume play.
	Next track	Switches to the next media track. Press once for each subsequent media track.
	Mute	Mute the device's sound volume. Press it again to turn the volume back on.
	V-	Decrease the device's sound volume. Hold down to decrease volume more quickly.
	V+	Increases the device's sound volume. Hold down to increase volume more quickly.
	eject	Eject CD/DVD

	Home	Returns to home screen.
	Search	Search files.