



Volkswagen Zubehör Volkswagen Accessories



GB Rear Seat Entertainment DVD player Owner's Manual

 
 
 
 


GB Owner's Manual
Contents

1	General information	4
1.1	Signs and Symbols	4
1.2	Safety information	4
1.3	Precautions when using the portable DVD player	5
1.4	Advice on handling the discs	5
2	In the box	5
3	Controls on the player	6
3.1	Front face with control panel	6
3.2	Left and right sides	7
3.3	Back (without battery)	7
4	The remote control	8
4.1	Remote control buttons	8
4.2	Notes on using the remote control	8
4.3	Inserting or replacing the battery	9
5	Typical player installations	9
5.1	Installing in the car	9
5.2	Playback with two DVD players in the car.	9
5.3	Demounting the portable DVD player	9
5.4	Free-standing position	10
5.5	Day - night brightness adjustment	10
6	Initial operation	10
6.1	Connecting to the power supply	10
6.2	Switching the player On/Off.	10
6.3	Standby mode	10
7	Disc playback	11
7.1	Inserting disc and playing back	11
7.2	Interrupting /resuming playback	11
7.3	Fast forwarding /rewinding	11
7.4	Skipping to previous /next section	11
7.5	Calling up the DVD menu and navigation	11
7.6	Changing the sound playback language	12
7.7	Calling up information on the disc	12
7.8	Ejecting the disc	12
8	Playing back audio titles, images and videos from data CDs	12
8.1	Displaying the contents	12
8.2	Switching selection	12
8.3	Playing content	12
8.4	Characteristics of individual file types	13
9	Playing back the contents of USB drives and memory cards	13
9.1	Inserting the memory medium and playing back files	13
9.2	Switching between several memory media	13
10	Using Bluetooth headphones	14
10.1	Establishing a headphone connection	14
10.2	Severing the Bluetooth connection	14



11	Other settings in the player menu- -----	14
11.1	Navigating through the player menu- -----	14
11.2	Screen settings -----	14
11.3	Settings with connection to an external TV -----	15
11.4	Resetting to factory settings -----	15
11.5	Selecting the language -----	15
12	Connecting to external equipment -----	15
12.1	Connecting external equipment for playback-----	15
12.2	Playback from external equipment (e.g. games consoles) -----	15
12.3	Connecting headphones -----	16
13	Using the battery -----	16
13.1	The battery -----	16
13.2	Battery operation of the portable DVD player -----	16
13.3	Charging the battery-----	16
13.4	Notes on using the battery-----	17
14	Fault correction -----	17
15	Player menu - overview-----	18
16	Technical data -----	19
17	Licences and copyright -----	20



1 General information

These instructions will help you to become familiar with your portable DVD player and to recognize and avoid situations that could endanger you and others. Please carefully read and follow the information in these instructions. Please be sure to read and heed safety information and WARNINGS. Failure to do so can cause damage the DVD player that will not be covered by the Limited Warranty. More importantly failure to install and use the DVD player properly can lead to serious personal injury.

Please keep these operating instructions in a safe place for future reference.

1.1 Signs and Symbols

The following signs and symbols make it easier to read the operating manual:

DANGER


Texts with this symbol indicate a dangerous situation that results in death or severe injuries if disregarded.


WARNING

Texts with this symbol indicate a dangerous situation that may lead to death or severe injuries if disregarded.

NOTE

Texts with this symbol indicate a situation that may lead to damage to the vehicle or radio if disregarded.

 Texts with this symbol contain additional information.

 Texts with this symbol contain information about the environment and how you can help to protect it.

1.2 Safety information

WARNING

An DVD player that is not secured at all or correctly can be flung through the interior of the vehicle causing injuries as the result of sudden driving or braking manoeuvres as well as an accident or a collision.

- Never arrange or mount the DVD player on the doors, on the windscreen, above or near to the area marked with "AIRBAG" on the steering wheel, the dashboard, the backrests or between these areas and the passengers themselves. The DVD player may lead to severe injuries in event of an accident, especially when the airbags are triggered.
- Only use the player in the vehicle on the mount provided. The player may only be installed and operated in vehicles in such a way that the driver is not distracted.

Preventive measures with laser devices:

Laser devices are classified in the safety classes 1-4 according to DIN IEC 76 (CO) 6/ VDE 0837.

The DVD player of this device corresponds with safety class 1.

The laser used in class 1 devices is low-energy or is shielded so that there is no risk when used for its intended purpose.

WARNING

Opening the housing of a DVD player may lead to injuries caused by non-visible laser radiation.

- Have DVD players repaired only by a specialist company.

1.3 Precautions when using the portable DVD player

NOTE

The player is to be safeguarded from moisture. Use a soft, dry cloth for cleaning the casing surfaces.

When setting up the player, make sure there is enough space is available for air to circulate around it. The player should not be operated directly adjacent to heat sources.

Connect the player to the power supply using only the connecting cable supplied. Make sure that the cable is not damaged and that the plugs are seated firmly.

Ensure that the supply voltage corresponds to the operating voltage of the player. The operating voltage is stated on the mains voltage adapter.

Isolate the player from the power supply during thunderstorms or longer periods of absence.

Replace empty batteries only with new batteries that have the same voltage, size and specification.

To prevent theft and to protect the equipment from extreme temperatures through direct sunlight, we recommend taking it with you when leaving the vehicle or stowing it safely inside the vehicle.

Should smoke or odour possibly accompanied by unusual operating noises develop, switch the player off immediately and isolate it from the voltage supply. Do not continue using the player.

Avoid abrupt, jerky movements to the player during disc playback. The discs could otherwise become damaged.

1.4 Advice on handling the discs

The player will play standard 4 3/4 inch (12 cm) single or double-sided DVD video discs as well as standard compact discs. Smaller or irregularly shaped discs not suitable for playback in the player.

Clean discs carefully first with a damp and then with a dry cloth. Changes in ambient temperature can cause condensation to form on the disc. Dry the disc with a soft cloth before putting it into the player or playing the disc.

Do not touch, write on or damage the reverse side of a disc or either side of double-sided discs. Do not expose the discs to direct sunlight, dust or high temperatures. Damaged or incorrect discs can damage the DVD player!

2 In the box


The following components are included:


- Portable DVD player
- Remote control and battery
- AC power adapter
- 4 plugs for power supply (UK, EU, AU and US)
- Stand that attaches to the back of the player
- Lithium-polymer rechargeable battery
- Operating instructions (13 languages)
- Travel pouch

Check the contents upon receipt. If something is missing or damaged, contact your dealer for replacement.

3 Controls on the player


3.1 Front face with control panel

 The buttons on the front panel light up with the player is switched on. They react to a light touch.

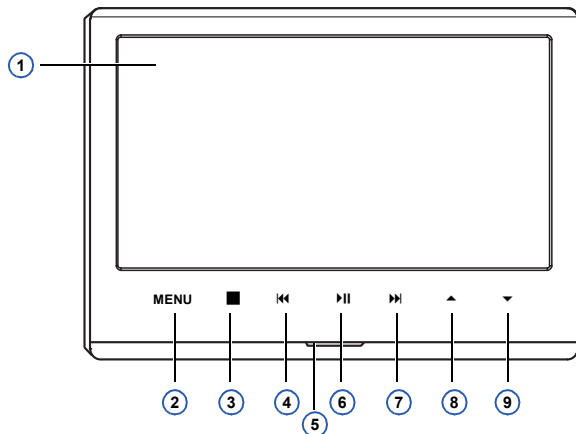


- ① Display
- ② **MENU**
Calls up the player menu.
- ③ **STOP** ■
Stops the playback.
- ④ **PREVIOUS CLIP** ⏮
Returns to previous section /music title / image. Holding the button down slows the playback.
- ⑤ *Day /night sensor as well as
sensor for remote control*
- ⑥ **PLAY / PAUSE** ⏩
Starts / interrupts the playback and also identifies the current selection in the menu display.
Holding the button down switches into or out of standby mode.
- ⑦ **NEXT CLIP** ⏭
Switches to next section /music title /image. Holding the button down speeds up the playback.
- ⑧ ⑨ **VOLUME CONTROL** ▲ ▼
Controls the playback volume and navigates up or down in the menu.

3.2 Left and right sides

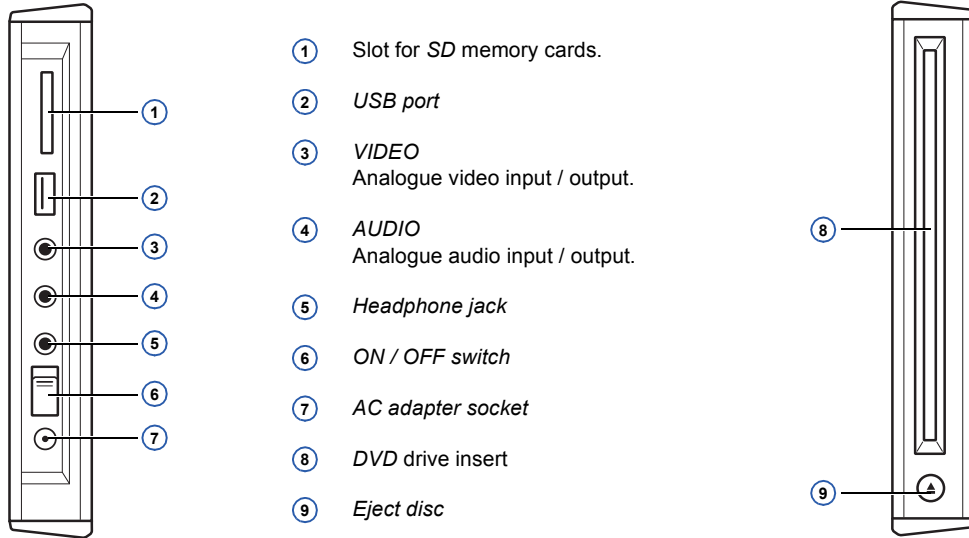

- ① Slot for SD memory cards.
- ② USB port
- ③ VIDEO
Analogue video input / output.
- ④ AUDIO
Analogue audio input / output.
- ⑤ Headphone jack
- ⑥ ON / OFF switch
- ⑦ AC adapter socket
- ⑧ DVD drive insert
- ⑨ Eject disc

3.3 Back (without battery)

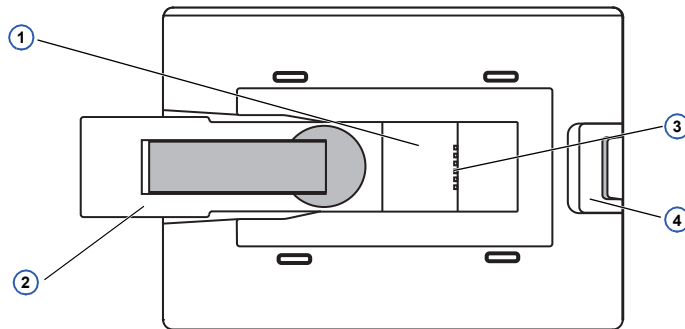


- ① Slot for the in-vehicle mounting bracket and for inserting the battery.
- ② Picture stand (removable).
- ③ Connection contacts for vehicle installation.
- ④ Sliding release button.

4 The remote control

4.1 Remote control buttons

- ① **STANDBY**
Switches the player On/Off.
- ② ③ **VOL+ ▲ / VOL- ▼**
Increases /decreases the volume.
- ④ **MUTE**
Switches the speakers On/Off.
- ⑤ **RETURN**
Back to previous menu item.
- ⑥ **AUDIO**
Language selection for DVD playback.
- ⑦ **INFO**
Calls up disc information.
- ⑧ **DVD MENU**
Calls up a DVD menu.
- ⑨ **STOP ■**
Stops the playback.
- ⑩ Numerical entry 0-9.
- ⑪ **NEXT CLIP ►►**
Switches to next section /
music title /image etc.
- ⑫ **PLAY / PAUSE ►||**
Starts /interrupts the playback
- ⑬ **PREVIOUS CLIP ◄◄**
Switches to previous
section /music title /image etc.
- ⑭ **FORWARD ►►**
Fast forward playback.

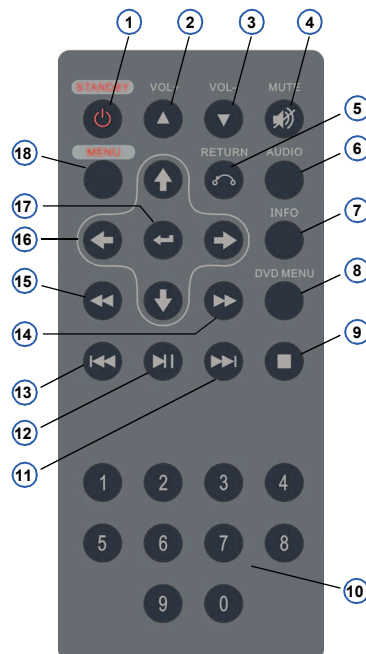

- ⑮ **REWIND ◄◄**
Fast reverse playback.
- ⑯ **Cursor buttons**
Moves the selection to the left, right, up or
down.
- ⑰ **ENTER**
Confirms entries.
- ⑱ **MENU**
Calls up the player menu.


4.2 Notes on using the remote control

! NOTE

Never expose the remote control to bright sun light, high temperatures, impact or other damage that can prevent it from working properly

4.3 Inserting or replacing the battery

- 1 Push a fingernail into each of the slots in the battery cover.
- 2 Press the battery compartment cover at slot **a** lightly to the side **(1)** and pull the battery holder at slot **b** out **(2)**.
- 3 Remove the old battery and place a new lithium battery (Cr2025) into the holder. The + side of the battery must point upwards.
- 4 Push the battery holder back into the remote control until the holder clicks lightly into place.

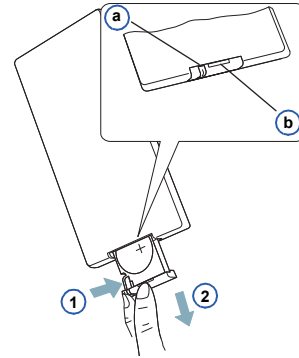


5 Typical player installations

5.1 Installing in the vehicle

i For vehicle installation, the front seat must be prepared and the carrier bracket for mobile terminal devices installed. Should that not be the case, please contact your authorized Volkswagen dealer or authorized Volkswagen Service Facility about installing Volkswagen rear seat entertainment.

To install the player in the vehicle:


- 1 Press the button at the top of the carrier **a** so that the mounting rail **b** flips forward (arrow).
- 2 Attach the player from the left and push it to the right until it audibly clicks into place.
- 3 Check that the player is firmly attached to the carrier.

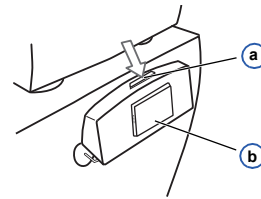

i If the *ON/OFF switch* on the player is ON, player switches on automatically when the vehicle ignition is switched on.

5.2 Playback with two DVD players in the vehicle

Where two players are installed in one vehicle, it is possible to transmit image and sound from one disc in the one player to the other player so that both play the same content. To do this:


- 1 Switch both players on.
- 2 Insert a disc into one player and start playback.
- 3 Select *Source - AV IN SEAT*  from the menu on the other player.

i In this mode, headphones are controlled independently with the controls on the respective player.

5.3 Removing the portable DVD player

To remove the player from the carrier:

- 1 Hold the player in both hands. Push the release tab on the back of the unit on the left, towards the middle of the player and hold it in **(1)**.
- 2 Push the player to the left, out of the carrier **(2)**.
- 3 Push the opposite side of the carrier in, so that it closes up flush.

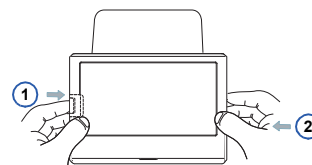

! NOTE


To help prevent damage to the rear seat entertainment system, always remove the DVD player from the carrier before folding the backrest of the back seat forward.

5.4 Free-standing position

For use outside the vehicle, the portable DVD player can be set upright with the stand that can be installed on the back of the unit.

- 1 Insert the stand into the slot on the back of the player.
- 2 Swing the tongue out until it clicks into place.
- 3 Turn the tongue 90° and stand the player up.
- 4 Check that the player is stand is properly inserted and secure.

Reverse these steps to fold up the stand when it no longer needed.

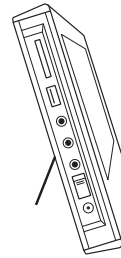

5.5 Day - night brightness adjustment

A day - night sensor is built into the front of the player. This sensor adjusts screen brightness to the ambient lighting conditions with a delay of about 5 seconds.

6 Initial operation

6.1 Connecting the player to the power supply

When the portable DVD player is installed in the vehicle, power is supplied via the contacts on the carrier.


If you are using the DVD player in a free-standing position, plug the AC adapter into an appropriate wall outlet and insert plug on the adapter into the socket on the left side of the player. You can also use the internal battery to power the player.

6.2 Switching the player On/Off.

To switch the portable DVD player on:

- 1 Push up on the *ON/OFF* switch on the left side of the player.
- 2 The "Welcome" screen appears. The front controls light up.

The player is ready for use.

 When switching the player on for the first time or after resetting the player settings, the language selector appears (see 11.5 Selecting the language).

To switch the player off, push down on the *ON/OFF* switch on the left side of the player.

6.3 Standby mode





The portable DVD player automatically switches to the standby mode after a few minutes when there is no playback or operator action. The screen becomes dark and only the *PLAY / PAUSE* button remains lit up on the front face.

Press *STANDBY* on the remote control or *PLAY / PAUSE* for a few seconds on the player to end the standby mode.

 
Similarly, the player switches to standby mode if you press *STANDBY* on the remote control when the screen is lit up or *PLAY / PAUSE* on the player for a few seconds.


7 Disc playback



7.1 Inserting disc and playing back

-  Check the condition of each disc before inserting. Do not use any deformed or otherwise damaged data carriers.
-  Insert single-sided discs with the printed side to the front. Check both sides of a double-sided disc then insert it correctly into the drive.
 - 1 Check that the portable DVD player is ready for operation or in standby mode. If not, switch the player on.
 - 2 When you push the disc into the opening in the DVD drive, it will be drawn in automatically. The player reads the information on the disc. Depending on the type of disk inserted, DVD, VCD or CD will appear on the screen.
 - 3 Playback normally starts automatically, the disc menu (where available) appears in the display. If not, press *PLAY / PAUSE*  on the control panel or on the remote control.
-  When an audio disc is playing, the screen display goes out automatically if no buttons are pressed for about 1 minute. Pressing any random button reactivates the display.





7.2 Interrupting /resuming playback

 To interrupt the playback with freeze-frame, press *PLAY / PAUSE*  once.

  
To interrupt the playback without freeze-frame, press *STOP*  once.

To resume the playback press *PLAY / PAUSE*  again. With most DVDs and video CDs, playback will restart at the point where it was stopped. By ejecting the disc or pressing *STOP*  again, this resume function is deactivated.

   
 
7.3 Fast forwarding /rewinding

During playback, press one of the *FORWARD*  or *REWIND*  buttons on the remote control or press and hold one of the  or  buttons on the player.

  The speed of the playback each time you press the button to 2x, 4x, 8x, 20x and again to 1x.


 
 
 
 
Pressing *PLAY / PAUSE*  resumes playback at normal speed.

7.4 Skipping to previous /next section


During playback press one of the  or  buttons to skip to the previous / next section.

7.5 Calling up the DVD menu and navigation

Most DVDs as well as video CDs with playback control (PBC) have a menu for selecting individual video sequences. This menu can be activated during playback by pressing *DVD MENU* on the remote control or by selecting the menu item *DVD Option - Disc Menu*.

Navigate DVDs by using the cursor buttons on the remote control or the  and  or  and  buttons to get to the desired item and start playback with *PLAY / PAUSE* .

For video CDs with PBC, use the number buttons on the remote control to select an item.

-  Video CD playback can also be started without calling up the disc menu. Track 1 on the disc will be played when you press number 1 on the remote control while the playback is stopped.

7.6 Changing the audio playback language

By pressing the *AUDIO* button on the remote control or by calling up the menu item *DVD Option - Audio* during the playback, you can choose between the different sound tracks offered – depending on the contents of the DVD/CD.-

7.7 Calling up information on the disc

This function lets you display general information on the disc such as playing time, number of sections or title.

Press the *INFO* button on the remote control during playback or select the menu item *DVD Option - Information*. The information is shown in the upper part of the display.

Pressing the *INFO* button repeatedly scrolls through the available information and ultimately fades the information out.

7.8 Ejecting the disc

Press the *Disc eject* button on the right side of the player. Any playback still running is stopped, the disc is ejected about half way.




Remove the disc completely from the player.

8 Playing back audio titles, images and videos from data CDs

8.1 Displaying the contents

After inserting a disc that contains audio, image and/or video files, the player reads the information on the disc and displays the contents on the screen in three columns.

The left column displays icons for the respective mode:

-  Music
-  Photos
-  Videos

Recognized folders and files are listed in the center and right hand columns.

The currently selected mode, the current folder or the current file is highlighted in white. The current selection is indicated with a bar.



8.2 Switching selection

Move the bar up or down within a column by pressing *Cursor up/down* on the remote control or the \blacktriangle or \blacktriangledown button.

To open a folder, press a *PLAY / PAUSE* \blacktriangleright button. The button moves the cursor to the right hand column.

To return to the next highest folder level, press a *STOP* \blacksquare button.

8.3 Playing content

If the bar is on an audio, image or video file, start the playback by pressing the *PLAY / PAUSE* \blacktriangleright button. If there are several media files located within the current folder, these will be played back sequentially.

During playback you can:

- switch to the previous or next file with \blacktriangleleft or \blacktriangleright ,
- pause or resume the playback with *PLAY / PAUSE* \blacktriangleright .

To end playback, press *STOP* \blacksquare . The folder structure returns to the display.

8.4 Characteristics of individual file types

The screen display can change depending on media type:

- With music files, you will see additional information in the lower part of the screen (where available):

File no./total	File name	Played
0002/0004	It Takes Two.MP3	00:00:00
Tina Turner It Takes Two simply the best		

You will find a list of playable file formats in section "Technical data" on page 19.


9 Playing back the contents of USB drives and memory cards

9.1 Inserting the memory medium and playing back files

Insert the USB drive or memory card into the corresponding jack on the left side of the player (see section "Left and right sides" on page 7).





The contents of the memory media are read and displayed as described in section "Playing back audio titles, images and videos from data CDs" on page 12.

To play back the contents of the media inserted, proceed as described in section "Playing content" on page 12.

-  Connecting a drive with USB cable or using memory cards of inferior quality can adversely affect playback quality or function.

9.2 Switching between several memory media

If several data carriers are inserted or connected into the player at the same time, playback can be switched between them as follows:

- 1 Press *MENU* on the player or remote control. The player menu is shown.
- 2 Confirm the current selection *Source* by pressing *PLAY / PAUSE*  on the player or *RETURN* on the remote control.
- 3 The data source sub-menu appears. The symbol for the current data source is highlighted white.
- 4 Move the selection to the desired item by pressing *Cursor up/down* on the remote control or  or .
- 5 Confirm the selection by pressing *PLAY / PAUSE*  on the player or *ENTER* on the remote control.


The information on the selected data carrier is read by the player and displayed or playback starts automatically.




 
10 Using Bluetooth headphones


10.1 Establishing a headphone connection

Sound from the player can also be transmitted to a Bluetooth headphone via a Bluetooth connection. When connecting a Bluetooth headphone for the first time:

- 1 Switch the headphones on by pressing and holding the symbol  on the phone designated "R". The green LED on the phone starts to flash.


 If the LED doesn't flash, replace the batteries or charge them via the USB connection.

- 2 In the player menu, select *Bluetooth - New connection*. In the left upper corner of the display a white flashing Bluetooth symbol  appears.
- 3 The player and headphones are pairing. This can take a few seconds. After successful connection, the color of the Bluetooth symbol changes to blue.
- 4 Close the player menu. The Bluetooth symbol will also be faded out.

 If the headphones have previously paired with the portable DVD player then they will recognize the player and connect automatically every time both the DVD player and headphones are switched on.

10.2 Severing the bluetooth connection





Should you wish to sever the connection, there are the following options:

- 1 Switch off the headphones by pressing and holding on the symbol  on the side designated "R." The green LED on the phone goes out and the sound is played back via the player.
- 2 In the player menu, select *Bluetooth - Bluetooth off*.

11 Other settings in the player menu

11.1 Navigating through the player menu

You can use the following buttons for calling up and navigating through the player menu.

Action	Button on the player	Button on the remote control
Calling up the menu	<i>MENU</i>	<i>MENU</i>
Up in menu level		<i>Cursor up</i>
Down in menu level		<i>Cursor down</i>
Confirm selection		<i>ENTER</i>
Back to previous menu		<i>RETURN</i>
Quit menu	<i>MENU</i>	<i>MENU</i>

11.2 Screen settings

The following monitor parameters can be set in the menu item *Display*:

- *Brightness*: automatic or manual, on a scale from 0 to 8. With "Automatic" the screen brightness adapts itself automatically to the ambient lighting conditions (see "Day - night brightness adjustment" on page 10).
- *Color*: manual, on a scale from 0 to 8.
- *Proportion*: switch between width-to-height ratios 16:9 and 4:3.


11.3 Settings with connection to an external TV

When you connect the portable DVD player to an external TV, you can make the appropriate settings in the menu item *Setup* depending on its data:

- *TV System*: automatic – for multi-standard TVs, e.g. NTSC or PAL. Specification is automatic.
- *TV Type*: setting the width-to-height ratio – 16:9, 4:3 letterbox (films are played back in the original width-to-height ratio, black bars may appear above and below), 4:3 pan & scan (films fill the entire TV screen, may be partially cut off at the sides), 2.35:1.

11.4 Resetting to factory settings

By selecting the menu item *Setup - Default*, all manual configuration changes to the portable DVD player are erased and returned to the factory settings.

 After reset, the language selection list appears on the screen.

11.5 Selecting the language

The player menu is available in the following languages:

English, German, Spanish, French, Italian, Russian, Swedish, Dutch, Japanese and Chinese.

The language can be selected in the menu item *Language* (see "Player menu - overview" on page 18).

12 Connecting to external equipment

NOTE

Before connecting external equipment, always switch off the power to the portable DVD player and the external equipment. To help prevent damage to the player and the other equipment.


12.1 Connecting external equipment for playback

You can transmit the sound or image and sound signals from the portable DVD player to external equipment such as a TV or amplifier. To do so:

- 1 Connect the socket(s) *AUDIO* or *VIDEO* on the portable DVD player (see 3.2 Left and right sides in this Manual) via the appropriate audio or video cable with the input socket(s) on the external equipment.
- 2 Switch both the player and the external equipment on. Select the required input or channel on the external equipment.
- 3 Start the media playback on the portable DVD player.

12.2 Playback from external equipment (e.g. games consoles)

You can transmit sound or image and sound signals from external playback equipment to the portable DVD player. To do so:

- 1 Connect the socket(s) *AUDIO* or *VIDEO* on the portable DVD player (see "Left and right sides" on page 7) via the appropriate audio or video cable with the output socket(s) on the external equipment.
- 2 Switch both the player and the external equipment on. In the portable DVD player menu, select *Source - AV IN SIDE* .
- 3 Start the media playback on the external equipment.

12.3 Connecting headphones

- 1 Turn the volume on the portable DVD player down to minimum.
- 2 Plug the headphones into the 'phone jack on the portable DVD player (see "Left and right sides" on page 7).
- 3 Put the headphones on and turn the volume up to a safe and comfortable level.


13 Using the battery

13.1 The battery

Located on the battery are:

- ① Mounting rail
- ② Status LED
- ③ AC adapter connection socket.

Located on the back of the player (not shown) is a slot similar to that on the portable DVD player for inserting the picture stand.

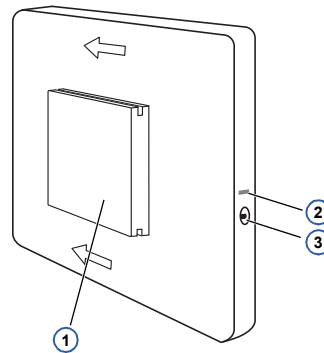


13.2 Battery operation of the portable DVD player

You can use the portable DVD player running on the internal battery for about 2.5 hours, independent of any other power supply. To do so:

- 1 Push the battery mounting rail into the slot on the back of the portable DVD player in the direction shown until it clicks into place.
- 2 Use the stand to support the player.
- 3 Switch the player on.

To remove the battery:

- 1 Switch the player off.
- 2 Push the release tab, left on the back of the player, towards the middle of the player and hold it in.
- 3 Push the battery out of the slot.

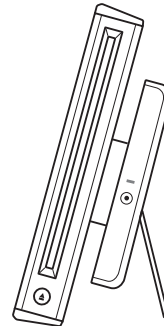

13.3 Charging the battery

To charge the battery, plug the AC adapter into an appropriate outlet and the adapter plug into the connection socket on the battery. When the charging process starts, the status LED on the battery lights up red. The LED goes out when the charging process has ended.

The battery can be charged while attached to the player as well as separately.

i If the battery is attached to the portable DVD player and the player is connected to an outside power source via the AC adapter socket on the player, the battery will not be charged.

13.4 Notes on using the battery

⚠ DANGER
20 mm button cells and other lithium batteries will cause serious personal injury and even death within a short time if swallowed.
 ● Get medical attention immediately if you suspect that a battery has been swallowed.

⚠ WARNING
Do not use damaged batteries – risk of explosion.

✿ Dispose of old batteries in an environmentally responsible manner.

✿ Batteries may contain Perchlorate Material. Special handling may apply – see <http://www.dtsc.ca.gov/hazardouswaste/perchlorate>. Obey all legal requirements regarding handling and disposal of these batteries. Authorized Volkswagen dealers and authorized Volkswagen Service Facilities are familiar with the requirements, and we recommend that you have them perform this service for you.

Charge the battery completely before using it for the first time.

The battery will be warm when charging. This is normal.

If the battery becomes too warm or the ambient temperature is more than 86° F (30° C), the charging time can be longer or may even become impossible. In this case, let the battery cool down or move to a cooler location before charging.

Do not recharge a battery that is already fully charged. This can permanently damage battery and reduce its capacity.

14 Fault correction

Not every fault means the player is broken. The following table lists some faults, possible causes and steps to help remedy these faults.

Symptom	Possible cause	Remedy
Player won't switch on	Player is unplugged from power supply	Check connection to player and that mains plug is seated properly
Remote control not working	Remote control batteries flat	Replace batteries
	Line of influence barred	Test in another location
No sound output	Volume at 0	Turn up volume
	Playback has been interrupted	Resume playback
	Headphones are connected or plugged in	Unplug headphones
Screen is blue, text: "No signal"	Source AV IN SEAT is activated without external signal	Select another source from the player menu
No disc playback	Disc incorrectly inserted	Insert disc correctly
	The disc is dirty or damaged	Clean disc carefully
	The disc contains no playable content	
No image and/or sound on the external equipment	Wrong channel or audio input selected at the external equipment	Check setting of the external equipment
	Cable connection loose	Check cable seating

WARNING
Opening the housing of a DVD player may lead to injuries caused by non-visible laser radiation.
● Have DVD players repaired only by a specialist company.

15 Player menu - overview

Portable DVD player overview of menu:

Source -----	DVD		
	USB		
	SD		
	AV IN SEAT		
	AV IN SIDE		
Bluetooth -----	Bluetooth On		
	Bluetooth Off		
	Pairing / New connection		
Display -----	Brightness -----	Auto	
		Manual -----	0..8
	Color		0..8
	Proportion -----	16:9	
		4:3	
Setup -----	TV System -----	Auto	
		PAL	
		NTSC	
	TV Type -----	16:9	
		4:3 LB	
		4:3 PS	
		2.35:1	
Language -----	Default		
	English		
	German		
	Spanish		
	French		
	Italian		
	Russian		
	Swedish		
	Dutch		
	Chinese		
	Japanese		
DVD Option -----	Disc Menu		
	Information		
	Audio		
	Subtitle		
	Repeat		

16 Technical data

Performance characteristics

- DVD player for DVD, VCD, SVCD, CD, DVD+R, DVD-R, DVD+RW, DVD-RW
- Image and video formats: JPEG, MPEG2, DIVX, DAT
- Audio formats: MP2, MP3, DAT
- TV systems: NTSC, PAL
- Integrated stereo loudspeakers, 2 x 1 W
- integrated bluetooth module

Screen

- Diagonal: 9" (22.8 cm), 800 x 480 pixels, width-to-height ration 16:9
- Brightness: 250 cd/m²
- Contrast: 400:1

Connections

- Headphones, input and output sockets: cinch 3.5 mm plug
- Card reader (SD) and USB port

Power supply

- Mains adapter: input 100-240 V AC, output 12 V 1.5 A DC
- Battery run time on playback: max. 2.5 hours

Dimensions

- Width /height /depth: 240 x 173 x 36.5 mm
- Weight: approx. 920 g

Battery

- Width /height /depth: 152 × 112 × 15mm
- Weight: approx. 240 g
- Capacity: 3000 mAh
- Output voltage: 7.4 V DC
- Charging time: approx. 4 hours (during simultaneous playback approx. 10 hours), up to 500 charging cycles.

Temperature range

- Operating: -10 ... +50 °C
- Storage: -30 ... +70 °C

Environmental protection

The screen is mercury-free with arsenic-free screen glass and contains no BFRs (brominated flame retardants) or PVC or heavy metals such as Cd, Cr, Hg or Pb, the casing consists of recyclable aluminium.

The player complies with the harmonized European Standards in the versions current at the time of manufacture:

Low voltage 2006/95/EC

Electromagnetic compatibility 2004/108/EC

17 Licences and copyright

FCC STATEMENT:

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC STATEMENT:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with RSS 210 of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

MACROVISION:

This product contains a technology for safeguarding copyrights which are protected by US patents and other intellectual property rights. The use of this copyright safeguarding technology must be authorised by Macrovision and is provided for personal use and other limited presentations unless otherwise stated by Macrovision. Reverse engineering or disassembly are not permitted.

DOLBY:

Manufactured under licence from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

DivX:

This equipment contains a copyright safeguarding technology which is protected by DivX, Inc. DivX, DivX Certified and related logos are trademarks of DivX, Inc. and are used within the scope of a licence.

Bluetooth:

Bluetooth® is a registered trademark of Bluetooth® SIG, Inc.

All other brand and product names referred to in these operating instructions are trademarks and/or registered trademarks of the respective owner.

We reserve the right to make alterations for reasons of technical advancement.

The illustrations and screen displays used in this handbook may deviate from the actual design of the equipment.

This manual is protected by copyright.

Any use without the permission of the author is prohibited.

© Made by Nextbase for Volkswagen Accessories, issued March 2014