

tablet 2 Quick Start Guide

This Quick Start Guide will help you get started with your new ClickN KIDS tablet 2. For additional assistance, visit www.clicknkidstablet.com/support

1 Before Starting

Make sure a Wi-Fi connection is available. We recommend using a Google Account (or Gmail) with your tablet. If you do not have one, this guide will help you sign up for a free Google Account.

Charging

Before first use, we recommend charging the tablet for 6 hours. Plug in the included AC adapter. Then connect the USB cable from the AC adapter to the tablet.



2 Turn Power On

1. Press and hold the power button for 3 seconds until the ClickN KIDS logo appears.




3 Language

1. Scroll through the languages and highlight your preference.
2. Tap **Next**.



4 Connect to Wi-Fi

1. Tap your Wi-Fi Network name.
2. If your network has a password, you will be prompted to enter it.
3. Tap **Connect**.

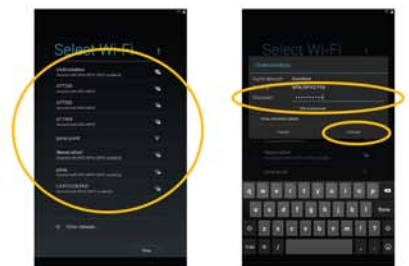


5 Got Google?

If you already have a Google Account (or Gmail) tap **Yes** and skip to step 12. If not, tap **No** and you may set one up.



6 Create a Google Account

1. Tap **Yes** to create a Google Account.
2. On the next screen, enter your first and last name in the appropriate boxes. Then tap the right arrow to continue.

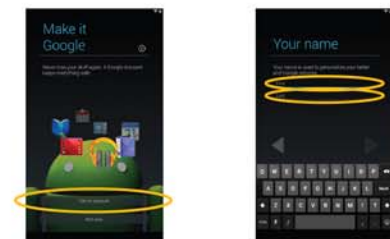

7 Username and Password

1. Enter your desired username and tap the right arrow to continue.
2. Enter a password in the first box and repeat it in the second box. Then tap the right arrow to continue.




8 Password Recovery

Follow the instructions on screen if you would like to set up password recovery. If not, you may do this later by logging in to google.com.



9 Google Services

Uncheck any services that you do not wish to have active on your tablet, then tap the right arrow to continue.

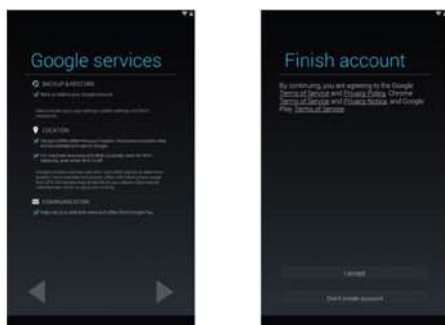

10 Security code

To finalize account creation, you may be asked to enter a security code. Enter the code in the box then tap the right arrow to continue.



11 Google+ and Payments

You may choose to sign up for Google+. You may do this later at plus.google.com. You may choose to add a credit card to your account for digital purchases. This can be done later at wallet.google.com. Next, **skip to step 14**.




12 Sign In with Google

(continued) Enter your Google or Gmail username and password. Tap the right arrow to continue. You may choose to use Google+ or upgrade later at plus.google.com. Then uncheck any Google services that you do not want.



13 Payments and Name

You may choose to add a credit card to your account for digital purchases. This can be done later at wallet.google.com. Then enter the name of the tablet's owner.

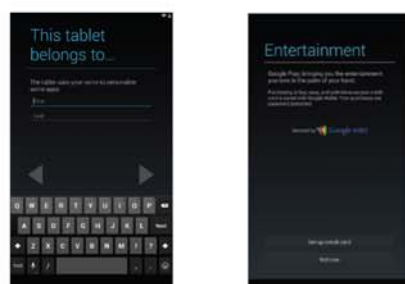

14 ClickN KIDS Setup

You will now set up your ClickN KIDS parent account. Fill in all fields such as name, email, postal code, security questions and parent PIN code. Tap **Done** on the keyboard to reveal the **Next** button.



15 Kid's Place Setup

Read and Accept the Kid's Place Terms and Conditions. Read the Kid's Place Quick Tips.



16 Have fun!

We hope you enjoy playing and learning on your new ClickN KIDS tablet 2!

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. MIDFCC ID: ZL9-CK07T) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use on the body is 0.1533W/kg. This device was tested for typical body-worn operations with the back of the handset kept 0cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.