

JOIN & JOY

Your Portable Concert On-The-Go

KARAOKE MACHINE



QUICK START GUIDE

INTRODUCTION

Thank You for Choosing Us!

We truly appreciate your purchase.

This quick guide will help you get started and make the most of all the fun features.

Read and understand all the safety instructions before using your product.

IMPORTANT SAFETY INSTRUCTIONS

1. Read all warnings.
2. Follow all instructions.
3. The apparatus shall not be exposed to dripping or splashing. Do not place any objects filled with liquids such as vases on the apparatus.
4. Do not block any ventilation openings. A minimum distance of 30cm around the apparatus must be maintained.
5. Do not install this apparatus near any heat sources such as radiators, heat registers, stoves or other apparatus that produce heat.
6. No naked flame sources, such as lighted candles should be placed on the apparatus.
7. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
8. Use only attachments and accessories specified by the manufacturer.
9. Unplug this apparatus during lightning storms or when unused for long duration.

CAUTION

RISK OF ELECTRIC SHOCK. DO NOT OPEN.



 
THE LIGHTNING FLASH WITH AN ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED DANGEROUS VOLTAGE WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE PRODUCT.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE

MAIN CONTROLS

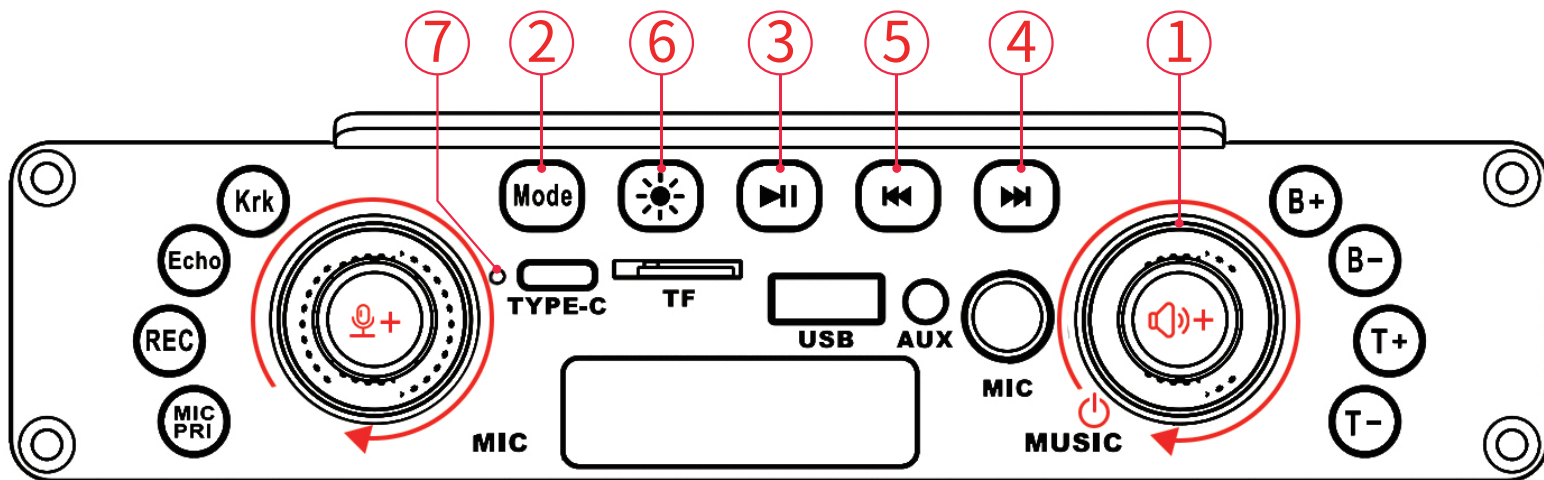

1 : Turn on the speaker and adjust overall volume.

2 **Mode** : Switch between FM, USB, AUX, and Bluetooth.

3 : Play or pause music.

Press once in FM mode to auto-scan and save stations.
Press and hold for 3s to activate TWS pairing with another speaker.

4 : Skip to the next track or FM station.

5 : Go back to the previous track or FM station.

 
6 : Tap to switch LED mode.

Hold for 3s to turn lights on/off.

7 : Charging Indicator


Lights up while charging, turns off when full.

MIC & SOUND SETTINGS

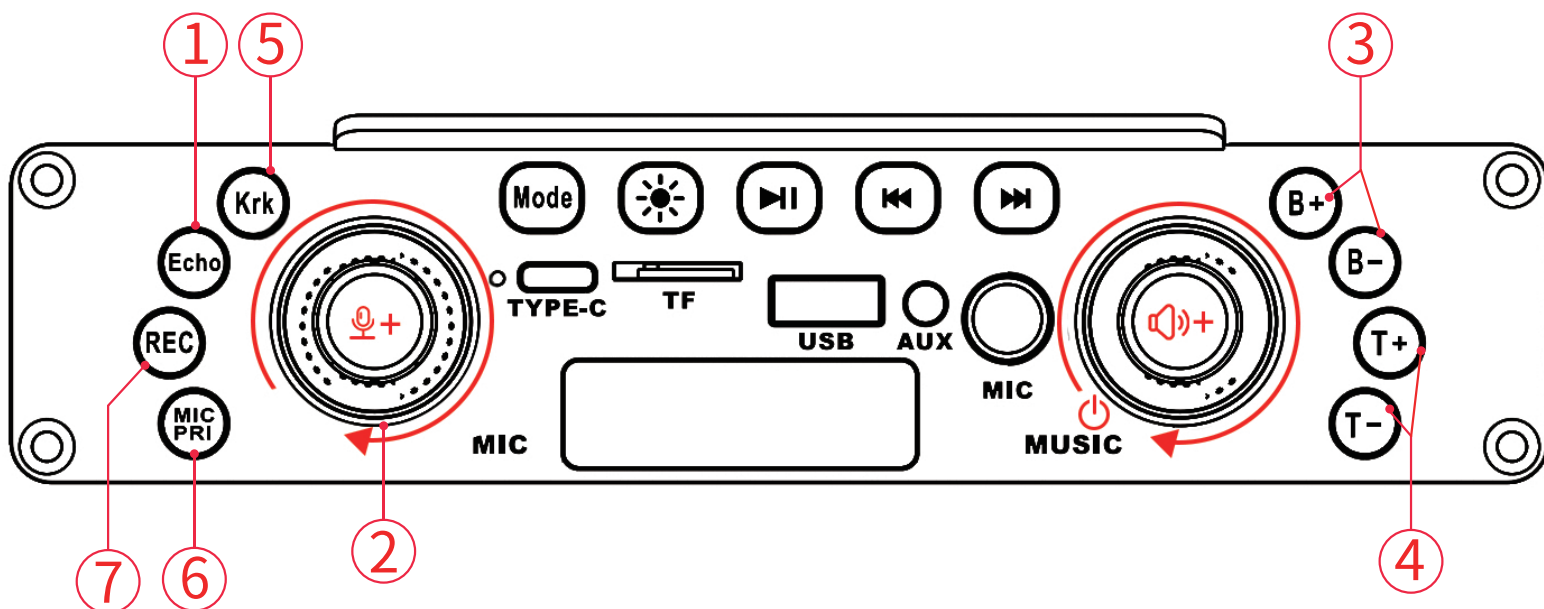

- 1 **ECHO** : Adjust microphone echo effect.
- 2 **MIC VOL** : Control microphone volume.
- 3 **B+/B-** : Increase or decrease bass.
- 4 **T+/T-** : Increase or decrease treble.
- 5 **KrK** : Reduce vocals from the track so your voice stands out.
- 6 **MIC PRI** : Mic Priority On/Off—voice overrides background music.
- 7 **REC** : Recording Start/Stop.

 INPUTS & PORTS

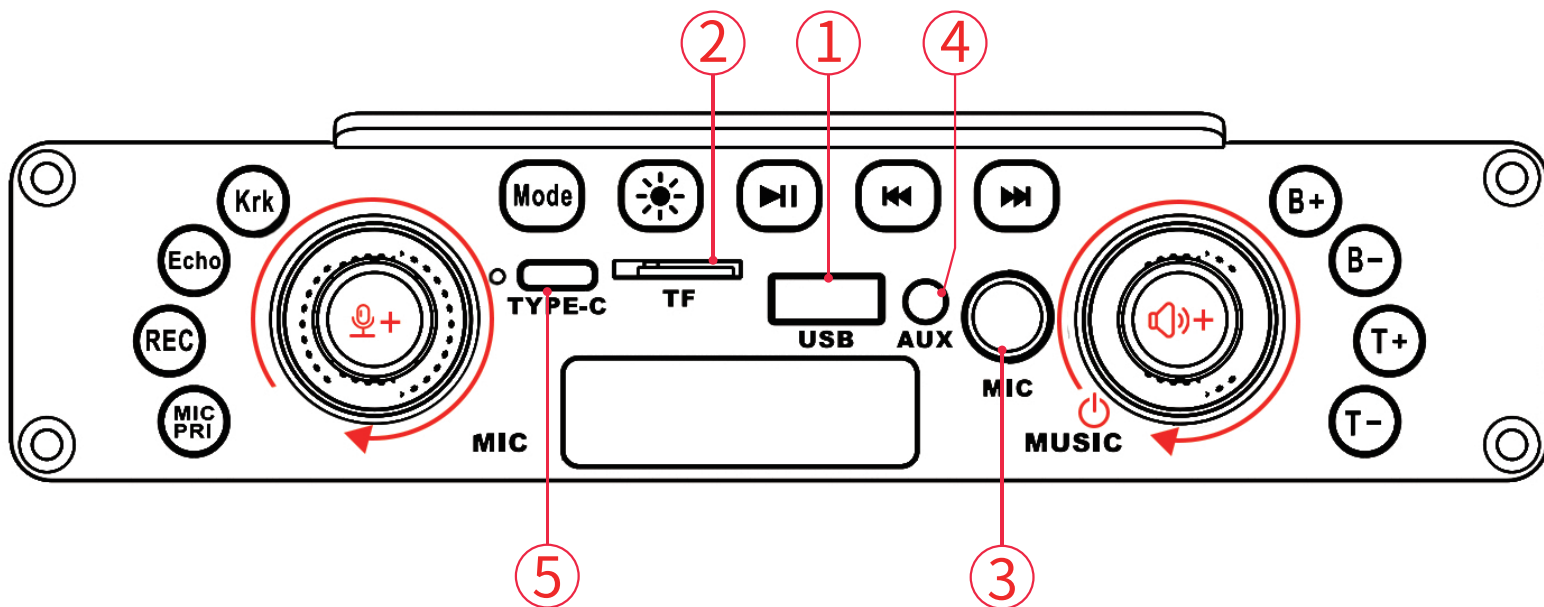

- 1 **USB** : Play MP3/WMA files from a USB device.
- 2 **TF** : Play music from a TF card.
- 3 **MIC** : 6.3mm jack for wired microphone
- 4 **AUX** : Connect phones or MP3 players via AUX.
- 5 **TYPE-C** : Connect charger here. Power off before plugging in.

INSTRUCTION

BLUETOOTH PAIRING

Power on speaker, then press the mode button repeatedly to toggle through your speaker's various modes. Make sure BT(Bluetooth) mode is selected.

NOTE: Your speaker has three modes.

Select BT mode to pair your speaker to a Bluetooth enabled device.

Select AUX mode to listen to music from a device connected to your speaker's Aux port.

Select FM mode to listen to FM radio.

Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on.

Connect to the device listed as "KM001".

TWS Function

If you have two KM001 speakers, enjoy high-quality sound by using the TWS pairing function.

First power on both speakers and put them in Bluetooth mode.

Next pair your phone/tablet etc to the first speaker in the normal way.

After succesful connection, double click the pause/play button, you will hear the sound 'didi' on the second speaker, that means TWS connect succesfully.

You can now play music to both speakers at the same time.

If you want to disconnect TWS function, long press the pause/play button on the second speaker.

FM Radio

1. Press and hold the Play/Pause button to perform as can of the FM band, the KM001 will store the strongest stations as presets.

2. Press the Next/Scan and Previous/Scan buttons to move a preset.

3. Press and hold the Next Scan and Previous/Scan buttons to scan to the next strongest Radio station.

FCC WARNING

FCC ID:ZMAB6C-Y

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction



Activate Your **12-MONTH** Warranty Now!



✓ Thank you for choosing us! You are eligible for a 12-MONTH Free Product Replacement Insurance.

✓ Any questions, please contact us for hassle-free after-sales support before returning.

✓ Just enter your 17-digit Amazon order at
<https://www.thejoinjoy.com/?vipwarranty>
OR send it to
thejoinjoy@hotmail.com

Scan the QR code to activate your warranty.

NOTE: Must register within 7 days after receiving your new product.

