


ST151L-GL & Label Location

- Label

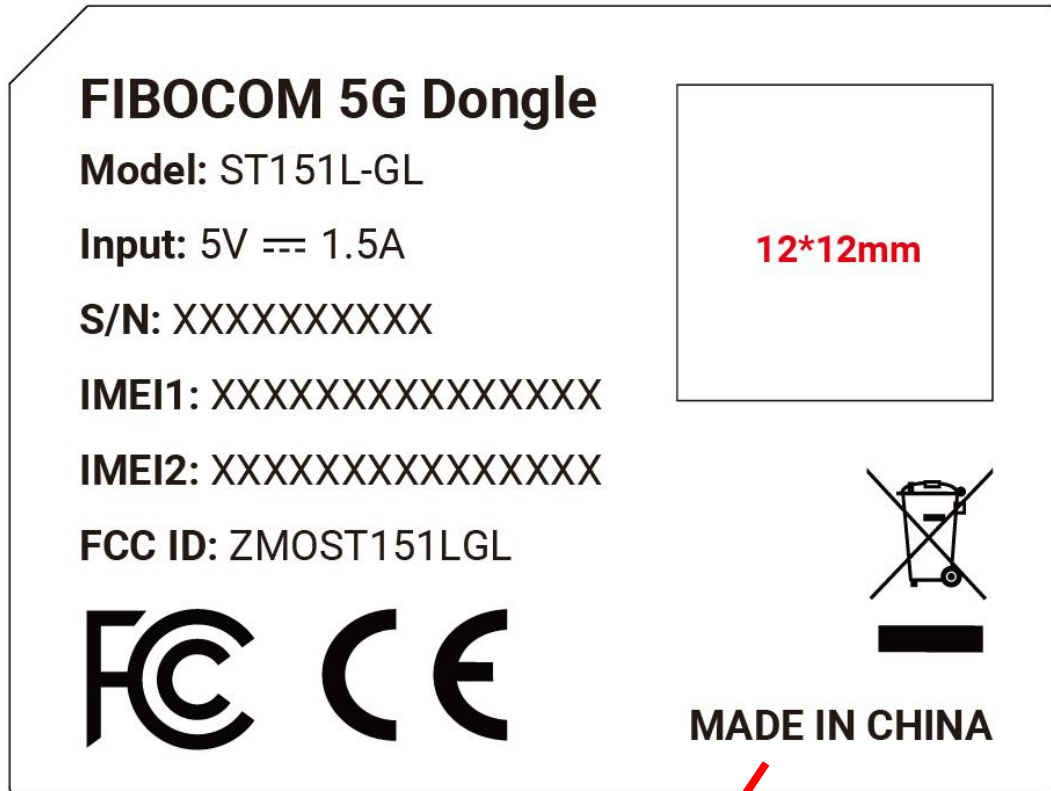

- Label Location (On the top of the EUT)

