

BE3600

WiFi7
Dual Band
Wi-Fi Range
Extender

Quick manual

1

Plug in your wifi extender and wait for 30s

After power on, you will find the LED light will change **Red** color. Then you can start to set up.

*** If Abnormal, please reset :**
Press and hold the "RST" button for 8 seconds and then release it, or contact seller.

2

Connect your extender SSID

choose **WiFi_XXXX** to setting
(XXXX is the last 4 numbers of the MAC Address)

*** NOTE :**
Please remember to turn off your mobile network data. You have no access to Internet until you finish all setting steps. If your phone prompts that the network cannot be connected, click to continue

*** NOTE :**
Jump to step 3 after step 2
If you click connect on the phone, no jumping interface will appear. You can manually enter the URL **192.168.188.1** in the browser.

192.168.188.1

3

Scan and select your host router to connect

If the WiFi SSID doesn't appear, pleasu refresh it several times

4

Enter the password of your host router

5

Set the new Wireless names and passwords for the Extender

Default SSID:
original SSID-**PRO-2.4G**
original SSID-**PRO-5G**
can be changed

Default router password

*** NOTE :**
If you don't want to modify, you can proceed to the next step.

6

Check again and confirm the wireless information

*** NOTE :**
After check, click'Start Connect' and wait 30-60s, the extender will connect to the router

7

Wait for the Extender to connect to the router successfully

After the setting is completed, please observe the signal indicator. If it lights up, it means that the relay is successful. Please connect Test001-PRO-2.4G / Test001-PRO- 5G to the Internet ! other wise reconnect.

Please wait 47 seconds

8

The Green lights on means the WiFi Extender has been successfully

*** NOTE :** **Green color** means successfully.

9

Reselect and reconnect to your Extender WiFi

Reselect and reconnect to your extender wifi
(The new wifi name defaults to the original wifi name plus -PRO-2.4G or 5G)

1

If you need AP mode, please do RESET then follow STEP1 to STEP 2

AP mode

Click 【AP Settings】

2

Set Wireless Password

AP mode

setting wireless name and password

Click 【Apply】

3

Plug the Ethernet cable to the LAN port directly then you can access the internet

AP mode

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement
This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FAQ
1. My Wi-Fi says connected but I have no internet connection.
* If the Wi-Fi is connected , but there is no internet , check that the router's Wi-Fi is actively working.
* If the Extender indicator light keeps flashing off, that means the connection failed, and you may have entered the wrong password. It could also be for some other reasons, so try to restore factory settings. To do that, press the RST button for about10 seconds.
Set up the Extender again.
2. What is the username and password for setting up the Extender?
No username and password need to enter the setting webpage of the Extender. But after Setting UP, you can not enter the setting page unless you restore factory settings by pressing RST button for 10 seconds
3. Why are some devices at home (Printer, CCTV, Camera, TV , Phone) unable to connect to the Extender?
* This means the device does not recognize the Extender.
* The device should be in the same network as your main router
4. Why am I unable to enter the webpage?
* You can not enter the setup webpage with URL **192.168.188.1** after extender setting, please press the RST button for about 10 seconds to restore factory settings and then try again.
* Check if you have connected to the Extender's WiFi during setup.
* Disable your mobile's data during setup.
* Use another mobile or PC to try.

展开尺寸: 400x140mm
成品尺寸: 80x70mm
四色双面印刷，先左右风琴折，后上下对折