

Wireless
Range Extender

Mobile phone setup

1

Plug in your wifi extender

***Normal:**
Plug in, wait for 1min, light of "WiFi" and "Power" turn green

Abnormal:
Press "reset" hole on the bottom of the product for 8s with paperclip, or contact seller



2

Connect your extender SSID

Please connect to the SSID of "wifi-XXXX".

***NOTE:**
You can not Surf the Internet until you finish all the setting steps, pls continue


"XXXX" is the last 4 digits letters of MAC Address which appears at the back of each product.



3


Sign in to management page
(Google Chrome&Mozilla Firefox recommended)

***NOTE:**
Pls make sure that you have connected the SSID(wifi-XXXX) of the wifi extender successfully, most of the PC/mart will recognize and Sign in to the management page automatically.
If not, pls enter 192.168.188.1 on the new browser.

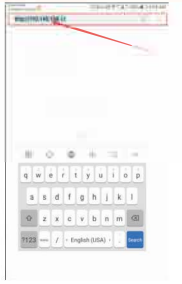

4

Enter the default password:admin

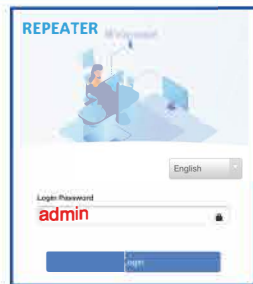

5

Scan and select your host router SSID

Please select the main route to be extended


ChinaNet 5828	192.168.1.1	192.168.1.1
ITV 5828	192.168.1.1	192.168.1.1
Five	192.168.1.1	192.168.1.1
1256	192.168.1.1	192.168.1.1



6

Enter the password of your host router

***NOTE:**
Pls make sure of the right password(special characters not allowed, like "%")

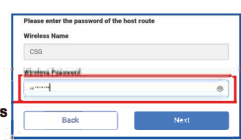

7

Set your Extender SSID and password

Please enter extender wireless password

Wireless Name: CSG-970

Wireless Password: csg12321


***NOTE:**
The extend extender password: XXXXX (5 digits password)



8

Check details and make a note of the Wireless Info

***NOTE:**
After check, click "Start Connect" and wait 30-60s

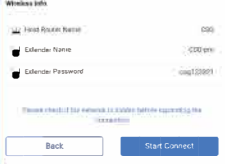


9

When you finished setting, pls wait 30-40s until extender light is on.

After the setting is completed, please observe the signal indicator. If it lights up, it means that the relay is successful. Please connect CSG-970 to the Internet's internet connection.

 Please wait 34 seconds



10

The led light will light up, that means it Extender Mode successfully.

***NOTE:**



11

Reconnect your extender wifi

Reconnect the extender SSID, then get access to Internet



Wireless
Range Extender

PC setup step

1

Plug in your wifi extender

***Normal:**
Plug in, wait for 1min, light of "WiFi" and "Power" turn green

Abnormal:
Press "reset" hole on the bottom of the product for 8s with paperclip, or contact seller



2

Connect your extender SSID

Please connect to the SSID of "wifi-XXXX".

***NOTE:**
You can not Surf the Internet until you finish all the setting steps, pls continue

"XXXX" is the last 4 digits letters of MAC Address which appears at the back of each product.



3


Sign in to management page
(Google Chrome&Mozilla Firefox recommended)

***NOTE:**
Pls make sure that you have connected the SSID(wifi-XXXX) of the wifi extender successfully, most of the PC/mart will recognize and Sign in to the management page automatically.
If not, pls enter 192.168.188.1 on the new browser.



4

Enter the default password:admin

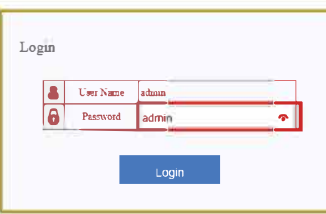


5

Scan and select your host router SSID

Please select the main route to be extended


ChinaNet 5828	192.168.1.1	192.168.1.1
ITV 5828	192.168.1.1	192.168.1.1
Five	192.168.1.1	192.168.1.1
1256	192.168.1.1	192.168.1.1

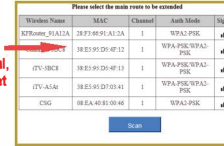

6

Enter the password of your host router

***NOTE:**
Pls make sure of the right password(special characters not allowed, like "%")

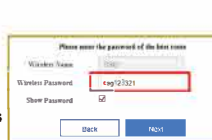

7

Set your Extender SSID and password

Please enter extender wireless password

Wireless Name: CSG-970

Wireless Password: csg12321


***NOTE:**
The extend extender password: XXXXX (5 digits password)



8

Check details and make a note of the Wireless Info

***NOTE:**
After check, click "Start Connect" and wait 30-60s

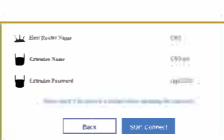

9

When you finished setting, pls wait 30-40s until extender light is on.

After the setting is completed, please observe the signal indicator. If it lights up, it means that the relay is successful. Please connect CSG-970 to the Internet's internet connection.

Please wait 34 seconds



10

The led light will light up, that means it Extender Mode successfully.


***NOTE:**




11

Reconnect your extender wifi

Reconnect the extender SSID, then get access to Internet

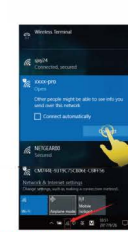

,

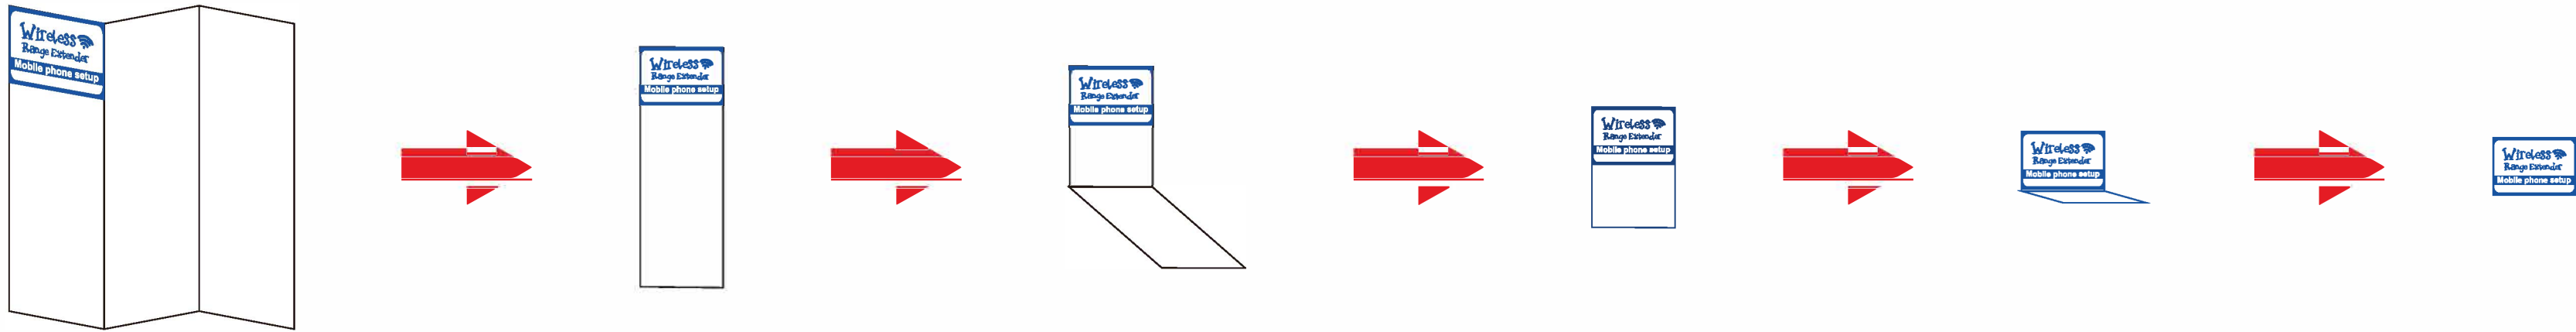

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.