 


Vibration pattern modes

- | | | | |
|-----------|--|-----------------|--|
| 1. Low | | 6. Wave | |
| 2. Medium | | 7. Echo | |
| 3. High | | 8. Echo Wave | |
| 4. Ultra | | 9. Surge Wave | |
| 5. Pulse | | 10. Ripple Wave | |

Discover more options to customize your play in the We-Vibe app.

Feel more with Chorus Pro

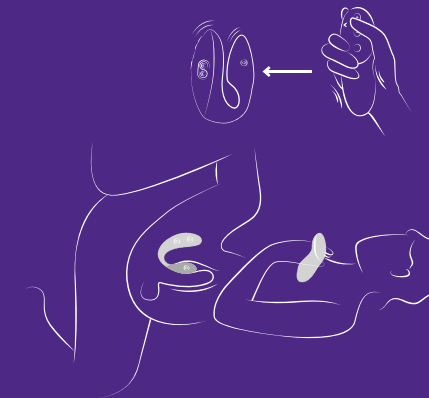

Go to www.we-vibe.com for the complete user manual.

Customer Care
care@we-vibe.com
www.we-vibe.com

WOW Tech Europe GmbH
Hermann-Blankenstein-Str. 5
10249 Berlin, Germany

Pat. wowtech.com/pat
Designed in Canada.

Date of issue: 4/2025
MA-00289



Chorus Pro

Pleasure to meet you

weVIBE

Quick start guide

Innovation Meets Intensity - Feel the Fusion Wave

Chorus Pro is the a powerful couples vibrator, featuring the unique Fusion Wave Technology for deep, rhythmic stimulation. With its innovative Haptic Squeeze Remote and adjustable fit, it offers intuitive control and a truly personalized experience. Designed for those who crave more, it delivers unparalleled pleasure with app connectivity for the ultimate shared intimacy.

Contents

Page 01. Power on	Page 04. Pairing
Page 02. Cleaning	Page 06. Touch sense
Page 03. How to use	Page 07. Charging

Box contains: Chorus Pro, Haptic Squeeze Remote, charging case, charging cable, quick start guide,safety information.

Box does not contain: USB AC Adaptor

Please read the safety instructions in the Compliance & Safety Information before first use.

Getting to know your Chorus Pro

1 Control button

Press to switch on. Press again to cycle through intensities. Hold again to turn off.

2 Magnetic charging pins

3 Internal stimulator

Massages the G-spot during sex.

4 External stimulator

 
The dual motors stimulate the clitoris.

5 Adjustable fit

Bend and adjust Chorus Pro to fit your body.

6 Haptic Squeeze Remote

Control Chorus Pro with the squeeze of the remote or cycle through the settings with the buttons.

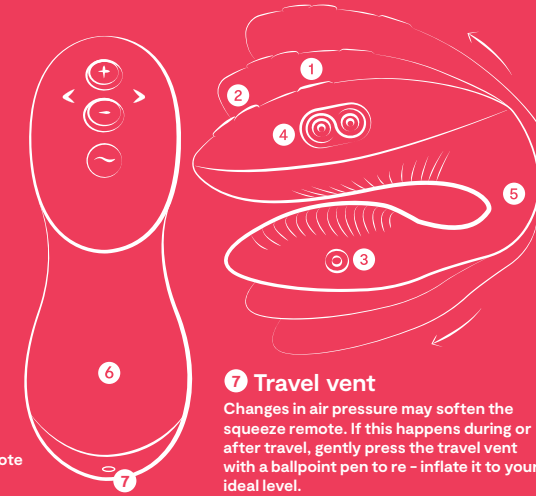

+ On/Increase

Press the + button to power on. Press again to increase the intensity.

- Decrease

Switch back to a lower intensity level by pressing the - button. Hold to turn off.

> Next

Press the > button to cycle through different vibration patterns.

< Previous

Switch back to your previous pattern by pressing the < button.

 
~ Squeeze mode

By pressing the We-Vibe button, you can switch between button-control and squeeze-control modes. In squeeze mode, the harder you squeeze, the more powerful the sensations. It's the most natural way to control your pleasure. Find your favorite pattern, and then squeeze to increase the sensations.

Step 1: get ready

Changes in air pressure during shipping or travel can cause the remote's air chamber to deflate slightly. Before first use, use a ballpoint pen to gently press the travel vent on the remote - this fills the air pocket and ensures it works properly.

Then, place both the couples vibrator and the remote into the charging case and fully charge them - so everything's ready when you are.

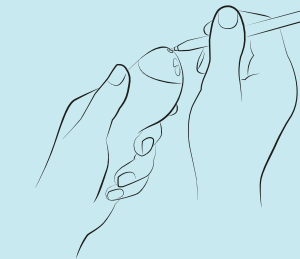

Step 2: prep & play

Adjust the toy's shape for the perfect fit and the right amount of pressure where you want it most.



Rinse your Chorus Pro and remote with warm water, then add a splash of premium toy cleaner to get started.



waterproof (IPX7)

You can take full control of the Chorus Pro with the innovative Haptic Squeeze Remote. Its unique air pocket design makes it super easy to squeeze and instantly intensify the vibrations for totally intuitive control. Or, use the buttons to adjust the intensity and cycle through exciting patterns. It's all about effortless pleasure in your hands.



 
The remote also provides real-time feedback, vibrating in sync with the toy's intensity. As you squeeze, the remote mirrors the toy's sensations, so you can feel exactly what she feels.

04

Step 3: pair with the remote

Your Chorus Pro and Haptic Squeeze Remote should already be paired and ready to go straight out of the box. To get started, simply press the We-Vibe button on the Chorus Pro once to power it on. Then, hold the Plus button on the remote for 3 seconds to ensure the connection is active.

If they don't connect, just reset the Chorus Pro by holding the We-Vibe button for 10 seconds—now it's in pairing mode. After that, press and hold the We-Vibe button on the remote for 10 seconds. Once they connect, you'll feel the toy vibrate twice to let you know it's all synced up and ready for fun.

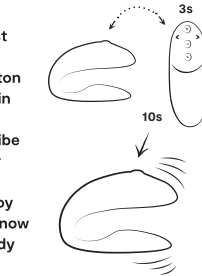

To activate the Squeeze function, just press the We-Vibe button on the remote once, and you're good to go.

Step 4: pair with the We-Vibe app

Chorus Pro can be controlled from anywhere with the free We-Vibe app. Download it from the App Store or Google Play to get started.

To connect your toy, scan the barcode on the bottom of the outer box and follow the on-screen instructions.

Once connected, the app lets you customize your experience: control the clitoral and G-spot motors separately, explore different control modes, sync vibrations to the rhythm of your favorite songs, or even let your partner take control from anywhere in the world.

You'll also have access to all 10 vibration patterns, including the exclusive Fusion Wave modes, only available on Chorus Pro.



05

Step 5: Fusion Wave Technology

Chorus Pro is the only couples vibrator with Fusion Wave Technology — a one-of-a-kind sensation created by two motors in the outer arm. Together, they deliver a wave-like motion that stimulates the clitoris in a deeper, more rhythmic way. It doesn't just vibrate — it pulses and flows, creating a build-up that feels more natural, more intense, and more satisfying.

Chorus Pro offers 10 vibration mode patterns:

1–7 are classic We-Vibe favorites.
8–10 are exclusive Fusion Wave patterns, delivering this unique clitoral sensation.

 
Fusion Wave Patterns:
8. Echo Wave — Rolling pulses that mimic the rhythm of soft, steady waves.
9. Surge Wave — A playful rhythm with alternating pulses and shifting intensity.
10. Ripple Wave — A rising wave of pleasure that builds and releases in powerful pulses.

06

Step 6: Touch Sense Modes



Below the We-Vibe logo, you will find a sensor. With Touch Sense Mode activated, Chorus Pro senses the contact with your partner's body during sex. It adjusts its vibration intensity based on your rhythm, giving you a hands-free, intuitive experience.

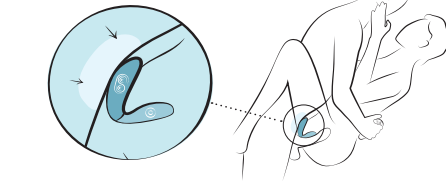

07

Activate Touch Sense Mode in the We-Vibe app, and choose from 3 exciting Touch Sense modes:

TOUCH SENSE MODE 1

When the sensor registers contact, the intensity ramps up to maximum, then drops back to minimum, repeating the cycle for a dynamic, responsive feel.

TOUCH SENSE MODE 2

Chorus Pro keeps a slow wave pattern, but when the sensor detects touch, the intensity increases and stays at that level until contact is lost. If no touch is registered for more than 3 seconds, it returns to the wave pattern.

TOUCH SENSE MODE 3

Chorus Pro vibrates on contact with the sensor, then completely stops when contact ends.

You can set the vibration intensity in the app or with the remote, giving you full control over your experience.

Step 7: charge

Place both your Chorus Pro and Haptic Squeeze Remote in the charging case to power them up.

Enjoy up to 2 hours of play with every charge—a full charge takes just 90 minutes. For optimal storage and to keep them ready for your next session, it's best to store your toy and remote safely in the charging case.



08

Scan the QR code to learn more about Chorus Pro and explore its unique features. Discover tips, user experiences, and more to help you make the most of your new toy.

Simply scan and start exploring!

