

Figure 1
Inside Configuration of the EUT

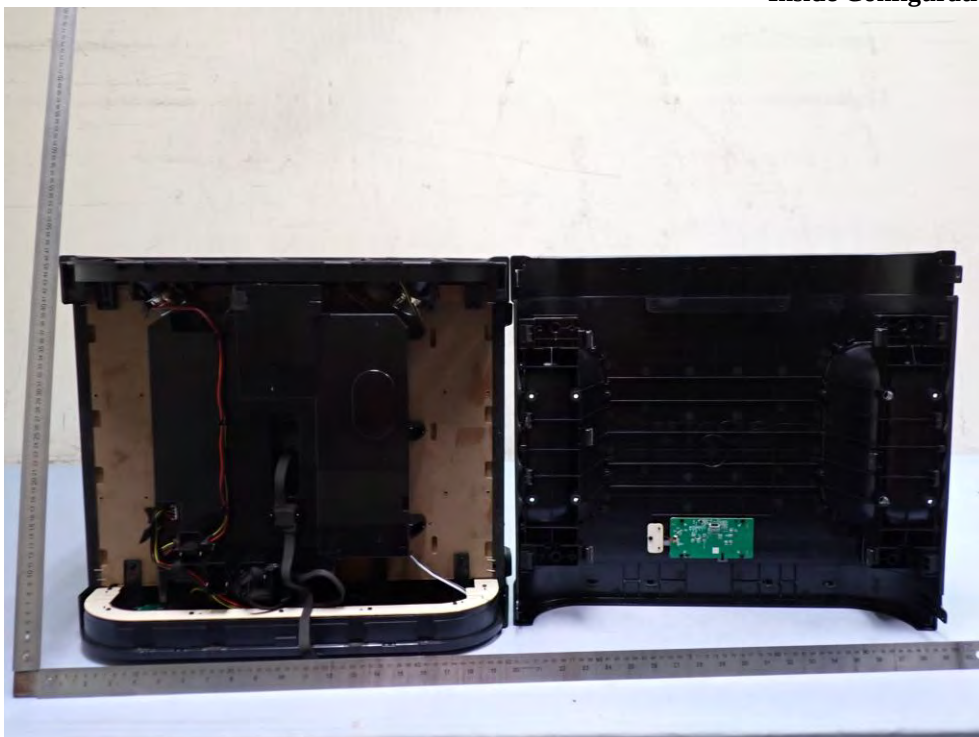 


Figure 2
Inside Configuration of the EUT

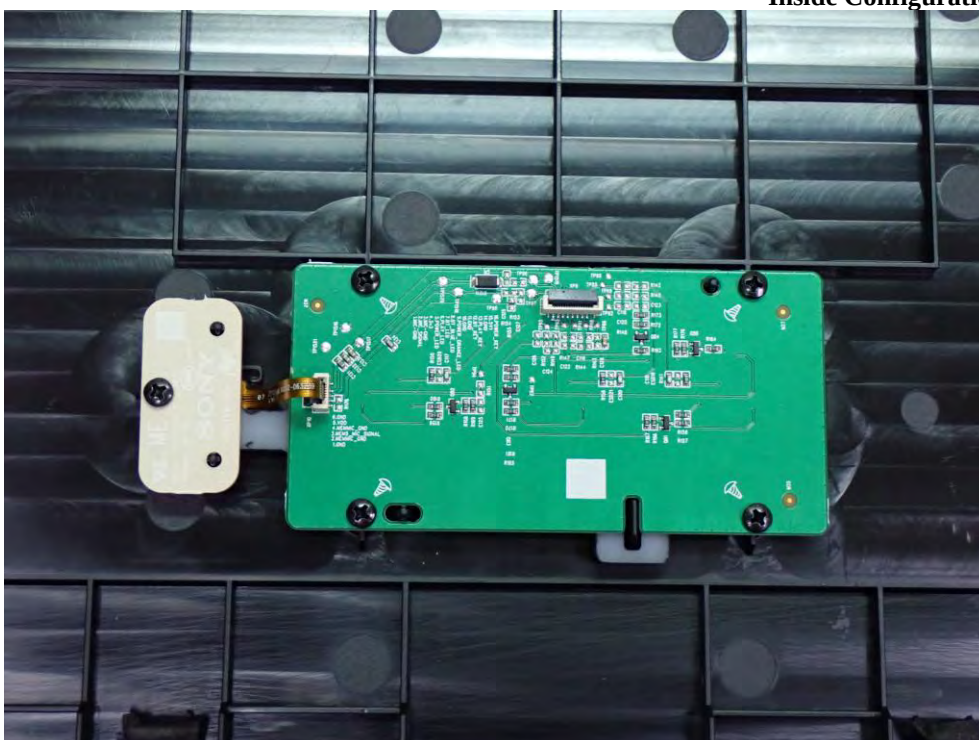 


Figure 3
Inside Configuration of the EUT

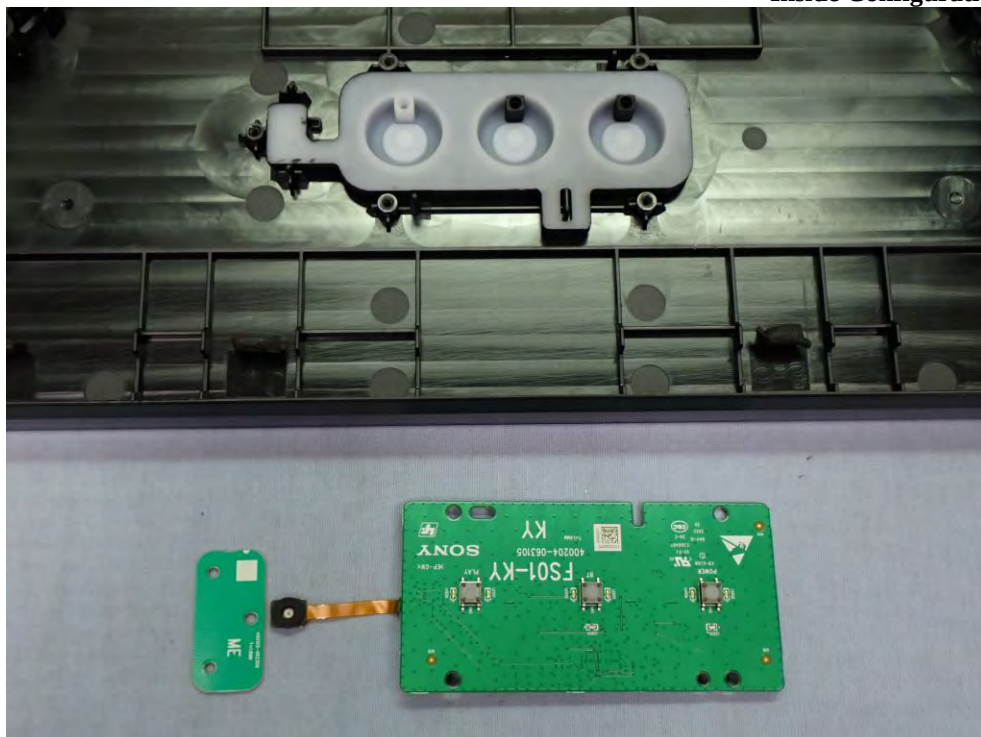 


Figure 4
Inside Configuration of the EUT

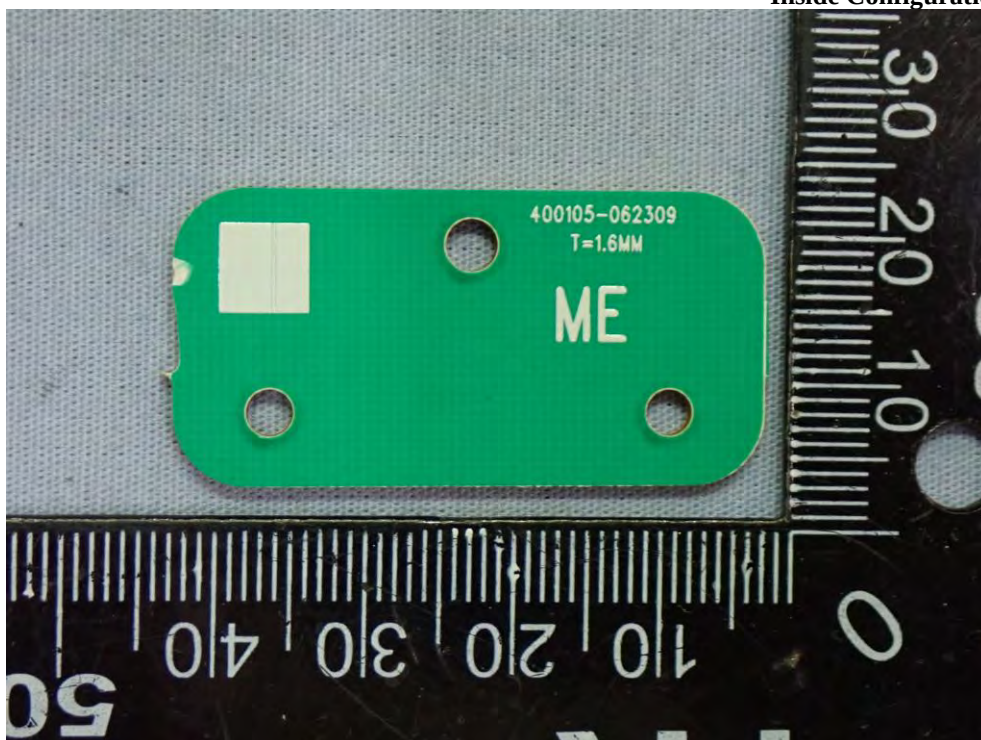 


Figure 5
Inside Configuration of the EUT

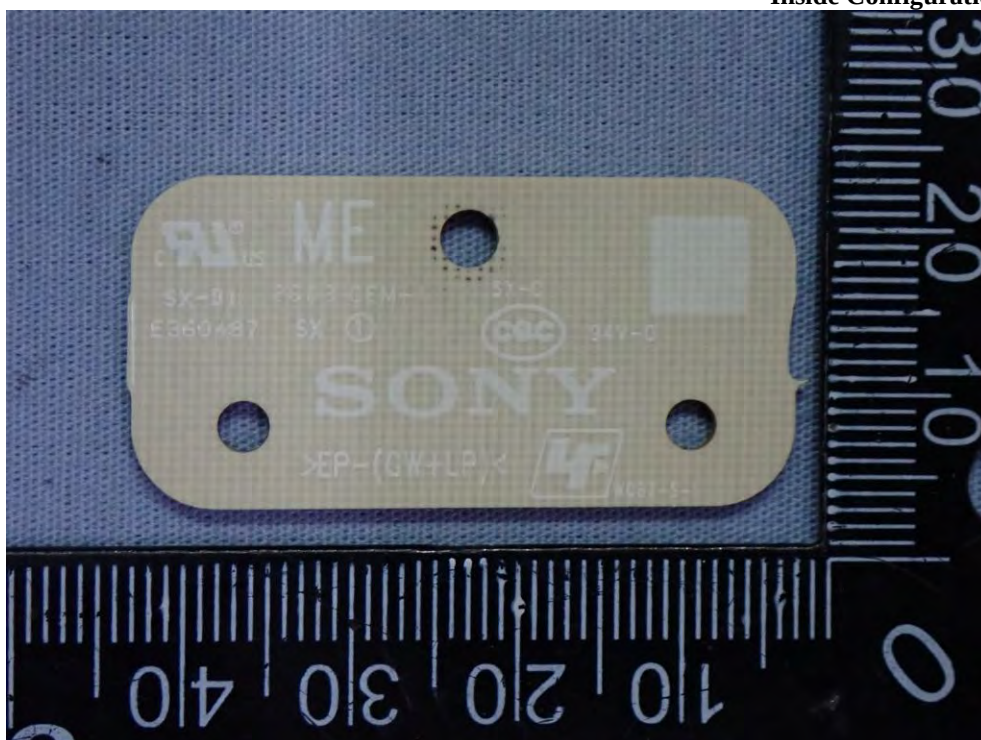 


Figure 6
Inside Configuration of the EUT



Figure 7
Inside Configuration of the EUT

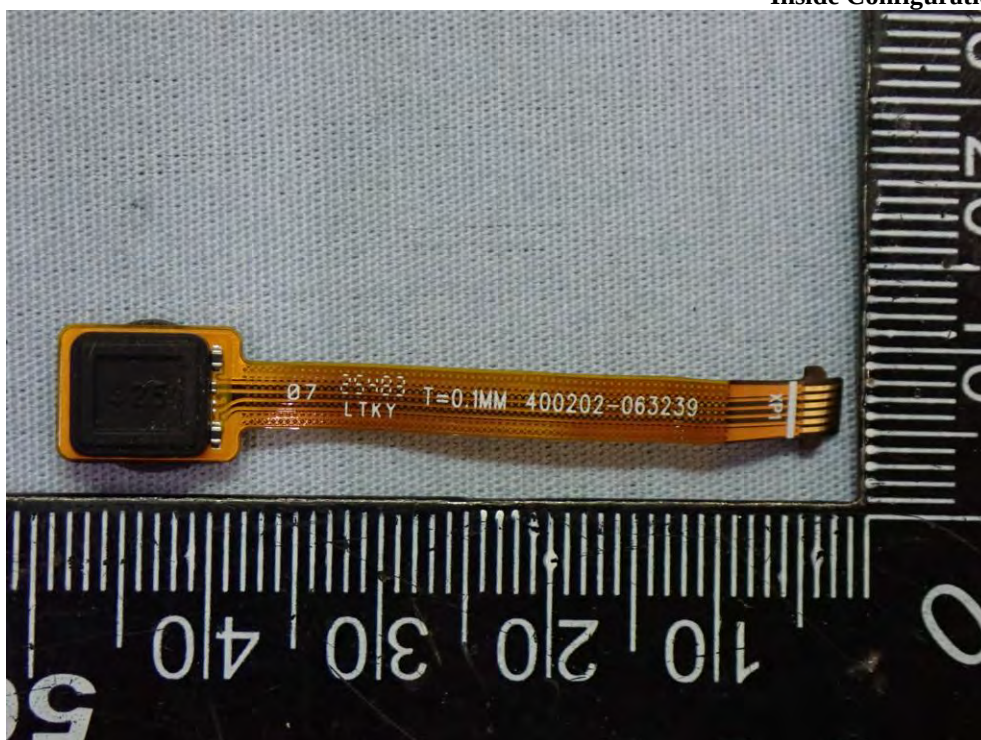 


Figure 8
Inside Configuration of the EUT

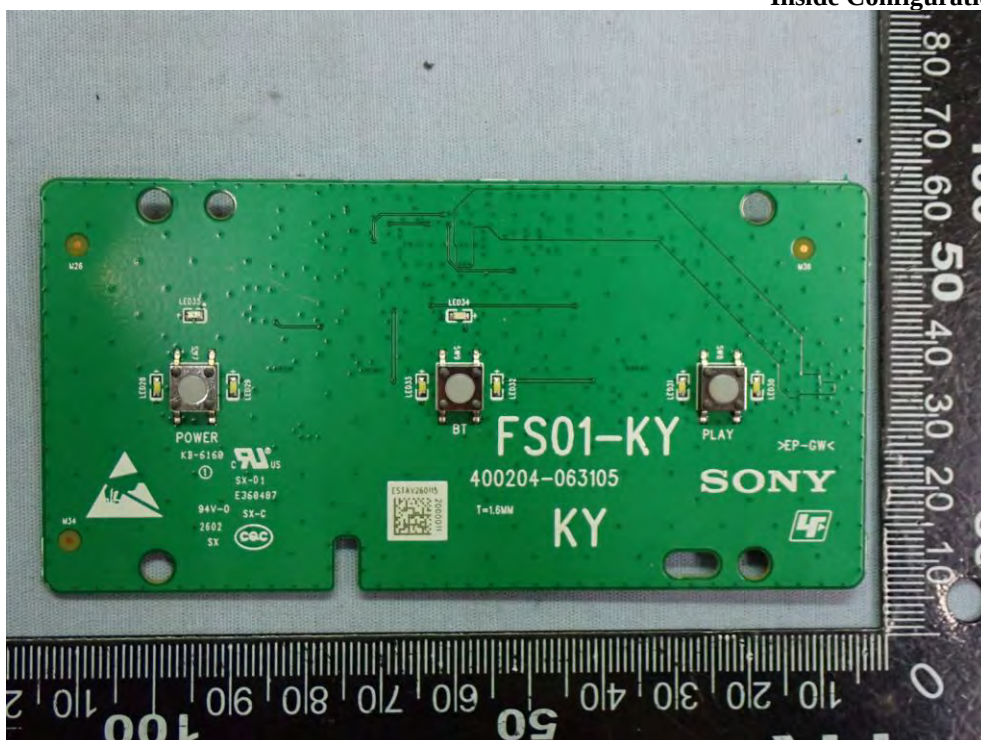 


Figure 9
Inside Configuration of the EUT

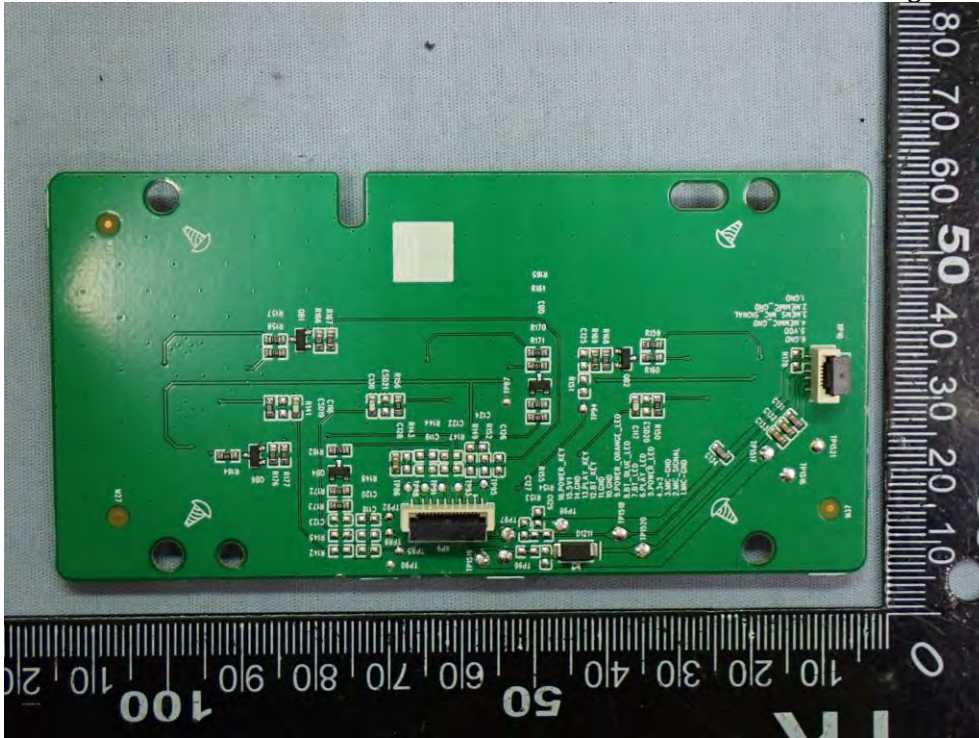 


Figure 10
Inside Configuration of the EUT



Figure 11
Inside Configuration of the EUT

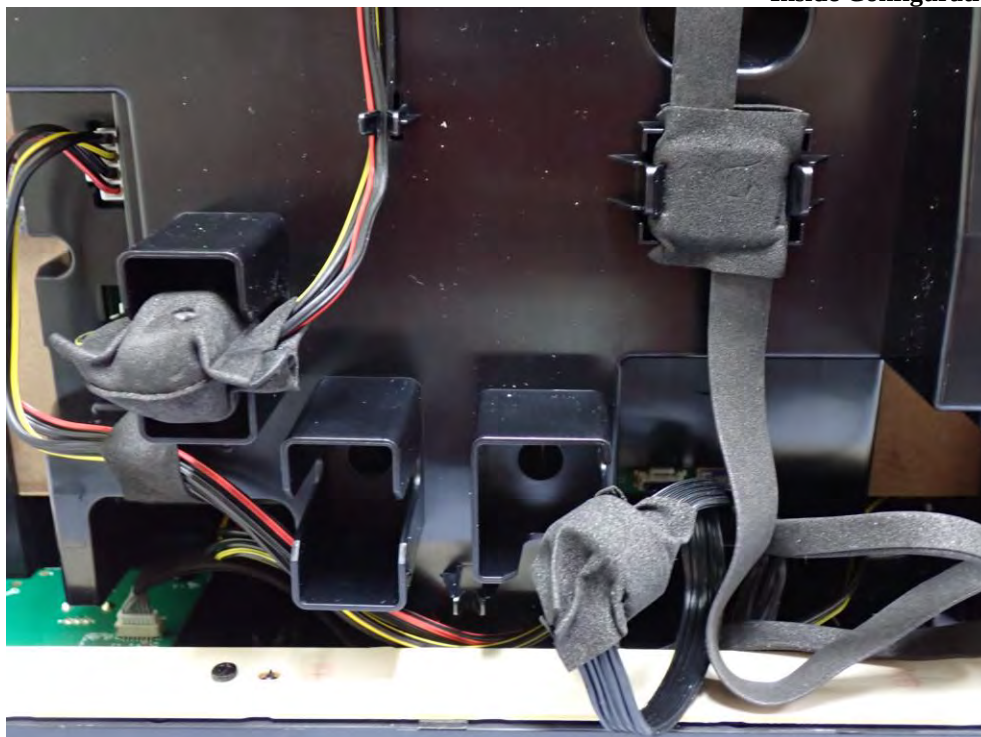 


Figure 12
Inside Configuration of the EUT

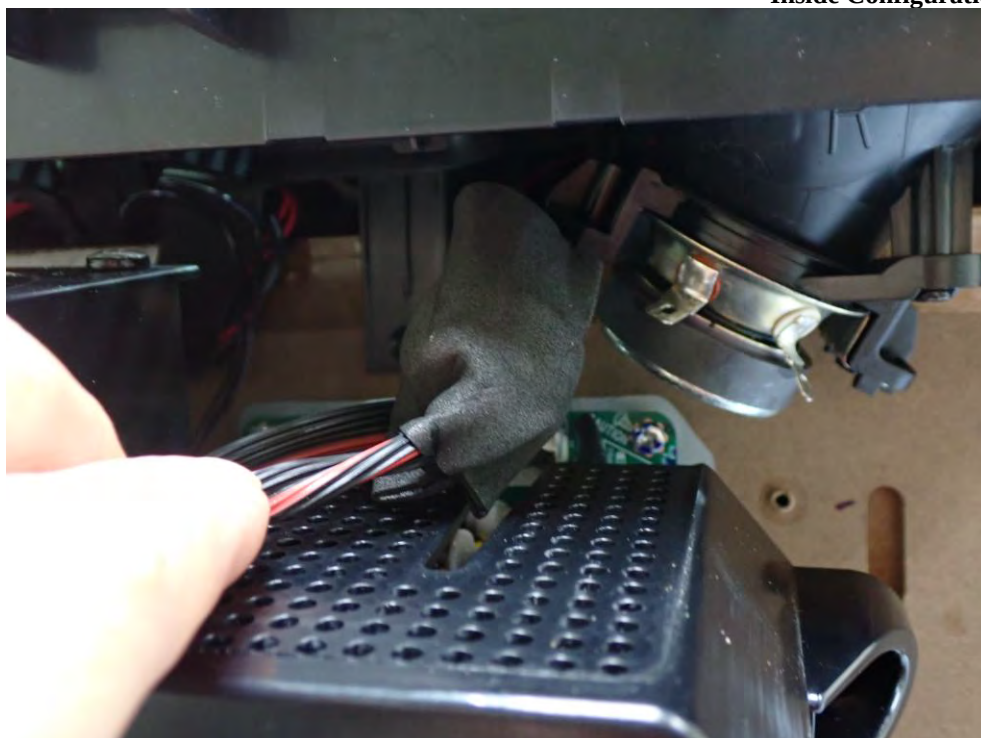 


Figure 13
Inside Configuration of the EUT

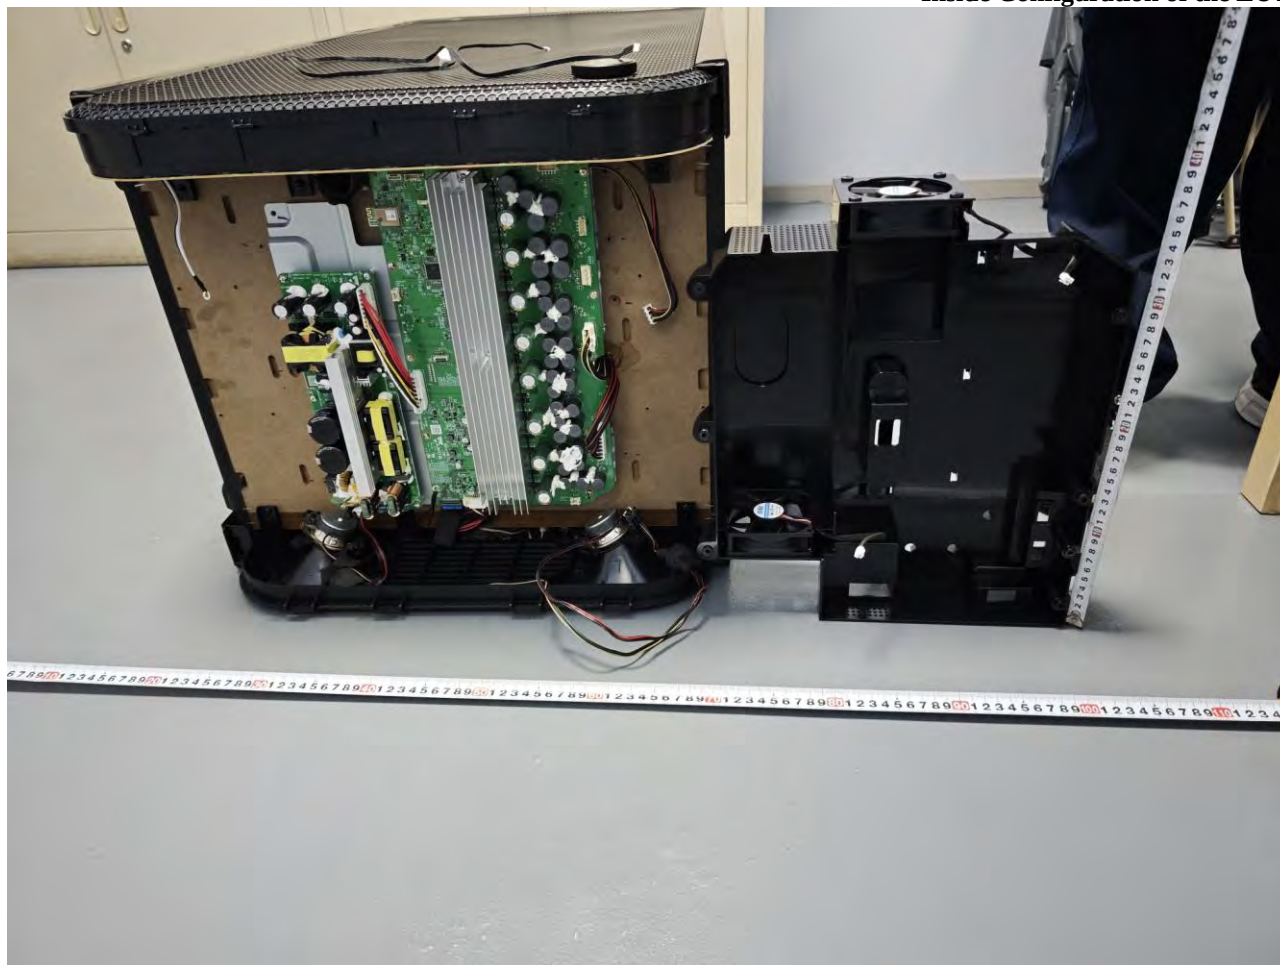 


Figure 14
Inside Configuration of the EUT

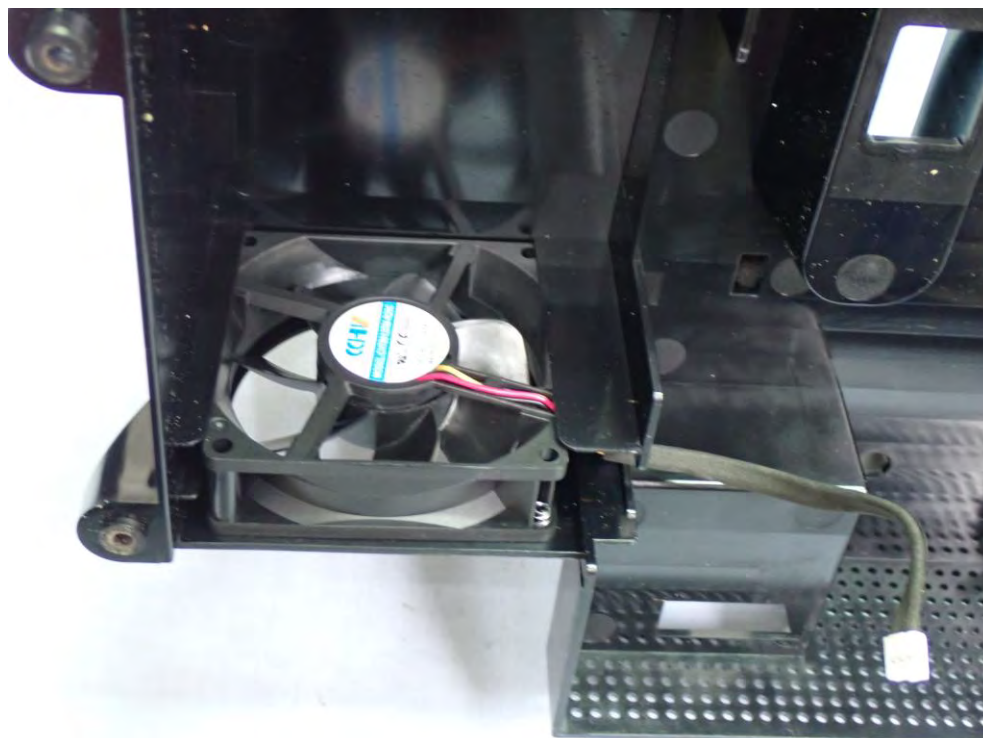 


Figure 15
Inside Configuration of the EUT



Figure 16
Inside Configuration of the EUT



Figure 17
Inside Configuration of the EUT



Figure 18
Inside Configuration of the EUT

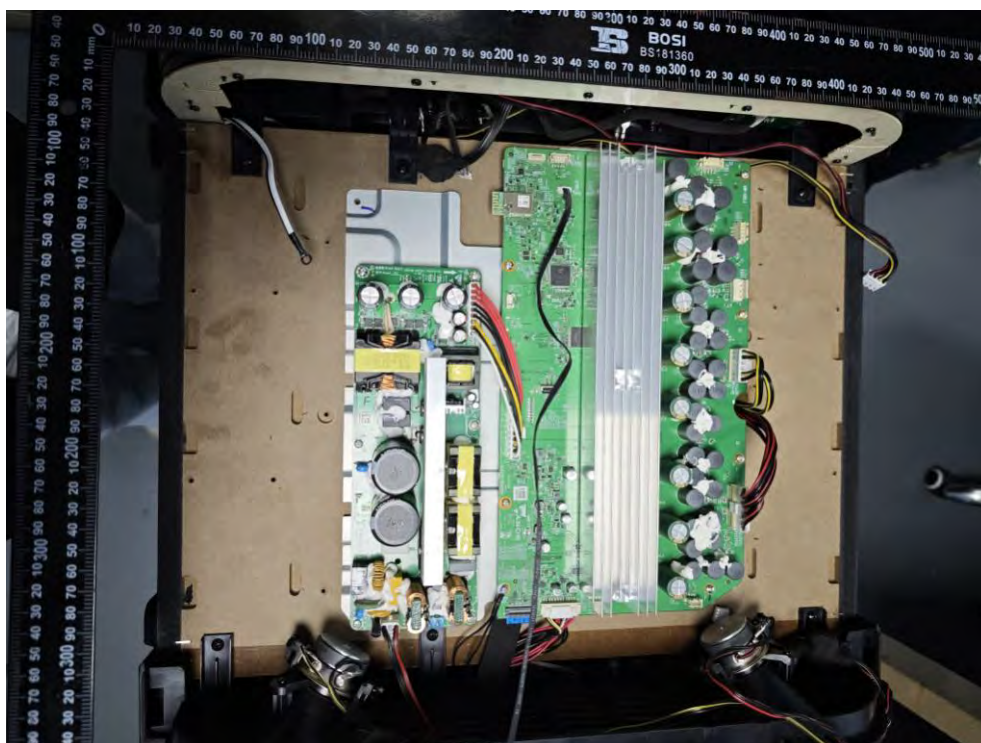 


Figure 19

Inside Configuration of the EUT

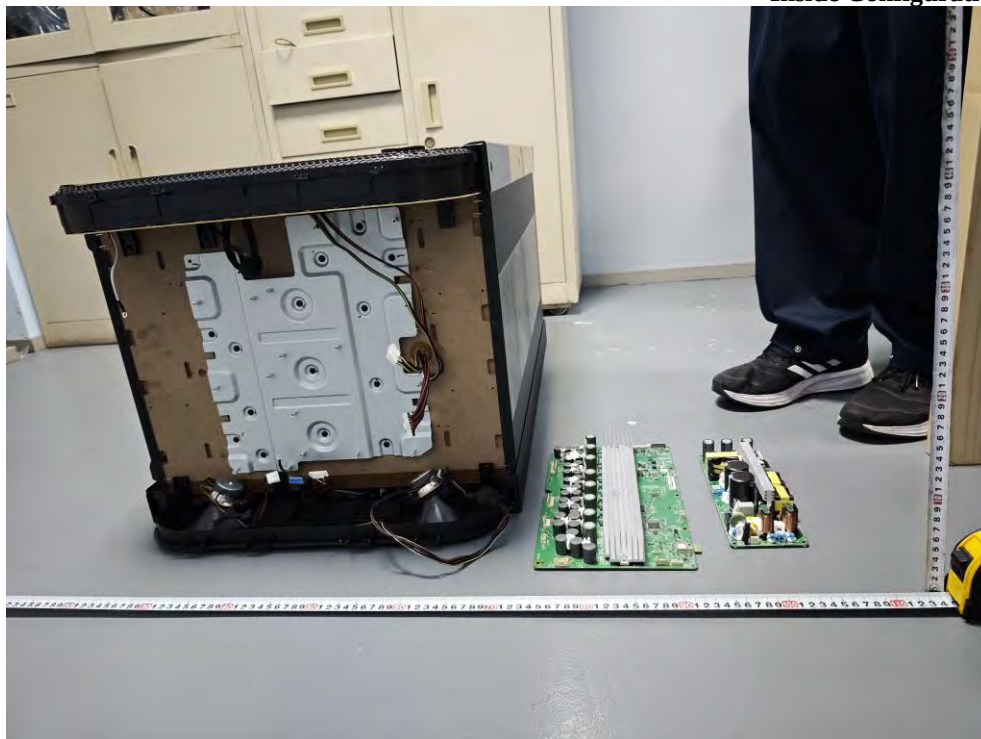 


Figure 20

Inside Configuration of the EUT

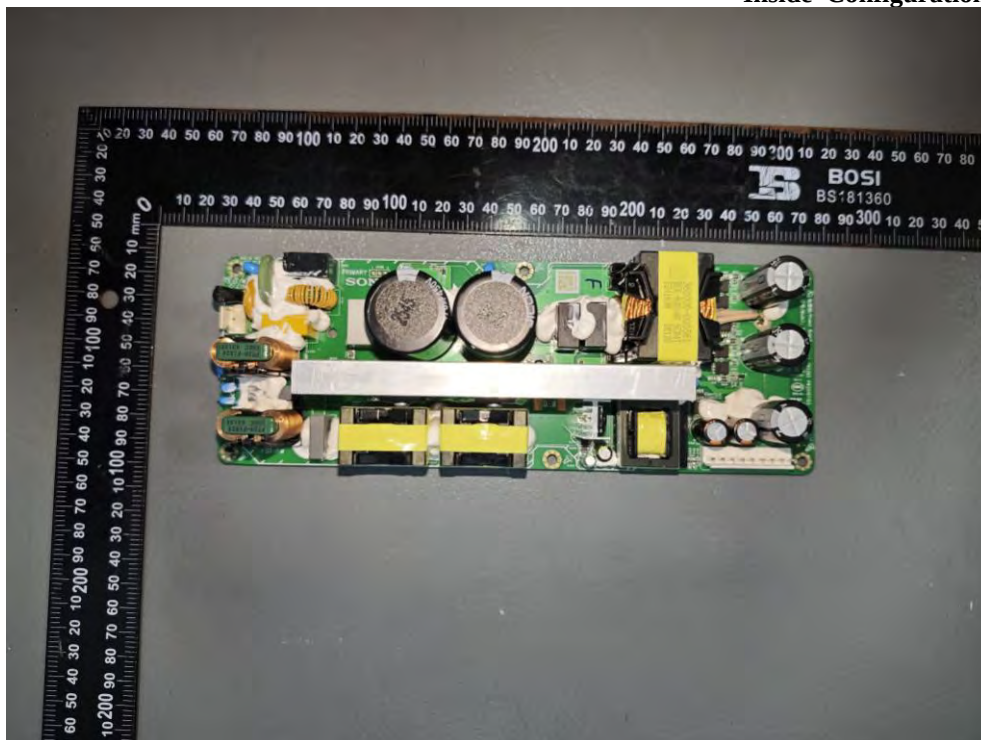 


Figure 21
Inside Configuration of the EUT

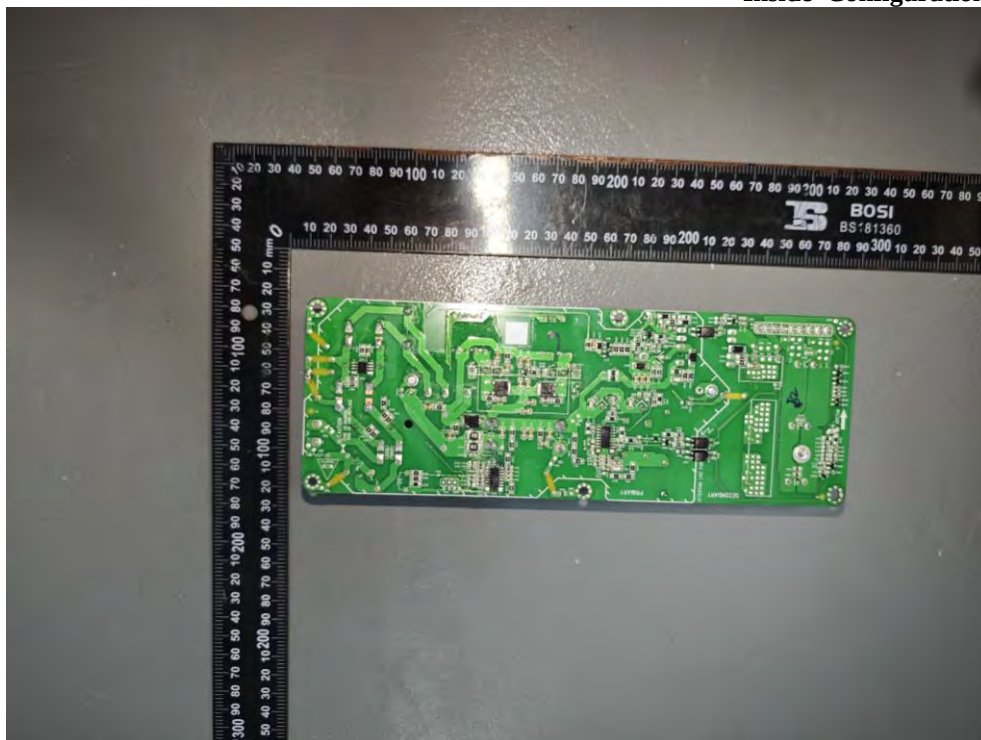 


Figure 22
Inside Configuration of the EUT

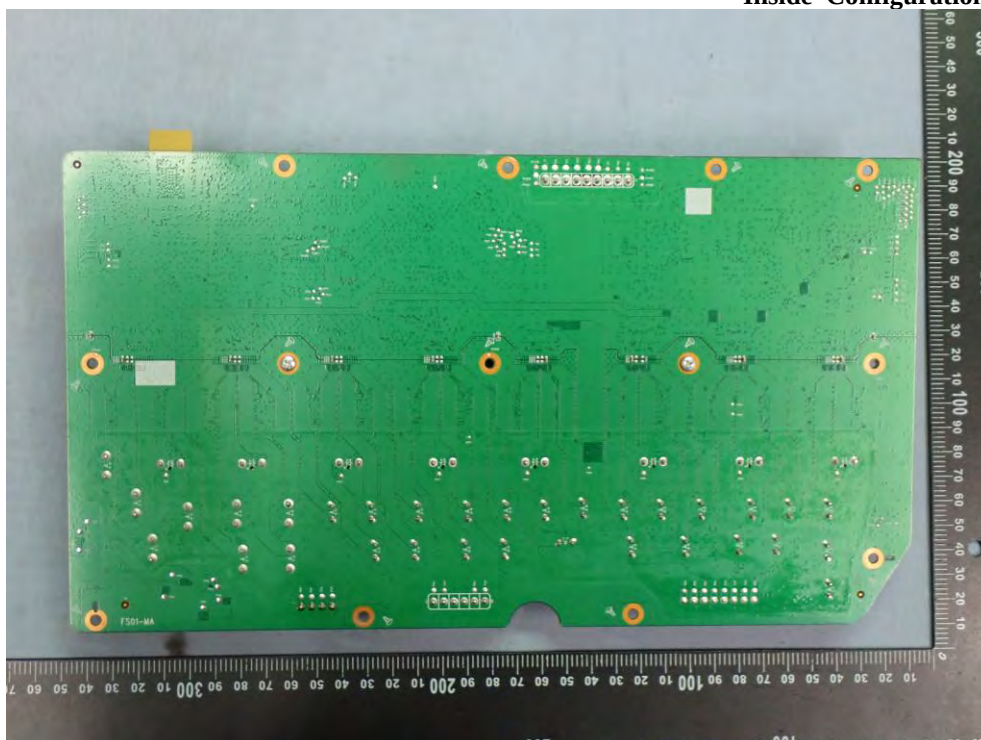 


Figure 23
Inside Configuration of the EUT

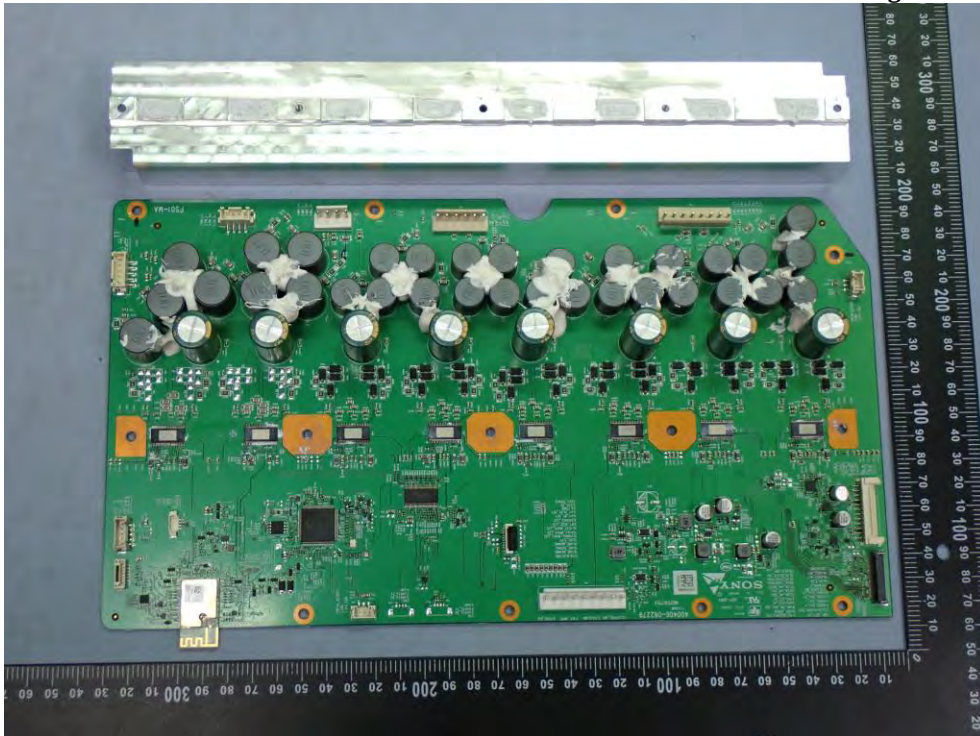 


Figure 24
Inside Configuration of the EUT

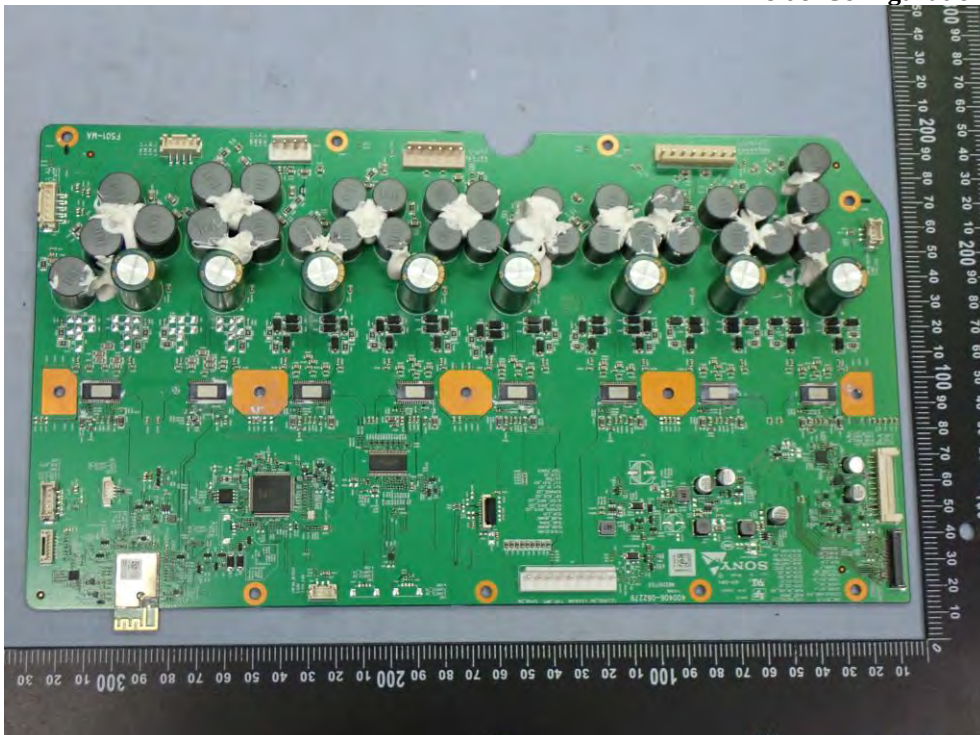 


Figure 27
Inside Configuration of the EUT

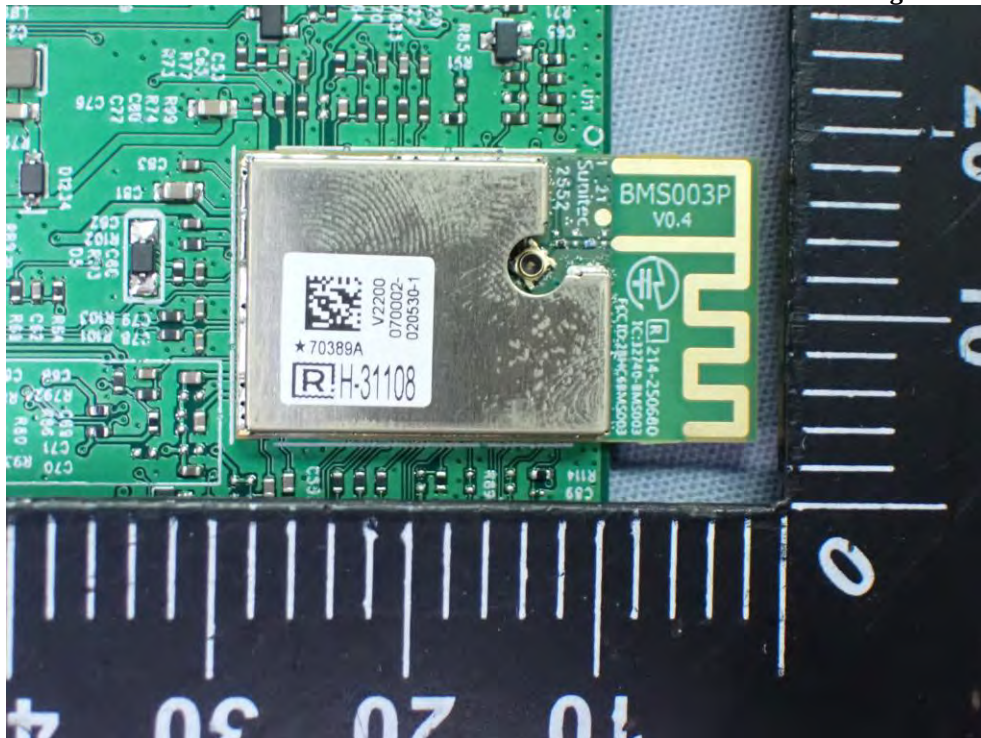 


Figure 28
Inside Configuration of the EUT



Figure 29
Inside Configuration of the EUT

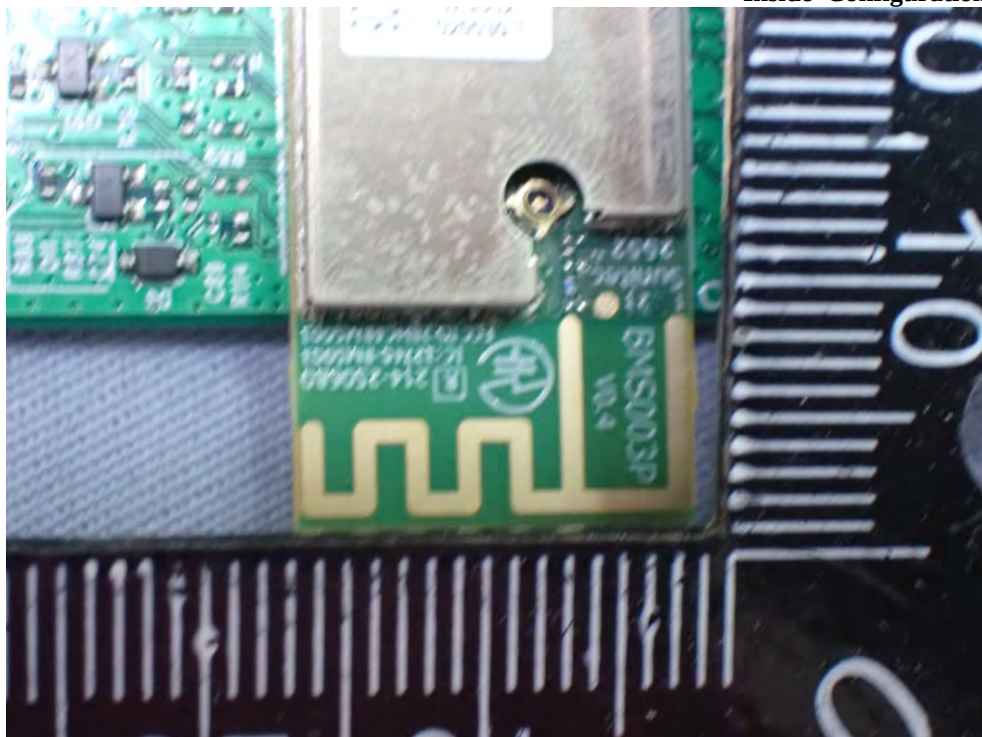 


Figure 30
Inside Configuration of the EUT

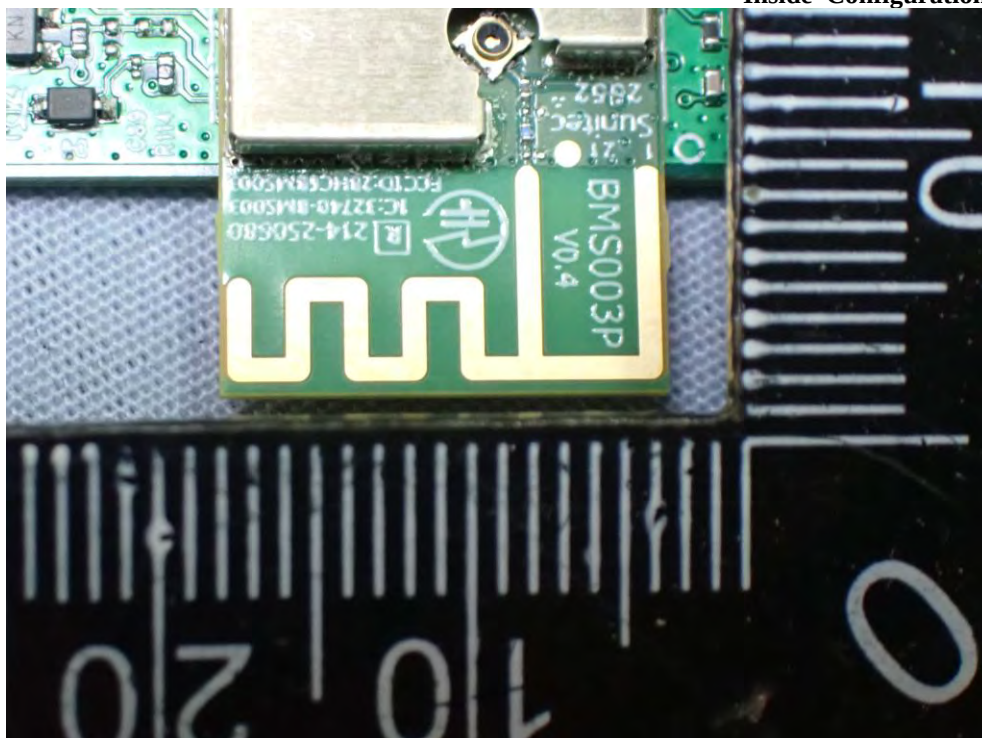 


Figure 31
Inside Configuration of the EUT



Figure 32
Inside Configuration of the EUT

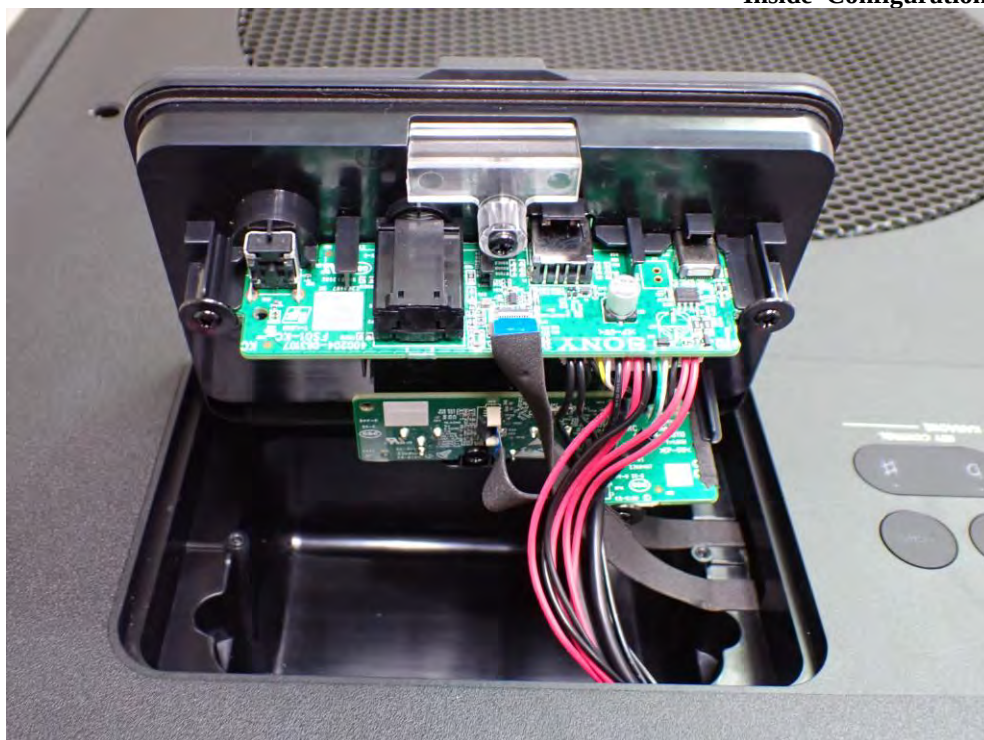 


Figure 33
Inside Configuration of the EUT

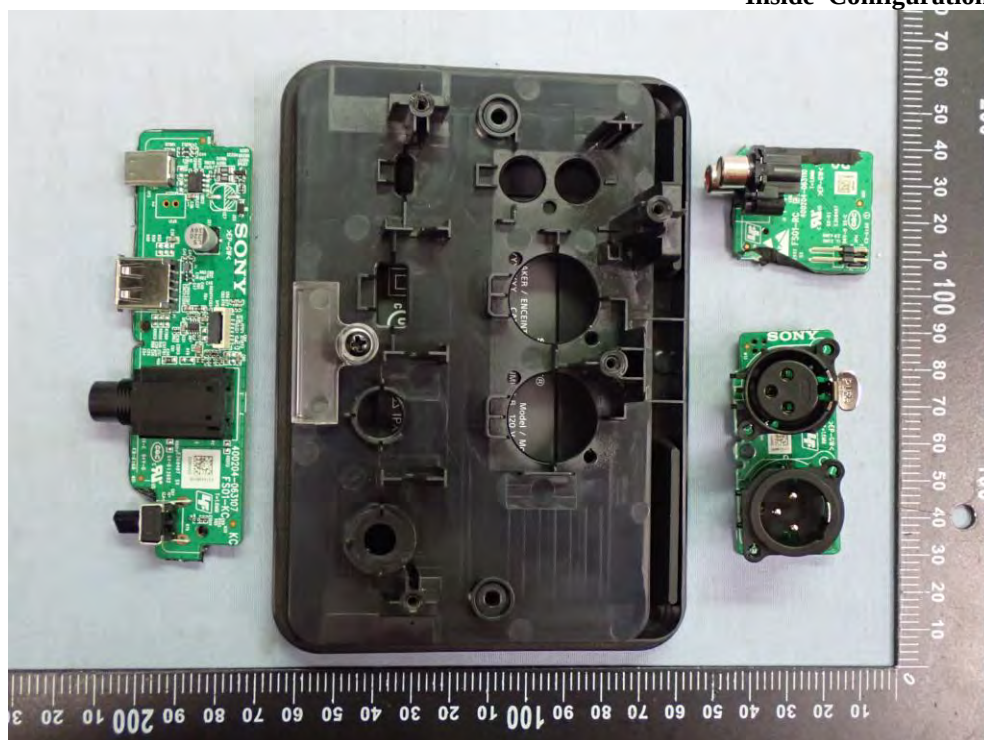 


Figure 34
Inside Configuration of the EUT

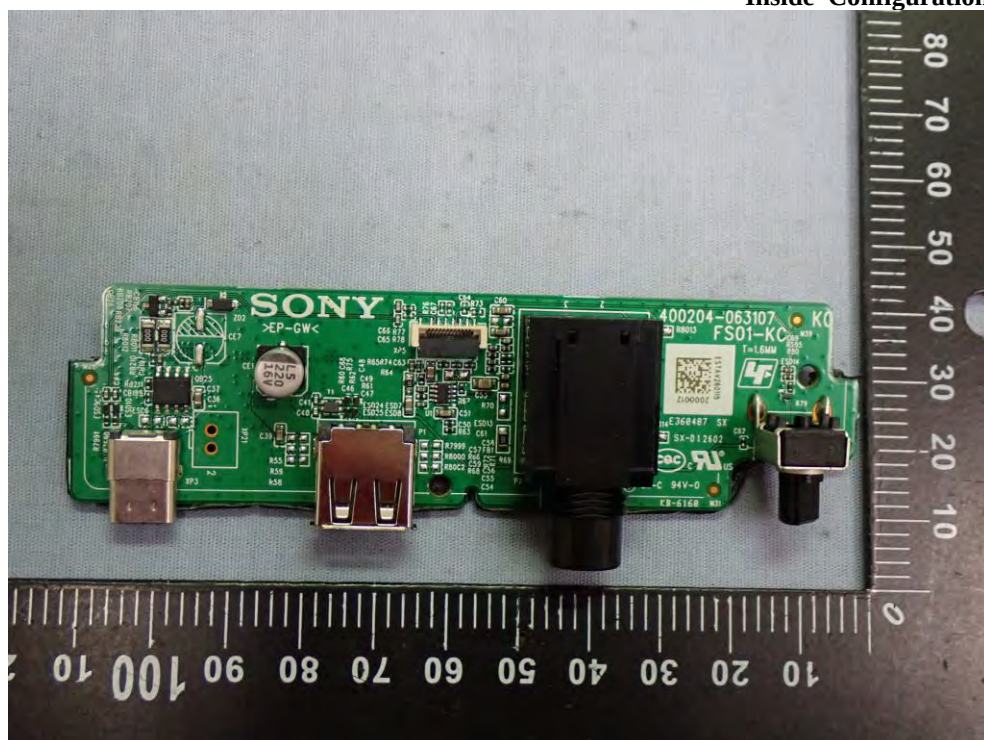 


Figure 35
Inside Configuration of the EUT

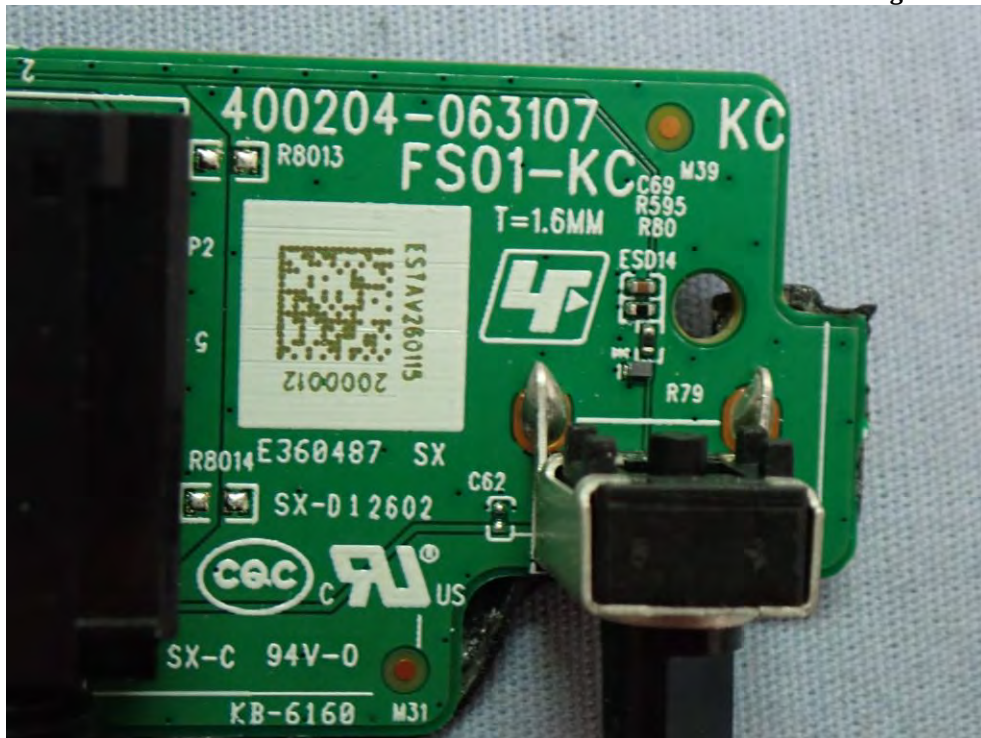 


Figure 36
Inside Configuration of the EUT

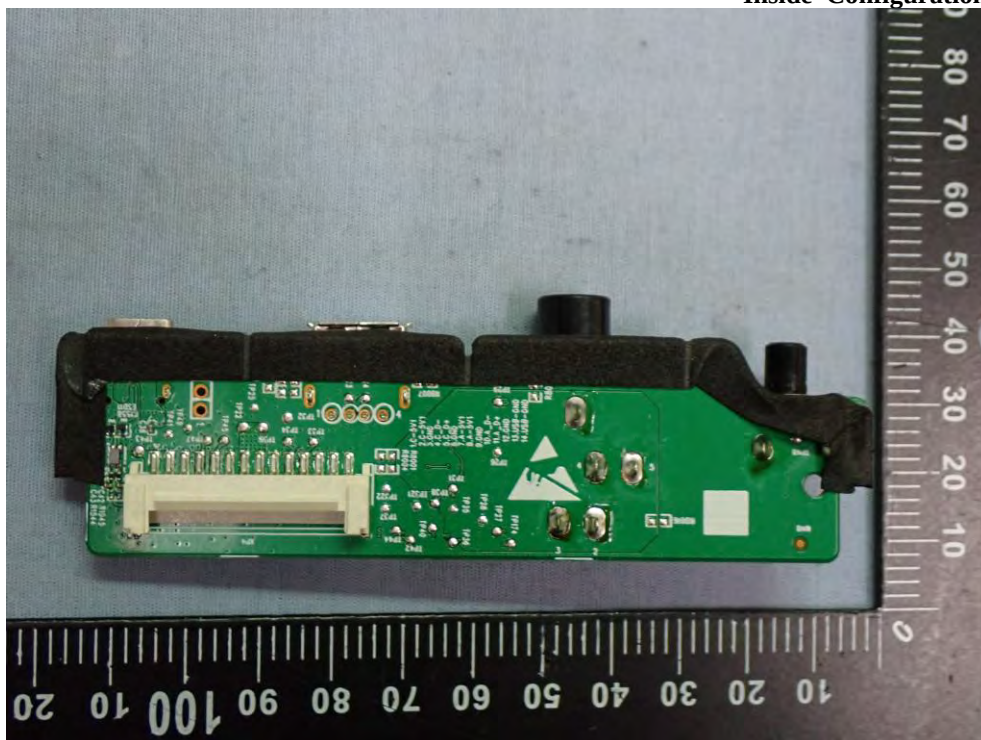 


Figure 37
Inside Configuration of the EUT

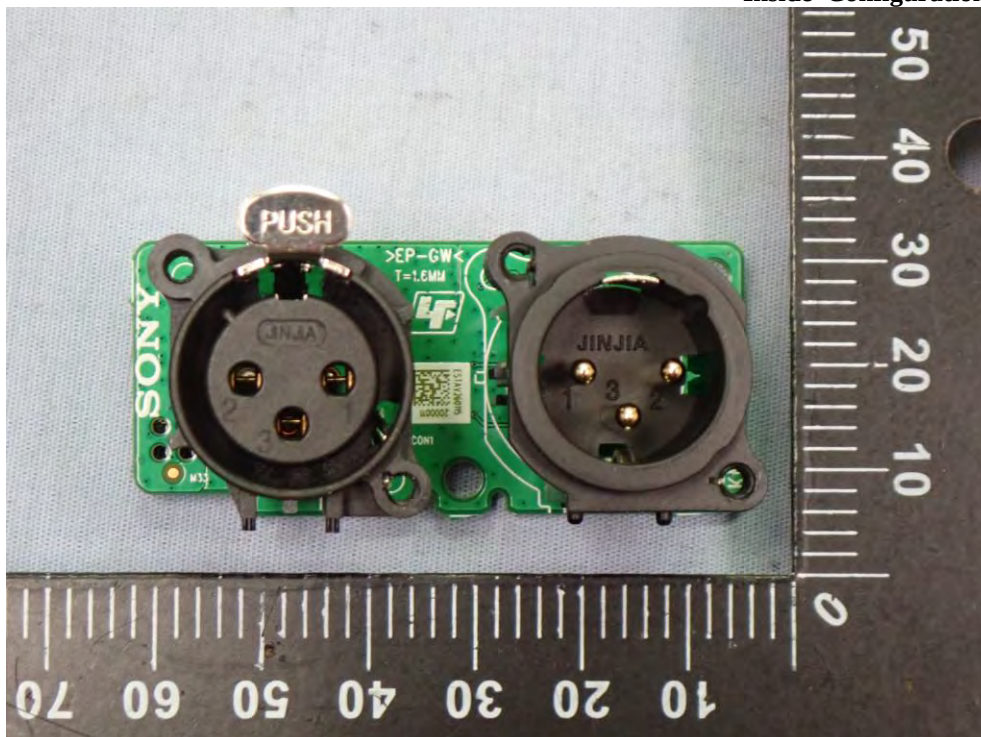 


Figure 38
Inside Configuration of the EUT

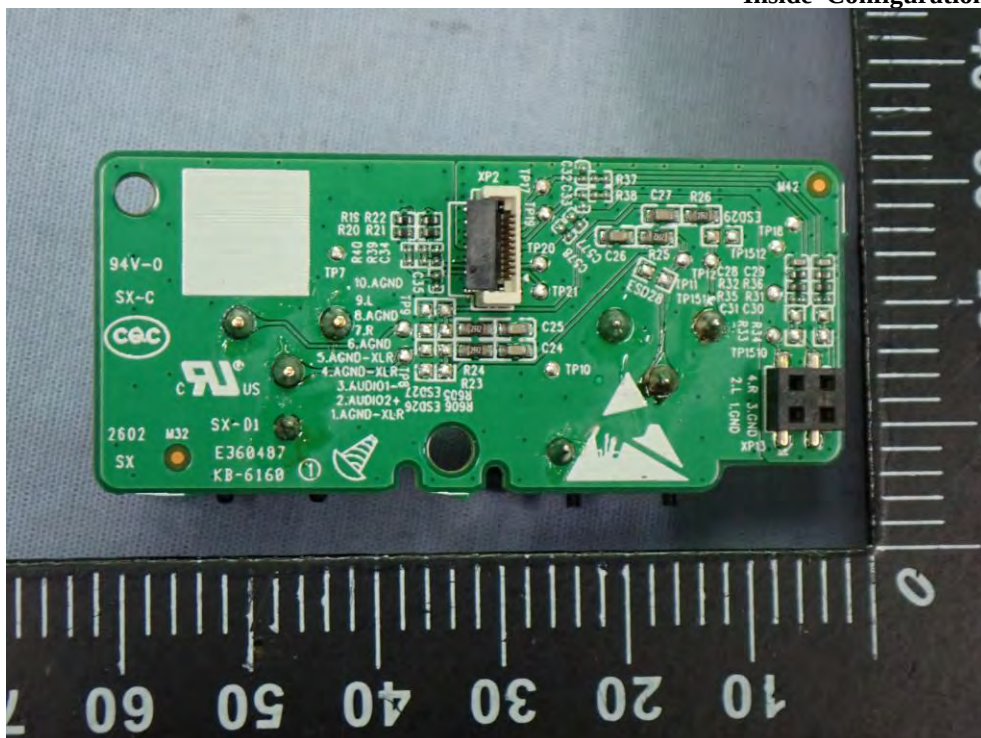 


Figure 41
Inside Configuration of the EUT

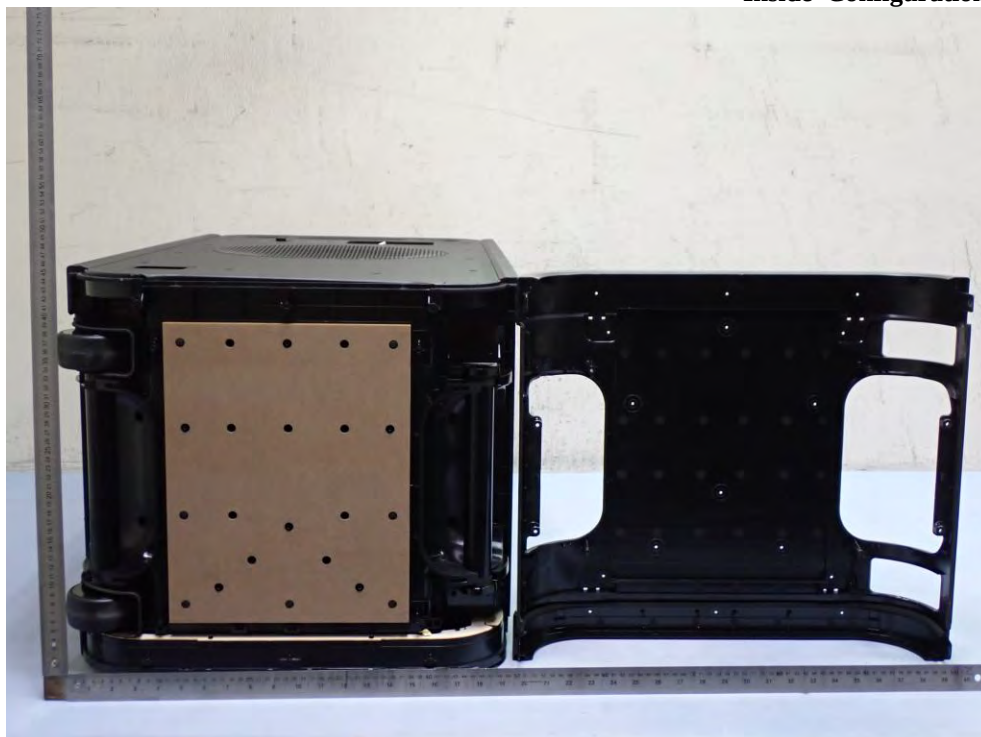 


Figure 42
Inside Configuration of the EUT



Figure 43
Inside Configuration of the EUT



Figure 44
Inside Configuration of the EUT



Figure 45
Inside Configuration of the EUT

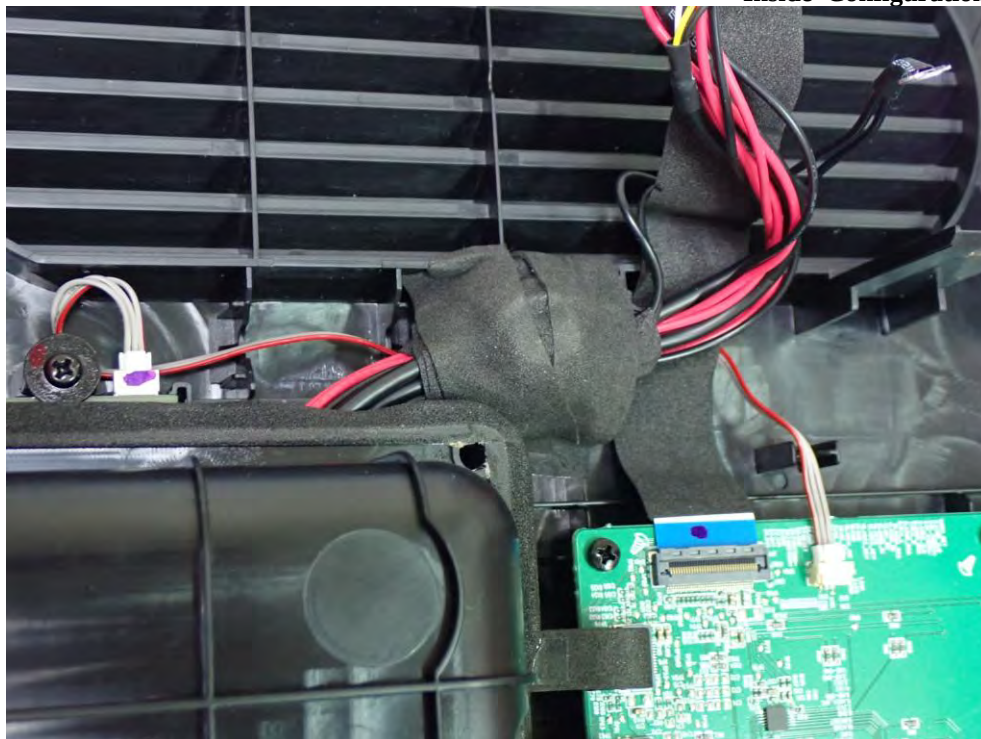 


Figure 46
Inside Configuration of the EUT



Figure 47
Inside Configuration of the EUT

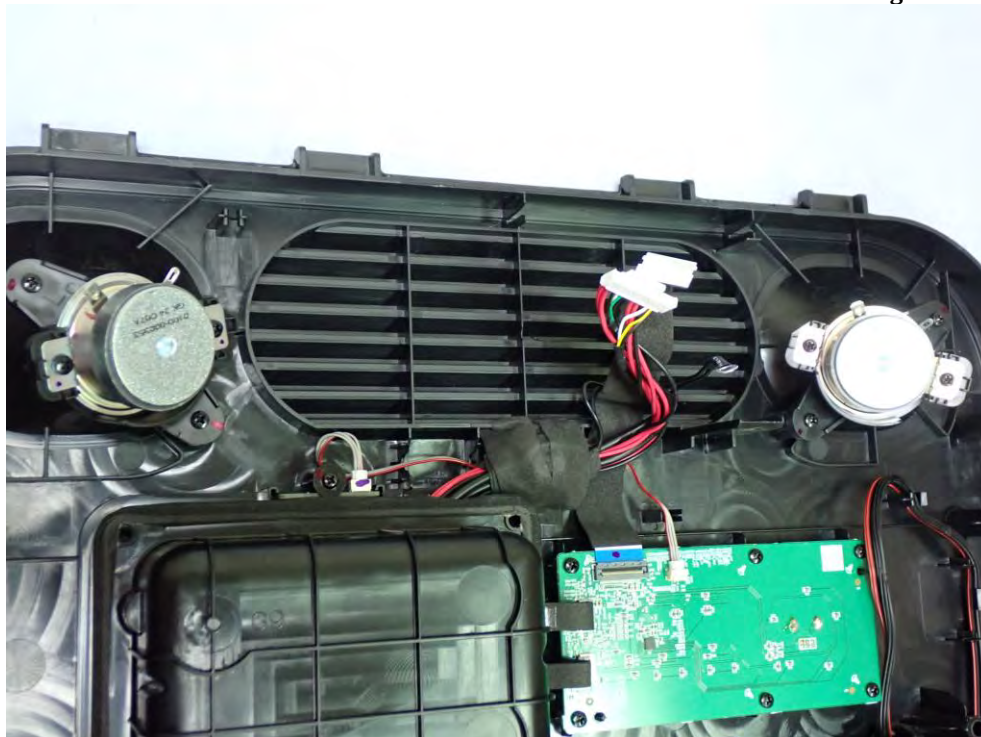 


Figure 48
Inside Configuration of the EUT



Figure 49
Inside Configuration of the EUT



Figure 50
Inside Configuration of the EUT

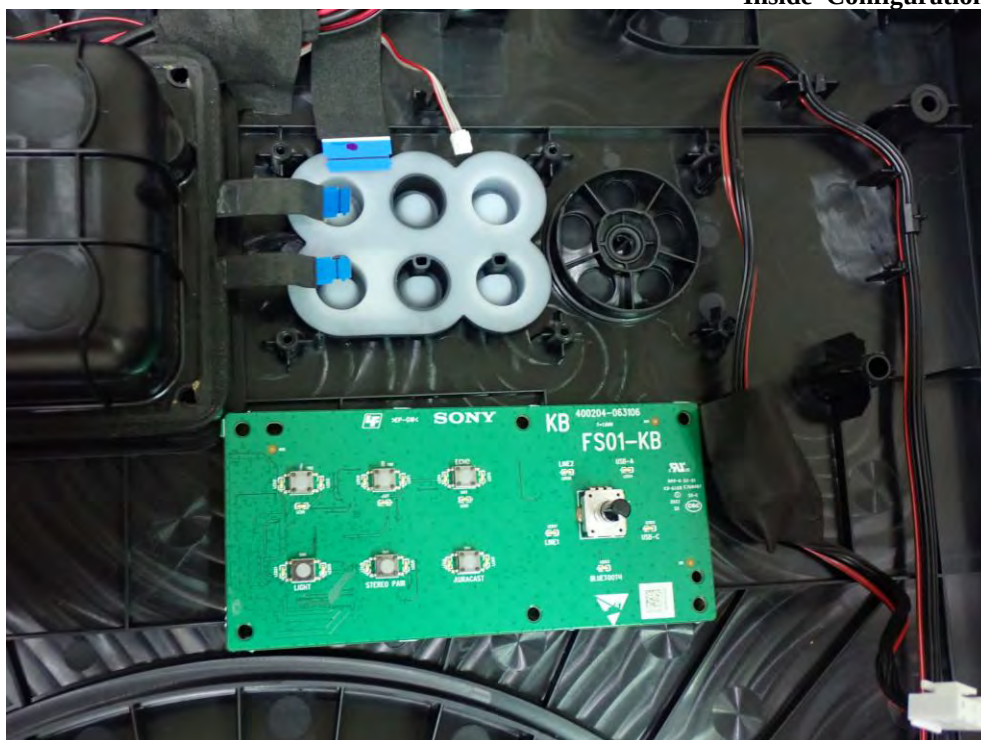 


Figure 51
Inside Configuration of the EUT

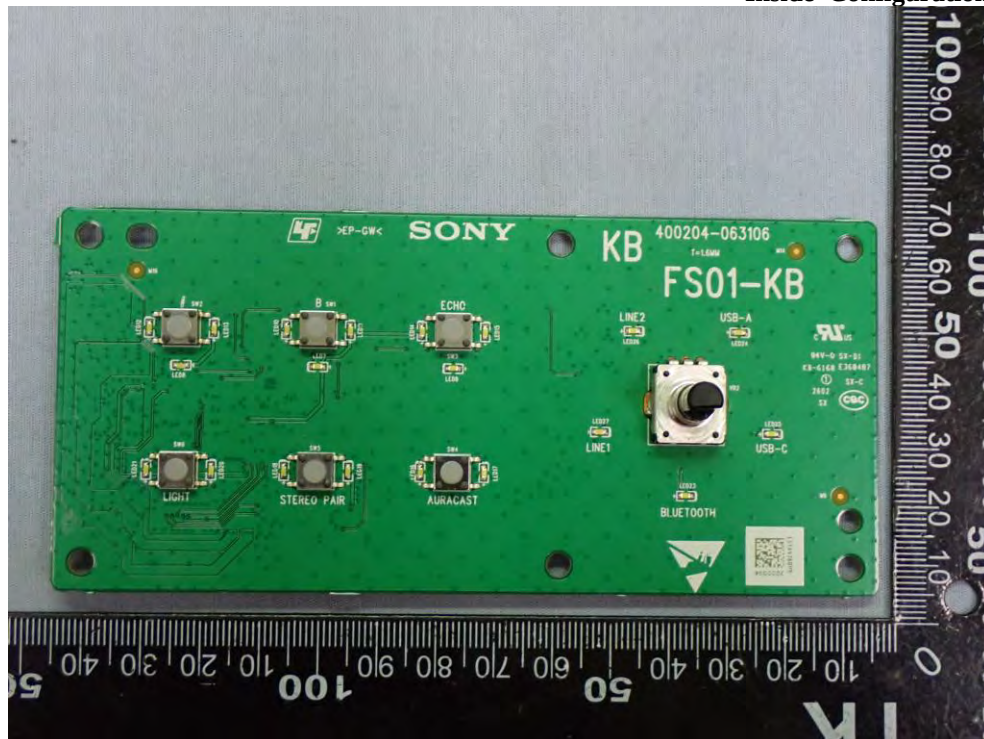 


Figure 52
Inside Configuration of the EUT



Figure 53
Inside Configuration of the EUT

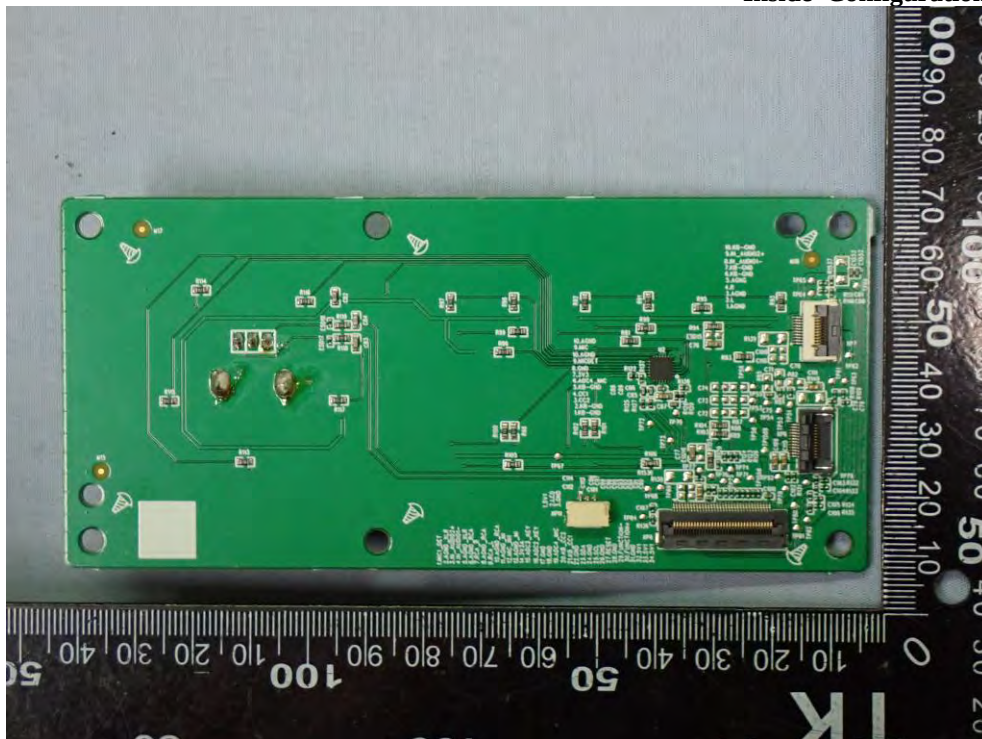 


Figure 54
Inside Configuration of the EUT

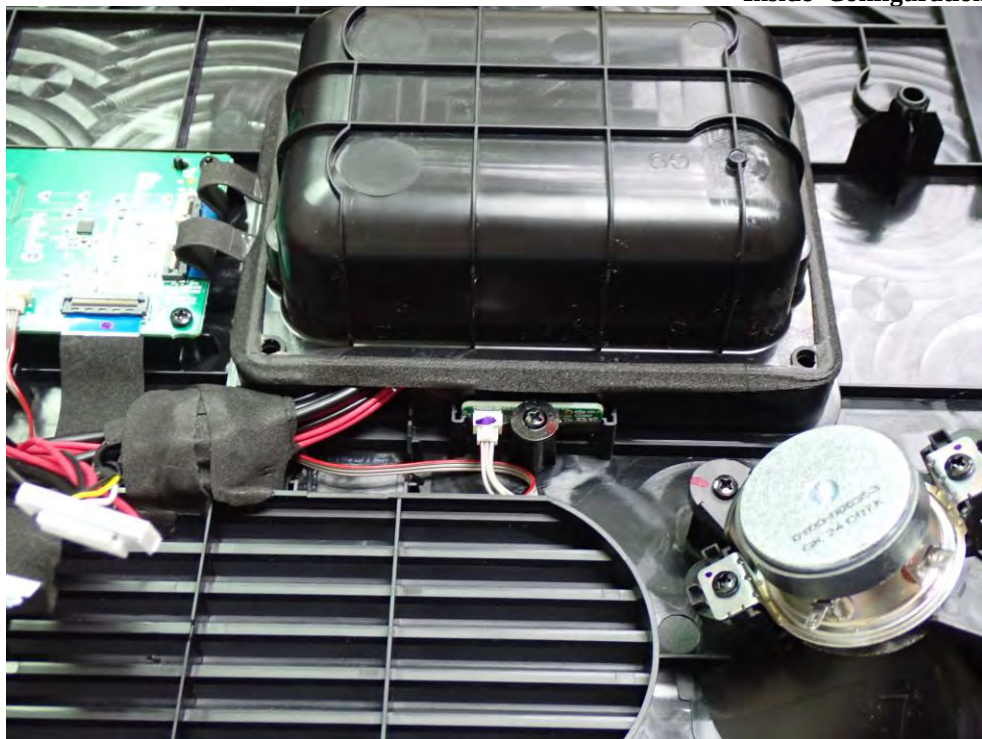 


Figure 55
Inside Configuration of the EUT

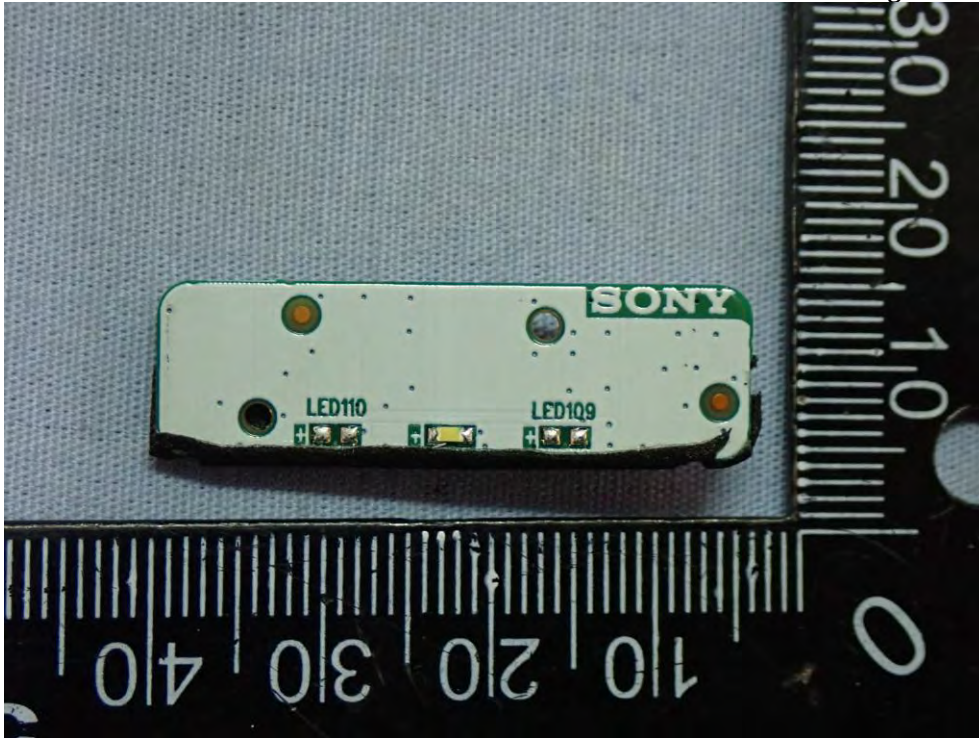 


Figure 56
Inside Configuration of the EUT

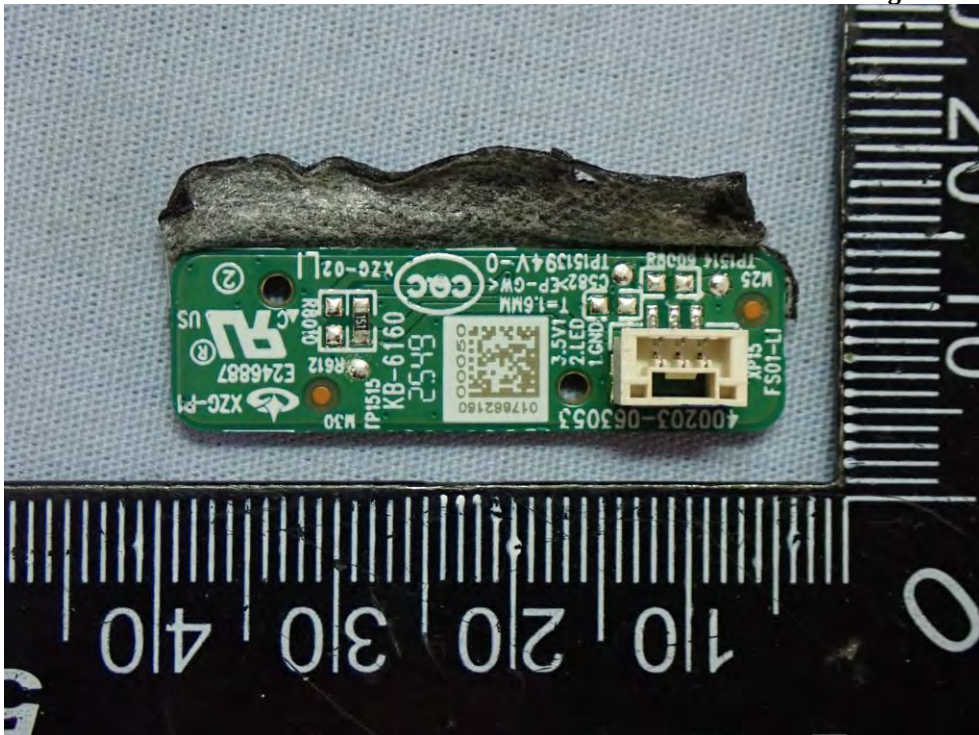 


Figure 57
Inside Configuration of the EUT



Figure 58
Inside Configuration of the EUT



Figure 59
Inside Configuration of the EUT



Figure 60
Inside Configuration of the EUT



Figure 61
Inside Configuration of the EUT



Figure 62
Inside Configuration of the EUT

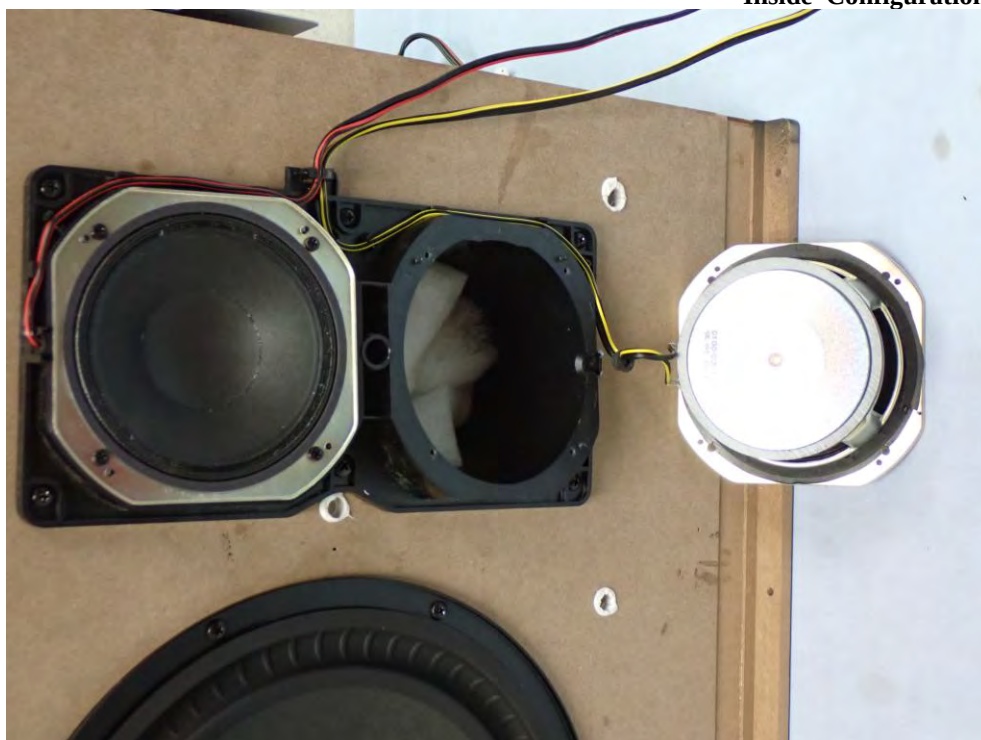 


Figure 63
Inside Configuration of the EUT



Figure 64
Inside Configuration of the EUT



Figure 65
Inside Configuration of the EUT



Figure 66
Inside Configuration of the EUT



Figure 67
Inside Configuration of the EUT



Figure 68
Inside Configuration of the EUT

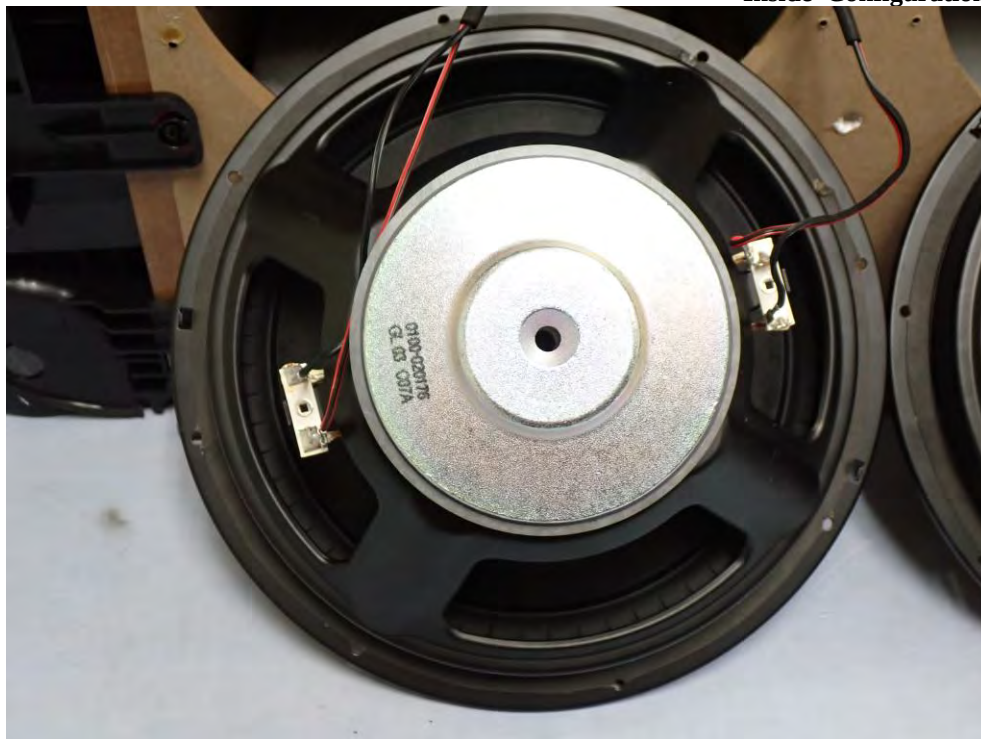 


Figure 69
Inside Configuration of the EUT



Figure 70
Inside Configuration of the EUT



Figure 71
Inside Configuration of the EUT

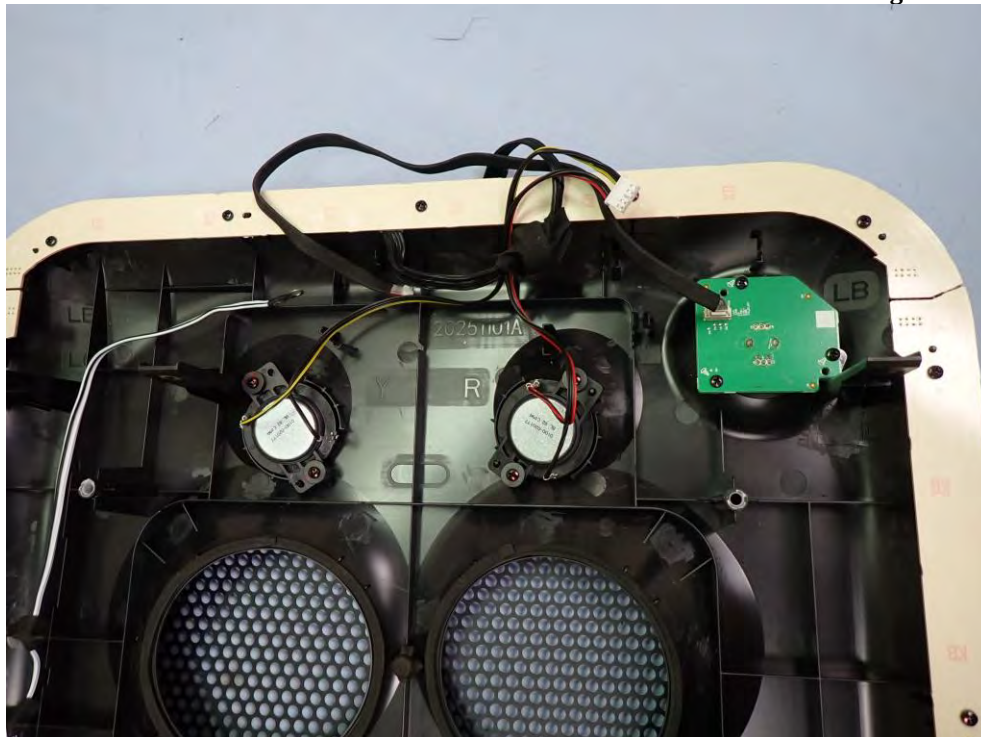 


Figure 72
Inside Configuration of the EUT



Figure 73
Inside Configuration of the EUT



Figure 74
Inside Configuration of the EUT

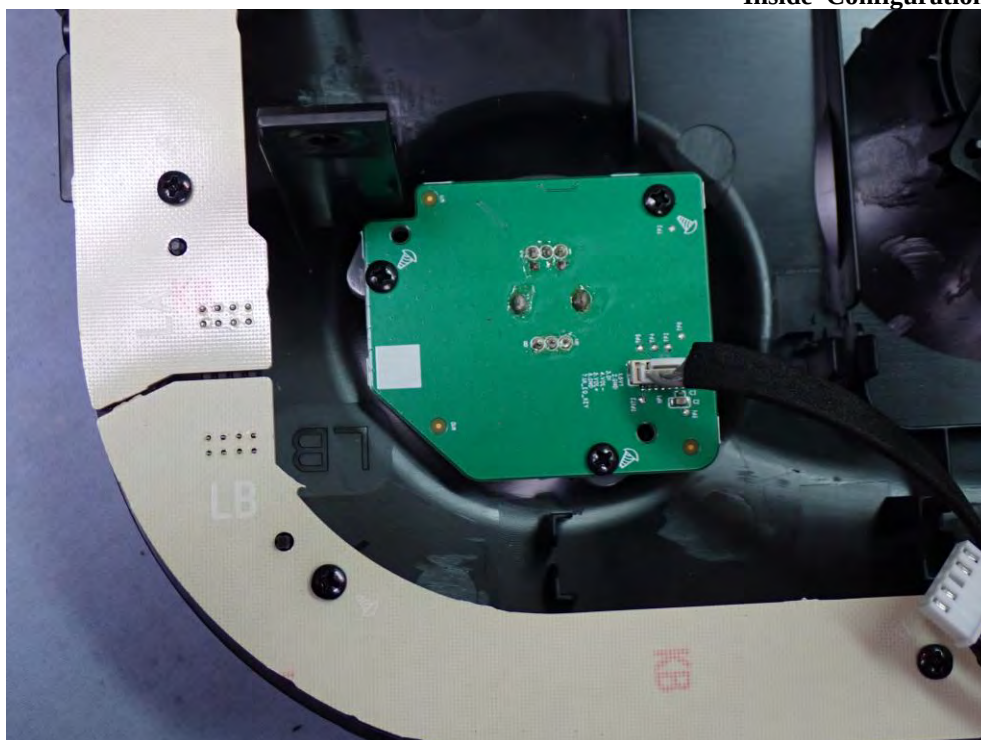 


Figure 75
Inside Configuration of the EUT

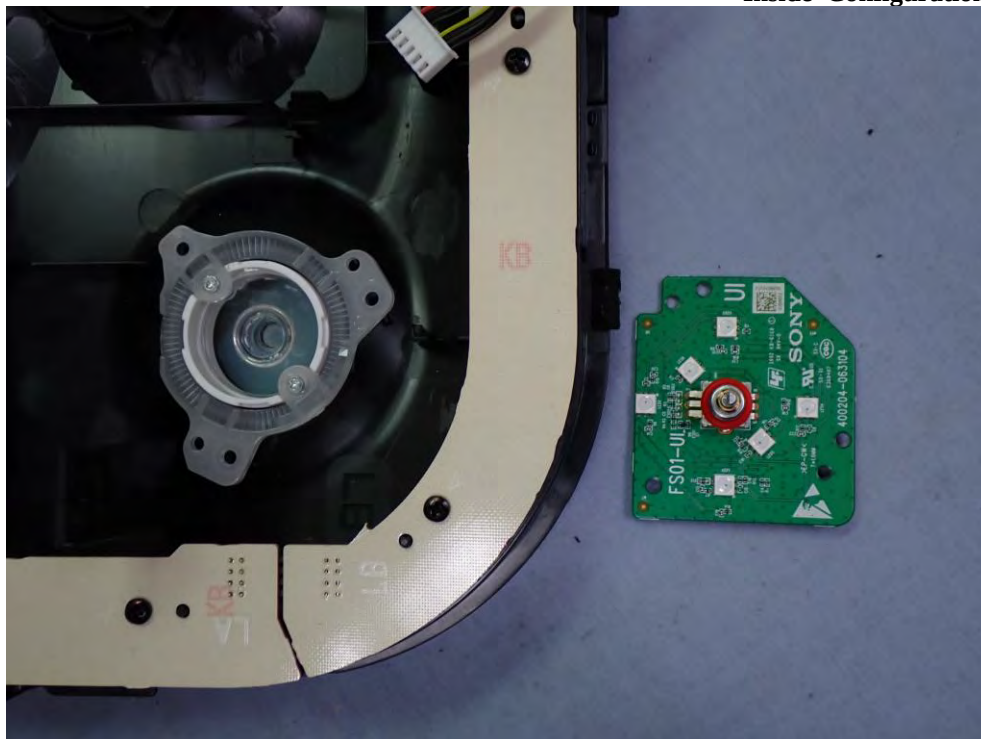 


Figure 76
Inside Configuration of the EUT

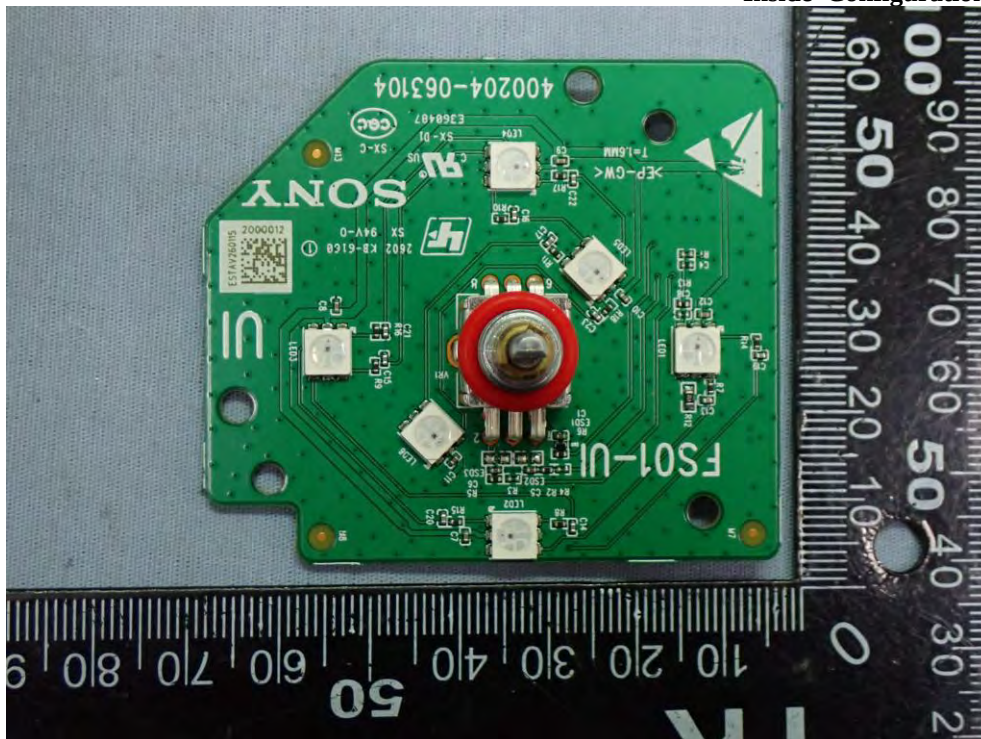 


Figure 77
Inside Configuration of the EUT

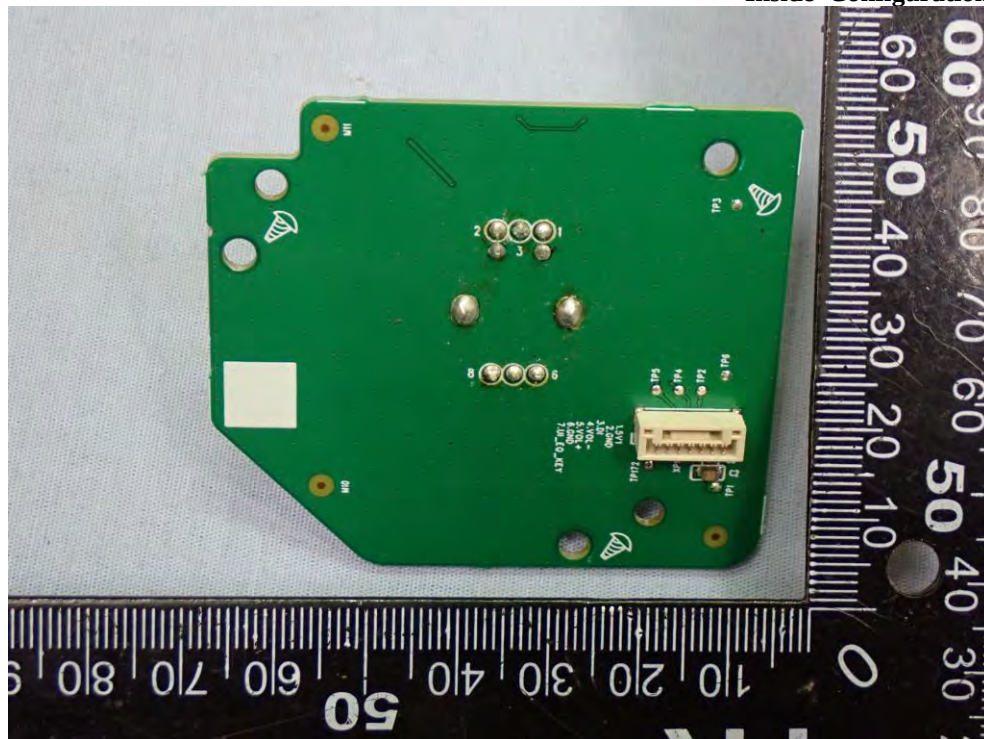 


Figure 78
Inside Configuration of the EUT



Figure 79
Inside Configuration of the EUT

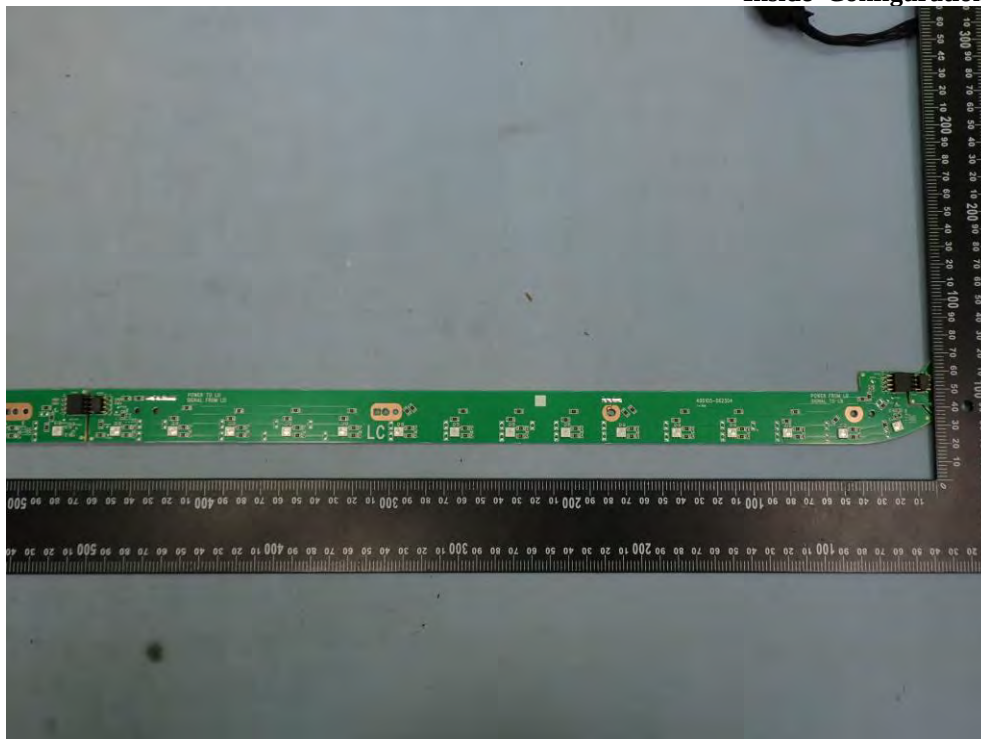 


Figure 80
Inside Configuration of the EUT



Figure 81
Inside Configuration of the EUT

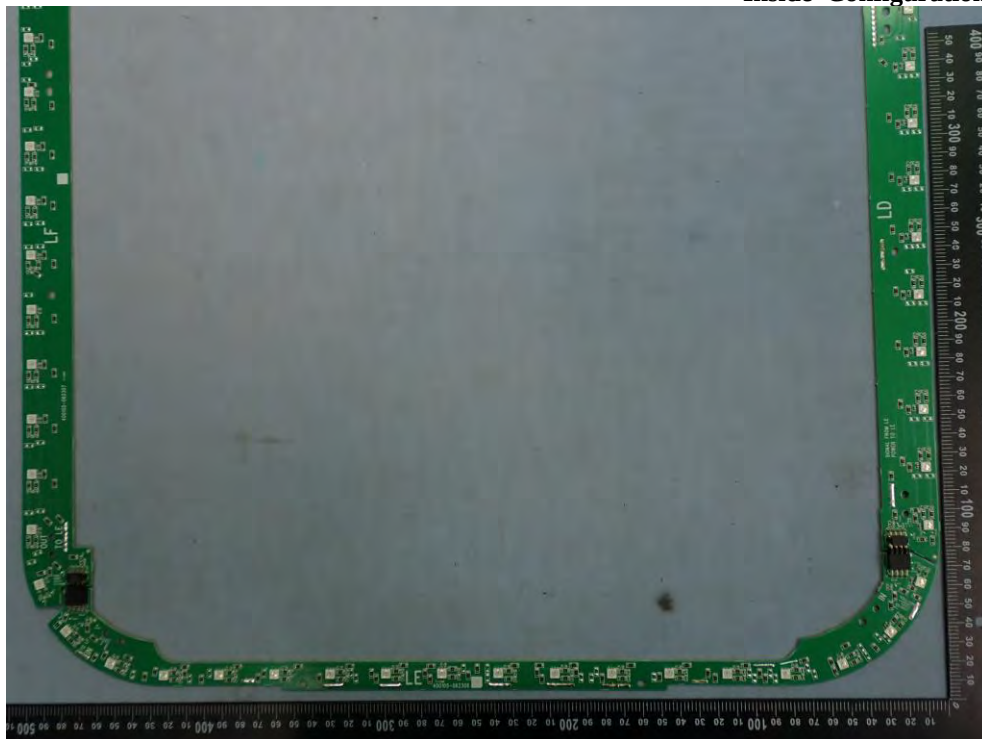 


Figure 82
Inside Configuration of the EUT



Figure 83
Inside Configuration of the EUT



..... **THE END**