

1

Turning the power on



Press the  (power) button. When you use the speaker for the first time after purchase, the speaker automatically enters pairing mode and the  (BLUETOOTH) indicator starts double flashing.

2

Connecting with BLUETOOTH® devices



Follow the instructions on the downloaded “Sony | Sound Connect” app to establish a BLUETOOTH connection between the speaker and your smartphone or iPhone. When a BLUETOOTH connection is established, you hear the notification sound from the speaker and the activity of the  (BLUETOOTH) indicator changes from flashing to lit.

3

Listening to music

 


Start playback on a BLUETOOTH device.

Connecting the speaker to an AC outlet

1 Connect the speaker to an AC outlet to charge it.


Connect the AC input jack on the rear side of the speaker and an AC outlet with the supplied AC power cord (mains lead).

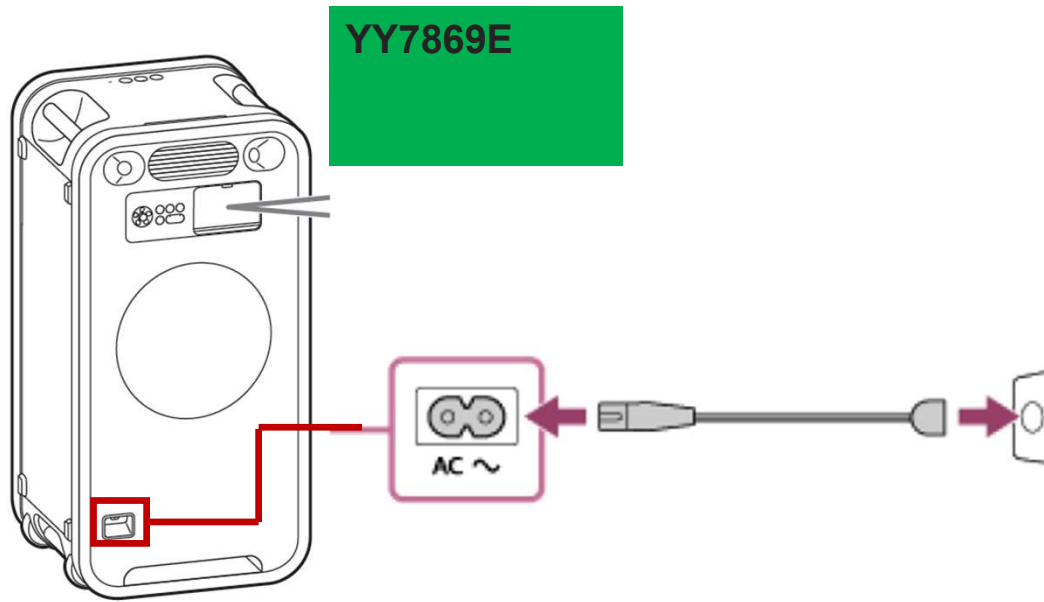

Connecting the speaker to an AC outlet

1 Connect the speaker to an AC outlet to charge it.

 
Connect the AC input jack on the rear side of the speaker and an AC outlet with the supplied AC power cord (mains lead).

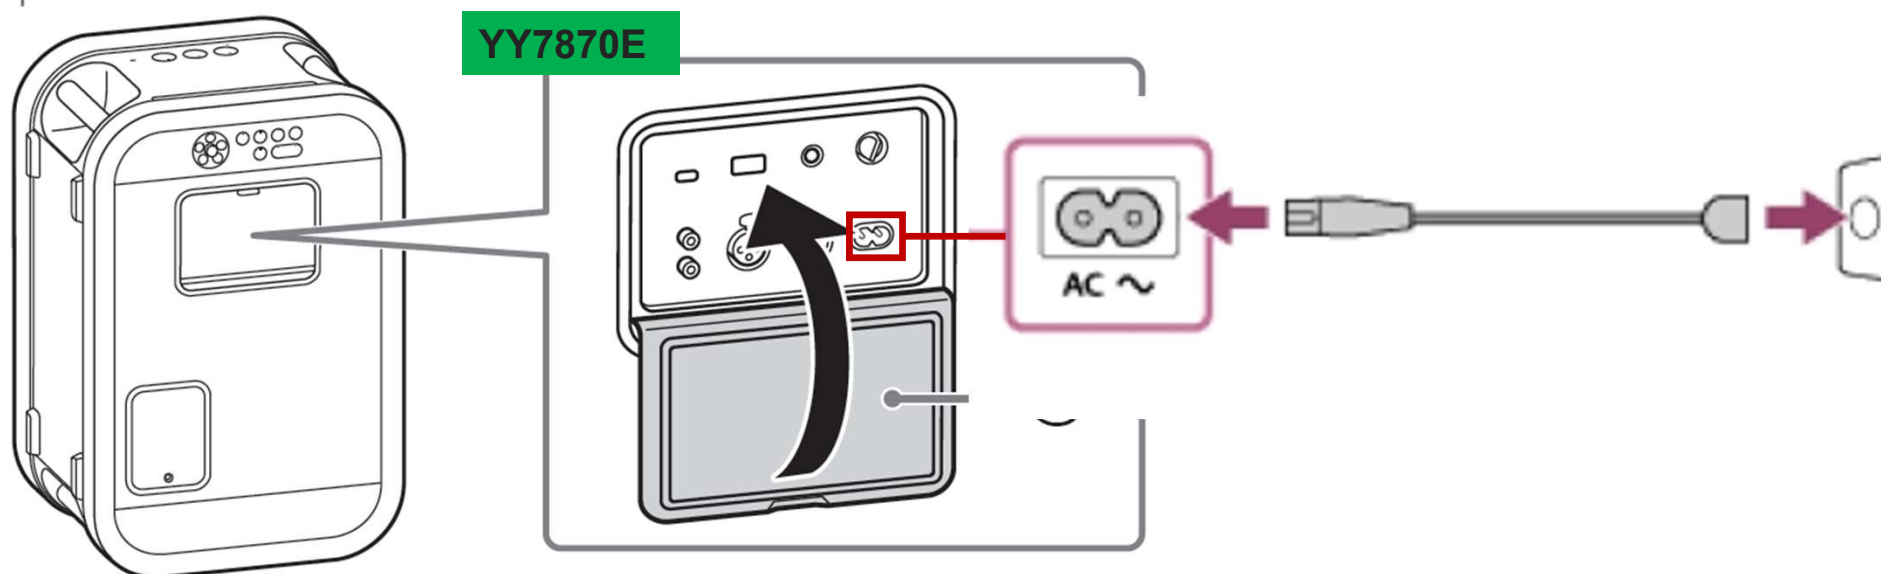

Connecting the speaker to an AC outlet

1 Connect the speaker to an AC outlet to charge it.

 
Connect the AC input jack on the rear side of the speaker and an AC outlet with the supplied AC power cord (mains lead).

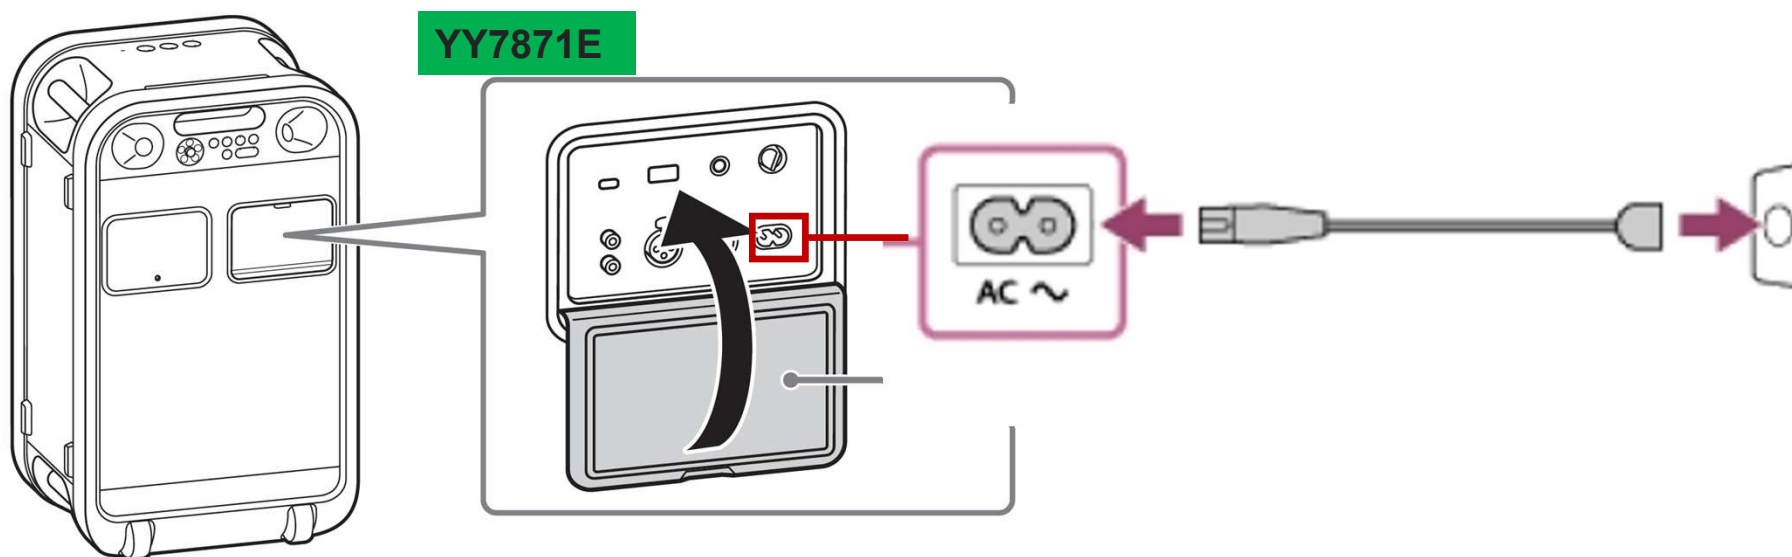

Turning the power on

- 1 Press the  (power) button on the speaker.

 You hear the notification sound from the speaker, the  (power) indicator on the speaker lights up in white, and the  (BLUETOOTH) indicator on the speaker flashes slowly in blue.

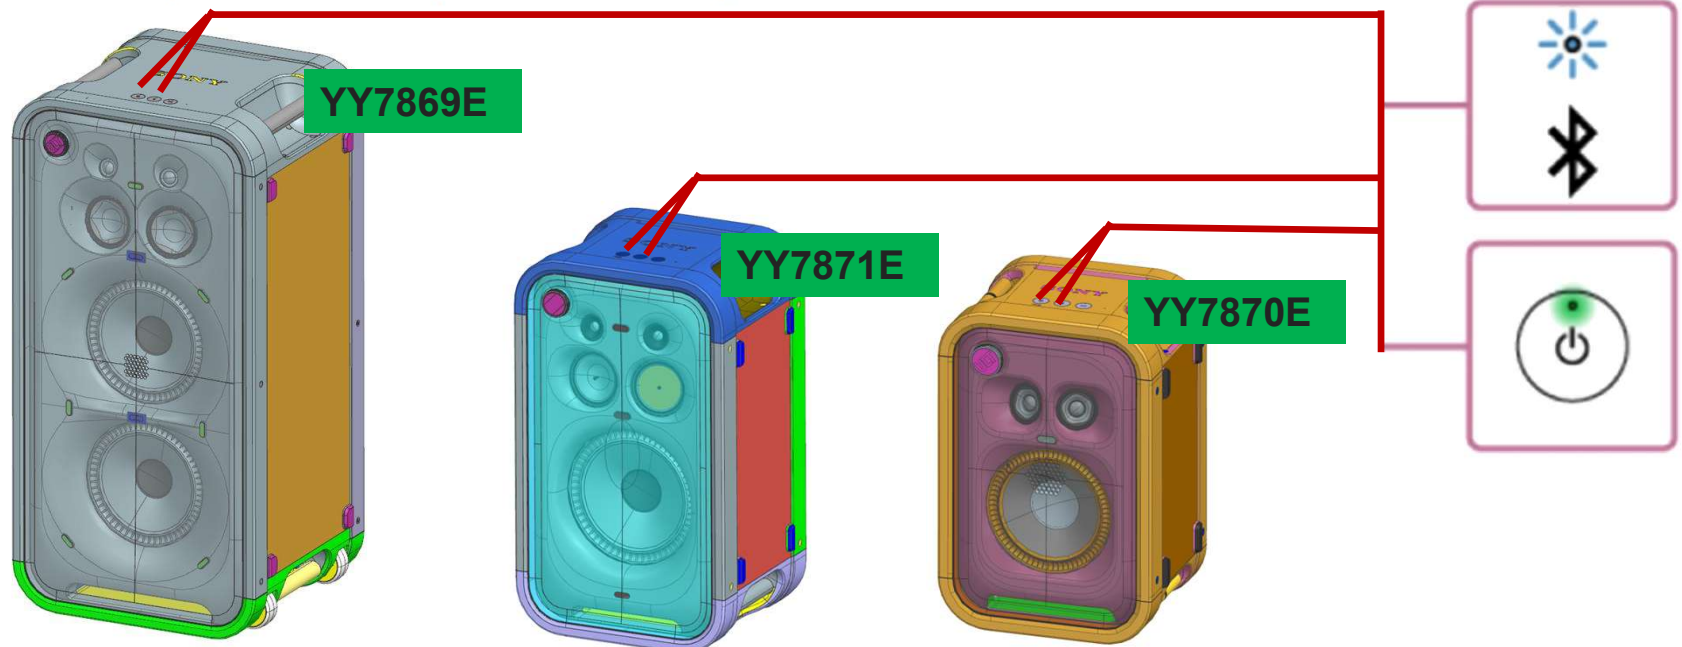


When the speaker has no pairing information, for example when you use the BLUETOOTH function for the first time after purchase, the  (BLUETOOTH) indicator on the speaker keeps double flashing in blue.

Turning the power off

Turning the power off

- 1 Press the  (power) button on the speaker.

 You hear the notification sound from the speaker, and the  (power) indicator and the  (BLUETOOTH) indicator on the speaker turn off.

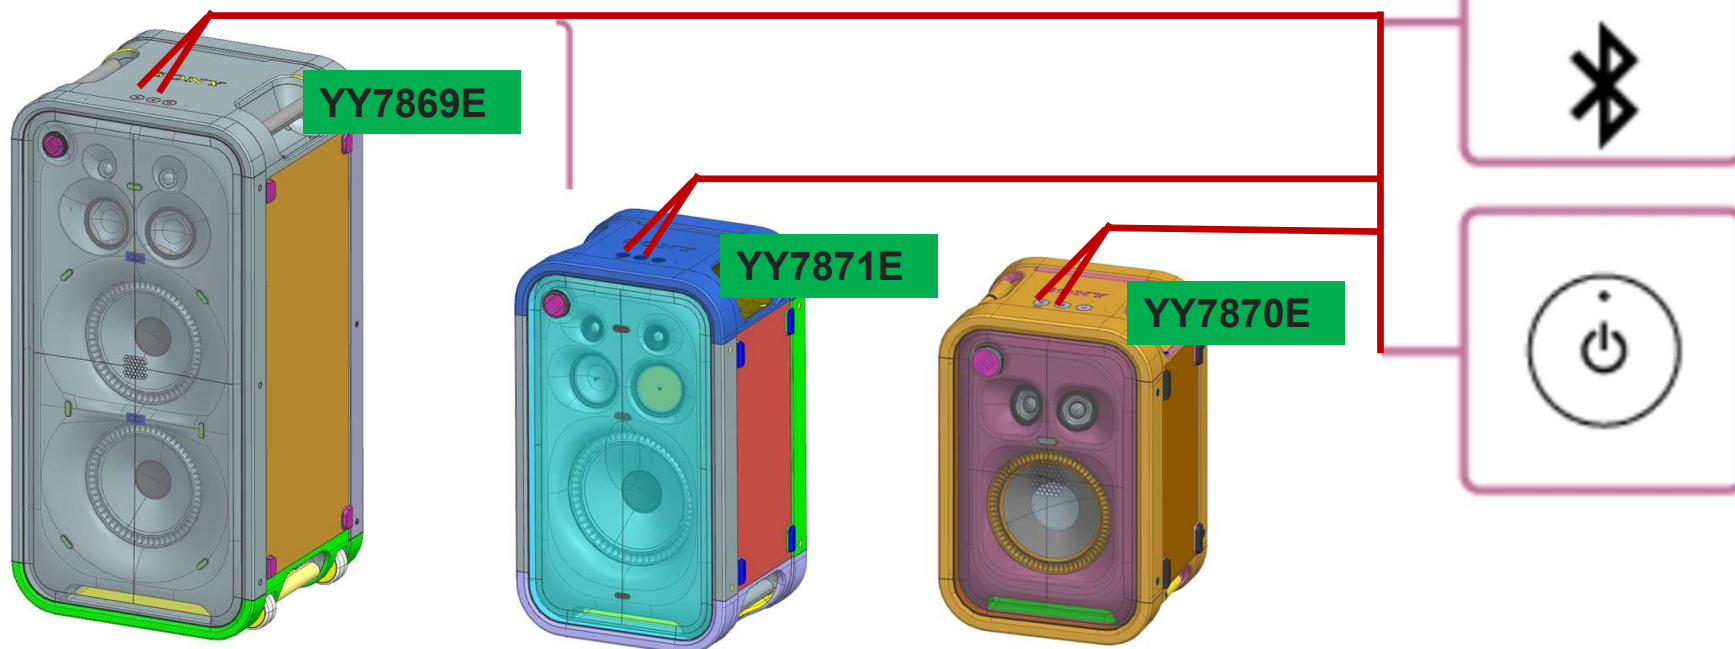

How to make wireless connections to BLUETOOTH devices

How to make wireless connections to BLUETOOTH devices

You can enjoy music with the speaker wirelessly by using your BLUETOOTH device's BLUETOOTH function.

Pairing

Pairing is the process required to mutually register the information on BLUETOOTH devices to be connected wirelessly. To use multiple BLUETOOTH devices in combination with the speaker, pairing is required for each device you want to connect.

Perform the pairing operation on both the speaker and the device.

Connecting to a paired device

Once a device is paired, it is not necessary to pair it again. Connect to devices already paired with the speaker using the methods necessary for each device.

For details on pairing and connection operations, see the related topics below.

Connecting with a USB device

Connecting with a USB device

 
Compatible USB devices

- USB devices compliant with USB Mass Storage Class
- USB devices formatted with the FAT (except exFAT) file system

Some USB devices may not work with the speaker even if the devices meet the above conditions.
Using iPhone devices via USB connection is not supported.

Note

- When USB cable connection is necessary, use the USB cable supplied with the USB device. See the operating instructions supplied with the USB device for details on the operation method.
- Do not connect the speaker and the USB device through a USB hub.
- When the USB device is connected, the speaker reads all the files on the USB device. If there are many folders or files on the USB device, it may take a long time to finish reading the USB device.
- With some connected USB devices, there may be a delay before an operation is performed by this speaker.
- Compatibility with all encoding/writing software cannot be guaranteed. If audio files on the USB device were originally encoded with incompatible software, those files may produce noise or interrupted audio, or may not play at all.
- This speaker does not necessarily support all the functions provided in a connected USB device.
- The port, connector, and jacks on the speaker are not designed for water resistant. Do not use the speaker in places where the speaker is likely to have water splashed on it. When you are finished with using the speaker, be sure to securely close the caps.

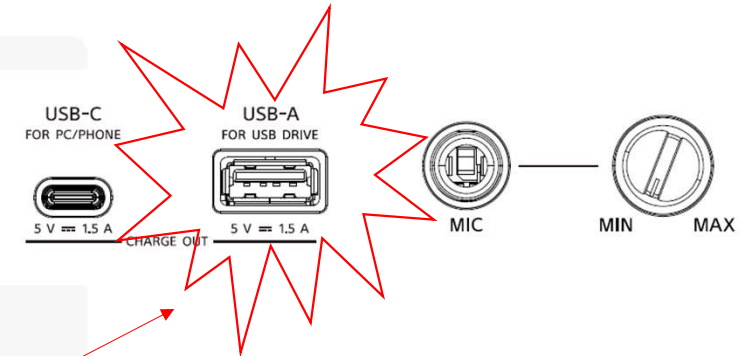

1 Connect a USB device to the speaker's USB-A port.

2 Turn the function knob to USB-A

