

## Contents

|                                           |   |
|-------------------------------------------|---|
| 1 Overview.....                           | 1 |
| 1.1 Appearance and Keys.....              | 1 |
| 1.2 Basic Operation.....                  | 2 |
| 1.2.1 Switch ON.....                      | 2 |
| 1.2.2 Unlock the Screen.....              | 2 |
| 1.2.3 Lock the screen.....                | 2 |
| 1.2.4 Switch OFF.....                     | 2 |
| 1.2.5 Battery charging.....               | 2 |
| 1.2.6 Switch input methods.....           | 3 |
| 1.2.7 Use Micro SD Card.....              | 3 |
| 1.2.8 Connected to the computer.....      | 4 |
| 1.2.9 Browse the file in the device.....  | 4 |
| 1.2.10 Startup programs.....              | 4 |
| 1.2.11 Close programs.....                | 5 |
| 1.2.12 Screen operation.....              | 5 |
| 1.2.13 Home screen.....                   | 5 |
| 1.2.14 Screen gestures.....               | 5 |
| 1.2.15 Security setting.....              | 6 |
| 1.2.16 Display setting.....               | 7 |
| 1.2.17 Wireless And Network Settings..... | 7 |
| 1.3 Technical specifications.....         | 9 |

### **Disclaimer**

Thank you for purchasing our product! Before using this product, please read the manual carefully.

We will presume that the manual has been read before using the product.

1. The functions information of this manual is subject to the product itself; we will keep developing new functions. Information in this manual is subject to change without any prior notice.
2. The Company will not be responsible for any loss of personal data and/or damage caused by incorrect operation of software/hardware, artificial damages, replacement of batteries or any other accident. To avoid loss of personal data, backup data to PC at any time.
3. The company can not control any controversy from users misunderstanding or incorrect operation against the manual, the company will not take any relevant responsibility for any accidental loss or potentially occurring in the process of using this manual.
4. Do not do any repairs. Otherwise manufacture warranty will be null and void.
5. The company reserves the final explanation right to this manual and other relevant information

### **Preface**

This device has built-in high performance Wi-Fi receiver module, supporting external 3G USB DONGLE wireless network card, turning on the broadband wireless networks, breaking through the restraint of network cable; it will bring the portable media player world and fulfill the entertainment needs. It also support picture browsing, E-book Reader, games, online chat, and various other functions and settings that will fully show individuality.

### **Safety notices**

To avoid accidents please adhere to the manuals instructions.

- Do not let the tablet fall, rub, or be compressed with hard objects, or it may cause surface damage of the tablet, loose battery, data loss or damages of other hardware
- Never let this product become exposed to humid environment or rain as the water that leaks in may disable it to the extent beyond maintenance.
- Do not use the headset with high volume continuously. Please adjust the volume to an appropriate and secure volume and control the usage time to avoid any damage to hearing, as excessive volume will cause permanent hearing damage.
- Do not cut off the power abruptly during software update or download. It may cause data loss and/or system error.
- Do not turn on the device where wireless equipment is forbidden or when usage of the device will cause interference or danger. Observe any relevant restrictions.
- Do not use incompatible products. Only use original accessories and battery.
- Do not use the device at gas station or nearby fuels or chemicals.
- Do not use product while driving or operating heavy machinery.
- Do not clean the device with any chemicals or detergent, it will damage the product surface and corrode the paint.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Packing list

| Item | Components      | Quantity |
|------|-----------------|----------|
| 1    | Tablet Device   | 1        |
| 2    | Micro USB Cable | 1        |
| 3    | User Manual     | 1        |
| 4    | Adapter         | 1        |

The following is included within your package. Carefully unpack the box and remove the contents.

*Attention: Accessories of this product can change without notice.*

## 1 Overview

### 1.1 Appearance and Keys



| Symbol | Name           | Description                                                      |
|--------|----------------|------------------------------------------------------------------|
| 1      | Power          | Press quick to enter sleep/wake mode, hold down to switch ON/OFF |
| 2      | Home           | Home                                                             |
| 3      | Micro USB port | Connect with PC and OTG function                                 |
| 4      | Headphone      | Connect to Stereo headphone                                      |
| 5      | MIC            | Microphone                                                       |
| 6      | TF Card        | Micro SD Card slot                                               |

## **1 Overview**

 
### **1.1 Basic Operation**

#### **1.1.1 Switch ON**

When the device is in the OFF mode, press and hold POWER key, then you can enter the system desktop.

#### **1.1.2 Unlock the screen**

Please press and drag the  icon to the , then the LCD will unlocked automatically.

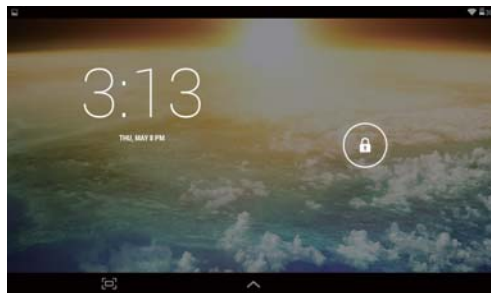

#### **1.1.3 Lock the screen**

When the device is in the ON mode, press the POWER key shortly, the system will lock the screen and enter the save power mode. Then the screen is OFF but the system will still run.

#### **1.1.4 Switch OFF**

When the device is in the ON mode, press and hold the POWER key for 3 seconds, the screen will display the power off interface, choose the power off item to confirm, the system will shut automatically.

#### **1.1.5 Battery charging**

For battery charge, insert the micro port of the battery adaptor into 220V AC slot on the device, and connect the other side with the power socket.


[Note] This device is not recommended to use USB interface to charge. Please Use the special power adapter for charging. You should charge the battery for at least 8-12 hours to make sure the battery is fully charged at the first time.

On charging the Power indicating lamp of the device is in high light blue color

and the desktop icon of the battery  keep rolling which shows it is connected to the device.

#### 1.1.6 Switch input methods

 The device support handwriting, number, letter, pinyin etc. Switching as follows:  
Click any text input area of the working program interface, it will pop input keyboard interface, as shown below:

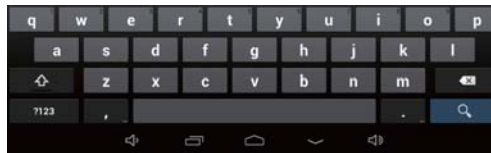

Press , then it will pop Input Method switch interface. Select the input method you want here.

[Noted] After newly installing input method, you should choose Settings>Language & input>Keyboard & Input methods then you can use.

#### 1.1.7 Use Micro SD Card

##### ● Insert Micro SD Card

Insert the Micro SD Card into the slot in direction of the device's bottom shell until you hear a sound of click.

##### ● Browse files in the memory card

In this MID device, you can view and use the needed files in catalogue of Menu>File manager>SD Card.

##### ● Remove Micro SD Card

Close all open files from the Micro SD Card, then enter MENU>Settings>Micro SD Card and device storage, click Unmount SD card. System will prompt that Micro SD Card was removed safely. Tap with your fingertips to the pop-up Micro SD Card

 
[Note]

1. Do not insert the Micro SD Card by force. This card can only be applied in one direction.
2. Do not remove the Micro SD Card before Uninstalling it, or the card may be damaged.
3. If the memory card is write-protected, data will not be formatted and written. Please remove the write protection before such operations

4. Major brands memory card is recommended to avoid that the card is not compatible to this device.
5. Please well note that the APK (such as application software and games) is default installed to the device. (not the memory card)

#### 1.1.8 Connected to the computer

One end of the USB line connects to the computer, the other end connects to the MID device, select Settings>Developer options>USB debugging, the device will connect with computer and you can copy files to the device.

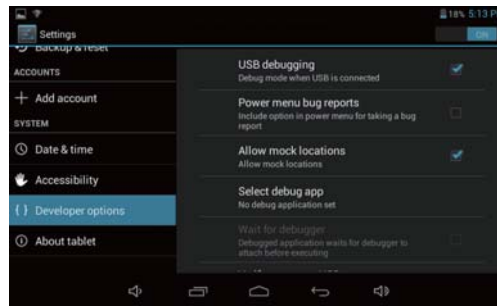

#### 1.1.9 Browse the file in the device



#### 1.1.10 Startup programs

Click all the application icon you want to start and it can switch on.

#### **1.1.11 Close programs**

Press the icon  continuously or the ESC key, the device will close the active program. You can also use the corresponding function in the management currently running applications to close the program.

#### **1.1.12 Screen operation**

- Zoom in and zoom out : In applications which support zoom gestures, such as photo , IE browser, mail and map etc. you can zoom in or out the screen contents by opening or closing your two fingers.
- Rolling: In applications which support rolling gestures, such as photo , IE browser, mail and map etc. you can scroll the screen contents by sliding your fingers on the screen. If you want to stop the rolling screen, you just need to touch it.

#### **1.1.13 Home screen**

- Switch home screen

In the home state, you can change the home interface by sliding your fingers on the screen quickly.

- Custom Home Screen

Press the blank area on the home screen interface for a few seconds, it will appear Choose wallpaper from menu, then you can set the home screen.

- Move application icons on screen

Press the icons of applications you need to move for several seconds, it will enter the moving model (the icon of application will turn big), then drag the icon to expected position directly.

- Move application icons screen to screen

Press the icons of applications you need to move for several seconds, and you can drag the icon to the left side or right side.

- Delete applications

Press the icon of application you need to remove for several seconds, drag the icon to × (when the icon turns big, the bottom of screen will appear ×, then you can delete the application).

#### **1.1.14 Screen gestures**

- Click

When you need to input by the on-screen keyboard, you just need to select applications or press the button on the screen, then click the items.

- Press

When you want to start the available options of a project(such as web page

link), you only need to press the project.

- Slide

Sliding on the interface with your fingers to make vertical or horizontal dragging action.

- Drag

 
Before you start dragging, you must press the items with your fingers, and can not let fingers leave the screen before dragging to the expected position.

- Rotation

Changing the screen orientation by rotating the device laterally.  
Click Settings>Accessibility, you can set Auto rotate screen.


#### 1.1.15 Security Setting

You can set the unlock pattern, each time you open or wake your MID device, you must draw pattern to unlock the screen. in Settings>Security>Screenlock, it support many unlock ways.

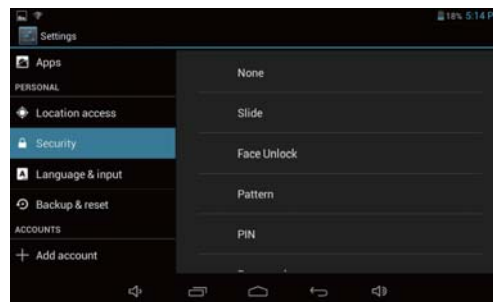


If use the pattern, as below:

 1. You must ensure the four-point connection when you draw the unlock pattern.

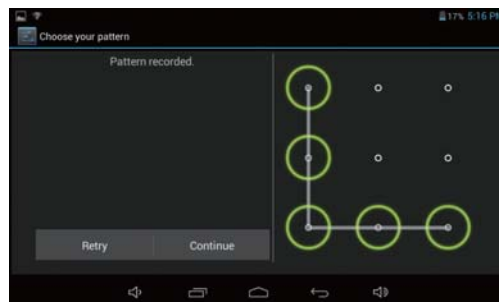

 2. Click Continue and draw again to confirm it

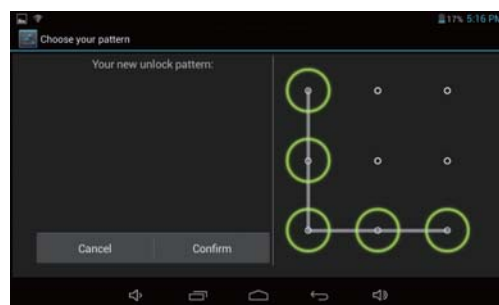

3. Click confirm to complete unlock pattern designing.

4. Each time you open or wake your MID device, you must draw pattern to unlock the screen.

#### 1.1.16 Display setting

Click Settings>Display, you can set the brightness/wallpaper/sleep/font size of the screen.

#### 1.1.17 Wireless And Network Settings

a) WIFI

Click Settings>Wi-Fi, turn on the wifi, the device will find available wireless network on the right interface



Select the expected wireless network, the system will directly connect the network or popup the password input window according to network access security settings. Please consult your wireless network administrator for the password.



### 1.3 Technical specifications

|                     |                                                          |                                   |
|---------------------|----------------------------------------------------------|-----------------------------------|
| Size                | L190 x W 110 x H 10mm                                    |                                   |
| Weight              | 0.27Kg                                                   |                                   |
| LCD Display         | 7 inch 1024*600- Multi-point capacitive touch screen     |                                   |
| PC Interface        | High speed Micro USB                                     |                                   |
| OS                  | Android 4.4                                              |                                   |
| Hard Drive Capacity | 8GB                                                      |                                   |
| System Memory       | 1G                                                       |                                   |
| Capacity Expansion  | Micro SD card 32GB(max)                                  |                                   |
| Music Function      | Format                                                   | Mp3, WMA, OGG, AAC, 3GP, WAV etc. |
|                     | Max. Resolutions                                         | 20Hz-20KHz                        |
| Video Function      | Format                                                   | Mp4, MKV, RMVB, AVI etc.          |
|                     | Max. Resolutions                                         | 1920 *1080                        |
|                     | Screen Ratio                                             | 16:9                              |
| Photo browse        | JPG/BMP/JPEG/etc.                                        |                                   |
| Wi-Fi               | Support                                                  | 802.11b/g/n                       |
|                     | Transmission rate                                        | Max 150Mbps                       |
|                     | Work Frequency                                           | 2.4GHz                            |
| Camera Function     | Front 0.3 megapixel camera, rear 2.0 megapixel           |                                   |
| Recording Function  |                                                          |                                   |
| Support             | Support                                                  |                                   |
| Temperature         | Room temp -50-100°F                                      |                                   |
| Languages           | English/Turkish/French/Spanish/German/Simplified/Chinese |                                   |

External 3G USB DONGLE wireless network card is not include in the package of the Tablet PC