

按文件1： 1尺寸打样
材质：128g 铜版纸
12.7 cm x 12 cm (5" x 4.75")

Do not ingest the battery. Chemical burn hazard.

(The remote control supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

©2017 MerchSource, LLC. All rights reserved.
Distributed by MerchSource, LLC, Irvine, CA 92618.
For technical support, please visit www.merchsource.com or call 1-800-374-2744.
The artwork and design of this manual are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notice from this manual.
Model Number 2011A
China Patent No. ZL201130504680.0
Printed in China

INSTRUCTIONS



IMPORTANT:
KEEP THIS INSTRUCTION MANUAL FOR REFERENCE
AS IT CONTAINS IMPORTANT SAFETY INFORMATION.


The Portable Electronic Key Finder is a device that makes finding keys simple. The everyday hassle of finding lost keys is eliminated with the touch of a button. You can count on an alarm to direct you to your keys. Whether your keys are lying close by or up to 45 feet away, the Portable Electronic Key Finder's wireless transmitter will locate your keys while being carried in-hand with ease. This package includes a remote transmitter, two key ring fobs, and a tabletop cradle for storage.

FOBS

Each requires one CR2032 button cell battery (included).

NOTE: There are four CR2032 button cell batteries included. Two must be installed prior to your first use and the other two are replacements. Follow these steps for first time installation or if the batteries need to be replaced.

1. Grasp the back cover and screw off counterclockwise.
See Figure A.
2. Insert a new battery into the metal slot, ensuring the "+" side of the battery is facing up. The FOB will make its characteristic beeping sound as it is inserted into the slot.
3. Replace the back cover by screwing it clockwise back onto the FOB.
See Figure B.

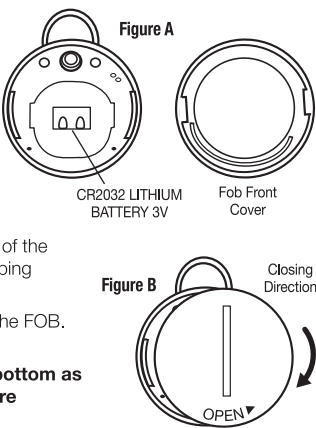

1. Attach the number-coded fobs to key rings or other appropriate devices to be located.
2. Press the corresponding number-coded button on the Remote Transmitter in order to locate the desired fob.
3. If the fob is in range (45 feet in an open area), it **will** emit an audible beep for a few seconds.
4. If no beep is heard, intermittently press the corresponding button. You may have to change your location if beep is **still** not heard and continue to intermittently press the corresponding button.

NOTE: The Remote Transmitter is portable, it can be removed from the provided Tabletop Cradle and carried with you to locate devices attached to a fob.


NOTE: The Remote Transmitter is portable, it can be removed from the provided Tabletop Cradle and carried with you to locate devices attached to a fob.

4

REMOTE TRANSMITTER

Requires 2 AAA batteries (not included).

1. Grasp the back cover of the transmitter and firmly slide it down to access the battery compartment inside.
2. Insert 2 "AAA" 1.5V batteries into the transmitter, aligning the polarity (+/-) of the batteries to match the labels provided inside the battery compartment.
3. Reattach the back cover of the transmitter. Start by positioning the cover on the device with the top edge aligned at the level of the top-most screws, and then firmly push the entire cover up.

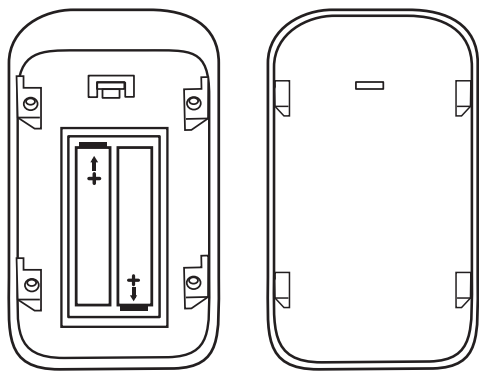

3

CONTENTS

Safety Information and Warnings	1
Parts	2
Battery Installation	3
Operation	4

All of the safety and operating instructions should be read, understood and followed before the unit is operated.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- This is not a children's product.
- Small parts, especially the button cell batteries, pose a choking hazard to young children.
- If the product appears cracked or broken in any manner, discontinue use and discard immediately.

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Insert batteries using the correct polarity. Do not short-circuit the supply terminal.
- Remove batteries when not in use. Recycle or dispose of exhausted batteries according to federal, state, and local laws. Do not dispose of batteries in a fire - they may leak or explode.
- Only use manufacturer specified battery(ies), charger(s) and/or adapter, if applicable, specified by the manufacturer.
- Always use, replace, and recharge (if applicable) batteries under adult supervision.

KEEP THIS PACKAGING FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

PARTS

1. Remote Transmitter
2. Transmitter Cradle
3. Key Fobs (2)
4. CR2032 Button Cell Batteries (4) (Not pictured)



1

2