

DISC MAINTENANCE

Depending on the quality of the disc, and the condition of the recording, some CD-R/CD-RW discs may not be playable.



How to remove the disc

 


How to hold the disc



How to clean the disc

1. Always place the compact disc in the disc tray with the label facing upward. (Compact discs can be played only on one side).
2. To move a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.
3. If the disc becomes dirty, wipe the surface from the center hole outward towards the outer edge with a soft, dry cloth.
4. Never use such chemicals as record spray, antistatic sprays or fluid, benzine or thinner to clean the discs. Such chemicals will do irreparable damage to the disc's plastic surface.
5. Discs should be returned to their cases after use to avoid serious scratches that could cause the laser pick up to skip.
6. Do not expose discs to direct sunlight or high humidity and temperature for extended periods. Long exposure to high temperatures will warp the discs.
7. Printable CD-R and CD-RW discs are not recommended, as the label side might be sticky and damage the unit.
8. Use a soft oil-based felt-tipped pen to write the information on the label side. Never use a ball-point or hard-tipped pen, as this may cause damage to the recorded side.
9. Do not use CDs with an irregular shape (octagonal, heart-shaped, business card size, etc). CDs of this sort can damage the unit.



10. If you have any doubts of using CD-R/CD-RW disc, read the precautions supplied with the disc, or contact the disc manufacturer directly.

AUX-IN OPERATION

External (auxiliary) audio sources such as tablets, smartphones or MP3 players, can connect to the CD Stereo System via aux-in.

The unit has 2 AUX INs. AUX IN 1 SOCKET at the front of the unit, AUX IN 2 SOCKET at the rear of the unit.

1. Press **POWER** button to turn the unit **ON** and then press **FUNCTION** button to select "**AUX1**" or "**AUX2**".
2. Set the volume to the minimum level with the **VOLUME KNOB**.
3. Plug the AUX IN cable (not included) into the AUX IN socket at the unit.
For AUX IN 2 SOCKET, plug one end of the AUX IN cable (not included) into the color coded AUX IN sockets at rear of the unit. Always make sure the white plug is connected to the white socket and the red plug in the red socket.
4. Plug the other end of the cable into the headphone or Line-Out jack of the external source.
5. Turn on the external audio device and set it to play. Turn the external audio device's volume up to 2/3. If necessary, adjust the volume on the CD Stereo System by turning the **VOLUME KNOB**.

BLUETOOTH OPERATION

External devices that have a built-in Bluetooth feature can connect wirelessly to the CD Stereo System.

GETTING CONNECTED

1. Press the **FUNCTION** button until the LED Display shows "**BLUE**".
2. Set the Bluetooth function of your external device to **ON** and begin searching for devices.
NOTE: The effective distance between your external device and this apparatus is 10 meters (33 feet).
3. Once "**ITCDS-5000a**" appears on the paired devices list of your external device, select it.
4. A beep will be heard that indicates a connection has been established.
5. A few seconds later your Bluetooth connection should be ready to use.

PLAYING MUSIC FROM AN EXTERNAL BLUETOOTH DEVICE

1. Follow the "GETTING CONNECTED" steps above to pair your external device.
2. Turn on the music player program on your external device and set it to play.
Normally, you can control music playback with the **PLAY/PAUSE**, **PREVIOUS BUTTON** and **NEXT BUTTON** on the CD Stereo System.
Note: Some function buttons may not work with all devices.

USING THE REMOTE CONTROL

The Remote Control Unit can operate the unit from a distance. When operating the remote control unit, point it towards the front panel of the unit.

- Even if the remote control unit is operated within the effective range, remote control operation may be impossible if there are any obstacles between the unit and the remote control.

- If the remote control unit is operated near other appliances which generate infrared rays, or if other remote control devices using infrared rays are used near the unit, it may operate incorrectly. Conversely, the other appliances may operate incorrectly.

TO ACTIVATE THE REMOTE CONTROL

The remote control comes with a cell battery already installed. To activate the battery, remove the transparent tab at the bottom of the remote control. The remote control is now ready to use.




BATTERY REPLACEMENT

If the distance required between the remote control unit and main unit decreases, the battery is exhausted. In this case, please replace the battery with a new one.

To Replace With a New Battery

1. Remove the battery compartment cover as per the illustration on the right.
2. Observe the correct polarity and install a 3Vdc lithium battery (CR2025).
3. Close the cover.

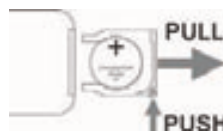

BATTERY PRECAUTIONS

- Be sure to insert the battery with correct positive + and negative - polarities.
- Refer to the precautions on the battery labels.
- When the remote control unit is not to be used for long periods of time (more than a month), remove the battery from the remote control unit to prevent it from leaking. If it leaks, carefully wipe away the liquid inside the battery compartment and replace the battery with a new one.
- Do not heat or disassemble batteries and never dispose of old batteries by throwing them into a fire.
- Do not dispose batteries into standard garbage disposal sites. Dispose of at available Battery Recycling Sites after fully discharging battery. Not doing so may violate local disposal laws and regulations. Please refer to local regulations for proper battery disposal.

TROUBLESHOOTING GUIDE

In case of trouble with the unit, please look through the problems below and see if you can solve them yourself before calling your dealer.

	PROBLEM	CAUSE	SOLUTION
WHOLE UNIT	Unit does not turn ON when POWER is pressed.	• Unit is unplugged	• Connect unit to AC power supply
	No sound comes out of the speakers.	• The external speakers are disconnected. • The volume is turned down (to MIN). • The input selector does not match the playback source.	• Connect the external speakers. • Adjust the volume. • Re-select the desired input source.
	The sound is noisy.	• The unit is too close to a TV set or another similar appliance.	• Turn off the TV or other appliance, and relocate the unit.
	The unit does not act as expected, or respond.	• External factors such as ESD (Electro-static discharge) affect the unit.	• Remove the power cord and all power supply devices. Then re-plug the unit after one minute.
RADIO UNIT	Cannot listen to any station, or signal appears weak.	• The station is not tuned-in properly. • A TV set is being used nearby and is interfering with the radio reception.	• Properly tune-in the desired station. • Turn-off the interfering TV set.
	The sound is distorted.	• The antenna is not positioned properly.	• Re-position the antenna until reception improves.
CD PLAYER	CD stops immediately after starting, or unit pauses or stops during play.	• The CD is inserted upside down. • The CD is dusty or dirty or there is condensation on the CD.	• Insert the CD with the printed side right-side up. • Carefully clean and dry the CD.
	No sound.	• The CD player is paused.	• Press the PLAY/PAUSE button.
	Specific CD is noisy, or playback stops or skips.	• The CD is scratched, damaged or warped. • The disc is very dirty.	• The CD should be changed. • Carefully clean the CD.
AUX	No sound output with external audio device plugged into AUX in jack.	• The unit is not switched to AUX mode • The AUX cable is not plugged in properly	• Ensure the unit is switched to AUX mode. • Plug in the AUX cable correctly.
Bluetooth	No sound	• The unit is not switched to Bluetooth mode • Your device's and/or the unit's volume is not turned up. • Your device is too far from the unit or there're some obstacles between your device and the unit.	• Ensure the unit is switched to BT mode. • Move your Bluetooth device closer to the unit • Turn up the volume on your portable device and/or the unit. • Turn OFF your Bluetooth device and the unit. Then power them both back ON.
	Sound has a lot of static	• Your device is too far away.	• Bring your device closer to the turntable.
	Unable to pair with a Bluetooth device	• Your device doesn't have Bluetooth connectivity. • The Bluetooth pairing is not successful.	• Confirm that your device is Bluetooth compatible. • Re-pair the unit and device again.

SPECIFICATIONS

AMPLIFIER Section

Output Power 25W + 25W
Frequency Response 60 to 20,000 Hz

TUNER Section

FM Section
Frequency Range 87.5 to 108 MHz

CD PLAYER Section

Frequency Response 60 to 20,000 Hz
Signal-to-Noise Ratio 55 dB (IEC-A)

SPEAKER SYSTEM Section

Impedance 8ohms
Input Power 25W (woofer)
5W / Max 10W (tweeter)

GENERAL

Power Requirements AC 120V ~ 60Hz
Power Consumption 60W
Dimensions (L x D x H) 360mm x 222mm x 110mm (approx.)

Loudspeakers Dimensions (L x D x H) 130mm x 217.5mm x 250mm (approx.)

Weight 5.53 kgs (approx.)
Standard Accessories Operating Instruction Booklet;
Remote control with battery;
A pair of external speakers;

BLUETOOTH Section

Bluetooth Version Bluetooth V2.1+EDR
Bluetooth Profiles A2DP, AVRCP
Bluetooth Frequency range 2.402GHz-2.480GHz
Operating Distance 10 meters (33 ft.)

Made in China.

NOTE: As a result of continual improvements, the design and specifications of this product are subject to change without notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment.

The device should be installed and operated with a minimum distance of 20cm between the radiator and your body.

INDUSTRY CANADA

This device complies with RSS247 of Industry Canada. Cet appareil se conforme à RSS247 de Canada d'Industrie. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

Radiation Exposure Statement: The product comply with the Canada mobile RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual.

The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Déclaration d'exposition aux radiations: Le produit est conforme aux limites d'exposition pour les appareils mobile RF pour les Etats-Unis et le Canada établies pour un environnement non contrôlé.

Le produit est sûr pour un fonctionnement tel que décrit dans ce manuel. La réduction aux expositions RF peut être augmentée si l'appareil peut être conservé aussi loin que possible du corps de l'utilisateur ou que le dispositif est réglé sur la puissance de sortie la plus faible si une telle fonction est disponible.

CALIFORNIA PROP 65 WARNING

"WARNING" This product contains a chemical known to the State of California to cause birth defects or other reproductive harm. For more information on these regulations and a list of chemicals, log on the following website address: <http://www.oehha.ca.gov/prop65.html>

DÉCLARATION DE LA FCC

Cet appareil est conforme à la partie 15 des règles de la FCC. Son fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences nuisibles. (2) Cet appareil doit accepter toute interférence reçue, y compris des interférences qui peuvent provoquer un fonctionnement non désiré.

NOTE : Cet équipement a été testé et considéré conforme aux limitations des périphériques numériques de classe B, en vertu de la partie 15 des règlements FCC. Ces limitations sont conçues pour fournir une protection raisonnable contre les interférences dangereuses dans le cadre d'une installation domestique. Cet équipement génère, utilise et peut émettre de l'énergie de fréquence radio et, s'il n'est pas installé et utilisé conformément aux instructions, peut provoquer des interférences dangereuses au niveau des communications radio. Cependant, il n'est pas garanti que des interférences ne se produisent pas dans une installation particulière. Si cet équipement provoque des interférences nuisibles à la réception de la radio ou de la télévision, ce qui peut être déterminé en éteignant et allumant l'équipement, l'utilisateur est encouragé à essayer de corriger l'interférence par une des mesures suivantes:

- Réorienter ou repositionner l'antenne de réception.
- Augmenter la distance entre l'appareil et le récepteur.
- Brancher l'appareil dans une prise d'un circuit différent de celui auquel est branché le récepteur.
- Consulter le revendeur ou un technicien spécialisé en radio-télévision pour obtenir de l'aide.

ATTENTION : Les changements ou modifications non expressément approuvés par la partie responsable de la conformité pourraient annuler l'autorité de l'utilisateur à utiliser cet équipement.

L'appareil ne doit pas être localisé ou fonctionner avec d'autres antennes ou transmetteurs.

Cet appareil est conforme aux limites d'exposition aux rayonnements de la FCC et de la CI pour un environnement incontrôlé.

L'appareil doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

INDUSTRY CANADA

This device complies with RSS247 of Industry Canada. Cet appareil se conforme à RSS247 de Canada d'Industrie. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

Radiation Exposure Statement: The product comply with the Canada mobile RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual.

The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Déclaration d'exposition aux radiations: Le produit est conforme aux limites d'exposition pour les appareils mobile RF pour les Etats-Unis et le Canada établies pour un environnement non contrôlé.

Le produit est sûr pour un fonctionnement tel que décrit dans ce manuel. La réduction aux expositions RF peut être augmentée si l'appareil peut être conservé aussi loin que possible du corps de l'utilisateur ou que le dispositif est réglé sur la puissance de sortie la plus faible si une telle fonction est disponible.

CALIFORNIA PROP 65 WARNING

"AVERTISSEMENT" Ce produit contient des substances chimiques connus au l'état de Californie pour provoquer des défauts de naissance ou autres dommages reproductifs. Pour avoir plus de renseignements sur ces règlements et une liste des produits chimiques, connectez-vous sur le site suivant :

<http://www.oehha.ca.gov/prop65.html>