 


GUIDE DE DÉMARRAGE RAPIDE / GUÍA DE INICIO RÁPIDO

 


CONTENU / CONTENIDO

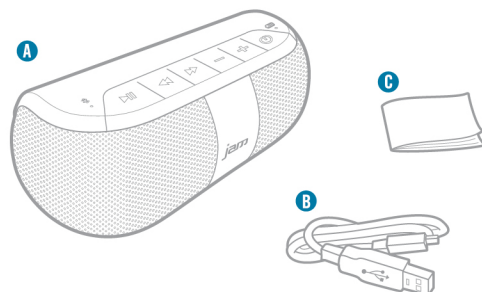

- A – Speaker**
Haut-parleur
Altavoz
- B – Charging cord**
Câble de recharge
Cable de recarga
- C – Legal card**
Carte de renseignements
importants
Tarjeta de asuntos legales


CHARGE / RECHARGE DE BATERÍAS

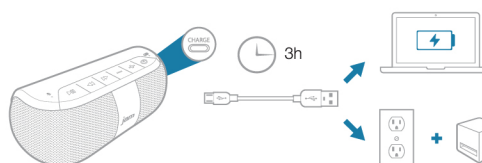

- EN For a complete user guide and to register your product, visit us online.**
FR Pour consulter un guide complet de l'utilisateur et enregistrer votre appareil, visitez notre site Web.
ES Para la Guía de Uso completa, y para registrar su producto con nosotros, por favor visitenos en nuestro sitio web.


- EN Charge 3 hours for up to 4 hours of play time. AC adapter not included.**
FR Une charge de 3 heures donne jusqu'à 4 heures d'autonomie. Adaptateur c.a. non inclus.
ES Una recarga de 3 horas entrega hasta 4 horas de reproducción. La fuente de poder no está incluida.

 CONNEXION BLUETOOTH® / CONECCIÓN BLUETOOTH®

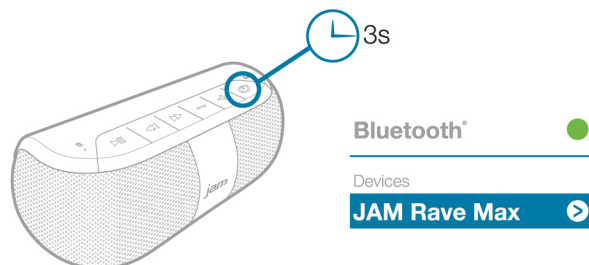


- EN** Turn on the speaker. Enable *Bluetooth* on your device and choose **JAM Rave Max** from the list. If prompted, enter code **"0000."**
- FR** Allumez le haut-parleur. Activez la fonction *Bluetooth* de votre appareil et choisissez **JAM Rave Max** dans la liste des signaux détectés. Si l'appareil vous le demande, inscrivez le code « 0000 ».
- ES** Encienda el altavoz. Habilite la función *Bluetooth* en su dispositivo y elija **JAM Rave Max** de la lista. Si se requiere, ingrese el código "0000".

 GUIDE VOCAL / INDICACIONES DE VOZ

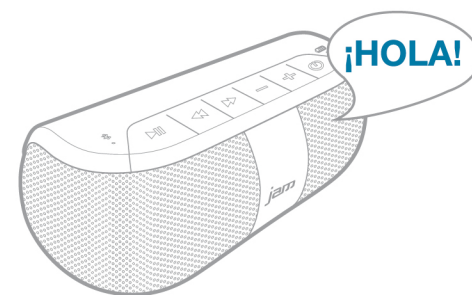


- EN To choose a different language, press + and – together.**
FR Pour choisir une autre langue, appuyer sur + et – en même temps.
ES Para elegir un idioma diferente, pulse + y – al mismo tiempo.

 TÉLÉPHONE À HAUT-PARLEUR / ALTAVOZ DEL TELÉFONO

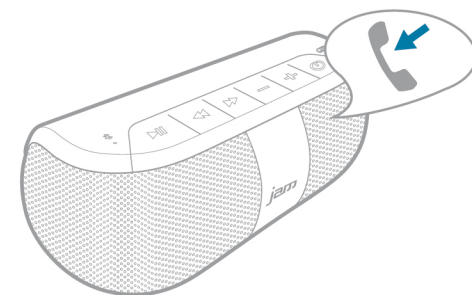

- EN Press play/pause to answer and end a call. See the full user guide for complete details.**
FR Appuyez sur le bouton lecture/pause pour répondre ou raccrocher. Consultez le guide complet de l'utilisateur pour obtenir de plus amples directives.

 COMMANDES / CONTROLES

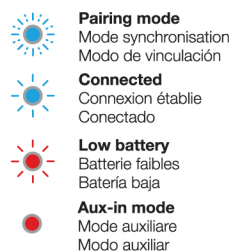Indicateur *Bluetooth* / Luz de *Bluetooth*

- A – Bluetooth light**
Indicateur *Bluetooth*
Luz de *Bluetooth*
- B – Play/pause**
Lecture/pause
Reproducir/pausa
- C – Previous track**
Piste précédente
Pista precedente
- D – Next track**
Piste suivante
Pista siguiente
- E – Volume down**
Diminution du volume
Bajar el volumen
- F – Volume up**
Augmentation du volume
Subir el volumen
- G – On/off**
Marche/arrêt
Encendido/apagado
- H – Charge light**
Indicateur de charge
Luz de recarga

Indicateur de charge / Luz de recarga



CONTACTEZ-NOUS / COMUNÍCANOS CON NOSOTROS

- USA**
-  cservice@jamaudio.com
-  1.888.802.0040
8:30am–7:00pm EST M–F / L–V
- CANADA**
-  cservice@homedicsgroup.ca
-  1.888.225.7378
8:30am–5:00pm EST M–F / L–V



FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: ZY9-HXP210

The logo for JAM RAVE MAX, featuring the word "jam" in a stylized, lowercase font with a dot above the 'j', and "RAVE MAX" in a bold, uppercase font below it.

PULL / TIRER / HALAR

