

SIMATIC NET

SCALANCE W1750D CLI

Function Manual

About this guide

1

Security recommendations

2

SCALANCE W CLI

3

CLI Commands

4

Appendix

A

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

DANGER

indicates that death or severe personal injury **will** result if proper precautions are not taken.

WARNING

indicates that death or severe personal injury **may** result if proper precautions are not taken.

CAUTION

indicates that minor personal injury can result if proper precautions are not taken.

NOTICE

indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

WARNING

Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Table of contents

1	About this guide	15
2	Security recommendations	17
3	SCALANCE W CLI.....	21
3.1	Saving Configuration Changes	24
3.2	Command Line Editing.....	25
3.3	Specifying Addresses and Identifiers in Commands	26
3.4	Typographic Conventions	27
3.5	Industry Online Support	28
4	CLI Commands	29
4.1	A.....	29
4.1.1	a-channel	29
4.1.2	aaa test-server	30
4.1.3	aaa dns-query-interval	31
4.1.4	aaa radius-attributes	32
4.1.5	aaa radius modifier	33
4.1.6	aeroscout-rtls	34
4.1.7	a-ant-pol.....	35
4.1.8	airgroup	36
4.1.9	airgroupservice	38
4.1.10	airwave-rtls.....	40
4.1.11	ale-report-interval	41
4.1.12	ale-server	42
4.1.13	alg	43
4.1.14	allow-new-aps	44
4.1.15	allowed-ap	45
4.1.16	a-max-clients.....	46
4.1.17	ams-backup-ip	47
4.1.18	ams-identity	48
4.1.19	ams-ip	49
4.1.20	ams-key	50
4.1.21	ap1x	51
4.1.22	ap-frequent-scan.....	52
4.1.23	ap-installation	53
4.1.24	ap1x-peap-user.....	54
4.1.25	apply.....	55
4.1.26	arm	56
4.1.27	attack.....	63
4.1.28	auth-failure-blacklist-time	64
4.1.29	auth-survivability cache-time-out	65
4.2	B.....	66
4.2.1	banner	66

4.2.2	blacklist-client.....	67
4.2.3	blacklist-time	68
4.2.4	ble	69
4.3	C.....	71
4.3.1	calea.....	71
4.3.2	cellular-uplink-profile	72
4.3.3	clarity	75
4.3.4	clear airgroup state statistics	76
4.3.5	clear	77
4.3.6	clear-cert	78
4.3.7	clock set	79
4.3.8	cluster-security	80
4.3.9	cluster-security logging	81
4.3.10	clock summer-time	82
4.3.11	clock timezone	84
4.3.12	commit.....	85
4.3.13	configure terminal.....	86
4.3.14	console	87
4.3.15	content-filtering.....	88
4.3.16	convert-aos-ap	89
4.3.17	copy.....	90
4.3.18	custom_var.....	92
4.4	D.....	93
4.4.1	deny-inter-user-bridging	93
4.4.2	deny-local-routing.....	94
4.4.3	device-id	95
4.4.4	disable-prov-ssid	96
4.4.5	disconnect-user	97
4.4.6	dot-11a-radio-disable	98
4.4.7	dot-11g-radio-disable	99
4.4.8	download-cert.....	100
4.4.9	dpi	102
4.4.10	dpi-error-page-url	103
4.4.11	dynamic-cpu-mgmt	104
4.4.12	dynamic-dns.....	105
4.4.13	dynamic-dns-ap.....	107
4.4.14	dynamic-dns-interval	108
4.4.15	dynamic-radius-proxy.....	109
4.4.16	dynamic-tacacs-proxy	110
4.5	E.....	111
4.5.1	enet-vlan	111
4.5.2	enet0-bridging	112
4.5.3	enet0-port-profile.....	113
4.5.4	enet1-port-profile.....	114
4.5.5	enet2-port-profile.....	115
4.5.6	enet3-port-profile.....	116
4.5.7	enet4-port-profile.....	117
4.5.8	extended-ssid.....	118
4.6	F	119
4.6.1	facebook.....	119

4.6.2	factory-ssid-enable.....	120
4.6.3	firewall	121
4.6.4	firewall-external-enforcement	122
4.7	G	124
4.7.1	g-channel	124
4.7.2	g-ant-pol.....	125
4.7.3	g-max-clients.....	126
4.7.4	gre per-ap-tunnel	127
4.7.5	gre primary.....	128
4.7.6	gre type	129
4.8	H.....	130
4.8.1	hash-mgmt-password	130
4.8.2	hash-mgmt-user	131
4.8.3	help	132
4.8.4	hostname	134
4.8.5	hotspot anqp-3-gpp-profile.....	135
4.8.6	hotspot anqp-domain-name-profile.....	136
4.8.7	hotspot-anqp-ip-addr-avail-profile.....	137
4.8.8	hotspot anqp-nai-realm-profile	139
4.8.9	hotspot anqp-nwk-auth-profile	142
4.8.10	hotspot anqp-roam-cons-profile.....	144
4.8.11	hotspot anqp-venue-name-profile.....	146
4.8.12	hotspot h2qp-conn-cap-profile	150
4.8.13	hotspot-h2qp-oper-name-profile	152
4.8.14	hotspot h2qp-oper-class-profile	153
4.8.15	hotspot h2qp-osu-provider-profile.....	154
4.8.16	hotspot h2qp-wan-metrics-profile	158
4.8.17	hotspot hs-profile	160
4.8.18	hs2-osu-icon-delete	172
4.8.19	hs2-osu-icon-download.....	173
4.9	I	174
4.9.1	iap-master	174
4.9.2	ids.....	175
4.9.3	ignore-image-check	183
4.9.4	inactivity-ap-timeout	184
4.9.5	inbound-firewall.....	185
4.9.6	internal-domains	188
4.9.7	iot transportProfile.....	189
4.9.8	iot usetransportProfile	191
4.9.9	ip-address	192
4.9.10	ip dhcp	193
4.9.11	ip dhcp pool.....	200
4.9.12	ip-mode	202
4.9.13	ipm	203
4.9.14	ip radius	204
4.10	L	205
4.10.1	l3-mobility	205
4.10.2	lacc-mode	207
4.10.3	led-off	208
4.10.4	login-session	209

4.10.5	logout	210
4.11	M	211
4.11.1	mas-integration	211
4.11.2	managed-mode-profile	213
4.11.3	managed-mode-sync-server	215
4.11.4	mesh	215
4.11.5	mgmt-accounting.....	217
4.11.6	mgmt-auth-server.....	218
4.11.7	mgmt-auth-server-load-balancing	219
4.11.8	mgmt-auth-server-local-backup	220
4.11.9	mgmt-user	221
4.11.10	mtu	222
4.12	N.....	223
4.12.1	name	223
4.12.2	ntp-server	224
4.13	O	225
4.13.1	opendns	225
4.13.2	openflow-server.....	226
4.13.3	organization.....	227
4.13.4	out-of-service-hold-on-time	228
4.14	P.....	229
4.14.1	pcap	229
4.14.2	per-ap-ssid	230
4.14.3	per-ap-vlan	231
4.14.4	pin-enable	232
4.14.5	pin-puk	233
4.14.6	pin-renew	234
4.14.7	ping	234
4.14.8	pppoe-uplink-profile	235
4.14.9	proxy	236
4.15	R.....	238
4.15.1	radius-vsa-redirect-url	238
4.15.2	reload	239
4.15.3	remove-blacklist-client	240
4.15.4	reset drt	241
4.15.5	restrict-corp-access.....	242
4.15.6	restrict-mgmt-access.....	243
4.15.7	rf dot11a-radio-profile.....	244
4.15.8	rf dot11g-radio-profile.....	248
4.15.9	rf-band	253
4.15.10	rf-zone	254
4.15.11	routing-profile	255
4.16	S.....	257
4.16.1	show 1xcert.....	257
4.16.2	show aaa dns-query-interval.....	258
4.16.3	show aaa fqdn-server-names	259
4.16.4	show about.....	260
4.16.5	show access-rule	261
4.16.6	show access-rule-all	263

4.16.7	show acl	265
4.16.8	show airgroup	266
4.16.9	show airgroupservice	277
4.16.10	show airgroupservice-ids	280
4.16.11	show ale	281
4.16.12	show ale stats	282
4.16.13	show alert global	283
4.16.14	show alg	285
4.16.15	show allowed-aps	286
4.16.16	show all monitor	287
4.16.17	show a-max-clients	288
4.16.18	show amp-audit.....	289
4.16.19	show ap-alert	295
4.16.20	show ap-env	296
4.16.21	show ap1x	297
4.16.22	show ap1xcert.....	298
4.16.23	show aps	298
4.16.24	show ap allowed-channels.....	301
4.16.25	show ap allowed-max-EIRP.....	302
4.16.26	show ap arm	303
4.16.27	show ap association.....	311
4.16.28	show ap bss-table	314
4.16.29	show ap cacert.....	316
4.16.30	show ap client-match-history	318
4.16.31	show ap client-match-live	319
4.16.32	show ap client-probe-report	320
4.16.33	show ap client-match-refused	321
4.16.34	show ap client-match-ssid-table	323
4.16.35	show ap client-match-ssid-table radio-mac	324
4.16.36	show ap client-match-triggers	325
4.16.37	show ap client-view.....	326
4.16.38	show ap debug airwave	328
4.16.39	show ap debug airwave-config-received	339
4.16.40	show ap debug airwave-data-sent.....	340
4.16.41	show ap debug airwave-events-pending	340
4.16.42	show ap debug airwave-restore-status.....	341
4.16.43	show ap debug airwave-signon-key	342
4.16.44	show ap debug airwave-state	343
4.16.45	show ap debug airwave-stats	346
4.16.46	show ap debug am-config.....	347
4.16.47	show ap debug auth-trace-buf	350
4.16.48	show ap debug ble-config	351
4.16.49	show ap debug ble-connect.....	353
4.16.50	show ap debug ble-daemon	353
4.16.51	show ap debug ble-relay.....	354
4.16.52	show ap debug ble-table.....	357
4.16.53	show ap debug ble-table assettags	359
4.16.54	show ap debug client-match	360
4.16.55	show ap debug client-stats	361
4.16.56	show ap debug client-table	364
4.16.57	show ap debug client-frame-history	366
4.16.58	show ap debug crash-info.....	367

4.16.59	show ap debug dhcp-packets	368
4.16.60	show ap debug dot1x-statistics	369
4.16.61	show ap debug driver-config	370
4.16.62	show ap debug lldp counters	375
4.16.63	show ap debug lldp neighbor	375
4.16.64	show ap debug lldp state	377
4.16.65	show ap debug mgmt-frames	377
4.16.66	show ap debug persistent-clients	379
4.16.67	show ap debug power-table	380
4.16.68	show ap debug radio-stats	381
4.16.69	show ap debug radius-statistics	384
4.16.70	show ap debug rfc3576-radius-statistics	385
4.16.71	show ap debug shaping-table	387
4.16.72	show ap debug spanning-tree	389
4.16.73	show ap debug stm-config	389
4.16.74	show ap debug stm-role	391
4.16.75	show ap debug system-status	392
4.16.76	show ap debug tacacs-statistics	392
4.16.77	show ap dot11k-beacon-report	394
4.16.78	show ap dot11k-nbrs	395
4.16.79	show ap flash-config	396
4.16.80	show ap mesh counters	397
4.16.81	show ap mesh link	399
4.16.82	show ap mesh neighbors	401
4.16.83	show ap monitor	403
4.16.84	show ap pmkcache	416
4.16.85	show ap virtual-beacon-report	417
4.16.86	show app-services	419
4.16.87	show audit-trail	421
4.16.88	show arm-channels	422
4.16.89	show arm config	424
4.16.90	show arp	426
4.16.91	show attack	428
4.16.92	show auth-surviveability	429
4.16.93	show backup-config	431
4.16.94	show banner	433
4.16.95	show blacklist-client	434
4.16.96	show ble-config	435
4.16.97	show calea config	437
4.16.98	show calea statistics	438
4.16.99	show captive-portal	439
4.16.100	show captive-portal-domains	441
4.16.101	show cellular	442
4.16.102	show cert all	445
4.16.103	show clarity config	446
4.16.104	show clarity history	447
4.16.105	show clients	450
4.16.106	show clock	454
4.16.107	show cluster-security	456
4.16.108	show configuration	462
4.16.109	show config-status	468
4.16.110	show console-setttings	470

4.16.111	show country-codes	471
4.16.112	show cpcert	475
4.16.113	show cpu	475
4.16.114	show datapath	477
4.16.115	show ddns	499
4.16.116	show delta-config	500
4.16.117	show derivation-rules	501
4.16.118	show dhcp-allocation	502
4.16.119	show dhcpc-opts	503
4.16.120	show dhcps config	503
4.16.121	show dhcp subnets	506
4.16.122	show distributed-dhcp-branch-counts	507
4.16.123	show domain-names	508
4.16.124	show dpi	509
4.16.125	show dpi-error-page-url	515
4.16.126	show dpi-stats	516
4.16.127	show drt state	520
4.16.128	show election	521
4.16.129	show external-captive-portal	523
4.16.130	show facebook	524
4.16.131	show fault	524
4.16.132	show firewall	526
4.16.133	show g-max-clients	526
4.16.134	show ids	527
4.16.135	show ids-detection config	530
4.16.136	show ids-protection config	531
4.16.137	show image	533
4.16.138	show inbound-firewall-rules	534
4.16.139	show interface counters	535
4.16.140	show iot transportProfile	536
4.16.141	show ip dhcp database	538
4.16.142	show ip igmp	539
4.16.143	show ip interface brief	540
4.16.144	show ip route	542
4.16.145	show ipv6 interface	543
4.16.146	show ipv6 route	544
4.16.147	show lacp status	545
4.16.148	show l3-mobility	546
4.16.149	show ldap-servers	551
4.16.150	show lhm	552
4.16.151	show log ap-debug	553
4.16.152	show log apifmgr	553
4.16.153	show log convert	554
4.16.154	show log debug	555
4.16.155	8show log openflow	555
4.16.156	show log papi-handler	556
4.16.157	show log drive	556
4.16.158	show log kernel	557
4.16.159	show log l3-mobility	557
4.16.160	show log network	559
4.16.161	show log pppd	559
4.16.162	show log rapper	560

4.16.163	show log rapper-brief	560
4.16.164	show log rapper-counter	561
4.16.165	show log sapd	562
4.16.166	show log security.....	563
4.16.167	show log system.....	564
4.16.168	show log upgrade.....	564
4.16.169	show log user	565
4.16.170	show log user-debug.....	565
4.16.171	show log vpn-tunnel.....	566
4.16.172	show log vpn-tunnel-primary.....	567
4.16.173	show log vpn-tunnel-backup	568
4.16.174	show log wireless	569
4.16.175	show memory	569
4.16.176	show mgmt-user.....	571
4.16.177	show network	572
4.16.178	show network-summary	574
4.16.179	show opendns	575
4.16.180	show out-of-service	576
4.16.181	show port status	576
4.16.182	show pppoe.....	577
4.16.183	show process	578
4.16.184	show proxy config	580
4.16.185	show radio config	581
4.16.186	show radio profile.....	583
4.16.187	show radius-redirect-url	585
4.16.188	show radius-servers support.....	585
4.16.189	show radius status	587
4.16.190	show radseccert.....	589
4.16.191	show running-config	590
4.16.192	show snmp-configuration	594
4.16.193	show snmp trap-queue	596
4.16.194	show spectrum-alert.....	597
4.16.195	show speed-test	598
4.16.196	show stats	599
4.16.197	show subscription-aps	608
4.16.198	show summary	609
4.16.199	show swarm	609
4.16.200	show supported-cert-formats	610
4.16.201	show syslog-level	611
4.16.202	show tacas-servers	612
4.16.203	show tech-support.....	614
4.16.204	show time-profile	614
4.16.205	show time-range.....	615
4.16.206	show tspec-calls.....	616
4.16.207	show uncommitted-config	617
4.16.208	show upgrade info.....	618
4.16.209	show uplink	619
4.16.210	show uplink-vlan.....	621
4.16.211	show url-visibility	622
4.16.212	show usb status	624
4.16.213	show user.....	625
4.16.214	show valid-channels.....	627

4.16.215	show version	629
4.16.216	show vpn	629
4.16.217	show vpn tunnels	632
4.16.218	show walled-garden	633
4.16.219	show wifi-uplink.....	634
4.16.220	show wired-port.....	636
4.16.221	show wired-port-settings	638
4.16.222	show wispr config.....	640
4.16.223	show xml-api-server	641
4.16.224	snmp-server	642
4.16.225	speed test	643
4.16.226	speed test <server>	645
4.16.227	subscription-ap.....	646
4.16.228	subscription-ap-enable.....	647
4.16.229	swarm-mode	647
4.16.230	syslocation	648
4.16.231	syslog-level	649
4.16.232	syslog-server.....	651
4.17	T	652
4.17.1	telnet	652
4.17.2	telnet-server	653
4.17.3	terminal-access.....	654
4.17.4	tftp-dump-server.....	655
4.17.5	time-range	655
4.17.6	traceroute	657
4.18	U.....	658
4.18.1	upgrade-drt	658
4.18.2	upgrade-image.....	659
4.18.3	uplink.....	660
4.18.4	uplink-vlan	664
4.18.5	url-visibility	665
4.18.6	usb-port-disable	666
4.18.7	user	667
4.19	V.....	668
4.19.1	version	668
4.19.2	virtual-controller	669
4.19.3	vpn backup.....	670
4.19.4	vpn fast-failover.....	671
4.19.5	vpn gre-outside	672
4.19.6	vpn hold-time	672
4.19.7	vpn ikepsk	674
4.19.8	vpn monitor-pkt-lost-cnt	674
4.19.9	vpn monitor-pkt-send-freq.....	675
4.19.10	vpn preemption	676
4.19.11	vpn primary	677
4.19.12	vpn reconnect-time-on-failure	678
4.19.13	vpn reconnect-user-on-failover	679
4.20	W.....	680
4.20.1	web-server	680
4.20.2	wifi0-mode.....	681

4.20.3	wifi1-mode	682
4.20.4	wired-port-profile	683
4.20.5	wlan access-rule	689
4.20.6	wlan auth-server	694
4.20.7	wlan captive-portal	697
4.20.8	wlan-external-captive-portal	699
4.20.9	wlan ldap-server	701
4.20.10	wlan ssid-profile	704
4.20.11	wlan sta-profile	725
4.20.12	wlan tacacs-server	726
4.20.13	wlan walled-garden	727
4.20.14	wlan wispr-profile	729
4.20.15	write	731
4.21	X	732
4.21.1	xml-api-server	732
4.22	Z	734
4.22.1	zonename	734
A	Appendix	735
A.1	Glossary of Terms	735
	Index	767

About this guide

This document describes the CLI command syntax and provides the following information for each command:

- **Command Syntax**—The complete syntax of the command.
- **Description**—A brief description of the command.
- **Syntax**—A description of the command parameters, the applicable ranges and default values, if any.
- **Usage Guidelines**—Information to help you use the command, including prerequisites, prohibitions, an related commands.
- **Example**—An example of how to use the command.
- **Command Information**—This table describes command modes and platforms for which this command is applicable.

The commands are listed in alphabetical order.

Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that may be implemented, please visit

Link: (<https://www.siemens.com/industrialsecurity>)

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customers' exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed under

Link: (<https://www.siemens.com/industrialsecurity>)

Security recommendations

To prevent unauthorized access, note the following security recommendations.

General

- You should make regular checks to make sure that the device meets these recommendations and/or other security guidelines.
- Evaluate your plant as a whole in terms of security. Use a cell protection concept with suitable products (<https://www.industry.siemens.com/topics/global/en/industrial-security/pages/default.aspx>).
- When the internal and external networks are disconnected, an attacker cannot access internal data from the outside. Therefore operate the device only within a protected network area.
- For communication via non-secure networks use additional devices with VPN functionality to encrypt and authenticate the communication.
- Terminate management connections correctly (WBM, Telnet, SSH etc.).

Physical access

- Restrict physical access to the device to qualified personnel

Software (security functions)

- Keep the software up to date. Check regularly for security updates of the product. You will find information on this on the Internet pages "Industrial Security (<https://www.siemens.com/industrialsecurity>)"
- Inform yourself regularly about security advisories and bulletins published by Siemens ProductCERT (<https://www.siemens.com/cert/en/cert-security-advisories.htm>).
- Only activate protocols that you really require to use the device.
- Use the security functions such as address translation with NAT (Network Address Translation) or NAPT (Network Address Port Translation) to protect receiving ports from access by third parties.
- Restrict access to the device with a firewall or rules in an access control list (ACL - Access Control List).
- If RADIUS authentication is via remote access make sure that the communication is within the secured network area or is via a secure channel.
- The option of VLAN structuring provides good protection against DoS attacks and unauthorized access. Check whether this is practical or useful in your environment.
- Enable logging functions. Use the central logging function to log changes and access attempts centrally. Check the logging information regularly.

- Configure a Syslog server to forward all logs to a central location.
- Use WPA2/ WPA2-PSK with AES to protect the WLAN.

Passwords

- Define rules for the use of devices and assignment of passwords.
- Regularly update passwords and keys to increase security.
- Change all default passwords for users before you operate the device.
- Only use passwords with a high password strength. Avoid weak passwords for example password1, 123456789, abcdefgh.
- Make sure that all passwords are protected and inaccessible to unauthorized personnel.
- Do not use the same password for different users and systems or after it has expired.

Keys and certificates

- This section deals with the security keys and certificates you require to set up HTTPS (Hypertext Transfer Protocol Secured Socket Layer).
- We strongly recommend that you create your own HTTPS certificates and make them available. There are preset certificates and keys on the device. The preset and automatically created HTTPS certificates are self-signed. We recommend that you use HTTPS certificates signed either by a reliable external or by an internal certification authority. The HTTPS certificate checks the identity of the device and controls the encrypted data exchange. You can install the HTTPS certificate via the SCALANCE W UI, see "Uploading Certificate".
- Handle user-defined private keys with great caution if you use user-defined SSH or SSL keys.
- Use the certification authority including key revocation and management to sign the certificates.
- Verify certificates and fingerprints on the server and client to avoid "man in the middle" attacks.
- We recommend that you use certificates with a key length of 2048 bits.
- Change keys and certificates immediately, if there is a suspicion of compromise.

Secure/non-secure protocols

- Avoid and disable non-secure protocols, for example Telnet and TFTP. For historical reasons, these protocols are still available, however not intended for secure applications. Use non-secure protocols on the device with caution.
- The following protocols provide secure alternatives:
 - SNMPv1/v2 → SNMPv3

Check whether use of SNMPv1 is necessary. SNMPv1 is classified as non-secure. Use the option of preventing write access. The product provides you with suitable setting options. If SNMP is enabled, change the community names. If no unrestricted

access is necessary, restrict access with SNMP. Use SNMPv3 in conjunction with passwords.

- HTTP → HTTPS
- Telnet → SSH
- SNMP → NTP
- Use secure protocols when access to the device is not prevented by physical protection measures.
- To prevent unauthorized access to the device or network, take suitable protective measures against non-secure protocols.
- If you require non-secure protocols and services, operate the device only within a protected network area.
- Restrict the services and protocols available to the outside to a minimum.

Available protocols per port

The following list provides you with an overview of the open ports on this device. The table includes the following columns:

- Protocol
All protocols that the device supports
- Port number
Port number assigned to the protocol
- Port status
 - Open: The port is always open and cannot be closed.
- Factory setting
 - Open: The factory setting of the port is "Open".
 - Closed: The factory setting of the port is "Closed".
- Authentication
Specifies whether or not the protocol is authenticated.

Protocol	Port number	Port status	Factory setting of the port	Authentication
Air Monitor	UDP/1144	open	close	yes
Airgroup	UDP/53536	open	close	yes
Airgroup Master to slave	UDP/53535	open	close	no
Bootps	UDP/67	open	open	no
Captive portal	TCP/8080	open	open	yes
DHCP	UDP/1067	open	open	no
	UDP/68	open	close	no
	UDP/4011	open	close	no

Protocol	Port number	Port status	Factory setting of the port	Authentication
Dnsmasq	UDP/one port in range 3000-3020	open	open	no
DTLS	UDP/4433	open	close	yes
HTTP	TCP/80	open	open	yes
	TCP/4343	open	open	yes
HTTPS	TCP/443	open	open	yes
	TCP/43430	open	close	yes
mDNS	UDP/5999	open	close	no
	UDP/5353	open	close	no
NTP	UDP/123	open	close	no
Proprietary	UDP/8209	open	close	no
	UDP/4434	open	open	no
	UDP/8211	open	open	no
Dynamic dns	UDP/5363	open	open	yes
Proprietary(dTable)	UDP/3799	open	close	no
	UDP/8612	open	open	no
RADIUS	UDP/1892	open	close	no
	UDP/2629	open	open	no
	UDP/1812	open	close	no
	UDP/2083	open	close	no
	UDP/1616	open	open	no
Radius-terms	UDP/2628	open	open	yes
SSH	TCP/22	open	open	yes
	TCP/2322	open	open	yes
Syslog	UDP/514	open	close	no
Telnet	TCP/23	open	close	yes
SNMPv1	UDP/161	open	open	no
	UDP/one Port in range 49152-65535	open	close	no
SNMPv3	UDP/161	open	open	yes
	UDP/one Port in range 49152-65535	open	close	yes

SCALANCE W CLI

SCALANCE W supports the use of Command Line Interface (CLI) for scripting purposes. You can access the SCALANCE W CLI through a Secure Shell (SSH).

To enable the SSH access to the SCALANCE W CLI:

1. From the SCALANCE W UI, navigate to **System > Show advanced options**.
2. Select **Enabled** from the **Terminal access** drop-down list.
3. Click **OK**.

Connecting to a CLI Session

On connecting to a CLI session, the system displays its host name followed by the login prompt. Use the administrator credentials to start a CLI session. For example:

```
(AP)
```

```
User: admin
```

```
Password: *****
```

If the login is successful, the privileged command mode is enabled and a command prompt is displayed. For example:

```
(AP) #
```

The privileged mode provides access to **show**, **clear**, **ping**, **traceroute**, and **commit** commands. The configuration commands are available in the configuration (config) mode. To move from privileged mode to the configuration mode, enter the following command at the command prompt:

```
(AP)# configure terminal
```

The configure terminal command allows you to enter the basic configuration mode and the command prompt is displayed as follows:

```
(AP) (config) #
```

The SCALANCE W CLI allows CLI scripting in several other sub-command modes to allow the users to configure individual interfaces, SSIDs, access rules, and security settings.

You can use the question mark (?) to view the commands available in a privileged mode, configuration mode, or sub-mode

Note

Although automatic completion is supported for some commands such as **configure terminal**, the complete **exit** and **end** commands must be entered at command prompt for successful execution.

Applying Configuration Changes

Each command processed by the Virtual Controller is applied on all the slave APs in a cluster. When you make configuration changes on a master AP in the CLI, all associated APs in the cluster inherit these changes and subsequently update their configurations. The changes configured in a CLI session are saved in the CLI context.

The CLI does not support the configuration data exceeding the 4K buffer size in a CLI session: therefore, Siemens recommends that you configure fewer changes at a time and apply the changes at regular intervals.

To apply and save the configuration changes at regular intervals, use the following command in the privileged mode:

```
(AP)# commit apply
```

To apply the configuration changes to the cluster, without saving the configuration, use the following command in the privileged mode:

```
(AP)# commit apply no-save
```

To view the changes that are yet to be applied, use the following command in the privileged mode:

```
(AP)# show uncommitted-config
```

To revert to the earlier configuration, use the following command in the privileged mode.

```
(AP)# commit revert
```

Example:

```
(AP) (config)# rf dot11a-radio-profile (AP)# show uncommitted-config
```

Configuration Sub-modes

Some commands in configuration mode allow you to enter into a sub-mode to configure the commands specific to that mode. When you are in a configuration sub-mode, the command prompt changes to indicate the current sub-mode.

You can exit a sub-command mode and return to the basic configuration mode or the privileged Exec (enable) mode at any time by executing the **exit** or **end** command.

Deleting Configuration Settings

Use the **no** command to delete or negate previously-entered configurations or parameters.

- To view a list of no commands, type **no** at the prompt in the relevant mode or sub-mode followed by the question mark. For example:

```
(AP) (config) # no?
```

- To delete a configuration, use the **no** form of a configuration command. For example, the following command removes a configured user role:

```
(AP) (config) # no user <username>
```

- To negate a specific configured parameter, use the **no** parameter within the command. For example, the following command deletes the PPPoE user configuration settings:

```
(AP) (config) # pppoe-uplink-profile
```

```
(AP) (pppoe_uplink_profile) # no pppoe-username
```

Using Sequence Sensitive Commands

The SCALANCE W CLI does not support positioning or precedence of sequence-sensitive commands. Therefore, Siemens recommends that you remove the existing configuration before adding or modifying the configuration details for sequence-sensitive commands. You can either delete an existing profile or remove a specific configuration by using the **no...** commands.

The following table lists the sequence-sensitive commands and the corresponding **no** command to remove the configuration-

Tabelle 3- 1 *Sequence-Sensitive Commands*

Sequence-Sensitive Command	Corresponding no command
opendns <username> <password>	no opendns
rule <dest> <mask> <match> <protocol> <start-port> <end-port> {permit deny src-nat dst-nat {<IPaddress> <port> <port>}} [<option1...option9>]	no rule <dest> <:mask> <match> <protocol> <start-port> <end-port> {permit deny src-nat dst-nat}
mgmt-auth-server <auth-profile-name>	no mgmt-auth-server <auth-profilename>
set-role <attribute>{{equals not-equals startswith ends-with contains} <operator> <role> value-of}	no set-role <attribute>{{equals not- equals starts-with ends-with contains} <operator> value-of} no set-role
set-vlan <attribute>{{equals not-equals startswith ends-with contains} <operator> <VLAN-ID> value-of}	no set-vlan <attribute>{{equals not- equals starts-with ends-with contains} <operator> value-of} no set-vlan
auth-server <name>	no auth-server <name>

3.1 Saving Configuration Changes

The *running-config* holds the current AP configuration, including all pending changes which are yet to be saved. To view the running-config of an AP, use the following command:

```
(AP) # show running-config
```

When you make configuration changes through the CLI, the changes affect the current running configuration only. To save your configuration changes, use the following command in the privileged Exec mode:

```
(AP)# write memory
```

Commands that Reset the AP

If you use the CLI to modify a currently provisioned radio profile, the changes take place immediately. A reboot of the AP is not required to apply the configuration changes. Certain commands, however, automatically force AP to reboot. Verify the current network loads and conditions before executing the commands that enforce a reboot of the AP, as they may cause a momentary disruption in service as the unit resets.

The `reload` command resets an AP.

3.2 Command Line Editing

The system records your most recently entered commands. You can review the history of your actions, or reissue a recent command easily, without having to retype it.

To view items in the command history, use the *up* arrow key to move back through the list and the *down* arrow key to move forward. To reissue a specific command, press **Enter** when the command appears in the command history. You can also use the command line editing feature to make changes to the command prior to entering it. The command line editing feature allows you to make corrections or changes to a command without retyping. The following table lists the editing controls. To use key shortcuts, press and hold the **Ctrl** button while you press a letter key.

Tabelle 3- 2 Line Editing Keys

Key	Effect	Description
Ctrl A	Home	Move the cursor to the beginning of the line.
Ctrl B or the left arrow	Back	Move the cursor one character left.
Ctrl D	Delete Right	Delete the character to the right of the cursor.
Ctrl E	End	Move the cursor to the end of the line.
Ctrl F or the right arrow	Forward	Move the cursor one character right.
Ctrl K	Delete Right	Delete all characters to the right of the cursor.
Ctrl N or the down arrow	Next	Display the next command in the command history.
Ctrl P or up arrow	Previous	Display the previous command in the command history.
Ctrl T	Transpose	Swap the character to the left of the cursor with the character to the right of the cursor.
Ctrl U	Clear	Clear the line.
Ctrl W	Delete Word	Delete the characters from the cursor up to and including the first space encountered.
Ctrl X	Delete Left	Delete all characters to the left of the cursor.

3.3 Specifying Addresses and Identifiers in Commands

This section describes addresses and other identifiers that you can reference in CLI commands.

Tabelle 3- 3 Addresses and Identifiers

Address/Identifier	Description
IP address	For any command that requires entry of an IP address to specify a network entity, use IPv4 network address format in the conventional dotted decimal notation (for example, 192.0.2.1).
Netmask address	For subnet addresses, specify a subnet mask in dotted decimal notation (for example, 255.255.255.0).
MAC address	For any command that requires entry of a device's hardware address, use the hexadecimal format (for example, 00:05:4e:50:14:aa).
SSID	A unique character string (sometimes referred to as a network name), consisting of no more than 32 characters. The SSID is case-sensitive (for example, WLAN-01).
BSSID	This entry is the unique hard-wireless MAC address of the AP. A unique BSSID applies to each frequency— 802.11a and 802.11g— used from the AP. Use the same format as for a MAC address.
ESSID	Typically the unique logical name of a wireless network. If the ESSID includes spaces, enclose the name in quotation marks.

3.4 Typographic Conventions

The following conventions are used throughout this document to emphasize important concepts:

Tabelle 3- 4 Typographical Conventions

Type Style	Description
<i>Italics</i>	This style is used for emphasizing important terms and to mark the titles of books.
Boldface	This style is used for command names and parameter options when mentioned in the text.
Commands	This fixed-width font depicts command syntax and examples of commands and command output.
<angle brackets>	In the command syntax, text within angle brackets represents items that you should replace with information appropriate to your specific situation. For example, ping <ipaddr> In this example, you would type “ping” at the system prompt exactly as shown, followed by the IP address of the system to which ICMP echo packets are to be sent. Do not type the angle brackets.
[square brackets]	In the command syntax, items enclosed in brackets are optional. Do not type the brackets.
{Item_A Item_B}	In the command examples, single items within curled braces and separated by a vertical bar represent the available choices. Enter only one choice. Do not type the braces or bars.
{ap-name <ap-name>} {ipaddr <ip-addr>}	Two items within curled braces indicate that both parameters must be entered together. If two or more sets of curled braces are separated by a vertical bar, like in the example to the left, enter only one choice. Do not type the braces or bars.

The following informational icons are used throughout this guide:

Note

Indicates helpful suggestions, pertinent information, and important things to remember.

CAUTION

Indicates a risk of damage to your hardware or loss of data.

WARNING

Indicates a risk of personal injury or death.

3.5 Industry Online Support

In addition to the product documentation, also check out the comprehensive online information platform of Siemens Industry Online Support at the following Internet address:

<https://support.industry.siemens.com/cs/en/>

Apart from news, there you will also find:

- Project information: Manuals, FAQs, downloads, application examples etc.
- Contacts, Technical Forum
- The option submitting a support query:
<https://support.industry.siemens.com/My/ww/en/requests>
- Our service offer:

Right across our products and systems, we provide numerous services that support you in every phase of the life of your machine or system - from planning and implementation to commissioning, through to maintenance and modernization.

You will find contact data on the Internet at the following address:

https://www.automation.siemens.com/aspa_app/?ci=yes&lang=en

CLI Commands

4.1 A

4.1.1 a-channel

Description

This command configures 5 GHz radio channels for a specific Access P.

Syntax

```
a-channel <channel> <tx-power>
```

Parameter	Description	Range
<channel>	Configures the specified 5 GHz channel	The valid channels for a band are determined by the AP regulatory domain.
<tx-power>	Configures the specified transmission power values. It also supports 0.1 dBm and negative values.	-51 dBm to 51 dBm

Usage Guidelines

Use this command to configure radio channels for the 5 GHz band for a specific AP.

Example

The following example configures the 5 GHz radio channel:

```
(AP) # a-channel 44 18
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.1 A

4.1.2 **aaa test-server**

Description

This command tests a configured authentication server.

Syntax

```
aaa test-server <servername> username <username> password <passwd> auth-type <type>
```

Parameter	Description
<servername>	Authentication server for which the authentication test must be run.
username <username>	Username to use to test the authentication server.
password <passwd>	Password to use to test the authentication server.
auth-type <type>	Authentication protocol type. Use PAP as the authentication type.

Usage Guidelines

This command verifies the status of RADIUS authentication between the AP and RADIUS or AAA server.

Example

The following example shows the output of the **aaa test-server** command:

```
Authentication is successful
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.1.3 aaa dns-query-interval

Description

This command configures the interval at which the dns server sends out a query.

Syntax

```
aaa dns-query-interval <interval>
```

```
no aaa dns-query-interval
```

Parameter	Description	Range	Default
<interval>	The time interval at which the query must be sent. The interval is ranged in minutes.	0 - 60 mins	15 mins

Usage Guidelines

Use this command to configure the time interval for sending out dns queries.

Example

The following example shows the output of the **aaa dns-query-interval** command:

```
20:4c:03:24:89:18 (config) # aaa dns-query-interval 15
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.1.4 aaa radius-attributes

Description

This command configures RADIUS attributes to statically configure values to be included in RADIUS Access- Requests and Accounting-Requests.

Syntax

```
aaa radius-attributes add <attribute> <attribute-id> {date|integer|ipaddr|string}  
[vendor <name> <vendor-id>]
```

Parameter	Description
add <attribute> <attribute-id>	adds the specified attribute name (alphanumeric string), associated attribute ID (integer), and type (date, integer, IP address, or string).
date	Adds a date attribute
integer	Adds a integer attribute
ipaddr	Adds a ip address attribute
string	Adds a date attribute
vendor	(Optional) Display attributes for a specific vendor name and vendor ID.

Usage Guidelines

Add RADIUS attributes for use in SDRs. Use the **show aaa radius-attributes** command to display a list of the current RADIUS attributes recognized by the Mobility Master. To add a RADIUS attribute to the list, use the **aaa radius-attributes** command.

Example

The following command adds the VSA SCALANCE W-User-Role:

```
(host) (config)# aaa radius-attributes add SCALANCE W-User-Role 1 string vendor  
Siemens 4239
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.1.5 aaa radius modifier

Description

This command configures the RADIUS modifier profile to customize the attributes that are included, excluded and modified in the RADIUS request before it is sent to the authentication server.

Syntax

```
aaa radius-attributes modifier <profile_name>
```

Parameter	Description
<profile_name>	The specified RADIUS modifier profile name
clone	Copy data from another Radius Modifier Profile.
exclude	Attribute to be excluded in RADIUS request.
include	Authentication protocol type. Use PAP as the authentication typeAttribute/Value to be included in RADIUS request.
no	Delete Command

Usage Guidelines

Use the **show aaa radius modifier** command to display a list of RADIUS modifier profiles . To create a RADIUS modifier profile with customized attributes, use the **aaa radius-attributes** command.

Example

Example for Included attribute

```
(host) [md](config) #aaa radius-attributes add BW-Area-Code 18 integer vendor Boingo 22472
```

```
(host) [md](Radius Modifier Profile "radmodifier1") # include BW-Area-Code static "212"
```

```
(host) [md](Radius Modifier Profile "radmodifier1") # no include BW-Area-Code
```

Example for excluded attribute

```
(host) (config) #aaa radius-attributes add BW-Area-Code 18 integer vendor Boingo 22472
```

```
(host) (Radius Modifier Profile "radmodifier1") # exclude BW-Area-Code
```

```
(host) (Radius Modifier Profile "radmodifier1") # no exclude BW-Area-Code
```

Example for modified attribute

Default attributes to carry to radius server can be modified with include option.

```
(host) Radius Modifier Profile "radmodifier1") # include "Siemens-location-id" static "Shim- office"
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.1.6 aeroscout-rtls

Description

This command configures the Aeroscout RTLS settings for SCALANCE W and sends the RFID tag information to an Aeroscout RTLS server.

Syntax

```
aeroscout-rtls <addr> <Port> [include-unassoc-sta]
```

no...

Parameter	Description	Default
<addr>	IP address of the Aeroscout RTLS server to which the location reports are sent.	—
<Port>	Port number of the Aeroscout RTLS server to which the location reports are sent.	—
[include-unassoc-sta]	Includes the client stations not associated to any AP when mobile unit reports are sent to the Aeroscout RTLS server.	Disabled
no	Removes the Aeroscout RTLS configuration.	—

Usage Guidelines

This command allows you to integrate Aeroscout RTLS server with SCALANCE W by specifying the IP address and port number of the Aeroscout RTLS server. When enabled, the RFID tag information for the stations associated with an AP are sent to the AeroScout RTLS. You can also send the RFID tag information for the stations that are not associated with any AP.

Example

The following example configures the Aeroscout RTLS server:

```
(AP) (config)# aeroscout-rtls 192.0.2.2 3030 include-unassoc-sta
(AP) (config)# end
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.1.7 a-ant-pol

Description

This command configures the antenna polarization value for 5 GHz radio channels.

Syntax

```
a-ant-pol <pol>
```

Parameter	Description	Range
<pol>	Denotes the antenna polarization value for 5 GHz radio channel. 0: Co-Polarized radio ID 1: Cross-Polarized radio ID	0 or 1

Usage Guidelines

Use this command to set the antenna polarization value for 5 GHz radio channel.

Example

The following example configures the antenna polarization value for a 5 GHz radio channel:

```
(AP)# a-ant-pol 0
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.1.8 airgroup

Description

This command configures the AirGroup settings on an AP.

Syntax

```
airgroup cppm
    cppm-query-interval
    cppm-server disable
    enable
    enable-guest-multicast multi-swarm
no
```

Parameter	Description	Range	Default
cppm	Enforces the discovery of the ClearPass Policy Manager registered devices. When enabled, only devices registered with ClearPass PolicyManager will be discovered by Bonjour® or DLNA devices, based on the ClearPass Policy Manager policy configured.	—	Enabled
cppm-query-interval <interval>	Configures a time interval at which SCALANCE W sends a query to ClearPass Policy Manager for mapping the access privileges of each device to the available services.	1-24	10 hours
cppm-server <server-name>	Configures the ClearPass Policy Manager server information for AirGroup policy.	—	—
disable	Disables the AirGroup feature.	—	—
enable [dlna-only mdns-only]	Enables the mDNS or DLNA or both. When dlna-only command is executed with enable , the DLNA support is enabled for AirGroup enabled devices. When mdns-only command is executed with enable , the Bonjour support is enabled for AirGroup enabled devices.	—	—
enable-guest-multicast	Allows the users to use the Bonjour or DLNA services enabled in a guest VLAN. When enabled, the Bonjour or DLNA devices will be visible only in the guest VLAN and AirGroup will not discover or enforce policies in guest VLAN.	—	—

Parameter	Description	Range	Default
multi-swarm	Enables inter cluster mobility. When enabled, the AP shares the DNS database information with the other clusters. The AirGroup records in the Virtual Controller can be shared with all the Virtual Controllers specified for L3 Mobility.	—	Disabled
no...	Removes the configuration settings for parameters under the airgroup command.	—	—
no airtgroup	Removes the AirGroup configuration.	—	—

Usage Guidelines

Use this command to configure the AirGroup, the availability of the AirGroup services, and ClearPass Policy Manager servers.

Example

The following example configures an AirGroup profile:

```
(AP) (config)# airtgroup
(AP) (airgroup)# enable
(AP) (airgroup)# cppm enforce-registration
(AP) (airgroup)# cppm-server Test
(AP) (airgroup)# cppm-query-interval 10
(AP) (airgroup)# enable-guest-multicast
(AP) (airgroup)# multi-swarm
(AP) (airgroup)# end
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and AirGroup configuration sub-mode.

4.1.9 airgroupservice

Description

This command configures the availability of AirGroup services for the AP clients.

Syntax

```
airgroupservice <airgroupservice>

    description <description>

    disable

    disallow-role <role>

    disallow-vlan <VLAN-ID>

    enable

    id <AirGroupservice-ID>

    no...
```

Parameter	Description	Range
<airgroupservice>	Specifies the AirGroup service to configure. The following pre-configured services are available for AP clients: • AirPlay™— Apple® AirPlay allows wireless streaming of music, video, and slideshows from your iOS device to Apple TV® and other devices that support the AirPlay feature. • AirPrint™— Apple® AirPrint allows you to print from an iPad®, iPhone®, or iPod® Touch directly to any AirPrint compatible printers. • iTunes— iTunes service is used by iTunes Wi-Fi sync and iTunes home-sharing applications across all Apple® devices. • RemoteMgmt— Use this service for remote login, remote management, and FTP utilities on Apple® devices. • Sharing— Applications such as disk sharing and file sharing, use the service ID that are part of this service on one or more Apple® devices. • ChromeCast—ChromeCast service allows you to use a ChromeCast device to play audio or video content on a high definition television by streaming content through Wi-Fi from the Internet or local network. • DLNA Media—Applications such as Windows Media Player use this service to browse and play media content on a remote device. • DLNA Print—This service is used by printers that support DLNA. You can allow all services or add custom services. Up to 10 services can be configured on an AP.	—
description <description>	Adds a description to the AirGroup service profile.	—
disable	Disables AirGroup services for the profile.	—

Parameter	Description	Range
<code>disallow-role <role></code>	Restricts the user roles specified for role from accessing the AirGroup service.	Disab d
<code>disallow-vlan <VLAN-ID></code>	Restricts the AirGroup servers connected on the specified VLANs from being discovered.	Disab d
<code>enable</code>	Enables the AirGroup service for the profile.	—
<code>id <airgroupserviceid></code>	Allows you to specify the AirGroup service ID corresponding to the service that you are trying to configure. NOTE: The service IDs cannot be added for the pre- configured services.	—
<code>no...</code>	Removes the AirGroup service configuration.	—

Usage Guidelines

Use this command to enforce AirGroup service policies and define the availability of a services for an AirGroup profile. When configuring AirGroup service for an AirGroup profile, you can also restrict specific user roles and VLANs from availing the AirGroup services.

Example

The following example configures AirGroup services:

```
(AP) (config) # airgroupservice AirPlay
(AP) (airgroup-service) # description AirPlay Service
(AP) (airgroup-service) # disallow-role guest
(AP) (airgroup-service) # disallow-vlan 200
(AP) (airgroup-service) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and AirGroup services configuration sub-mode.

4.1.10 airwave-rtls

Description

This command integrates AirWave RTLS settings for SCALANCE W and sends the RFID tag information to an AirWave RTLS server with the RTLS feed to accurately locate the wireless clients.

Syntax

```
airwave-rtls <addr> <Port> <key> <frequency> [include-unassoc-sta]
```

```
no...
```

Parameter	Description	Default
<addr>	Configures the IP address of the AirWave RTLS server.	—
<Port>	Configures the port for the AirWave RTLS server.	—
<key>	Configures key for service authorization.	—
<frequency>	Configures the frequency at which packets are sent to the RTLS server in seconds.	5
include-unassoc-sta	When enabled, this option sends mobile unit reports to the AirWave RTLS server for the client stations that are not associated to any AP (unassociated stations).	Disabled
no...	Removes the specified configuration parameter.	—

Usage Guidelines

Use this command to send the RFID tag information to AirWave RTLS. Specify the IP address and port number of the AirWave server, to which the location reports must be sent. You can also send reports of the unassociated clients to the RTLS server for tracking purposes

Example

The following command enables AirWave RTLS:

```
(AP) (config) # airwave-rtls ams-ip 192.0.2.3 3030 pass@1234 5 include-unassoc-st
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.1.11 ale-report-interval

Description

This command configures the interval at which an AP sends data to the ALE server.

Syntax

```
ale-report-interval <seconds>
```

```
no...
```

Parameter	Description	Range	Default
ale-report-interval <seconds>	Configures an interval at which the Virtual Controller can report the AP and client details to the ALE server.	6–60 seconds	30
no...	Removes the specified configuration parameter.	—	—

Usage Guidelines

Use this command to specify an interval for AP and ALE server communication.

Example

The following example configures the ALE server details:

```
(AP) (config) # ale-report-interval 60
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.1.12 ale-server

Description

This command configures ALE server details for AP integration with ALE.

Syntax

```
ale-server <server>
```

```
no...
```

Parameter	Description
ale-server <server>	Allows you to specify the FQDN or IP address of the ALE server.
no...	Removes the specified configuration parameter.

Usage Guidelines

Use this command to enable an AP for ALE support.

Example

The following example configures the ALE server details:

```
(AP) (config)# ale-server AleServer1
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.1.13 alg

Description

This command allows you to modify the configuration settings for ALG protocols enabled on an AP. An application-level gateway consists of a security component that augments a firewall or NAT used in a network.

Syntax

```
alg
    sccp-disable
    sip-disable
    vocera-disable
    no...
```

Command/Parameter	Description	Default
sccp-disable	Disables the SCCP.	Enabled
sip-disable	Disables the SIP for VOIP and other text and multimedia sessions.	Enabled
vocera-disable	Disables the VOCERA protocol.	Enabled
no...	Removes the specified configuration parameter.	—

Usage Guidelines

Use this command to functions such as SIP, Vocera, and Cisco Skinny protocols for ALG.

Example

The following example configures the ALG protocols:

```
(AP) (config) # alg
(AP) (ALG) # sccp-disable
(AP) (ALG) # no sip-disable
(AP) (ALG) # no vocera-disable
(AP) (ALG) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and ALG configuration sub-mode.

4.1.14 allow-new-aps

Description

This command allows the new access points to join the AP cluster.

Syntax

```
allow-new-aps
```

```
no...
```

Parameter	Description
allow-new-aps	Allows new access points in the domain.
no	Removes the specified configuration parameter.

Usage Guidelines

Use this command to allow the new access points to join the AP cluster. When this command is enabled, only the licensed slave APs can join the cluster.

Example

The following command allows the new APs to join the cluster.

```
(AP) (config) # allow-new-aps
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.1.15 allowed-ap

Description

This command allows an AP to join the AP cluster.

Syntax

```
allowed-ap <MAC-address>
```

```
no...
```

Parameter	Description
allowed-ap <MAC-address>	Specifies the MAC address of the AP that is allowed to join the cluster.
no...	Removes the specified configuration parameter.

Usage Guidelines

Use this command to allow an AP to join the cluster.

Example

The following command configures an allowed AP:

```
(AP) (config) # allowed-ap 01:23:45:67:89:AB
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.1.16 a-max-clients

Description

This command configures the maximum number of clients allowed for an SSID profile on a 5 GHz radio channel.

Syntax

```
a-max-clients <ssid_profile> <max-clients>
```

Parameter	Description	Range
<ssid_profile>	Denotes the SSID profile for which the maximum clients limit is to be configured.	—
<max-clients>	Denotes the maximum number of clients that can be configured on the 5 GHz radio channel of the AP.	1 to 255.

Usage Guidelines

Use this command to set the maximum number of clients allowed to connect to 5 GHz radio channels for a specific SSID profile. This is a per-AP and per-Radio configuration.

Example

The following example configures the maximum number of clients for a 5 GHz radio channel:

```
(AP)# a-max-clients test1 35
```

Command Information

Access Point Platform	Command Mode
All Platforms	Privileged EXEC mode

4.1.17 ams-backup-ip

Description

This command adds the IP address or domain name of the backup AirWave Management server.

Syntax

```
ams-backup-ip <IP-address or domain name>
```

```
no...
```

Parameter	Description
<IP-address or domain name>	Configures the IP address or domain name of the secondary AirWave Management Server.
no...	Removes the specified configuration parameter.

Usage Guidelines

Use this command to add the IP address or domain name of the backup AirWave Management Server. The backup server provides connectivity when the AirWave primary server is down. If the AP cannot send data to the primary server, the Virtual Controller switches to the backup server automatically.

Example

The following command configures an AirWave backup server.

```
(AP) (config)# ams-backup-ip 192.0.2.1
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.1.18 **ams-identity**

Description

This command uniquely identifies the group of APs managed or monitored by the AirWave Management console. The name can be a location, vendor, department, or any other identifier.

Syntax

```
ams-identity <Name>
```

Parameter	Description
<Name>	Configures a name that uniquely identifies the AP on the AirWave Management server. The name defined for this command will be displayed under the Groups tab in the AirWave UI.

Usage Guidelines

Use this command to assign an identity for the APs monitored or managed by the AirWave Management Server.

Example

The following command configures an AirWave identifier:

```
(AP) (config)# ams-identity aruba
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.1.19 ams-ip

Description

This command configures the IP address or domain name of the AirWave Management console for an AP.

Syntax

```
ams-ip <IP-address or domain name>
```

no...

Parameter	Description
<IP-address or domain name>	Configures the IP address or domain name of an AirWave Management server for an AP.

Usage Guidelines

Use this command to configure the IP address or domain name of the AMS console for an AP.

Example

The following command configures the AirWave Management Server.

```
(AP) (config) # ams-ip 192.0.1.2
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.1.20 ams-key

Description

This command assigns a shared key for service authorization.

Syntax

```
ams-key <key>
```

```
no...
```

Parameter	Description
<key>	Authorizes the first Virtual Controller to communicate with the AirWave server.
no...	Removes the specified configuration parameter.

Usage Guidelines

Use this command to assign a shared key for service authorization. This shared key is used for configuring the first AP in the AP network.

Example

The following command configures the shared key for the AirWave management server.

```
(AP) (config) # ams-key key@789
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.1.21 ap1x

Description

This command sets the 802.1X authentication type on the uplink ports of AP.

Syntax

```
ap1x {peap|tls {tpm|user}} [validate-server]
```

```
no...
```

Parameter	Description
peap	Configures PEAP based 802.1X authentication type.
tls	Configures TLS based 802.1X authentication type.
tpm	Configures a factory- installed TPM certificate for AP authentication.
validate-server	Validates the authentication server credentials against the CA certificate in the AP database.
no...	Removes the configuration.

Usage Guidelines

Use this command to configure 802.1X authentication on uplink ports of an AP, so that the APs can authenticate as 802.1X supplicant against the wired ports.

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.1.22 ap-frequent-scan

Description

This command enables an AP to search for a new environment, triggering the ARM profile to perform frequent scanning of transmission signals in a short span of time. Once the frequent scanning is complete, the ARM selects a valid channel of transmission.

Syntax

```
ap-frequent-scan <band>
```

Parameter	Description	Range
band	Sets a frequency band of the transmission signal during frequent scanning. NOTE: Client connection is impacted for a few seconds when the frequent scanning is in progress. The connection is re-established after the scanning is complete. Typically, a frequent scanning session lasts for less than 10 seconds.	2.4, 5.0, all

Usage Guidelines

Execute this command to enable the AP to perform frequent scanning of transmission signals, and to select a valid channel for transmission.

The following checks must be performed before scanning:

- The DFS channels are skipped.
- The AP is on stand-alone mode.
- The **client-aware** parameter is disabled by executing the **arm** command.

Example

The following example triggers the ARM to perform frequent scanning on a 2.4 GHz frequency band radio profile:

```
(AP) # ap-frequent-scan 2.4
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.1.23 ap-installation

Description

This command tests a configured authentication server.

Syntax

```
ap-installation default|indoor|outdoor
```

Parameter	Description	Range	Default
ap-installation	Specify the type of installation (indoor or outdoor). The default parameter automatically selects an installation mode based upon the AP model type.	default indoor outdoor	default

Usage Guidelines

Use this command to provision an outdoor AP into an indoor AP or vice versa. The AP needs to be rebooted for the configuration to take effect.

Example

The following example changes the installation type of the AP from default to outdoor:

```
(AP) # ap-installation outdoor
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.1.24 ap1x-peap-user

Description

This command configures the user name and password variables to set the AP as a 802.1X supplicant to authenticate against the wired ports

Syntax

```
ap1x-peap-user <ap1xuser> <password>
```

```
no...
```

Parameter	Description
<ap1xuser>	Configures the user name variable for AP to authenticate against the wired uplink ports with 802.1X authentication enabled.
<password>	Configures the password variable for AP to authenticate against the wired uplink ports with 802.1X authentication enabled.
no...	Removes the configuration.

Usage Guidelines

Use this command to configure and store the user name and password variables in AP flash. This configuration is required for AP to authenticate as 802.1X supplicant against the wired ports that are configured to use 802.1X protocols for authenticating clients.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.1.25 **apply**

Description

This command is used to save or apply the configuration settings on the AP.

Syntax

```
apply {cplogo-install| cplogo-uninstall| debug-command| delta-config}
```

Parameter	Description
cplogo-install	Installs the captive portal logo on the AP.
cplogo-uninstall	Uninstalls the captive portal logo on the AP.
debug-command	Applies the configuration settings from the debug command .
delta-config	Applies the configuration settings from the delta-config command.

Usage Guidelines

Use this command to apply the current configuration settings on the AP.

Example

The following example installs the captive portal logo on an AP.

```
(AP) (config)# apply cplogo-ininstall http://cp.logo.com
```

The following example uninstalls the captive portal logo on an AP.

```
(AP) (config)# apply cplogo-ininstall http://cp.logo.com
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode.

4.1.26 arm

Description

This command assigns an ARM profile for an AP and configures ARM features such as band steering, spectrum load balancing, airtime fairness mode, and access control features.

Syntax

```
arm
    80mhz-support
    a-channels <channel>
    air-time-fairness-mode {<default-access>| <fair-access>| <preferred-access>}
    backoff-time <secs>
    band-steering-mode {balance-bands|prefer-5ghz| force-5ghz| disable}
    channel-quality-aware-arm-disable
    channel-quality-threshold
    channel-quality-wait-time
    client-aware
    client-match [bad-snr <snr> | [calc-interval <interval>| calc-threshold <thresh>|
client- thresh <thresh> | debug <level>| good-snr <snr> | holdtime <second> | max-
adoption
    <adopt>| max-request <req>| nb-matching <percentage> |report-interval <interval>|
restriction-timeout slb-mode <mode>|snr-thresh <snr>| vbr-entry-age <age>]
    error-rate-threshold <percent>
    error-rate-wait-time <secs>
    free-channel-index <idx>
    g-channels <channel>
    ideal-coverage-index <idx>
    max-tx-power
    min-tx-power
    scanning
    spectrum-load-balancing [calc-interval <Seconds> |calc-threshold <threshold> | nb-
matching <Percentage>]
    wide-bands {<none>| <all>| <2.4>| <5>}
```


no...

Command/Parameter	Description	Range	Default
80mhz-support	Enables the use of 80 MHz channels on APs with 5 GHz radios, which support a VHT. NOTE: Only the APs that support 802.11ac can be configured with 80 MHz channels.	—	—
a-channels <a-channel>	Configures 5 GHz channels.	—	—
air-time-fairness-mode {<default-access> <fair-access> <preferred-access>}	Allows equal access to all clients on the wireless medium, regardless of client type, capability, or operating system and prevents the clients from monopolizing resources. You can configure any of the following modes: • default- access—To provide access based on client requests. When this mode is configured, the per user and per SSID bandwidth limits are not enforced. • fair- access—To allocate Airtime evenly across all the clients. • preferred- access—To set a preference where 802.11n clients are assigned more airtime than 802.11a or 802.11g. The 802.11a or 802.11g clients get more airtime than 802.11b. The ratio is 16:4:1.	default-access, fair-access, preferred-access default- access	default-access
backoff-time <secs>	Configures the time when an AP backs off after requesting a new channel or power.	10 - 3600	240

Command/Parameter	Description	Range	Default
band-steering-mode {<balance-bands> <prefer-5ghz> <force-5ghz> <disable>	Assigns the dual-band capable clients to the 5 GHz band on dual-band. It reduces co-channel interference and increases available bandwidth for dual-band clients, because there are more channels on the 5 GHz band than on the 2.4 GHz band. You can configure any of the following band-steering modes: - balance-bands—To allow the APs to balance the clients across the two 2.4 GHz and 5 GHz radio and to utilize the available bandwidth. - prefer-5ghz—To allow the AP to steer the client to 5 GHz band (if the client is 5 GHz capable). However, the AP allows the client connection on the 2.4 GHz band if the client persistently attempts for 2.4 GHz association. - force-5ghz—To enforce 5 GHz band steering mode on the APs, so that the 5 GHz capable clients are allowed to use only the 5 GHz channels. - disable—To allow the clients to select the bands	balance-bands, prefer-5ghz, force-5ghz, disable	balance-bands
channel-quality-aware-arm-disable	With this parameter, ARM ignores the internally calculated channel quality metric and initiates channel changes based on thresholds defined in the profile. ARM chooses the channel based on the calculated interference index value.	—	Disabled
channel-quality-threshold <thresh>	Specifies the channel quality percentage below which ARM initiates a channel change.	0 - 100	70
channel-quality-wait-time <secs>	Specifies the time that the channel quality is below the channel quality threshold value to initiate a channel change. NOTE: If current channel quality is below the specified channel quality threshold for this wait time period, ARM initiates a channel change.	1 - 3600	120
client-aware	Enables the client aware feature. When enabled, the AP will not change channels for the Access Points when clients are active, except for high priority events such as radar or excessive noise. The client aware feature must be enabled in most deployments for a stable WLAN.	—	Enabled

Command/Parameter	Description	Range	Default
client-match	Enables the client match feature on APs. When the client match feature is enabled on an AP, the AP measures the RF health of its associated clients. If the client's RSSI is less than 18dB but has a good RSSI with another AP having an RSSI of more than 30db or atleast 10db more than its current RSSI, the client will be moved to the AP with the higher RSSI for better performance and client experience. In the current release, the client match feature is supported only within the APs within the swarm.	—	—
bad-snr <snr>	The clients with an SNR value below the threshold value will be moved to a potential target AP.	0 - 100	18
calc-interval<seconds>	Configures an interval at which client match is calculated.	1 - 600 in seconds	3
calc-threshold <threshold>	Configures a threshold that takes acceptance client count difference among all the channels of Client match into account. When the client load on an AP reaches or exceeds the threshold in comparison, client match is enabled on that AP.	1 - 255	5
client-thresh <thresh>	When the number of clients on a radio exceeds the value, SLB algorithm will be triggered.	0 - 255	30
debug <level>	Displays information required for debugging client match issues.	0 - 4 0 — none 1 — error 2 — information 3 — debug 4 — dump	1
good-snr <snr>	The APs with a RSSI higher than the specified good-snr value will be considered as a potential target AP.	0 - 100	30
holdtime <number>	Configures the hold time for the next client match action on the same client.	1 - 1800	300
max-adoption <count>	Configure a maximum number for adopting clients.	0 - 100	10
max-request <count>	Configures the maximum number of requests for client match	0 - 100	10
nb-matching <percentage>	Configures a percentage value to be considered in the same virtual RF neighborhood of Client match.	20 - 100%	75%
report-interval <interval>	Configures the report interval of VBR on each AP.	0 - 3600	30

Command/Parameter	Description	Range	Default
restriction-timeout	Configures the timeout interval during which non- target AP will not respond to a specific client.	1 - 255	10
slb-mode <mode>	Configures a balancing strategy for client match. The applicable values are: 1 - Channel-based 2 - Radio-based 3 - Channel and Radio based	1 - 3	1
snr-thresh <snr>	The snr value of the Client RSSI must be higher than the current AP for a potential target AP.	0 - 100	10
vbr-entry-age <age>	Denotes the for stable VBR entries.	1 - 3600	300
error-rate-threshold <percent>	Configures the minimum percentage of errors in the channel that triggers a channel change.	0 - 100	70
error-rate-wait-time <secs>	Configures the time that the error rate has to be at least equal to the error rate threshold to trigger a channel change. The error rate must be equal to or more than the error rate threshold to trigger a channel change.	1 - 3600	90
free-channel-index <idx>	Checks the difference in threshold in the channel interference index between the new channel and the existing channel. An AP will only move to a new channel if the new channel has a lower interference index value than the current channel. This parameter specifies the required difference between the two interference index values before the AP moves to the new channel. The lower this value, the more likely it is that the AP will move to the new channel.	—	25
g-channels <g-channel>	Configures 2.4 GHz channels.	—	—
ideal-coverage-index	Specifies the ideal coverage index that an AP tries to achieve on its channel. The denser the AP deployment, the lower this value should be.	2 - 20	10
max-tx-power <power>	Sets the highest transmit power levels for the AP. If the maximum transmission EIRP configured on an AP is not supported by the AP model, the value is reduced to the highest supported power setting. NOTE: Higher power level settings may be constrained by local regulatory requirements and AP capabilities.	0 - 127dBm	127

Command/Parameter	Description	Range	Default
<code>min-tx-power</code> <code><power></code>	Sets the minimum transmission power. This indicates the minimum EIRP. If the minimum transmission EIRP setting configured on an AP is not supported by the AP model, this value is reduced to the highest supported power setting.	0 - 127dBm	18
<code>scanning</code>	Allows the APs to scan other channels for RF Management and WIPS enforcement.	—	Enabled
<code>spectrum-load-balancing</code> <code>{<calc-interval> </code> <code><calc- threshold> </code> <code><nb-matching>}</code>		—	—
<code>wide-bands {<none> </code> <code><all> <2.4> <5>}</code>	Allows administrators to configure 40 MHz channels in the 2.4 GHz and 5 GHz bands. 40 MHz channels are two 20 MHz adjacent channels that are bonded together. The 40 MHz channels double the frequency bandwidth available for data transmission. For high performance, enter 5 GHz. If the AP density is low, enter 2.4 GHz.	none, all, 2.4, and 5	5
<code>no...</code>	Removes —the current value for that parameter and return it to its default setting	—	—

Usage Guidelines

Use this command to configure ARM features on an AP. ARM ensures low-latency roaming, consistently high performance, and maximum client compatibility in a multi-channel environment. By ensuring the fair distribution of available Wi-Fi bandwidth to mobile devices, ARM ensures that data, voice, and video applications have sufficient network resources at all times. ARM allows mixed 802.11ac, a, b, g, and n client types to inter-operate at the highest performance levels.

Example

The following example configures an ARM profile:

```
(AP) (config) # arm
(AP) (ARM) # 80mhz-support
(AP) (ARM) # a-channels 44
(AP) (ARM) # min-tx-power 18
(AP) (ARM) # max-tx-power 127
(AP) (ARM) # band-steering-mode prefer-5ghz
(AP) (ARM) # air-time-fairness-mode fair-access
(AP) (ARM) # backoff-time 600
(AP) (ARM) # scanning
(AP) (ARM) # client-aware
(AP) (ARM) # client-match
(AP) (ARM) # error-rate-threshold 80
(AP) (ARM) # error-rate-wait-time 120
(AP) (ARM) # free-channel-index 75
(AP) (ARM) # ideal-coverage-index 7
(AP) (ARM) # channel-quality-threshold 50
(AP) (ARM) # channel-quality-wait-time 180
(AP) (ARM) # wide-bands 5
(AP) (ARM) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration and ARM configuration sub-mode.

4.1.27 attack

Description

This command enables firewall settings to protect the network against wired attacks, such as ARP attacks or malformed DHCP packets, and notify the administrator when these attacks are detected.

Syntax

```
attack
    drop-bad-arp-enable
    fix-dhcp-enable
    no...
    poison-check-enable
```

Parameter	Description
drop-bad-arp-enable	Enables the AP to block the bad ARP request.
fix-dhcp-enable	Enables the AP to fix the malformed DHCP packets.
poison-check-enable	Enables the AP to trigger an alert to the user about the ARP poisoning that may have been caused by the rogue APs. Enabling this parameter triggers alerts when a known client on the AP spoofs the base MAC address of the AP.
no...	Removes the specified configuration parameter.

Usage Guidelines

Use this command to block ARP attacks and to fix malformed DHCP packets.

Example

The following example configures firewall settings to protect the network from Wired attacks:

```
(AP) (config) # attack
(AP) (ATTACK) # drop-bad-arp-enable
(AP) (ATTACK) # fix-dhcp-enable
(AP) (ATTACK) # poison-check-enable
(AP) (ATTACK) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration and Attack configuration sub-mode

4.1.28 auth-failure-blacklist-time

Description

This command allows the APs to dynamically blacklist the clients when they exceed the authentication failure threshold.

Syntax

```
auth-failure-blacklist-time <seconds>
```

Parameter	Description	Default
<seconds>	Configures the duration in seconds for which the clients that exceed the maximum authentication failure threshold are blacklisted.	3600

Usage Guidelines

Use this command to dynamically blacklist the clients that exceed the authentication failure threshold configured for a network profile.

Example

The following example blacklists the clients dynamically:

```
(AP) (config) # auth-failure-blacklist-time 60
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.1.29 auth-survivability cache-time-out

Description

This command configures an interval after which the authenticated credentials of the clients stored in the cache expire. When the cache expires, the clients are required to authenticate again.

Syntax

```
auth-failure-blacklist-time <seconds>
```

Parameter	Description	Range	Default
<seconds>	Indicates the duration after which the authenticated credentials in the cache expire.	1-99 hours	24 hours

Usage Guidelines

Use this command when the authentication survivability is enabled on a network profile, to set a duration after which the authentication credentials stored in the cache expires. To enable the authentication survivability feature, use the **auth-survivability** in WLAN SSID profile sub-mode.

Example

```
(AP) (config)# auth-survivability cache-time-out 60
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.2 B

4.2.1 banner

Description

This command defines a text banner to be displayed at the login prompt when a user is on a Telnet or SSH session of an AP.

Syntax

```
banner motd <motd_text>
```

```
no...
```

Parameter	Description
<motd_text>	Indicates the text message that you define.
no...	Removes the banner configuration.

Usage Guidelines

The banner you define is displayed at the login prompt of the AP. The banner is specific to the AP on which you configure it. The configured banner is displayed at the CLI login prompt of the AP. SCALANCE W supports up to 16 lines text, and each line accepts a maximum of 255 characters including spaces.

Example

The following example configures a banner:

```
(AP) (config)# banner motd "#####welcome to login SCALANCE W#####"  
(AP) (config)# banner motd "####please start to input admin and password#####"  
(AP) (config)# banner motd "###Don't leak the password###"  
(AP) (config)# end  
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.2.2 blacklist-client

Description

This command allows you to manually blacklist the clients by using MAC addresses of the clients.

Syntax

```
blacklist-client <MAC-address>
```

```
no...
```

Parameter	Description
<MAC-address>	Adds the MAC address of the client to the blacklist.
no...	Removes the specified configuration parameter.

Usage Guidelines

Use this command to blacklist the MAC addresses of clients.

Example

The following command blacklists an AP client:

```
(AP) (config) # blacklist-client 01:23:45:67:89:AB
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.2.3 blacklist-time

Description

This command sets the duration in seconds for which the clients can be blacklisted due to an ACL rule trigger.

Syntax

```
blacklist-time <seconds>
```

Parameter	Description	Range
<seconds>	Sets the duration in seconds for blacklisting clients due to an ACL rule trigger.	3600

Usage Guidelines

Use this command to configure the duration in seconds for which the clients can be blacklisted when the blacklisting rule is triggered.

Example

The following command configures the duration for blacklisting clients:

```
(AP) (config) # blacklist-time 30
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.2.4 ble

Description

This command enables BLE beacon management by BMC and configures the BLE operation mode.

Syntax

```
ble
    config <token> <url>
    mgmt-server <type>
    mode <opmode>
```

Parameter	Description	Range	Default
config	Allows you to enable BLE beacon management by BMC.	—	—
<token>	Configures a text string of 1-255 characters as the BLE endpoint authorization token. The authorization token is used by the BLE devices in the HTTPS header when communicating with the BMC.	—	—
<url>	Configures the URL of the server to which the BLE monitoring data is sent.	—	—
mgmt-server <type>	This parameter registers the WebSocket endpoint of a management server for BLE data, such as the Meridian editor, on the AP. The WebSocket endpoint allows the management server to receive messages from the BLE relay process on the AP. NOTE: Only one endpoint configuration is supported at a given time. A new endpoint configuration will overwrite the existing configuration.	—	—
<https>	URL or IP address of the HTTPS endpoint. This parameter is highly recommended for meridian load balance.	—	—

Parameter	Description	Range	Default
<ws>	URL of the WebSocket endpoint.	—	—
mode <opmode>	Configures the operation modes for the built-in Bluetooth Low Energy (BLE) chip in the AP. APs support the following BLE operation modes: • Beaconing: The built-in BLE chip of the AP functions as an iBeacon combined with the beacon management functionality. • Disabled: The built-in BLE chip of the AP is turned off. BLE operation mode is set the Disabled by default. • DynamicConsole: The built-in BLE chip of the AP functions in the beaconing mode and dynamically enables access to AP console over BLE when the link to the LMS is lost. • PersistentConsole: The built-in BLE chip of the AP provides access to the AP console over BLE and also operates in the Beaconing mode.	beaconing disabled dynamic-console persistent-console	Disabled

Usage Guidelines

The BLE beacon management feature allows you to configure parameters for managing the BLE beacons from the BLE devices connected to an AP and establishing secure communication with the BMC. You can also configure the BLE operation modes that determine the functions of the built-in BLE chip in the AP.

Example

The following example enables BLE beacon management:

```
(host) (config)# ble config
MmZjYzkyNTZlYzExODY2MjU3OTBlNTkyZjA0MjdmNjU6OWVkJmJk3MDAxYzFjZjA2ZTQ3Y2UxYWExMmMwY
TE= https://edit.meridianapps.com/api/beacons/manage

(host) (config)# end

(host) (config)# commit apply
```

The following example enables the beaconing BLE operation mode:

```
(host) (config)# ble mode beaconing

(host) (config)# end

(host) (config)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.3 C

4.3.1 calea

Description

This command creates a CALEA profile to enable APs for LI compliance and CALEA integration.

Syntax

```

calea

    encapsulation-type <gre>

    gre-type <type>

    ip <IP-address>

    ip mtu <size>

    no...

no calea

```

Parameter	Description	Range	Default
calea	Enables calea configuration sub-mode for CALEA profile configuration.	—	—
gre-type	Specifies GRE type.	—	25944
encapsulation-type <gre>	Specifies the encapsulation type for Generic Routing Encapsulation (GRE) packets.	GRE	GRE
ip <IP-address>	Configures the IP address of the CALEA server on an AP.	—	—
ip mtu <size>	Configures the Maximum Transmission Unit size to use.	68— 1500	1500
no...	Disables the parameters configured under the calea command.	—	—
no calea	Removes the CALEA configuration	—	—

Usage Guidelines

Use this command to configure an AP to support LI. LI allows the LEA to conduct an authorized electronic surveillance. Depending on the country of operation, the service providers are required to support LI in their respective networks.

In the United States, SPs are required to ensure LI compliance based on CALEA specifications. LI compliance in the United States is specified by the CALEA.

For more information on configuring APs for CALEA integration, see *Configuration manual "SCALANCE W UI"*.

Example

The following example configures a CALEA profile:

```
(AP) (config)# calea
(AP) (calea)# ip 192.0.8.29
(AP) (calea)# ip mtu 1500
(AP) (calea)# encapsulation-type gre
(AP) (calea)# gre-type 25944
(AP) (calea)# end
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and access rule configuration sub-mode.

4.3.2 cellular-uplink-profile

Description

This command provisions the cellular (3G or 4G) uplink profiles on an AP.

Syntax

```
cellular-uplink-profile <profile>
  4g-usb-type <4G-usb-type>

  modem-country <modem-country>
  modem-isp <modem_isp>
  usb-auth-type <usb_authentication_type>
  usb-dev <usb-dev>
  usb-dial <usb-dial>
  usb-init <usb-init>
  usb-modeswitch <usb-modeswitch>
  usb-passwd <usb-passwd>
  usb-tty <usb-tty>
  usb-type <usb-type>
  usb-user <usb-user>

no...no cellular-uplink-profile
```


Parameter	Description	Range	Default
cellular-uplink-profile <profile>	Configures a 3G or 4G cellular profile for an AP.	—	—
4g-usb-type <4G-usb-type>	Configures the driver type for the 4G modem.	ether-lte, pantech-lte, none	—
modem-country <modem-country>	Specifies the country for the deployment.	—	—
modem-isp <modem_isp>	Specifies the name of the ISP to connect.	—	—
usb-auth-type <usb authentication_type>	Specifies the authentication type for USB.	PAP, CHAP	PAP
usb-dev <usb-dev>	Specifies the device ID of the USB modem.	—	—
usb-dial <usb-dial>	Specifies the parameter to dial the cell tower.	—	—
usb-init <usb-init>	Specifies the parameter name to initialize the modem.	—	—
usb-passwd <usb-passwd>	Specifies the password for the account associated with the subscriber of the selected ISP.	—	—
usb-modeswitch <usb-modeswitch>	Specifies the parameter used to switch modem from storage mode to modem mode.	—	—
usb-type <usb-type>	Configures the driver type for the 3G modem.	acm, airprime, hso, option, pantech-3g, sierra-evdo, sierra-gsm, none	—
usb-tty <usb-tty>	Specifies the modem tty port.	—	—
usb-user <usb-user>	Specifies the username of subscriber of the selected ISP.	—	—
no...	Removes the configuration settings of parameters under the cellular-uplink-profile command.	—	—
no cellular-uplink-profile	Removes the cellular uplink configuration profile.	—	—

Usage Guidelines

Use this command to configure a cellular uplink profile on an AP and modem parameters 3G or 4G uplink provisioning. SCALANCE W supports the use of 3G or 4G USB modems to provide Internet backhaul to a network. The 3G or 4G USB modems can be used to extend client connectivity to places where an Ethernet uplink cannot be configured. This enables the APs to automatically choose the available network in a specific region.

Most modems using a 4G driver will automatically select the best available cellular network coverage based on the RSSI value.

Note

When UML290 runs in auto detect mode, the modem can switch from 4G network to 3G network or vice-versa based on the signal strength. To configure the UML290 for the 3G network only, manually set the USB type to **pantech-3g**. To configure the UML290 for the 4G network only, manually set the 4G USB type to **pantech-lte**.

Example 1

The following example configures a cellular uplink profile:

```
(AP) (config) # cellular-uplink-profile
(AP) (cellular-uplink-profile) # usb-type sierra-net
(AP) (cellular-uplink-profile) # usb-dev 0x0f3d68aa
(AP) (cellular-uplink-profile) # usb-init 3,broadband
(AP) (cellular-uplink-profile) # end
(AP) # commit apply
```

Example 2

The following example configures a cellular uplink profile for UML295 Country US and ISP Pantech:

```
(AP) (config) # cellular-uplink-profile
(AP) (cellular-uplink-profile) # usb-type rndis-uml295
(AP) (cellular-uplink-profile) # usb-dev 0x10a96064
(AP) (cellular-uplink-profile) # usb-tty ttyACM0
(AP) (cellular-uplink-profile) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and cellular uplink profile configuration sub-mode

4.3.3 clarity

Description

This command creates a CALEA profile to enable APs for LI compliance and CALEA integration.

Syntax

```
clarity
    inline-auth-stats
    inline-dhcp-stats
    inline-dns-stats
    inline-sta-stats
no...
```

Parameter	Description	Default
inline-auth-stats	Enables the client authentication statistics on the AP.	Disabled
inline-dhcp-stats	Enables the DHCP statistics on the AP.	Disabled
inline-dns-stats	Enables the DNS statistics on the AP.	Disabled
inline-sta-stats	Enables the station passive monitor statistics on the AP.	Disabled
no...	Removes the configuration and returns the values to its default setting	—

Usage Guidelines

Use this command to configure the AP to generate authentication, dhcp, dns, and station passive monitor statistics by using inline monitoring. These statistics are sent to AirWave to derive conclusions on the client connectivity issues.

Example

The following example configures a clarity profile:

```
(AP) (config) # clarity
(AP) (clarity) # inline-auth-stats
(AP) (clarity) # inline-dhcp-stats
(AP) (clarity) # inline-dns-stats
(AP) (clarity) # inline-sta-stats
(AP) (clarity) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration and clarity configuration sub-mode.

4.3.4 clear airgroup state statistics**Description**

This command removes the AirGroup statistics.

Syntax

```
clear airgroup state statistics
```

Usage Guidelines

Use this command to remove AirGroup details from the AP database.

Example

The following command clears AirGroup statistics:

```
(AP) (config) # clear airgroup state statistics
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration Mode

4.3.5 clear

Description

This command clears various user-configured values from the running configuration on an AP.

Syntax

```
clear

    airgroup {blocked-queries|blocked-service-id}

    ap-env-backup

    ap-env-current

    arp <ip>

    captive-portal <logo>

    cluster-security {connections|peers|stats} core-file

    datapath {session|session-all|statistics} debug <ap>

    trace {ip|mac}
```

Parameter	Description
airgroup {blocked-queries blocked-service-id}	Clears all AirGroup blocked queries and service IDs.
ap-env-backup	Clears all information from a backup AP.
ap <ip-address>	Clears all AP related information.
arp <ip-address>	Clears all ARP table information for an AP
client <mac>	Clears all information pertaining to an AP client.
datapath {session- all statistics}	Clears all configuration information and statistics for datapath modules and user sessions.

Usage Guidelines

Use the clear command to clear the current information stored in the running configuration of an AP

Example

The following command clears all information related to an AP:

```
(AP)# clear ap 192.0.2.3
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.3.6 clear-cert

Description

This command clears client and server certificates from the AP database.

Syntax

```
clear-cert  
  
    ap1x  
  
    ap1xca  
  
    ca  
  
    cp  
  
    datatunnel  
  
    datatunnelca  
  
    radsec  
  
    radsecca  
  
    server  
  
    ui
```

Parameter	Description
ap1x	Clears the user certificate used for TLS based 802.1x authentication of the AP.
ap1xca	Clears CA certificate used for 802.1x authentication of the AP against its uplink wired ports.
ca	Clears the CA certificates.
cp	Clears the captive portal server certificate.
radsec	Clears the RadSec server certificate.
radsecca	Clears the RadSec CA certificate.
server	Clears all server certificates.
ui	Clears the WebUI certificate.

Usage Guidelines

Use this command to clear the certificates from the AP database.

Example

The following command shows an example for clearing server certificates:

```
(AP)# clear-cert server
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.3.7 clock set

Description

This command sets the date and time on the AP system clock.

Syntax

```
clock set <year> <month> <day> <hour> <min> <sec>
```

Parameter	Description	Range
<year>	Sets the year. Requires all 4 digits.	Numeric
<month>	Sets the month.	1-12
<day>	Sets the day.	1-31
<time>	Sets the hour. Specify hours, minutes, and seconds separated by spaces. <hour> <min> <sec>.	Numeric

Usage Guidelines

You can configure the year, month, day, and time. Specify the time using a 24-hour clock with hours, minutes and seconds separated by spaces.

Example

The following example sets the clock to 21 May 2013, 1:03:52 AM:

```
(AP) # clock set 2013 5 21 1 3 52
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.3.8 cluster-security

Description

This command enables cluster security in DTLS mode and also provides an option for users to allow or deny a DTLS connection for low assurance APs.

Syntax

```
cluster-security  
  
    allow-low-assurance-devices  
  
    dtls  
  
    no...
```

Parameter	Description	Range
allow-low-assurance-devices	Enables DTLS connection for low assurance APs.	Numeric
dtls	Enables cluster security on the AP using DTLS and secures the control plane messages between APs in the cluster.	1-12
no...	Removes the configuration and returns the values to its default setting.	1-31

Usage Guidelines

Use this command to configure cluster security using DTLS for securing control plane messages exchanged between the APs in a cluster.

Example

The following example configures a cluster-security profile:

```
(AP) (config)# cluster-security  
(AP) (cluster-security)# dtls  
(AP) (cluster-security)# end  
(AP)# commit apply
```

The following example configures DTLS connection for low assurance PKIs:

```
(AP) (config)# cluster-security  
(AP) (cluster-security)# allow-low-assurance-devices  
(AP) (cluster-security)# end  
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration and configuration sub-modes

4.3.9 cluster-security logging

Description

This command allows you to set per module logging levels and retrieve the debugging logs on a one-time basis.

Syntax

```
cluster-security logging module <module_name> log-level <level>
```

Parameter	Description	Range
cluster-security logging	Allows you to change the per module logging level for cluster security	—
module <module_name>	Allows you to set the following core modules for debugging. peer—The peer module helps in logging the connection initiation, renegotiation, collision, and active connection updates. conn—The connection module helps in logging connection creation, establishment, data transfer, and maintenance logs. mcap—The message capture module logs the messages received and sent to the socket.	peer conn mcap
log-level <level>	Allows you to set a log level. Set the log-level to debug to log only the control messages. Set the log level to debug1 to log both control and data messages.	debug debug1

Usage Guidelines

Use this command to change the per module logging level of cluster security.

Example

The following example creates a log for the peer module:

```
(AP) # cluster-security logging module peer log-level-individual debug1
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.3.10 clock summer-time

Description

This command configures daylight saving for the time zones that support DST.

Syntax

```
clock summer-time <timezone> recurring <start-week> <start-day> <start-month> <start-hour>
```

```
<eweeek> <eday> <emonth> <ehour>
```

```
no...
```

Parameter	Description	Range
clock summer-time <timezone>	Configures Daylight Saving time.	Timezones that support daylight saving configuration
recurring	Indicates the recurrences.	—
<start-week>	Indicates the week from which the daylight saving configuration is effective.	—
<start-day>	Indicates the day from which the daylight saving configuration applies.	—
<start-month>	Indicates the month from which the daylight saving configuration applies.	—
<start-hour>	Indicates the hour from which the daylight saving configuration applies.	1-24
<eweeek>	Indicates the week in which the daylight saving configuration ends.	—
<eday>	Indicates the day on which daylight saving configuration ends.	—
<emonth>	Indicates the month in which daylight saving configuration ends.	—
<ehour>	Indicates the hour at which daylight saving configuration ends.	1-24
no...	Removes the configuration	—

Usage Guidelines

Use this command to configure daylight saving for the timezones that support daylight saving. When enabled, the DST ensures that the APs reflect the seasonal time changes in the region they serve.

Example

The following example configures daylight saving for a timezone:

```
(AP) (config) # clock summer-time PST recurring 7 10 March 9PM 38 10 October 9PM  
(AP) (config) # end  
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.3.11 clock timezone

Description

This command sets the timezone on an AP.

Syntax

```
clock timezone <name> <hour-offset> <minute-offset>
```

```
no...
```

Parameter	Description	Range
clock timezone <name>	Configures the required timezone.	All supported timezones
<hour-offset>	Specifies the hours offset from the UTC.	—
<minute-offset>	Specifies the hours offset from the UTC.	—
no...	Removes the timezone configuration.	—

Usage Guidelines

Use this command to set the timezone on an AP.

Example

The following example configures the PST timezone:

```
(AP) (config)# clock timezone PST -8 0
```

```
(AP) (config)# end
```

```
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.3.12 commit

Description

This command allows you to commit configuration changes performed during a user session. You can also revert the changes that are already committed.

Syntax

```
commit {apply [no-save]| revert}
```

Parameter	Description
apply	Applies and saves the AP configuration changes.
no-save	Applies the configuration changes to the cluster, but does not save the configuration. To save the configuration, run the write memory or commit apply command.
revert	Reverts the changes committed to the current configuration of an AP.

Usage Guidelines

Each command processed by the Virtual Controller is applied on all the slave APs in a cluster. The changes configured in a CLI session are saved in the CLI context. The CLI does not support the configuration data exceeding the 4K buffer size in a CLI session: therefore, Siemens recommends that you configure fewer changes at a time and apply the changes at regular intervals.

To apply and save the configuration changes, use the **commit apply** command. To apply the configuration changes without saving the configuration, use the **commit apply no-save** command.

Example

The following command allows you to commit the configuration changes:

```
(AP) # commit apply
```

The following command reverts the already committed changes

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode.

4.3.13 configure terminal

Description

This command allows you to enter configuration commands.

Syntax

```
configure terminal
```

No parameters.

Usage Guidelines

Upon entering this command, the enable mode prompt changes to:

```
(AP) (config) #
```

To return to EXEC mode, enter Ctrl-Z, end or exit.

Example

The following command allows you to enter configuration commands:

```
(AP) # configure terminal
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode.

4.3.14 console

Description

This command enables console access to an AP through the serial port

Syntax

```
console
    enable
    disable
no console
```

Parameter	Description
console	Allows you to enter the console configuration mode.
enable	Enables console access to the AP.
disable	Disables console access to the AP.
no...	Removes the console access settings.

Usage Guidelines

Use this command to enable or disable access to the AP console and thus allow users to configure AP settings or debug system errors. By default, the console access to the AP is enabled.

Example

The following example disables console access to the AP:

```
(AP) (config) # console
(AP) (console) # disable
(AP) (console) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Console configuration sub mode

4.3.15 content-filtering

Description

This command enables content filtering feature. When content filtering is enabled on an SSID, all DNS requests to non-corporate domains on this wireless network are sent to OpenDNS.

Syntax

```
content-filtering
```

```
no...
```

Parameter	Description
content-filtering	Enables content filtering.
no	Removes the configuration.

Usage Guidelines

Use this command to enable content filter. With content filter feature enabled, you can:

- Prevent known malware hosts from accessing your wireless network.
- Improve employee productivity by limiting access to certain websites.
- Reduce bandwidth consumption significantly.

You can enable content filtering on an SSID. When enabled, all DNS requests to non-corporate domains on this SSID are sent to the open DNS server.

Example

The following example enables content filtering:

```
c:a3:1e:cd:7b:d6 (config) # content-filtering
ac:a3:1e:cd:7b:d6 (config) # end
ac:a3:1e:cd:7b:d6# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.3.16 convert-aos-ap

Description

This command allows you to provision an AP as a Campus AP or Remote AP in a controller-based network.

Syntax

```
convert-aos-ap <mode> <name>
```

Parameter	Description	Range
<mode>	This command allows you to provision an AP as a Campus AP or Remote AP in a controller-based network.	RAP, CAP.
<name>	Allows you to specify the IP address of the controller to which the Remote AP or Campus AP will be connected.	—

Usage Guidelines

Before converting an AP, ensure that both the AP and controller are configured to operate in the same regulatory domain. An AP can be converted to a Campus AP and Remote AP only if the controller is running ArubaOS 6.1.4 or later versions.

For more information, see the *Converting an AP to a Remote AP and Campus AP* topic in *Configuration manual „SCALANCE W UI“*.

Example

The following command allows you to convert an AP to a remote AP:

```
(AP) # convert-aos-ap RAP 192.0.2.5
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode.

4.3.17 copy

Description

This command copies files to and from the AP.

Syntax

copy

config tftp <ip-address> <filename>

core-file tftp <ip-address>

flash tftp <ip-address> <filename>

tftp <ip-address> <filename> {aplx {ca|cert} <password> format pem}| cpserver cert <password> format {p12|pem}| portal logo| radsec {ca|cert <password>} format pem| system {lxca [format {der|pem}]]|lxcert <password>[format {p12|pem}]]|config|flash} | uiserver cert<password> format pem}

Parameter	Description
config	Copies a configuration file to the TFTP server.
core-file	Copies a core file to the TFTP server.
flash	Copies a file from flash to the TFTP server or to flash from a TFTP server.
tftp	Copies files and certificates to the AP database from a TFTP server.
<ip-address>	Copies files to the specified TFTP server IP address.
<filename>	Indicates the name of the file to be copied.
aplx {ca cert}	Copies user or CA certificate required for 802.1X authentication of the AP.
cpserver cert <password>	Copies internal captive portal server certificate.
portal logo	Copies customized logo for the internal captive portal server.
radsec {ca cert <password>}	Copies RadSec server or CA certificates.
system	Copies the file to the system partition.
lxca	Copies the CA certificate used for 802.1X authentication from the TFTP server.
der pem	Indicates the system partition file extensions.
lxcert	Copies the server certificate used for 802.1X authentication from the TFTP server.
<password>	Indicates the password for certificate authentication.
p12 pem	Indicates the certificate file extensions.
uiserver cert <password>	Copies the customized WebUI server certificate.

Usage Guidelines

Use this command to save backup copies of the configuration file to a TFTP server, or to load a certificate file and customized logo from a TFTP server to the AP database.

Example

The following example copies a configuration file to the TFTP server:

```
(AP)# copy config tftp 10.0.0.1 filename.cfg
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.3.18 custom_var

Description

This command is used to set the custom string length. The string length that is set will be valid until the AP is factory reset.

Syntax

```
custom_var <text>
```

```
no..
```

Parameter	Description	Range
<text>	Indicates the custom variable string.	1 .. 32
no..	Disables the custom string length that has been set.	—

Example

The following example sets the custom string length:

```
(AP)# custom_var 12
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.4 D

4.4.1 deny-inter-user-bridging

Description

This command disables bridging traffic between two clients of an AP on the same VLAN. Bridging traffic between the clients will be sent to the upstream device to make the forwarding decision.

Syntax

```
deny-inter-user-bridging
```

```
no...
```

Parameter	Description
deny-inter-user-bridging	Prevents the inter-user bridging.
no...	Removes the configuration.

Usage Guidelines

Use this command if you have security and traffic management policies defined for upstream devices.

Example

The following command disables inter-user bridging:

```
(AP) (config) # deny-inter-user-bridging
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.4.2 deny-local-routing

Description

This command disables routing traffic between two clients of an AP on different VLANs. Routing traffic between the clients will be sent to the upstream device to make the forwarding decision.

Syntax

```
deny-local-routing
```

```
no...
```

Parameter	Description
deny-local-routing	Disables local routing of traffic.
no...	Removes the configuration.

Usage Guidelines

Use this command to prevent the local routing of traffic if you have security and traffic management policies defined for upstream devices.

Example

The following command disables local routing:

```
(AP) (config) # deny-local-routing
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.4.3 device-id

Description

This command assigns an ID for the AP device.

Syntax

```
device-id <device>
```

Parameter	Description
device-id <device>	Configures an ID for the AP device.

Usage Guidelines

Use this command to configure a device identification.

Example

The following example configures a device ID:

```
(AP) (config) # device-ID Device1  
(AP) (config) # end  
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.4.4 disable-prov-ssid

Description

This command disables the default provisioning SSID enabled in the AP factory default settings.

Syntax

```
disable-prov-ssid
```

```
no...
```

Usage Guidelines

The default provisioning SSID is used during the initial configuration of the AP if the automatic provisioning of the AP fails and if AirWave are not reachable.

Example

The following example disables the default provisioning SSID:

```
(AP)# disable-prov-ssid
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.4.5 disconnect-user

Description

This command disconnects the clients from an AP.

Syntax

```
disconnect-user {<addr>|all|mac <mac>| network <name>}
```

Parameter	Description
<addr>	Allows you to disconnect a client by specifying the IP address of the client.
all	Disconnects all users associated with an AP.
mac <mac>	Allows you to disconnect a client by specifying the MAC address of the client.
network <name>	Allows you to disconnect the clients connected to a specific network.

Example

The following example disconnects all clients associated with an AP:

```
(AP) # disconnect-user
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.4.6 dot-11a-radio-disable

Description

This command disables the 5 GHz or 802.11a radio profile for an AP. Disabling the radio profile using this command will not delete the SSID profiles.

Syntax

```
dot-11a-radio-disable
```

```
no...
```

Parameter	Description
dot11a-radio-disable	Disables the 5 GHz or 802.11a radio profile.
no...	Removes the radio profile from the disabled mode.

Usage Guidelines

Use this command to disable a 5 GHz radio profile on an AP.

Example

The following example disables the 5 GHz radio profile:

```
(AP) # dot11a-radio-disable
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode.

4.4.7 dot-11g-radio-disable

Description

This command disables the 2.4 GHz or 802.11g radio profile for an AP. Disabling the radio profile using this command will not delete the SSID profiles.

Syntax

```
dot-11g-radio-disable
```

```
no...
```

Parameter	Description
dot11g-radio-disable	Disables the 2.4 GHz or 802.11g radio profile
no...	Removes the radio profile from the disabled mode.

Usage Guidelines

Use this command to disable a 2.4 GHz radio profile on an AP.

Example

The following example disables the 2.4 GHz radio profile:

```
(AP) # dot11g-radio-disable
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode.

4.4.8 download-cert

Description

This command allows you to download the authentication, captive portal and RadSec server certificates, and CA certificates from an FTP or TFTP server, or through an HTTP URL.

Syntax

```
download-cert
  ap1x <url> format pem [psk <psk>]
  ap1xca <url> format pem
  ca <url> format {der|pem}

  cp <url> format pem [psk <psk>]
  radsec <url> format pem [psk <psk>]
  radsecca <url> format pem [psk <psk>]
  server <url> format pem [psk <psk>]
  ui <url> format pem [psk <psk>]
```

Parameter	Description
ap1x	Downloads user certificate for TLS based 802.1X authentication of the AP.
ap1xca	Downloads CA certificates.
ca	Downloads CA certificates for validating the identity of the client.
cp	Downloads captive portal server certificates for validating the identity of the internal captive portal server identity to the client.
radsec	Downloads RadSec certificates for mutual authentication between the AP and the client.
radsecca	Downloads RadSec CA certificates for authentication between the AP and the client.
server	Downloads authentication server certificates for validating the identity of the server to the client.
ui	Downloads the WebUI certificates.
<url>	Allows you to specify the FTP, TFTP, or HTTP URL.
psk <psk>	Allows you to specify the passphrase for server, captive portal, and RadSec certificates.
format	Allows you to specify the certificate format. The following types of certificate formats are supported: - CA certificate—PEM or DER format - Authentication server—PEM format with PSK - Captive portal certificate—PEM format with PSK - RadSec—PEM format with PSK

Usage Guidelines

Use this command to download certificates.

Example

The following command shows an example for downloading CA client certificates:

```
(AP)# download-cert ca ftp://192.0.2.7
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.4.9 dpi

Description

This command enables visualization of traffic from wired and wireless clients associated with an AP.

Syntax

`dpi`

`no...`

Parameter	Description
<code>dpi</code>	Enables AppRF feature.
<code>no...</code>	Removes the configuration.

Usage Guidelines

Use this command to enable AppRF visibility for wired and wireless clients associated with an AP. AppRF supports an application and web-filtering service that allows creating firewall policies based on types of application. AppRF includes the following capabilities:

- Access control, QoS, and bandwidth contract rules based on application and application categories.
- Content filters based on web categories and reputation scores (security ratings).

For more information access rule configuration and web-filtering options, see the *Configuration manual „SCALANCE W UI“* and the wlan access-rule command page.

Example

The following command configures DPI support:

```
(AP) (config) # dpi
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.4.10 dpi-error-page-url

Description

This command allows you to create a custom list of URLs to which users can be redirected when they access a blocked website.

Syntax

```
dpi-error-page-url <idx> <url>
```

```
no...
```

Parameter	Description
<idx>	Index number of the URL.
<url>	URL of the website.
no...	Removes the configuration.

Usage Guidelines

Use this command to create a custom list of URLs. The URLs configured by this command are used for defining an access rule (using the **wlan access-rule <rule> dpi-error-page-url** command) to redirect users to a specific URL when they access a blocked website.

Example

```
(AP) (config) # dpi-error-page-url 0 http://www.NoExample.com
(AP) (config) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.4.11 dynamic-cpu-mgmt

Description

This command enables or disables the dynamic CPU management feature, to manage resources across different functions performed by an AP.

Syntax

```
dynamic-cpu-mgmt {auto| disable| enable}
```

Parameter	Description
auto	Configures the AP to automatically enable or disable CPU management feature during run-time. When configured, the AP determines the need for enabling or disabling CPU management, based on the real-time load calculations taking into account all different functions that the CPU needs to perform. The auto option is the default and recommended setting.
disable	Disables CPU management on all APs, typically for small networks. This setting protects the user experience.
enable	Enables the CPU management feature. When configured, the client and network management functions are protected. This setting helps in large networks with a high client density.

Usage Guidelines

Use this command to enable or disable resource management across different functions performed by an AP.

Example

The following example enables the automatic enabling or disabling of CPU management:

```
(AP) (config)# dynamic-cpu-mgmt auto
(AP) (config)# end
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.4.12 dynamic-dns

Description

This command makes a one time dynamic update of the DNS records of the AP and its clients after the user has manually configured the dns values.

Syntax

```
dynamic-dns {<dns_action> <dns_server> <dns_domain> <dns_hostname> <dns_host>}
[key <algo- name:keyname:keystring>]
```

Parameter	Description	Example
dynamic-dns	Updates the DNS records of the AP and its clients dynamically on the DNS server.	—
<dns_action>	Allows you to add or delete the DNS record from the DNS server.	—
<dns_server>	Denotes the IP address of the DNS server.	10.17.132.85
<dns_domain>	Denotes the domain name of the client that is updated on the DNS server.	test.dns
<dns_hostname>	Denotes the hostname of the client or AP that is updated on the DNS server.	host-anand
<dns_host>	Denotes the IP address of the AP or the client.	10.17.132.85
key <algo- name:keyname:keystring>	Configures a TSIG shared secret key to secure the dynamic updates. The following algorithm names are supported: • hmac-md5 (used by default if algo- name is not specified) • hmac-sha1 • hmac-sha256 • NOTE: When a key is configured, the update is successful only if AP and DNS server clocks are in sync.	hmac- sha1:siemensddns: 16YuLPdH21rQ6PuK9ud sVLtJw3Y=

Usage Guidelines

Use this command to perform a one time dynamic update of the DNS records.

Example

The following example manually adds the SOA record:

```
(AP)# dynamic-dns add 10.1.1.23 test.dns host-anand 10.3.2.11 key hmac-shal:siemensaddns:16YuLPdH21rQ6PuK9udsVLtJw3Y=
```

```
(AP)# commit apply
```

The following example manually deletes the SOA record.

```
(AP)# dynamic-dns delete 10.17.132.7 test.ddns host-anand 10.17.132.85 key hmac-shal: siemensaddn:16YuLPdH21rQ6PuK9udsVLtJw3Y=
```

```
(AP)# commit apply
```

Note

The colon (:) functions as an input separator in the shared secret key entry.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.4.13 dynamic-dns-ap

Description

This command enables the AP and clients to dynamically update the DNS server.

Syntax

```
dynamic-dns-ap [key <algo-name:keyname:keystring>] [server <ddns_server>]
```

Parameter	Description	Example
dynamic-dns-ap	Updates the DNS records of the AP and its clients dynamically on the DNS server.	—
key <algo-name:keyname:keystring>	Configures a TSIG shared secret key to secure the dynamic updates. The following algorithm names are supported: • hmac-md5 (used by default if algo-name is not specified) • hmac-sha1 • hmac-sha256 • NOTE: When a key is configured, the update is successful only if AP and DNS server clocks are in sync.	hmac-sha1:ddns-key:asda1sdfasdfs9dsgs=
server <ddns_server>	Denotes the IP address of the DNS server.	10.17.132.85

Usage Guidelines

Dynamic DNS configuration is allowed only on Master APs.

Example

The following example enables the dynamic dns feature:

```
(AP) (config)# dynamic-dns-ap
(AP) (config)# dynamic-dns-ap key hmac-sha1:siemensddns:16YuLPdH21rQ6PuK9udsVLtJw3Y=
(AP) (config)# dynamic-dns-ap server 10.1.1.23
(AP) (config)# end
(AP)# commit apply
```

Note

The colon (:) functions as an input separator in the shared secret key entry.

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.4.14 dynamic-dns-interval

Description

This command configures a time interval at which the DNS updates are synced to the server.

Syntax

```
dynamic-dns-interval <ddns_interval>
```

Parameter	Description
<code>dynamic-dns-interval</code> <code><ddns_interval></code>	Configures the time interval (in seconds) at which the DNS updates are synced to the server. The default value is 12 hours.

Usage Guidelines

Use this command to set a time interval during which the DNS are periodically updated on the server.

Example

The following example configures a DDNS time interval:

```
(AP) (config)# dynamic-dns-interval 900
(AP) (config)# end
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.4.15 dynamic-radius-proxy

Description

This command enables the use of IP Address of the Virtual Controller for communication with external RADIUS servers.

Syntax

```
dynamic-radius-proxy
```

```
no...
```

Parameter	Description
dynamic-radius-proxy	Enables dynamic RADIUS proxy feature to allow the Virtual Controller network to use the IP address of the Virtual Controller when communicating with the external RADIUS servers.
no...	Removes the configuration.

Usage Guidelines

Ensure that you set the Virtual Controller IP address as a NAS client in the RADIUS server when Dynamic RADIUS proxy is enabled.

Example

The following example enables the dynamic RADIUS proxy feature:

```
(AP) (config) # dynamic-radius-proxy
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.4.16 dynamic-tacacs-proxy

Description

This command enables the Virtual Controller network to use the IP Address of the Virtual Controller for communication with external TACACS servers.

Syntax

```
dynamic-tacacs-proxy
```

```
no...
```

Parameter	Description
dynamic-tacacs-proxy	Allows the Virtual Controller network to use the IP address of the Virtual Controller when communicating with the external TACACS servers. NOTE: When dynamic-tacacs-proxy is enabled on the AP, the TACACS server cannot identify the slave AP that generates the TACACS traffic as the source IP address is changed.
no...	Removes the configuration.

Usage Guidelines

Use this command to enable the Virtual Controller to channel all TACACS related traffic from the slave APs to the external TACACS server.

Example

The following example enables the dynamic TACACS proxy feature:

```
(AP) (config) # dynamic-tacacs-proxy
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.5 E

4.5.1 enet-vlan

Description

This command configures a VLAN for Ethernet connections.

Syntax

```
enet-vlan <vlan-ID>
```

```
no...
```

Parameter	Description	Range	Default
enet-vlan <vlan-ID>	Configures VLAN for the upstream switch to which the AP is connected.	0 .. 4093	1
no...	Removes the configuration.	-	-

Usage Guidelines

Use this command to configure VLAN settings for upstream switch to which the AP is connected. By default, the value is set to 1. The VLAN setting configured by this command is used for restricting the AP from sending out tagged frames to clients connected on the SSID that has the same VLAN as the native VLAN of the upstream switch, to which the AP is connected.

Example

The following example configures a non-default VLAN value for the Ethernet ports:

```
(AP) (config) # enet-vlan 200
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.5.2 enet0-bridging

Description

This command allows you to use all ports on the APs as downlink ports.

Syntax

```
enet0-bridging
```

Usage Guidelines

Use this command for AP models that have only one Ethernet port enabled. When Ethernet 0 bridging is configured, ensure that the uplink for each AP is mesh link, Wi-Fi, or 3G or 4G.

Example

The following command enables Eth0 bridging:

```
(AP)# enet0-bridging
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.5.3 enet0-port-profile

Description

This command assigns a wired profile to the ENET 0 port on an AP.

Syntax

```
enet0-port-profile <profile>
```

Parameter	Description
enet0-port-profile <profile>	Assigns a wired profile to the ENET 0 interface port.

Usage Guidelines

Use this command to assign a wired profile to the ENET 0 port to activate the wired profile.

Example

The following command assigns a wired profile to the ENET 0 port:

```
(AP) (config) # enet0-port-profile <name>
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.5.4 enet1-port-profile

Description

This command assigns a wired profile to the ENET 1 port on an AP.

Syntax

```
enet1-port-profile <profile>
```

Parameter	Description
enet1-port-profile <profile>	Assigns a wired profile to the ENET 1 interface port.

Usage Guidelines

Use this command to assign a wired profile to the ENET 1 port to activate the wired profile.

Example

The following command assigns a wired profile to the ENET 1 port:

```
(AP) (config)# enet1-port-profile <name>
```

```
(AP) (config)# end
```

```
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.5.5 enet2-port-profile

Description

This command assigns a wired profile to the ENET 2 port on an AP.

Syntax

```
enet2-port-profile <profile>
```

Parameter	Description
enet2-port-profile <profile>	Assigns a wired profile to the ENET 2 interface port.

Usage Guidelines

Use this command to assign a wired profile to the ENET 2 port to activate the wired profile.

Example

The following command assigns a wired profile to the ENET 2 port:

```
(AP) (config) # enet2-port-profile <name>
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.5.6 enet3-port-profile

Description

This command assigns a wired profile to the ENET 3 port on an AP.

Syntax

```
enet3-port-profile <profile>
```

Parameter	Description
enet3-port-profile <profile>	Assigns a wired profile to the ENET 3 interface port.

Usage Guidelines

Use this command to assign a wired profile to the ENET 3 port to activate the wired profile.

Example

The following command assigns a wired profile to the ENET 3 port:

```
(AP) (config) # enet3-port-profile <name>
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.5.7 enet4-port-profile

Description

This command assigns a wired profile to the ENET 4 port on an AP.

Syntax

```
enet4-port-profile <profile>
```

Parameter	Description
enet4-port-profile <profile>	Assigns a wired profile to the ENET 4 interface port.

Usage Guidelines

Use this command to assign a wired profile to the ENET 4 port to activate the wired profile.

Example

The following command assigns a wired profile to the ENET 4 port:

```
(AP) (config) # enet4-port-profile <name>
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.5.8 extended-ssid

Description

This command enables the configuration of additional WLAN SSIDs. Extended SSID is enabled by default in the factory default settings of APs. Disabling the extended ssid option in the factory default mode will not take effect.

Syntax

```
extended-ssid
```

```
no...
```

Parameter	Description
extended-ssid	Enables the users to configure additional SSIDs.
no...	Removes the configuration.

Usage Guidelines

Use this command to create additional SSIDs. By default, you can create up to six WLAN SSIDs. With the Extended SSID option enabled, you can create up to 16 WLANs.

Example

The following example enables the configuration of extended SSIDs:

```
(AP) (config) # extended-ssid
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.6 F

4.6.1 facebook

Description

This command saves the Facebook ID and secret text that are generated after registering an AP with Facebook.

Syntax

```
facebook <id> <secret>
```

Parameter	Description
<id>	Indicates the ID generated after an AP is successfully registered with Facebook.
<secret>	Indicates the secret key that is returned after a successful registration of an AP with Facebook.

Usage Guidelines

Use this command to verify the ID and secret text generated after the successful integration of an AP with Facebook.

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.6.2 factory-ssid-enable

Description

This command resets the AP to use the factory configuration.

Syntax

```
factory-ssid-enable
```

Parameter	Description
factory-ssid-enable	Enables factory SSID configuration.

Usage Guidelines

Use this command to reset an AP to use the factory default SSID.

Example

The following example enables factory default configuration:

```
(AP) (config) # factory-ssid-enable
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.6.3 firewall

Description

This command allows control over the ACEs that are automatically programmed due to expansion of the ACLs.

Syntax

```
firewall  
  
disable-auto-topology-rules  
  
no...
```

Parameter	Description
firewall	Opens the firewall configuration mode.
disable-auto-topology-rules	Disables the default auto topology rule that is created for predefined ACLs and WLAN Access Rules.
no...	Removes the specified configuration parameter.

Usage Guidelines

Use this command to remove the default auto topology rules created for predefined ACLs and WLAN Access Rules. When **disable-auto-topology-rules** is configured on the AP and the Inbound Firewall rule is set using the SCALANCE W UI, the user rules take precedence over the guest VLAN ACL expansion and overrides the auto-expanded rules. However, the corporate and local VLAN expansions will continue to take precedence over the user rules.

Example

The following example disables the default auto topology rules on an AP:

```
(AP) (config) # firewall  
  
(AP) (firewall) # disable-auto-topology-rules  
  
(AP) (firewall) # end  
  
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and firewall sub-mode.

4.6.4 firewall-external-enforcement

Description

This command configures external firewall details such as Palo Alto Networks (PAN) firewall to enable integration with the AP.

Syntax

```
firewall-external-enforcement pan
    disable
    enable
    domain-name <name>
    ip <address>
    port <port>
    user <name> <password>
    no...
```

Parameter	Description	Range	Default
firewall-external-enforcement pan	PAN firewall configuration sub-mode.	-	-
disable	Disables PAN firewall.	-	-
enable	Enables PAN firewall.	-	-
ip <address>	Configures PAN firewall IP address on the AP	-	-
port <port>	Configures a port for the PAN firewall.	1 .. 65535	443
user <name> <password>	Configures administrator user credentials of PAN firewall on an AP.	-	-
domain-name <name>	Configures a static domain name to be prefixed with the client user id sent to the PAN firewall.	-	-
no...	Removes the specified configuration parameter.	-	-

Usage Guidelines

Use this command to enable external firewall integration with an AP. The APs can be integrated with external firewall such as PAN firewall. The PAN firewall is based on user ID, which provides many methods for connecting to sources of identity information and associating them with firewall policy rules. The functionality provided by the PAN firewall based on user ID requires the collection of information from the network. AP maintains the network (such as mapping IP address) and user information for those clients in the network and provides the required information for the user ID feature on PAN firewall.

To enable AP integration with PAN firewall, a global profile configured on AP with PAN firewall information such as IP address, port, user name, password, firewall enabled or disabled status.

Example

The following example configures PAN firewall information on an AP:

```
(AP) (config)# firewall-external-enforcement pan
(AP) (firewall-external-enforcement pan)# enable
(AP) (firewall-external-enforcement pan)# domain-name domain@xyz
(AP) (firewall-external-enforcement pan)# ip 192.0.2.11
(AP) (firewall-external-enforcement pan)# port 443
(AP) (firewall-external-enforcement pan)# user admin1 admin1
(AP) (firewall-external-enforcement pan)# end
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and firewall-external-enforcement sub-mode.

4.7 G

4.7.1 g-channel

Description

This command configures 2.4 GHz radio channels for a specific AP.

Syntax

```
g-channel <channel> <tx-power>
```

Parameter	Description	Range
<channel>	Configures the specified 2.4 GHz channel.	The valid channels for a band are determined by the AP regulatory domain.
<tx-power>	Configures the specified transmission power values. It also supports 0.1 dBm and negative values.	-51 dBm to 51 dBm

Usage Guidelines

Use this command to configure radio channels for the 2.4 GHz band for a specific AP.

Example

The following example configures the 2.4 GHz radio channel:

```
(AP)# g-channel 11 18
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.7.2 g-ant-pol

Description

This command configures the antenna polarization value for 2.4 GHz radio channels.

Syntax

```
g-ant-pol <pol>
```

Parameter	Description	Range
<pol>	Denotes the antenna polarization value for 2.4 GHz radio channel. 0: Co-Polarized radio ID 1: Cross-Polarized radio ID	0 or 1

Usage Guidelines

Use this command to set the antenna polarization value for 2.4 GHz radio channel.

Example

The following example configures the antenna polarization value for a 2.4 GHz radio channel:

```
(AP) # g-ant-pol 0
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.7.3 g-max-clients

Description

This command configures the maximum number of clients allowed for an SSID profile on a 2.4 GHz radio channel.

Syntax

```
g-max-clients <ssid_profile> <max-clients>
```

Parameter	Description	Range
<ssid_profile>	Denotes the SSID profile for which the maximum clients limit is to be configured.	—
<max-clients>	Denotes the maximum number of clients that can be configured on the 2.4 GHz radio channel of the AP.	1 to 255.

Usage Guidelines

Use this command to set the maximum number of clients allowed to connect to 2.4 GHz radio channels for a specific SSID profile. This is a per-AP and per-Radio configuration.

Example

The following example configures the maximum number of clients for a 2.4 GHz radio channel:

```
(AP)# g-max-clients test1 77
```

Command Information

Access Point Platform	Command Mode
All Platforms	Privileged EXEC mode

4.7.4 gre per-ap-tunnel

Description

This command configures a GRE tunnel from each AP to the VPN or GRE Endpoint rather than the tunnels created just from the Virtual Controller.

Syntax

```
gre per-ap-tunnel
```

```
no...
```

Parameter	Description
gre per-ap-tunnel	Creates a GRE tunnel from the AP to the VPN or GRE endpoint.
no...	Removes the configuration.

Usage Guidelines

Use this command to allow the traffic to be sent to the corporate network through a Layer-2 GRE tunnel from the AP itself. When a GRE tunnel per AP is created, the traffic need not be forwarded through the Virtual Controller.

Example

The following example creates a GRE tunnel for the AP:

```
(AP) (config)# gre per-ap-tunnel
```

```
(AP) (config)# end
```

```
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.7.5 gre primary

Description

This command configures a host for the primary VPN or GRE endpoint.

Syntax

```
gre primary <name>
```

```
no...
```

Parameter	Description
gre primary <name>	Specifies the FQDN of the primary host.
no...	Removes the configuration.

Usage Guidelines

Use this command to configure the primary VPN or GRE host.

Example

The following example configures a GRE primary host:

```
(AP) (config) # gre primary <name>
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.7.6 gre type

Description

This command configures a GRE protocol number as GRE type.

Syntax

gre type <type>

Parameter	Description	Range	Default
gre type <type>	Configures the protocol number or IP address for GRE type	16-bit protocol number	0

Usage Guidelines

Use this command to specify GRE type. The 16-bit protocol number uniquely identifies a Layer-2 tunnel. The APs or controllers at both endpoints of the tunnel must be configured with the same protocol number.

Example

The following example configures the GRE type:

```
(AP) (config) # gre type 0
(AP) (config) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.8 H

4.8.1 hash-mgmt-password

Description

This command enables hashing of the management user password.

Syntax

```
hash-mgmt-password
```

Usage Guidelines

Use this command to enable hashing of a management user password. When this command is configured, the **mgmt-user** command will not longer be available to add, modify, or remove management users. You will be redirected to the **hash-mgmt-user** command to add, modify, or remove management users.

Example

The following example enables password hashing for management users:

```
(AP) (config) # hash-mgmt-password
(AP) (config) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.8.2 hash-mgmt-user

Description

This command is used to configure management users by using clear text or hash as the password input.

Syntax

```
hash-mgmt-user <username> password {{cleartext <cleartext_password>}} | {hash
<hash_password>}} [usertype <type>]
no..
```

Parameter	Description
<username>	Indicates the username of the management user.
password	Indicates the management user password.
cleartext	Indicates if a user will enable clear text as the password input format.
<cleartext_password>	Indicates the password in plain text format.
hash	Indicates that the input password is in hash format.
<hash_password>	Indicates the password in hash format.
usertype	Indicates the type of management user.
<type>	Indicates the type of management user. For example, users with guest-management, local, or read-only privilege.
no	Removes the management user configuration.

Usage Guidelines

Use this command to configure management user credentials to access and configure the AP. After you configure the **hash-mgmt-password** command, the **mgmt-user** command will no longer be valid. You will be directed to this command for management user configuration.

Example

The following example adds a management user with read-only privilege:

```
(AP) (config) # hash-mgmt-user john password cleartext password01 usertype read-only
(AP) (config) # end
(AP) # commit apply
```

The following examples removes a management user with read-only privilege:

```
(AP) (config) # no hash-mgmt-user read-only
(AP) (config) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.8.3 help

Description

This command displays help for the CLI.

Syntax

help

Usage Guidelines

This command displays keyboard editing commands that allow you to make corrections or changes to the command without retyping.

You can also enter the question mark (?) to get various types of command help:

- When typed at the beginning of a line, the question mark lists all commands available in the current mode.
- When typed at the end of a command or abbreviation, the question mark lists possible commands that match.
- When typed in place of a parameter, the question mark lists available options.

Example

The following example shows the output of the **help** command.

```
HELP:

Special keys:

BS .. delete previous character

Ctrl-A .. go to beginning of line

Ctrl-E .. go to end of line

Ctrl-F .. go forward one character

Ctrl-B .. go backward one character

Ctrl-D .. delete current character

Ctrl-U, X . delete to beginning of line

Ctrl-K .. delete to end of line

Ctrl-W .. delete previous word

Ctrl-T .. transpose previous character

Ctrl-P .. go to previous line in history buffer

Ctrl-N .. go to next line in history buffer

Ctrl-Z .. return to root command prompt

Tab .. command-line completion
```

exit .. go to next lower command prompt

? .. list choices

Help may be requested at any point in a command by entering a question mark '?'. If nothing matches, the help list will be empty and you must back up until entering a '?' shows the available options.

Two styles of help are provided:

1. Full help is available when you are ready to enter a command argument (e.g. 'show ?') and describes each possible argument.
2. Partial help is provided when an abbreviated argument is entered and you want to know what arguments match the input (e.g. 'show w?'.)

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.8.4 hostname

Description

This command changes the hostname of the Virtual Controller.

Syntax

```
hostname <name>
```

Parameter	Description
<name>	Configures a hostname for the Virtual Controller.

Usage Guidelines

The hostname is used as the default prompt. You can use any alphanumeric character, punctuation, or symbol characters. When spaces, plus symbols (+), question marks (?), or asterisks (*) are used, enclose the text in quotes.

Example

The following example configures host name for an AP.

```
(AP)# hostname AP1
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.8.5 hotspot anqp-3gpp-profile

Description

This command configures a 3GPP Cellular Network for hotspots that have roaming relationships with cellular operators.

Syntax

```
hotspot anqp-3gpp-profile <profile-name>
    3gpp-plmn1...3gpp-plmn6 <PLMN-ID>
    enable
    no...
```

Parameter	Description
hotspot anqp-3gpp-profile <profile-name>	Creates a 3GPP profile.
3gpp-plmn1...3gpp-plmn6 <PLMN-ID>	Configures the PLMN value of the network. The PLMN value can be specified for first, second, third, fourth, fifth, and sixth highest priority network. The PLMN ID consists of a 12-bit MCC and the 12-bit MNC.
enable	Activates the configuration profile.
no...	Removes the configuration

Usage Guidelines

Use this command to configure a 3GPP Cellular Network hotspot profile that defines the ANQP information element for 3G Cellular Network for hotspots. The IE defined in this profile will be sent in a GAS query response from an AP in a cellular network hotspot. The 3GPP MCC and the 12-bit Mobile Network Code data in the IE can help the client select a 3GPP network when associated with a hotspot profile and enabled on a WLAN SSID profile.

Example

The following command configures a 3GPP profile:

```
(AP) (config) # hotspot anqp-3gpp-profile cellcorp1
(AP) (3gpp "cellcorp1") # 3gpp-plmn1 310026
(AP) (3gpp "cellcorp1") # 3gpp-plmn2 208000
(AP) (3gpp "cellcorp1") # 3gpp-plmn3 208001
(AP) (3gpp "cellcorp1") # enable
(AP) (3gpp "cellcorp1") # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and the 3GPP hotspot profile configuration sub-mode

4.8.6 hotspot anqp-domain-name-profile

Description

This command defines the domain name to be sent in an ANQP information element in a GAS query response.

Syntax

```
hotspot anqp-domain-name-profile <profile-name>

    domain-name <domain-name>

    enable

    no...
```

Parameter	Description
hotspot anqp-domain-name-profile <profile-name>	Creates a domain profile.
domain-name <domain-name>	Configures a domain name of the hotspot operator.
enable	Enables the configuration profile.
no...	Removes the existing configuration

Usage Guidelines

Use this command to configure a domain name in the ANQP Domain Name profile. If a client uses the GAS to post an ANQP query to an AP, the AP will return an ANQP Information Element with the domain name when this profile is associated with a hotspot profile and enabled on a WLAN SSID profile.

Example

The following command defines a domain name for the ANQP domain name profile:

```
(AP) (config)# hotspot anqp-domain-name-profile domain1
(AP) (domain-name "domain1")# domain-name example.com
(AP) (domain-name "domain1")# enable
(AP) (domain-name "domain1")# end
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and the ANQP domain profile configuration sub-mode

4.8.7 hotspot-anqp-ip-addr-avail-profile

Description

This command defines the available IP address types to be sent in an ANQP information element in a GAS query response.

Syntax

```
hotspot anqp-ip-addr-avail-profile <profile-name>
```

```
enable
```

```
ipv4-addr-avail
```

```
ipv6-addr-avail
```

```
no...
```

Parameter	Description
hotspot anqp-ip-addr-avail-profile <profile-name>	Creates an ANQP IP Address availability profile.
enable	Enables the IP address availability profile.
ipv4-addr-avail	Indicates the availability of an IPv4 network. It can take one of the following values: • public • port-restricted single-nated- private • double-nated- private • port-restricted- single-nated- private • port-restricted- double-nated- private • not-available
ipv6-addr-avail	Indicates the availability of an IPv6 network. This can take one of the following values: • available • not-available
no...	Removes the existing configuration.

Usage Guidelines

Use this command to configure the IP Address availability information and IP address types which could be allocated to the clients after they associate to the hotspot AP.

Example

The following command configures an AP using this profile to advertise a public IPv4 network.

```
(AP) (config)# hotspot anqp-ip-addr-avail-profile default
(AP) (IP-addr-avail "default")# ipv4-addr-avail
(AP) (IP-addr-avail "default")# ipv6-addr-avail
(AP) (IP-addr-avail "default")# enable
(AP) (IP-addr-avail "default")# end
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and the ANQP IP address availability profile configuration sub-mode

4.8.8 hotspot anqp-nai-realm-profile

Description

This command defines a NAI realm information that can be sent as an ANQP information element in a GAS query response.

Syntax

```

hotspot anqp-nai-realm-profile <profile-name>

    enable

    nai-home-realm

    nai-realm-auth-id-1 <auth-ID> nai-
realm-auth-id-2 <auth-ID>

    nai-realm-auth-value-1 <auth-value>

    nai-realm-auth-value-2 <auth-value>

    nai-realm-eap-method <eap-method>

    nai-realm-encoding <encoding>

    nai-realm-name <name>

no...
```

Parameter	Description	Range
hotspot anqp-nai-realm-profile <profile-name>	Configures a NAI realm hotspot profile.	—
enable	Enables the NAI realm profile.	—
nai-home-realm	Sets the realm in this profile as the NAI Home Realm.	—
nai-realm-auth-id-1 nai-realm-auth-id-2	Configures the NAI realm authentication ID. Use the nai-realm-auth-id-1 command to send the one of the following authentication methods for the primary NAI realm ID. Use the nai-realm-auth-id-2 command to send the one of the following authentication methods for the secondary NAI realm ID.	—
<auth-id>	Configures any of the following types of authentication ID: credential— Uses credential authentication. eap-inner-auth—Uses EAP inner authentication type. exp-inner-eap— Uses the expanded inner EAP authentication method. expanded-eap—Uses the expanded EAP authentication method. non-eap-inner-auth—Uses non-EAP inner authentication type. reserved—Uses the reserved authentication method.	credential eap-inner-auth exp-inner-auth expanded-eap non-eap-inner-auth reserved

Parameter	Description	Range
nai-realm-auth-value- 1 nai-realm-auth-value- 2	Configures a value for NAI realm authentication. Use the nai-realm-auth-value-1 command to select an authentication value for the authentication method specified by nai-realm-auth-id-1 . Use the nai-realm-auth-value-2 command to select the authentication value for the authentication method specified by nai-realm-auth-id-2 .	—
<auth-value>	Configures any of following types of authentication values for the specified <auth-id>: - For credential <auth-ID>, specify the following values: - sim - usim - nfc-secure - hw-token - softoken - certificate - uname-password - none - reserved - vendor-specific - For eap-inner-auth <aut- ID>, specify the following values: - reserved - pap - chap - mschap - mschapv2 - For exp-inner-eap <auth-ID>, specify exp-inner-eap as the authentication value. - For expanded-eap<auth-ID>, specify expanded-eap as the authentication value - For non-eap-inner-auth<auth-ID> specify any of the following values: - reserved - pap - chap - mschap - mschapv2	sim, usim. — nfc-secure, hw-token, softoken, certificate, uname-password, none, reserved, vendor-specific reserved, pap chap, mschap, mschapv2, exp-inner- eap, expanded- eap, reserved
nai-realm-eap-method	Configures an EAP method for NAI realm.	

Parameter	Description	Range
<eap-method>	Configures any of the following EAP methods: crypto-card—Crypto card authentication eap-aka—EAP for UMTS Authentication and Key Agreement eap-sim—EAP for GSM Subscriber Identity Modules eap-tls—EAP-Transport Layer Security eap-ttls—EAP-Tunneled Transport Layer Security generic-token-card—EAP Generic Token Card (EAP- GTC) identity—EAP Identity type notification—The hotspot realm uses EAP Notification messages for authentication. one-time-password—Authentication with a single-use password peap—Protected Extensible Authentication Protocol peapmschapv2—Protected Extensible Authentication Protocol with Microsoft Challenge Handshake Authentication Protocol version 2	crypto-card, eap-aka, eap-sim, eap-tls, eap-ttls, generic-token-card, identity notification, one-time-password, peap, peapmschapv2
nai-realm-encoding <encoding>	Configures a UTF-8 or rfc4282 formatted character string for NAI realm encoding.	rfc4282, utf8
nai-realm-name <nai-realm-name>	Configures a name for the NAI realm. The realm name is often the domain name of the service provider.	—
no...	Removes any existing configuration.	—

Usage Guidelines

Use this command to configure an NAI Realm profile that identifies and describes a NAI realm accessible to the AP, and the method used for NAI realm authentication. The settings configured in this profile determine the NAI realm elements that are included as part of a GAS Response frame.

Example

The following example creates an NAI realm profile:

```
(AP) (config)# hotspot anqp-nai-realm-profile home
(AP) (nai-realm "home")# nai-realm-name home-hotspot.com
(AP) (nai-realm "home")# nai-realm-encoding utf8
(AP) (nai-realm "home")# nai-realm-eap-method eap-sim
(AP) (nai-realm "home")# nai-realm-auth-id-1 non-eap-inner-auth
(AP) (nai-realm "home")# nai-realm-auth-value-1 mschapv2
(AP) (nai-realm "home")# nai-home-realm
(AP) (nai-realm "home")# enable
(AP) (nai-realm "home")# end
(AP)# commit apply.
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and the NAI realm profile configuration sub-mode

4.8.9 hotspot anqp-nwk-auth-profile

Description

This command configures an ANQP network authentication profile to define authentication type being used by the hotspot network.

Syntax

```
hotspot anqp-nwk-auth-profile <profile-name>
```

```
enable
```

```
nwk-auth-type <auth-type>
```

```
url <url>
```

```
no...
```

Parameter	Description	Range
hotspot anqp-nwk-auth-profile <profile-name>	Configures an ANQP network authentication profile.	—
enable	Enables the network authentication profile.	—
nwk-auth-type	Defines the network Authentication type being used by the hotspot network.	—
<auth-type>	Allows you to specify any of the following values: accept-term-and-cond—When configured, the network requires the user to accept terms and conditions. NOTE: This option requires you to specify a redirection URL string as an IP address, FQDN or URL. online-enrollment—When configured, the network supports the online enrollment. http-redirect—When configured, additional information on the network is provided through HTTP or HTTPS redirection. dns-redirect—When configured, additional information on the network is provided through DNS redirection. NOTE: This option requires you to specify a redirection URL string as an IP address, FQDN or URL.	accept-term and-cond, online- enrollment, http-redirect, dns-redirect
url	Configures URL, IP address, or FQDN used by the hotspot network for the accept-term-and- cond or dns-redirect network authentication types.	—
no...	Removes any existing configuration.	—

Usage Guidelines

When the **asra** option is enabled in the hotspot profile associated with a WLAN SSID, the settings configured for the network authentication profile are sent in the GAS response to the client.

Example

The following command configures a network authentication profile for DNS redirection.

```
(AP) (config) # hotspot anqp-nwk-auth-profile default
(AP) (network-auth "default") # nwk-auth-type dns-redirection
(AP) (network-auth "default") # url http://www.example.com
(AP) (network-auth "default") # enable
(AP) (network-auth "default") # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and the ANQP network authentication profile configuration sub-mode

4.8.10 hotspot anqp-roam-cons-profile

Description

This command configures the Roaming Consortium OI information to be sent in an ANQP information element in a GAS query response.

Syntax

```
hotspot anqp-roam-cons-profile <profile-name>
```

```
enable
```

```
roam-cons-oi <roam-cons-oi>
```

```
roam-cons-oi-len <roam-cons-oi-len>
```

```
no...
```

Parameter	Description	Range
hotspot anqp-roam-cons-profile <profile-name>	Creates roaming consortium profile.	—
enable	Enables the roaming consortium profile.	—
roam-cons-oi <roam-cons-oi>	Sends the specified roaming consortium OI in a GAS query response. The OI must be a hexadecimal number 3-5 octets in length.	Hexadecimal number 3-5 octets in length
roam-cons-oi-len <roam-cons-oi-len>	Indicates the length of the OI. The value of the roam-cons-oi-len parameter must equal upon the number of octets of the roam-cons-oi field. 0: 0 Octets in the OI (Null) 3: OI length is 24-bit (3 Octets) 5: OI length is 36-bit (5 Octets)	—
no...	Removes any existing configuration.	—

Usage Guidelines

Use this command to configure the roaming consortium OIs assigned to service providers when they register with the IEEE registration authority. The Roaming Consortium Information Elements contain information about the network and service provider, whose security credentials can be used to authenticate with the AP transmitting this IE.

Example

The following command defines the roaming consortium OI and OI length in the ANQP roaming consortium profile:

```
(AP) (config) # hotspot anqp-roam-cons-profile profile1
(AP) (roaming-consortium "profile1") # roam-cons-oi 506F9A
(AP) (roaming-consortium "profile1") # roam-cons-oi-len 3
(AP) (roaming-consortium "profile1") # enable
(AP) (roaming-consortium "profile1") # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and the ANQP roaming consortium profile configuration sub-mode

4.8.11 hotspot anqp-venue-name-profile

Description

This command defines venue information to be sent in an ANQP information element in a GAS query response.

Syntax

```

hotspot anqp-venue-name-profile <profile-name>

    enable

    venue-group <group>

    venue-lang-code <language> venue-
name <name>

    venue-type <type>

    no...
```

Parameter	Description	Range	Default
hotspot anqp-venue-name-profile <profile-name>	Creates a ANQP venue name profile.	—	—
enable	Enables the ANQP venue name profile.	—	—
venue-group <group>	Configures one of the following venue groups to be advertised in the IEs from APs associated with this hotspot profile. • assembly • business • educational • factory-and-industrial • institutional • mercantile • outdoor • residential • storage • utility-and-misc • vehicular NOTE: This parameter only defines the venue group advertised in the IEs from hotspot APs. To define the venue group to be included in ANQP responses, use anqp-venue-name-profile <profile-name> command.	assembly, business, educational, factory-and-industrial, institutional, mercantile, outdoor, residential, storage, unspecified, utility-and-misc, vehicular	unspecified

Parameter	Description	Range	Default
venue-lang-code <language>	Configures an ISO 639 language code that identifies the language used in the Venue Name field.	—	—
venue-name <name>	Configures the venue name to be advertised in the ANQP IEs. If the venue name includes spaces, the name must be enclosed in quotation marks, e.g. "Midtown Shopping Center".	—	—
venue-type <type>	Specifies the venue type to be advertised in the IEs.	The complete list of supported venue types is described in hotspot anqp-venue-name- profile.	unspecified
no...	Removes any existing configuration.	—	—

Usage Guidelines

Use this command to configure the venue group and venue type in an ANQP Venue Name profile. If a client uses the GAS to post an ANQP query to an Access Point, the AP will return ANQP Information Elements with the values configured in this profile.

Venue Type

The following list describes the different venue types for each venue group:

Venue Group	Associated Venue Type Value
assembly	• arena • stadium • passenger-terminal • amphitheater • amusement-park • place-of-worship • convention-center • library • museum • restaurant • theater • bar • coffee-shop • zoo-or-aquarium • emergency-cord-center • unspecified

Venue Group	Associated Venue Type Value
business	• doctor • bank • fire-station • police-station • post-office • professional-office • research-and-dev-facility • attorney-office • unspecified
educational	• school-primary • school-secondary • univ-or-college • unspecified
factory-and-industrial	• factory • unspecified
institutional	• hospital • long-term-care • alc-drug-rehab • group-home • prison-or-jail • unspecified
mercantile	• retail-store • grocery-market • auto-service-station • shopping-mall • gas-station • unspecified
outdoor	• muni-mesh-network city-park • rest-area • traffic-control • bus-stop • kisok • unspecified
residential	• private-residence • hotel • dormitory • boarding-house • unspecified
storage	unspecified

Venue Group	Associated Venue Type Value
utility-and-misc	unspecified
vehicular	• unspecified • automobile-or-truck • airplane • bus • ferry • ship • train • motor-bike

Examples

The following command defines an ANQP Venue Name profile for a shopping mall:

```
(AP) (config) # hotspot anqp-venue-name-profile Mall1
(AP) (venue-name "Mall1") # venue-name ShoppingCenter1
(AP) (venue-name "Mall1") # venue-group mercantile
(AP) (venue-name "Mall1") # venue-type shopping-mall
(AP) (venue-name "Mall1") # venue-lang-code EN
(AP) (venue-name "Mall1") # enable
(AP) (venue-name "Mall1") # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and the ANQP venue name profile configuration sub-mode

4.8.12 hotspot h2qp-conn-cap-profile

Description

This command configures a H2QP profile that advertises hotspot protocol and port capabilities.

Syntax

```
hotspot h2qp-conn-cap-profile <profile-name>
```

```

enable
esp-port
icmp
tcp-ftp
tcp-http
tcp-pptp-vpn
tcp-ssh
tcp-tls-vpn
tcp-voip
udp-ike2
udp-ipsec-vpn
udp-voip
no...
```

Parameter	Description
hotspot h2qp-conn-cap-profile<profile-name>	Creates a connection capability profile.
enable	Enables the connection capability H2QP profile.
esp-port	Enables the ESP port used by IPsec VPNs. (port 0)
icmp	Indicates that the ICMP port is enabled and available. (port 0)
tcp-ftp	Enables the FTP port. (port 20)
tcp-http	Enables the HTTP port. (port 80)
tcp-pptp-vpn	Enables the PPTP port used by IPsec VPNs. (port 1723)
tcp-ssh	Enables the SSH port. (port 22)
tcp-tls-vpn	Enables the TCP TLS port used by VPNs. (port 80)
tcp-voip	Enables the TCP VoIP port. (port 5060)
udp-ike2	Enables the IKEv2 port.
udp-ipsec-vpn	Enables the IPsec VPN port. (ports 500, 4500 and 0)
udp-voip	Enables the UDP VoIP port. (port 5060)
no...	Removes any existing configuration.

Usage Guidelines

Use this command to configure the values to be sent in an ANQP IE to provide information about the IP protocols and associated port numbers that are available and open for communication.

Example

The following example allows the H2QP connection capability profile to advertise the availability of ICMP and HTTP ports.

```
(AP) (config) # hotspot h2qp-conn-cap-profile Wan1
(AP) (connection-capabilities "Wan1") # icmp
(AP) (connection-capabilities "Wan1") # tcp-http
(AP) (connection-capabilities "Wan1") # enable
(AP) (connection-capabilities "Wan1") # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and the H2QP connection capability profile configuration sub-mode

4.8.13 hotspot-h2qp-oper-name-profile

Description

This command configures a H2QP operator-friendly name profile.

Syntax

```
hotspot h2qp-oper-name-profile <profile>

    enable

    op-fr-name <name>

    op-lang-code <language>

    no...
```

Parameter	Description	Range	Default
hotspot h2qp-oper-name-profile <profile>	Creates an operator-friendly name profile.	—	—
enable	Enables the operator-friendly name profile.	—	—
op-fr-name <name>	Configures an operator-friendly name to be sent by devices using this profile. If the name includes quotation marks ("), include a backslash character (\) before each quotation mark. (e.g. \"example\")	1-64 alphanumeric characters	—
op-lang-code <language>	Configures an ISO 639 language code that identifies the language used in the op-fr-name command.	—	—
no...	Removes any existing configuration.	—	—

Usage Guidelines

Use this command to configure an operator-friendly name that can identify the operator and also provides information about the location.

Example

The following example configures an operator friendly profile:

```
(AP) (config)# hotspot h2qp-oper-name-profile Profile1
(AP) (operator-friendly-name "Profile1")# op-fr-name hotspot1
(AP) (operator-friendly-name "Profile1")# op-lang-code EN
(AP) (operator-friendly-name "Profile1")# enable
(AP) (operator-friendly-name "Profile1")# end
(AP)# commit apply
```


Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and the H2QP operator friendly name profile configuration sub-mode

4.8.14 hotspot h2qp-oper-class-profile

Description

This command configures a H2QP profile that defines the Operating Class to be sent in the H2QP IE.

Syntax

```

hotspot h2qp-oper-class-profile <profile>

    enable

    op-class <class>

    no...
```

Parameter	Description	Range	Default
hotspot h2qp-oper-class-profile <profile>	Creates operating class profile.	—	—
enable	Enables the operating class profile.	—	—
op-class <class>	Configures the operating class for the devices' BSS.	1-255	1
no...	Removes any existing configuration.	—	—

Usage Guidelines

Use this command to configure values for the H2QP Operating Class profile that lists the channels on which the hotspot is capable of operating.

Example

The following example configures and enables a profile with the default operating class value.

```

(AP) (config) # hotspot h2qp-oper-class-profile Profile1

(AP) (operator-class"Profile1")# op-class 1

(AP) (operator-class"Profile1")# enable
```

```
(AP) (operator-class"Profile1")# end
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and the H2QP operating class profile configuration sub-mode

4.8.15 hotspot h2qp-osu-provider-profile

Description

This command configures a H2QP profile that defines the Open Sign-Up(OSU) provider details to be sent in the H2QP IE.

Syntax

```
hotspot h2qp-osu-provider-profile <profile>
    disable
    enable
    frnd-name-count <count>
    frnd-name1 <OSU Friendly name>
    frnd-name1-hex<OSU Friendly name>
    frnd-name1-lang-code <lang code>
    frnd-name2 <OSU Friendly name>
    frnd-name2-hex <OSU Friendly name>
    frnd-name2-lang-code <lang code>
    icon1-file <idx> <File Name>
    icon1-height <height>
    icon1-lang-code <lang code>
    icon1-type <file type>
    icon1-width <width>
    icon2-file <idx> <File Name>
    icon2-height <height>
    icon2-lang-code <lang code>
    icon2-type <file type>
```

```

icon2-width <width>

iconfile-count <count>

no

osu-method <OSU method>

osu-server-uri <OSU server URI>

srvc-desc1 <description>

srvc-desc1-hex <description>

srvc-desc1-lang-code <lang code>

srvc-desc2 <description>

srvc-desc2-hex <description>

srvc-desc2-lang-code <lang code>

srvcdesc-count <count>

```

Parameter	Description	Range	Default
disable	Disables the OSU provider profile.	—	—
enable	Enables the OSU provider profile. This is enabled by default.	—	—
frnd-name-count	Number of OSU friendly names to be configured.	1-2	—
frnd-name1	The first OSU friendly name if you selected the language code as English. A string value of maximum 64 characters.	—	—
frnd-name1-hex	The first OSU friendly name in hexadecimal format for language codes other than English	—	—
frnd-name1-lang-code	The language code used for configuring the first OSU friendly name.	—	—
frnd-name2	The second OSU friendly name if the language code chosen is English. A string value of maximum 64 characters	—	—
frnd-name2-hex	The second OSU friendly name in hexadecimal format for language codes other than English.	—	—
frnd-name2-lang-code	The language code used for configuring the second OSU friendly name	—	—
icon1-file	The index and name of the first icon image file. NOTE: The index value and the filename value must match the file downloaded to AP. For more information on downloading the icon file, refer to <code>hs2- osu-icon-download</code> .	—	—

Parameter	Description	Range	Default
icon1-height	Height of the first icon image file.	1 .. 256	—
icon1-lang-code	Indicates the language used in the first icon image.	—	—
icon1-type	Type of the image file used as first icon.	—	—
icon1-width	Width of the first icon image file	1 .. 256	—
icon2-file	The index and name of the first icon image file. NOTE: The index value and the filename value must match the file downloaded to AP. For more information on downloading the icon file, refer to <code>hs2- osu-icon-download</code> .	—	—
icon2-height	Height of the second icon image file.	—	—
icon2-lang-code	Indicates the language used in the second icon image.	—	—
icon2-type	Type of the image file used as second icon.	—	—
icon2-width	Width of the second icon image file.	—	—
iconfile-count	Number of icon files to be used for the OSU provide	1 .. 2	—
no	Deletes the command.	—	—
osu-method	Indicates the method used by OSU to provision the HS2 client.	• OMA-DM • SOAP-XM	—
osu-server-uri	The URI of the OSU Server that is used for OSU with the service provider configured in the frnd-name1 parameter	—	—
srvc-desc1	The first service description if you selected the language code as English.	—	—
srvc-desc1-hex	The first service description in hexadecimal format for language codes other than English.	—	—
srvc-desc1-lang-code	The language code used for the first description.	—	—
srvc-desc2	The second service description if you selected the language code as English.	—	—
srvc-desc2-hex	The second service description in hexadecimal format for language codes other than English.	—	—
srvc-desc2-lang-code	The language code used for the second description.	—	—
srvcdesc-count	Number of descriptions to be provided for the OSU provider	—	—

Usage Guidelines

Use this command to create an OSU provider profile that can be attached to a hotspot profile for enabling wireless devices to use OSU.

Example

The following example creates and configures an OSU provider profile: (AP) (config) #
hotspot h2qp-osu-provider-profile OSU

```
(AP) (osu-provider OSU) # frnd-name-count 2
(AP) (osu-provider OSU) # frnd-name1-lang-code "eng"
(AP) (osu-provider OSU) # frnd-name1 "SP Red Test Only"
(AP) (osu-provider OSU) # frnd-name1-hex
(AP) (osu-provider OSU) # frnd-name2-lang-code "kor"
(AP) (osu-provider OSU) # frnd-name2 ""
(AP) (osu-provider OSU) # frnd-name2-hex
535020ebb9a8eab09520ed858cec8aa4ed8ab820eca084ec9aa9
(AP) (osu-provider OSU) # iconfile-count 2
(AP) (osu-provider OSU) # icon1-width 128
(AP) (osu-provider OSU) # icon1-height 61
(AP) (osu-provider OSU) # icon1-lang-code zxx
(AP) (osu-provider OSU) # icon1-type image/png
(AP) (osu-provider OSU) # icon1-file 1 "icon_red_zxx.png"
(AP) (osu-provider OSU) # icon2-width 160
(AP) (osu-provider OSU) # icon2-height 76
(AP) (osu-provider OSU) # icon2-lang-code eng
(AP) (osu-provider OSU) # icon2-type image/png
(AP) (osu-provider OSU) # icon2-file 2 "icon_red_eng.png"
(AP) (osu-provider OSU) # srvcdesc-count 2
(AP) (osu-provider OSU) # srvc-desc1-lang-code eng
(AP) (osu-provider OSU) # srvc-desc1 "Free service for test purpose"
(AP) (osu-provider OSU) # srvc-desc1-hex
(AP) (osu-provider OSU) # srvc-desc2-lang-code kor
(AP) (osu-provider OSU) # srvc-desc2 ""
(AP) (osu-provider OSU) # srvc-desc2-hex
ed858cec8aa4ed8ab820ebaaa9eca081ec9cbceba19c20ebac4eba38c20ec849cebb984ec8aa4
(AP) (osu-provider OSU) # osu-server-uri https://osu-server.r2-testbed-ar.wi-
fi.org:443/guest/HotSpot2OnlineSignUp.php
(AP) (osu-provider OSU) # osu-method SOAP-XML
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and the H2QP OSU provider profile configuration sub-mode.

4.8.16 hotspot h2qp-wan-metrics-profile

Description

This command configures a H2QP profile that specifies the hotspot WAN status and link metrics.

Syntax

```

hotspot h2qp-wan-metrics-profile <profile-name>

    at-capacity

    downlink-load <load>

    downlink-speed <speed>

    enable

    load-duration <duration> symm-
symm-link

    uplink-load <load>

    uplink-speed <speed>

    wan-metrics-link-status <status>

    no...
```

Parameter	Description	Range	Default
hotspot h2qp-wan-metrics-profile <profile-name>	Creates a H2QP WAN metric profile	—	—
at-capacity	Indicates if the WAN Link has reached its maximum capacity. If this parameter is enabled, no additional mobile devices will be permitted to associate to the hotspot AP.	—	—
downlink-load <load>	Configures the percentage of the WAN downlink that is currently utilized. If no value is set, this parameter will show a default value of 0 to indicate that the downlink speed is unknown or unspecified.	1-100	0 (unspecified)

Parameter	Description	Range	Default
downlink-speed <speed>	Indicates the current WAN backhaul downlink speed in Kbps. If no value is set, this parameter will show a default value of 0 to indicate that the downlink speed is unknown or unspecified.	0 - 2,147,483,647	0 (unspecified)
enable	Enables the H2QP WAN metrics profile.	—	—
load-duration <duration>	Configures a duration at which the downlink load is measured, in tenths of a second.	0 and 65535	—
symm-link	Indicates that the WAN Link has same speed in both the uplink and downlink directions.	—	—
no	Removes any existing configuration.	—	—
uplink-load <speed>	The percentage of the WAN uplink that is currently utilized. If no value is set, this parameter will show a default value of 0 to indicate that the downlink speed is unknown or unspecified.	1-100	0 (unspecified)
uplink-speed <speed>	Use the uplink <speed> parameter to indicate the current WAN backhaul uplink speed in Kbps. If no value is set, this parameter will show a default value of 0 to indicate that the uplink speed is unknown or unspecified.	0 - 2,147,483,647 kbps	0 (unspecified)
wan-metrics-link-status	Define the status of the WAN Link by configuring one of the following values.	—	—
<status>	Configures any of the following states: • link-up— Indicates if WAN link is up. • link-down— Indicates if WAN link is down • link-under-test— Indicates if WAN link is currently in a test state.	link-down, link-under- test, link-up	unspecified

Usage Guidelines

Use this command to configure the values be sent in an H2QP IE to provide information about access network characteristics such as link status and the capacity and speed of the WAN link to the Internet.

Example

The following example configures a WAN metric profile:

```
(AP) (config) # hotspot h2qp-wan-metrics-profile Wan1
(AP) (WAN-metrics "Wan1") # at-capacity
(AP) (WAN-metrics "Wan1") # downlink-load 5
```

```

(AP) (WAN-metrics "Wan1")# downlink-speed 147
(AP) (WAN-metrics "Wan1")# load-duration 60
(AP) (WAN-metrics "Wan1")# symm-link
(AP) (WAN-metrics "Wan1")# uplink-load 10
(AP) (WAN-metrics "Wan1")# uplink-speed 147
(AP) (WAN-metrics "Wan1")# wan-metrics-link-status link_up
(AP) (WAN-metrics "Wan1")# end
(AP)# commit apply

```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and the H2QP WAN metrics profile configuration sub-mode

4.8.17 hotspot hs-profile

Description

This command configures a hotspot profile for an 802.11u public access service provider.

Syntax

```

hotspot hs-profile <profile-name>
    access-network-type <type>
    addtl-roam-cons-ois <addtl-roam-cons-ois>
    advertisement-profile
    {anqp-3gpp-profile
    |anqp-domain-name-profile
    |anqp-ip-addr--profile
    |anqp-nai-realm-profile
    |anqp-nwk-auth-profile
    |anqp-roam-cons-profile
    |anqp-venue-name-profile
    |h2qp-conn-cap-profile
    |h2qp-oper-class-profile
    |h2qp-osu-provider-profile

```



```
|h2qp-oper-name-profile
|h2qp-wan-metrics-profile
} <profile-name>

asra

comeback-mode

enable

gas-comeback-delay <delay>

group-frame-block

hessid <id>

internet

no

osen

osu-nai <osu-nai>

osu-ssid <ssid>

p2p-cross-connect

p2p-dev-mgmt

pame-bi

qos-map-excp

qos-map-range

query-response-length-limit <len>

roam-cons-len-1 0|3|5

roam-cons-len-2 0|3|5

roam-cons-len-3 0|3|5

roam-cons-oi-1 <roam-cons-oi-1>

roam-cons-oi-2 <roam-cons-oi-1>

roam-cons-oi-3 <roam-cons-oi-1>

venue-group <venue-group>

venue-type <venue-type>
```

no

Parameter	Description	Range	Default
<code>access-network-type <type></code>	Configures any of the following access network (802.11u network type) type: • private—This network is accessible for authorized users only. For example, home networks or enterprise networks that require user authentication. The corresponding integer value for this network type is 0. • private-with-guest—This network is accessible to guest users based on guest authentication methods. For example, enterprise networks that allow guest users with captive portal authentication. The corresponding integer value for this network type is 1. • chargeable-public— This network provides access to the Internet based on payment. For example, a subscription-based Internet access in a coffee shop or a hotel offering chargeable in- room Internet access service. The corresponding integer value for this network type is 2. • free-public—This network is accessible to all without any charges applied. For example, a hotspot in airport or other public places that provide Internet access with no additional cost. The corresponding integer value for this network type is 3. • personal-device—This network is accessible for personal devices. For example, a laptop or camera configured with a printer for the purpose of printing. The corresponding integer value for this network type is 4. • emergency-services—This network is limited to accessing emergency services only. The corresponding integer value for this network type is 5. • test—This network is used for test purposes only. The corresponding integer value for this network type is 14. • wildcard —This network indicates a wildcard network. The corresponding integer value for this network type is 15.	private, private- with-guest, chargeable- public, free- public, personal- device, emergency- services, test, wildcard	chargeable- public

Parameter	Description	Range	Default
addtl-roam-cons-ois <addtl-roam-cons-ois>	Configures the number of additional roaming consortium OIs advertised by the AP. This feature supports up to three additional OIs, which are defined using the roam-cons-oi-1, roam-cons-oi-2 and roam-cons-oi-3 parameters.	—	—
advertisement-profile {anqp-3gpp-profile anqp-domain-name-profile anqp-ip-addr--profile anqp-nai-realm-profile anqp-nwk-auth-profile anqp-roam-cons-profile anqp-venue-name-profile h2qp-conn-cap-profile h2qp-oper-class-profile h2qp-osu-provider-profile h2qp-oper-name-profile h2qp-wan-metrics-profile}	Associates an advertisement profile with the hotspot profile. You can associate any of the following advertisement profiles: • anqp-3gpp-profile • anqp-domain-name-profile • anqp-ip-addr--profile • anqp-nai-realm-profile • anqp-nwk-auth-profile • anqp-roam-cons-profile • anqp-venue-name-profile • h2qp-conn-cap-profile • h2qp-oper-class-profile • h2qp-osu-provider-profile • h2qp-oper-name-profile • h2qp-wan-metrics-profile	—	—
<profile-name>	Allows you to associate a specific advertisement profile to the hotspot profile.	—	—
advertisement-protocol <protocol>	Configures the anqp : Access Network Query Protocol (ANQP) advertisement protocol.	anqp	—
asra	Indicates if any additional steps are required for network access.	—	—
comeback-mode	By default, ANQP information is obtained from a GAS Request and Response. If you enable the comeback-mode option, advertisement information is obtained using a GAS Request and Response, as well as a Comeback-Request and Comeback-Response. This option is disabled by default.	—	—
enable	Enables the hotspot profile.	—	—
gas-comeback-delay <delay>	Configures a GAS comeback delay interval after which the client can attempt to retrieve the query response using a Comeback Request Action frame.	100—2000 milliseconds	500
group-frame-block	Configures the Downstream Group Addressed Forwarding (DGAF) Disabled Mode. This feature ensures that the AP does not forward downstream group-addressed frames. It is disabled by default, allowing the AP to forward downstream group-addressed frames.	—	—

Parameter	Description	Range	Default
hessid	Configures a homogenous ESS identifier (HESSSID)	MAC address in colon-separated hexadecimal format	—
internet	Allows the AP to send an Information Element indicating that the network allows the Internet access. By default, a hotspot profile does not advertise network internet access.	—	—
no	Removes any existing configuration.	—	—
osen	Uses the OSEN information element to advertise and select an OSEN capable network. NOTE: When OSU ESS is encrypted, create a separate hotspot profile with only osen enabled and attach it to an SSID that broadcasts OSEN capable network. Then, choose the operation mode to WPA2-AES.	—	Disabled
osu-nai	Indicates the Network Access Identifier(NAI) that is used for OSU with the service provider configured in the OSU provider profile. When the OSU NAI is configured, the OSU ESS employs a link-layer encryption. For open OSU ESS, this parameter is not applicable	—	—
osu-ssid	Configures the SSID that the wireless devices use for OSU with all the OSU providers.	—	—
p2p-cross-connect	Advertises support for P2P Cross Connections.	—	Disabled
p2p-dev-mgmt	Advertises support for P2P device management.	—	Disabled
pame-bi	Enables the Pre-Association Message Exchange BSSID Independent (PAME-BI) bit, which is used by an AP to indicate whether the AP indicates that the Advertisement Server can return a query response that is independent of the BSSID used for the GAS Frame exchange.	—	—
qos-map-excp	Includes the DSCP exceptions in the QoS map set. You can configure a maximum of 21 sets of DSCP exception fields. It must be entered in Hexadecimal format. It is in the format, <value>-<up> separated by ',' where <value> can be 0-3F or FF, and user priority <up> can be 0-7)	—	—
qos-map-range	Configures the DSCP range value between 0 and 63 inclusive, or 255. It must be entered in Hexadecimal format. You must configure 8 sets each corresponding to a user priority. The format is <low>-<high> separated by a ',' where low and high are 0-3F and FF. For Example: 08-0F,00-07,FF-FF,10-1F,20-27,FF-FF,28-2F,30-3F	—	—

Parameter	Description	Range	Default
<code>query-response-length- limit <len></code>	Configures the maximum length of the GAS query response. GAS enables advertisement services that allow the clients to query multiple 802.11 networks at once, while also allowing the client to learn more about a network's 802.11 infrastructure before associating. If a client transmits a GAS Query using a GAS Initial Request frame, the responding AP will provide the query response (or information on how to receive the query response) in a GAS Initial Response frame.	1 - 6	1
<code>release-number</code>	Indicates the release number of Hotspot.	1 - 2	1
<code>roam-cons-len-1</code>	Configures the length of the OI. The value of the roam-cons-len-1 parameter is based upon the number of octets of the roam-cons-oi-1 field.	0: Zero Octets in the OI (Null), 3: OI length is 24-bit (3 Octets), 5: OI length is 36-bit (5 Octets)	—
<code>roam-cons-len-2</code>	Length of the OI. The value of the roam-cons-len-2 parameter is based upon the number of octets of the roam-cons-oi-2 field.	0: Zero Octets in the OI (Null), 3: OI length is 24-bit (3 Octets), 5: OI length is 36-bit (5 Octets)	—
<code>roam-cons-len-3</code>	Length of the OI. The value of the roam-cons-len-3 parameter is based upon the number of octets of the roam-cons-oi-3 field.	0: Zero Octets in the OI (Null), 3: OI length is 24-bit (3 Octets), 5: OI length is 36-bit (5 Octets)	—
<code>roam-cons-oi-1</code> <code>roam-cons-oi-2</code> <code>roam-cons-oi-3</code>	Configures the roaming consortium OI to assign to one of the service provider's top three roaming partners. This additional OI will only be sent to a client if the addtl-roam-cons- <ois>addtl-roam-cons-ois parameter is set to 1 or higher. NOTE: The service provider's own roaming consortium OI is configured using the hotspot anqp-roam-cons-profile command.	—	—

Parameter	Description	Range	Default
venue-group <venue-group>	Configures one of the following venue groups to be advertised in the IEs from APs associated with this hotspot profile. • assembly • business • educational • factory-and-industrial • institutional • mercantile • outdoor • residential • storage • unspecified • utility-and-misc • vehicular NOTE: This parameter only defines the venue group advertised in the IEs from hotspot APs. To define the venue group to be included in ANQP responses, use anqp-venue-name-profile <profile-name> command.	assembly, business, educational, factory-and-industrial, institutional, mercantile, outdoor, residential, storage, unspecified, utility-and-misc, vehicular	business
venue-type <venue-type>	Specifies the venue type to be advertised in the IEs from APs associated with this hotspot profile. The complete list of supported venue types is described in Venue Types on page 148 NOTE: This parameter only defines the venue type advertised in the IEs from hotspot APs. To define the venue type to be included in ANQP responses, use the hotspot anqp-venue-name-profile <profile-name> command.	—	—

Usage Guidelines

Use this command to configure a hotspot profile. Hotspot 2.0 is a Wi-Fi Alliance specification based on the 802.11u protocol, which allows wireless clients to discover hotspots using management frames (such as beacon, association request and association response), connect to networks, and roam between networks without additional authentication.

The Hotspot 2.0 provides the following services:

- Network discovery and selection— Allows the clients to discover suitable and available networks by advertising the access network type, roaming consortium, and venue information through the management frames. For network discovery and selection, GAS and ANQP are used.
- QoS Mapping— Provides a mapping between the network-layer QoS packet marking and over-the-air QoS frame marking based on user priority.

When a hotspot is configured in a network:

- The clients search for available hotspots using the beacon management frame.
- When a hotspot is found, the client sends queries to obtain information about the type of network authentication and IP address, and IP address availability using the GAS action frames.
- Based on the response of the advertisement Server (response to the GAS Action Frames), the relevant hotspot is selected and the client attempts to associate with it.
- Based on the authentication mode used for mobility clients, the client authenticates to access the network.

GAS Queries

An OI is a unique identifier assigned to a service provider when it registers with the IEEE registration authority. An AP can include its service provider OI in beacons and probe responses to clients. If a client recognizes the OI, it will attempt to associate to the AP using the security credentials corresponding to that service provider.

If the client does *not* recognize the OI, that client can send a GAS query to the AP to request more information more about the network before associating.

ANQP Information Elements

ANQP Information Elements (IEs) are additional data that can be sent from the AP to the client to identify the AP's network and service provider. If a client requests this information via a GAS query, the hotspot AP then sends the ANQP Capability list in the GAS Initial Response frame indicating support for the following IEs:

- **Venue Name** - Defined using the **hotspot anqp-venue-name-profile** command.
- **Domain Name**: Defined using the **hotspot anqp-domain-name-profile** command.
- **Network Authentication Type**: Define using the **hotspot anqp-nwk-auth-profile** command.
- **Roaming Consortium List**: Defined using the **hotspot anqp-roam-cons-profile** command.
- **NAI Realm**: Defined using the **hotspot anqp-nai-realm-profile** command.
- **Cellular Network Data**: Defined using the **hotspot anqp-3gpp-nwk-profile** command.
- **Connection Capability**: Defined using the **hotspot h2qp-conn-capability-profile** command.
- **Operator Class**: Defined using the **hotspot h2qp-op-cl-profile** command.
- **Operator Friendly Name**: Defined using the **hotspot h2qp-operator-friendly-name-profile** command.
- **WAN Metrics**: Defined using the **hotspot h2qp-wan-metrics-profile** command.

Roaming Consortium OIs

Organization Identifiers (OIs) are assigned to service providers when they register with the IEEE registration authority. You can specify the OI for the hotspot's service provider in the ANQP Roaming Consortium profile using the **hotspot anqp-roam-cons-profile** command. This Hotspot profile also allows you to define and send up to three additional roaming consortium OIs for the service provider's top three roaming partners. To send this additional data to clients, you must specify the number of roaming consortium elements a client can query using the **addtl-roam-cons-ois <1-3>** parameter, then define those elements using the following parameters:

- **roam-cons-oi-1** and **roam-cons-len 1**
- **roam-cons-oi-2** and **roam-cons-len 2**
- **roam-cons-oi-3** and **roam-cons-len 3**

The configurable values for each additional OI include the Organization Identifier itself, the OI length, and the venue group and venue type associated with those OIs.

Venue Types

The following list describes the different venue types for each venue group:

Venue Group	Associated Venue Type Value
unspecified The associated numeric value is 0.	—
assembly The associated numeric value is 1.	• unspecified—The associated numeric value is 0. • arena—The associated numeric value is 1. • stadium—The associated numeric value is 2. • passenger-terminal—The associated numeric value is 3. • amphitheater—The associated numeric value is 4. • amusement-park—The associated numeric value is 5. • place-of-worship—The associated numeric value is 6. • convention-center—The associated numeric value is 7. • library—The associated numeric value is 8. • museum—The associated numeric value is 9. • restaurant—The associated numeric value is 10. • theater—The associated numeric value is 11. • bar—The associated numeric value is 12. • coffee-shop—The associated numeric value is 13. • zoo-or-aquarium—The associated numeric value is 14. • emergency-cord-center—The associated numeric value is 15.

Venue Group	Associated Venue Type Value
business The associated numeric value is 2 .	• unspecified—The associated numeric value is 0. • doctor—The associated numeric value is 1 • bank—The associated numeric value is 2 • fire-station—The associated numeric value is 3 • police-station—The associated numeric value is 4 • post-office—The associated numeric value is 6 • professional-office—The associated numeric value is 7 • research-and-dev-facility—The associated numeric value is 8 • attorney-office—The associated numeric value is 9
educational The associated numeric value is 3 .	• unspecified—The associated numeric value is 0. • school-primary—The associated numeric value is 1. • school-secondary—The associated numeric value is 2. • univ-or-college—The associated numeric value is 3.
factory-and-industrial The associated numeric value is 4 .	• unspecified—The associated numeric value is 0. • factory—The associated numeric value is 1.
institutional The associated numeric value is 5 .	• unspecified—The associated numeric value is 0. • hospital—The associated numeric value is 1. • ong-term-care—The associated numeric value is 2. • alc-drug-rehab—The associated numeric value is 3. • group-home—The associated numeric value is 4. • prison-or-jail—The associated numeric value is .
mercantile The associated numeric value is 6 .	• unspecified—The associated numeric value is 0. • retail-store—The associated numeric value is 1. • grocery-market—The associated numeric value is 2. • auto-service-station—The associated numeric value is 3. • shopping-mall—The associated numeric value is 4. • gas-station—The associated numeric value is 5
residential The associated numeric value is 7 .	• unspecified—The associated numeric value is 0. • private-residence—The associated numeric value is 1. • hotel—The associated numeric value is 3 • dormitory—The associated numeric value is 4 • boarding-house—The associated numeric value is 5.
storage The associated numeric value is 8 .	unspecified—The associated numeric value is 0.
utility-misc The associated numeric value is 9 .	unspecified—The associated numeric value is 0.

Venue Group	Associated Venue Type Value
vehicular The associated numeric value is 10	• unspecified—The associated numeric value is 0. • automobile-or-truck—The associated numeric value is 1. • airplane—The associated numeric value is 2. • bus—The associated numeric value is 3. • ferry—The associated numeric value is 4. ship—The associated numeric value is 5. train—The associated numeric value is 6. • motor-bike—The associated numeric value is 7.
outdoor The associated numeric value is 11 .	• unspecified—The associated numeric value is 0 • muni-mesh-network—The associated numeric value is 1. • city-park—The associated numeric value is 2. • rest-area—The associated numeric value is 3. • traffic-control—The associated numeric value is 4 • bus-stop—The associated numeric value is 5 • kiosk—The associated numeric value is 6

Example

The following commands configure a hotspot profile:

```
(AP) (config)# hotspot hs-profile hsl
(AP) (Hotspot2.0 "hsl")# enable
(AP) (Hotspot2.0 "hsl")# comeback-mode
(AP) (Hotspot2.0 "hsl")# gas-comeback-delay 10
(AP) (Hotspot2.0 "hsl")# no asra
(AP) (Hotspot2.0 "hsl")# no internet
(AP) (Hotspot2.0 "hsl")# query-response-length-limit 5
(AP) (Hotspot2.0 "hsl")# access-network-type chargeable-public
(AP) (Hotspot2.0 "hsl")# roam-cons-len-1 3
(AP) (Hotspot2.0 "hsl")# roam-cons-oi-1 123456
(AP) (Hotspot2.0 "hsl")# roam-cons-len-2 3
(AP) (Hotspot2.0 "hsl")# roam-cons-oi-2 223355
(AP) (Hotspot2.0 "hsl")# addtl-roam-cons-ois 0
(AP) (Hotspot2.0 "hsl")# venue-group business
(AP) (Hotspot2.0 "hsl")# venue-type research-and-dev-facility
(AP) (Hotspot2.0 "hsl")# pame-bi
(AP) (Hotspot2.0 "hsl")# group-frame-block
(AP) (Hotspot2.0 "hsl")# p2p-dev-mgmt
```

```
(AP) (Hotspot2.0 "hs1")# p2p-cross-connect
```

```
(AP) (Hotspot2.0 "hs1")# end
```

```
(AP)# commit apply
```

The following commands associate **anqp-3gpp** advertisement profile with a hotspot profile:

```
(AP) (config)# hotspot hs-profile hs1
```

```
(AP) (Hotspot2.0"hs1")# advertisement-protocol anqp
```

```
(AP) (Hotspot2.0"hs1")# advertisement-profile anqp-3gpp 3gpp1
```

```
(AP) (Hotspot2.0"hs1")# end
```

```
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and the hotspot profile configuration sub- mode

4.8.18 **hs2-osu-icon-delete**

Description

This command deletes the specified OSU icon file downloaded in the AP.

Syntax

```
hs2-osu-icon-delete
```

Parameter	Description
<idx>	Deletes the file referenced by the specified index ID.

Usage Guidelines

Use this command to delete a downloaded icon file from the AP.

Example

The following command deletes a downloaded icon file:

```
(AP)# hs2-osu-icon-delete 5
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.8.19 hs2-osu-icon-download

Description

This command downloads the OSU provider's icon file to the AP.

Syntax

```
hs2-osu-icon-download <idx> <ftp/tftp/http URL syntax>
```

Parameter	Description	Range	Default
<idx>	Indicates the index of the file which can take values from 1 to 10.	1 .. 10	—
<url>	The location from which the icon file can be downloaded. The location can be FTP, TFTP, or HTTP.	—	—

Usage Guidelines

Use this command to download the icon file from a stored location. The icon file is downloaded from the specified location and stored in flash with the specified index as reference.

Example

To download the icon file to the AP, execute the following command:

```
(AP)# hs2-osu-icon-download <idx> <ftp/tftp/http URL syntax>
```

```
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.9 I

4.9.1 iap-master

Description

This command provisions an AP as a master AP.

Syntax

```
iap-master
```

```
no...
```

Parameter	Description
iap-master	Provisions the AP as a master AP.
no...	Removes the configuration.

Usage Guidelines

Use this command to manually provision an AP as a master AP.

Example

The following example provisions a master AP:

```
(AP) # iap-master
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.9.2 ids

Description

This command configures an IDS policy for an AP.

Syntax

```
ids
  client-detection-level <type>
  client-protection-level <type>
  detect-adhoc-network
  detect-ap-flood
  detect-ap-impersonation
  detect-ap-spoofing
  detect-bad-wep
  detect-beacon-wrong-channel
  detect-block-ack-attack
  detect-chan-based-mitm
  detect-chopchop-attack
  detect-client-flood
  detect-cts-rate-anomaly
  detect-disconnect-sta
  detect-eap-rate-anomaly
  detect-fatajack
  detect-hotspotter-attack
  detect-ht-40mhz-intolerance
  detect-ht-greenfield
  detect-invalid-addresscombination
  detect-invalid-mac-oui
  detect-malformed-assoc-req
  detect-malformed-frame-auth
  detect-malformed-htie
  detect-malformed-large-duration
  detect-omerta-attack
  detect-overflow-eapol-key
  detect-overflow-ie
```

```

detect-power-save-dos-attack
detect-rate-anomalies
detect-rts-rate-anomaly
detect-tkip-replay-attack
detect-unencrypted-valid
detect-valid-clientmisassociation
detect-valid-ssid-misuse
detect-windows-bridge
detect-wireless-bridge
detect-wpa-ft-attack
infrastructure-detection-level <type>
infrastructure-protection-level <type>
protect-adhoc-network
protect-ap-impersonation protect-ssid
protect-valid-sta protect-windows-bridge
rogue-containment
signature-airjack
signature-asleep
signature-deassociation-broadcast
signature-deauth-broadcast
wired-containment
wired-containment-ap-adj-mac
wired-containment-susp-l3-rogue
wireless-containment <type>

no...
no ids

```

Parameter	Description	Range	Default
ids	Creates an IDS policy	—	—
client-detection-level <type>	Sets the client detection level.	off, low, medium, high	off
client-protection-level <type>	Sets the client protection level.	off, low, medium, high	off
detect-adhoc-network	Enables detection of adhoc networks.	—	—
detect-ap-flood	Enables detection of flooding with fake AP beacons to confuse the legitimate users and to increase the amount of processing needed on client operating systems.	—	—

Parameter	Description	Range	Default
detect-ap-impersonation	Enables detection of AP impersonation. In AP impersonation attacks, the attacker sets up an AP that assumes the BSSID and ESSID of a valid AP. AP impersonation attacks can be done for man-in-the-middle attacks, a rogue AP attempting to bypass detection, or a honeypot attack.	—	—
detect-ap-spoofing	Enables AP Spoofing detection.	—	—
detect-bad-wep	Enables detection of WEP initialization vectors that are known to be weak and/or repeating. A primary means of cracking WEP keys is to capture 802.11 frames over an extended period of time and search for implementations that are still used by many legacy devices.	—	—
detect-beacon-wrong-channel	Enables detection of beacons advertising the incorrect channel.	—	—
detect-block-ack-attack	Enables detection of attempts to reset traffic receive windows using the forged Block ACK Add messages.	—	—
detect-chan-based-mitm	Enables or disables channel-based man-in-the-middle attackdetection.	—	—
detect-chopchop-attack	Enables detection of ChopChop attack.	—	—
detect-client-flood	Enables detection of client flood attack.	—	—
detect-cts-rate-anomaly	Enables detection of CTS rate anomaly.	—	—
detect-disconnect-sta	Enables a station disconnection attack. In a station disconnection, attacker spoofs the MAC address of either an active client or an active AP. The attacker then sends deauthenticate frames to the target device, causing it to lose its active association.	—	—
detect-eap-rate-anomaly	Enables EAP handshake analysis to detect an abnormal number of authentication procedures on achannel and generate an alarm when this condition is detected.	—	—
detect-fatajack	Enables detection off atjack attacks.	—	—
detect-hotspotter-attack	Enables detection of hotspot attacks.	—	—
detect-ht-40mhz-intolerance	Enables detection of 802.11n 40MHz intolerance setting, which controls whether stations and APs advertising 40 MHz intolerance will be reported.	—	—
detect-ht-greenfield	Enables detection of HT devices advertising greenfield preamblecapability.	—	—
detect-invalid-addresscombination	Enables detection of invalid address combinations.	—	—

Parameter	Description	Range	Default
detect-invalid-mac-oui	Enables checking of the first three bytes of a MAC address, known as the OUI, assigned by the IEEE to known manufacturers. Often clients using a spoofed MAC address do not use a valid OUI and instead use a randomly generated MAC address. Enabling MAC OUI checking causes an alarm to be triggered if an unrecognized MAC address is in use.	—	—
detect-malformed-assoc-req	Enables detection of malformed association requests.	—	—
detect-malformed-frame-auth	Enables detection of malformed authentication frames	—	—
detect-malformed-htie	Enables detection of malformed HT information elements.	—	—
detect-malformed-large-duration	Enables detection of unusually large durations in frames.	—	—
detect-omerta-attack	Enables detection of Omerta attack.	—	—
detect-overflow-eapol-key	Enables detection of overflow EAPOL key requests.	—	—
detect-overflow-ie	Enables detection of overflow Information Elements.	—	—
detect-power-save-dos-attack	Enables detection of Power Save DoS attack.	—	—
detect-rate-anomalies	Enables detection of rate anomalies.	—	—
detect-rts-rate-anomaly	Enables detection of RTS rate anomaly.	—	—
detect-tkip-replay-attack	Enables detection of TKIP replay attack.	—	—
detect-unencrypted-valid	Enables detection of unencrypted valid clients.	—	—
detect-valid-clientmisassociation	Enables detection of misassociation between a valid client and an unsafe AP. This setting can detect the following misassociation types: • MisassociationToRogueAP • MisassociationToExternalAPI • MisassociationToHoneyPotAP • MisassociationToAdhocAP • MisassociationToHostedAP	—	—
detect-valid-ssid-misuse	Enables detection of interfering or Neighbor APs using valid or protected SSIDs.	—	—
detect-windows-bridge	Enables detection of Windows station bridging.	—	—
detect-wireless-bridge	Enables detection of wireless bridging.	—	—
detect-wpa-ft-attack	Enables or disables detection of WPA FT attacks.	—	—
infrastructure-detection-level <type>	Sets the infrastructure detection level.	off, low, medium, high	off

Parameter	Description	Range	Default
infrastructure-protection-level <type>	Sets the infrastructure protection level.	off, low, medium, high	off
protect-adhoc-network	Enables protection from adhoc networks. When adhoc networks are detected, they are disabled using a denial of service attack	—	—
protect-ap-impersonation	Enables protection from AP impersonation attacks. When AP impersonation is detected, both the legitimate and impersonating AP are disabled using a denial of service attack.	—	—
protect-ssid	Enables use of SSID by valid APs only.	—	—
protect-valid-sta	Enables protection of valid stations. When enabled valid stations are not allowed to connect to an invalid AP.	—	—
protect-windows-bridge	Enables protection of a windows station bridging	—	—
rogue-containment	Controls Rogue AIPs. When rogue APs are detected, they are not automatically disabled. This option automatically shuts down rogue APs. When this option is enabled, clients attempting to associate to an AP classified as a rogue are disconnected through a denial of service attack.	—	—
signature-airjack	Enables signature matching for the AirJack frame type.	—	—
signature-asleap	Enables signature matching for the ASLEAP frame type.	—	—
signature-deassociation-broadcast	Configures signature matching for the deassociation broadcast frame type.	—	—
signature-deauth-broadcast	Configures signature matching for the deauth broadcast frame type.	—	—
wired-containment	Controls Wired attacks.	—	—
wired-containment-ap-adj- mac	Enables a wired containment to Rogue APs whose wired interface MAC address is offset by one from its BSSID.	—	—
wired-containment-susp-l3- rogue	Enables the user to identify and contain an AP with a preset wired MAC address that is different from the BSSID of the AP if the MAC address that the AP provides to wireless clients as the Gateway MAC is offset by one character from its wired MAC address. NOTE: Enable this feature only when the specific containment is needed, to avoid a false alarm.	—	—

Parameter	Description	Range	Default
wireless-containment <type>	Enable wireless containment including Tarpit Shielding. Tarpit shielding works by steering a client to a tarpit so that the client associates with it instead of the AP that is being contained. deauth-only— Enables Containment using deauthentication only . none— Disables wireless containment. tarpit-all-sta—Enables wireless containment by tarpit of all stations. tarpit-non-valid-sta— Enables wireless containment by tarpit of non-valid clients	deauth- only, none, tarpit-all-sta, tarpit-non- valid-sta	deauth-only
no...	Removes configuration settings for parameters under the ids command.	—	—
no ids	Removes IDS configuration.	—	—

Usage Guidelines

Use this command to configure IDS detection and protection policies. The IDS feature monitors the network for the presence of unauthorized APs and clients and enables you to detect rogue APs, interfering APs, and other devices that can potentially disrupt network operations. It also logs information about the unauthorized APs and clients, and generates reports based on the logged information.

WIP offers a wide selection of intrusion detection and protection features to protect the network against wireless threats. Like most other security-related features of the network, the WIP can be configured on the AP.

You can configure the following policies:

- Infrastructure Detection Policies — Specifies the policy for detecting wireless attacks on access points
- Client Detection Policies — Specifies the policy for detecting wireless attacks on clients
- Infrastructure Protection Policies — Specifies the policy for protecting access points from wireless attacks.
- Client Protection Policies — Specifies the policy for protecting clients from wireless attacks.
- Containment Methods — Prevents unauthorized stations from connecting to your network.

Each of these options contains several default levels that enable different sets of policies. An administrator can customize enable or disable these options accordingly. The following levels of detection can be configured:

- Off
- Low
- Medium
- High

Example

The following example configures detection and protection policies:

```
(AP) (config)# ids
(AP) (IDS)# infrastructure-detection-level low
(AP) (IDS)# client-detection-level low
(AP) (IDS)# infrastructure-protection-level low
(AP) (IDS)# client-protection-level low
(AP) (IDS)# wireless-containment deauth-only
(AP) (IDS)# wired-containment
(AP) (IDS)# detect-ap-spoofing
(AP) (IDS)# detect-windows-bridge
(AP) (IDS)# signature-deauth-broadcast
(AP) (IDS)# signature-deassociation-broadcast
(AP) (IDS)# detect-adhoc-using-valid-ssid
(AP) (IDS)# detect-malformed-large-duration
(AP) (IDS)# detect-ap-impersonation
(AP) (IDS)# detect-adhoc-network
(AP) (IDS)# detect-valid-ssid-misuse
(AP) (IDS)# detect-wireless-bridge
(AP) (IDS)# detect-ht-40mhz-intolerance
(AP) (IDS)# detect-ht-greenfield
(AP) (IDS)# detect-ap-flood
(AP) (IDS)# detect-client-flood
(AP) (IDS)# detect-bad-wep
(AP) (IDS)# detect-cts-rate-anomaly
(AP) (IDS)# detect-rts-rate-anomaly
(AP) (IDS)# detect-invalid-addresscombination
(AP) (IDS)# detect-malformed-htie
(AP) (IDS)# detect-malformed-assoc-req
(AP) (IDS)# detect-malformed-frame-auth
(AP) (IDS)# detect-overflow-ie
(AP) (IDS)# detect-overflow-eapol-key
(AP) (IDS)# detect-beacon-wrong-channel
(AP) (IDS)# detect-invalid-mac-oui
(AP) (IDS)# detect-valid-clientmisassociation
```

```
(AP) (IDS) # detect-disconnect-sta
(AP) (IDS) # detect-omerta-attack
(AP) (IDS) # detect-fatajack
(AP) (IDS) # detect-block-ack-attack
(AP) (IDS) # detect-hotspotter-attack
(AP) (IDS) # detect-unencrypted-valid
(AP) (IDS) # detect-power-save-dos-attack
(AP) (IDS) # detect-eap-rate-anomaly
(AP) (IDS) # detect-rate-anomalies
(AP) (IDS) # detect-chopchop-attack
(AP) (IDS) # detect-tkip-replay-attack
(AP) (IDS) # signature-airjack
(AP) (IDS) # signature-asleap
(AP) (IDS) # protect-ssid
(AP) (IDS) # rogue-containment
(AP) (IDS) # protect-adhoc-network
(AP) (IDS) # protect-ap-impersonation
(AP) (IDS) # protect-valid-sta
(AP) (IDS) # protect-windows-bridge
(AP) (IDS) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and IDS configuration sub-mode.

4.9.3 ignore-image-check

Description

This command ignores the automatic image check feature. The automatic image check feature automatically checks for a new version of SCALANCE W on the image server, once after the AP boots up and every week thereafter.

Syntax

```
ignore-image-check
```

Usage Guidelines

Use this command to disable the automatic image check feature.

Example

The following example disables the image check feature:

```
(AP) # ignore-image-check
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.9.4 inactivity-ap-timeout

Description

This command configures the timeout interval for inactive user sessions.

Syntax

```
inactivity-ap-timeout <seconds>
```

```
no...
```

Parameter	Description	Range	Default
inactivity-ap-timeout <seconds>	Configures the inactivity timeout interval in seconds.	1-1000	1000
no...	Removes any existing configuration.	—	—

Usage Guidelines

Use this command to configure an inactivity timeout interval for an AP.

Example

The following example configures the inactivity timeout interval:

```
(AP) (config) # inactivity-ap-timeout 180
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.9.5 inbound-firewall

Description

This command configures inbound firewall rules based on the source subnet.

Syntax

```
inbound-firewall
```

```
rule <subnet> <smask> <dest> <mask> <match/invert> <protocol> <sport> <eport>
```

```
{permit|deny|src-nat|dst-nat ip <IP-address> <port>}[<option1..option9>]
```

```
no...
```

Parameter	Description	Range	Default
inbound-firewall	Opens the inbound firewall configuration mode.	—	—
rule	Creates an access rule. You can create up to 128 access rules. However, it is recommended to delete any existing configuration and apply changes at regular intervals.	—	—
<subnet>	Allows you to specify the source subnet IP address	—	—
<smask>	Specifies the subnet mask of the source IP address.	—	—
<dest>	Allows you to specify the destination IP address.	—	—
<mask>	Specifies the subnet mask for the destination IP address.	—	—
<match/invert>	match—Indicates if the rule specific to the destination IP address and subnet mask matches the value specified for protocol. invert— Indicates if the rule allows or denies traffic with an exception to the specified destination IP address and subnet mask.	match invert	—
<protocol>	Configures any of the following: - Protocol number between 0-255 - any: any protocol - tcp: Transmission Control Protocol - udp: User Datagram Protocol	1-255	—
<sport>	Specifies the starting port number from which the rule applies.	1-65534	—
<eport>	Specifies the ending port number until which the rule applies	1-65534	—
dst-nat	Allows the AP to perform destination NAT on packets.	—	—

Parameter	Description	Range	Default
src-nat	Allows the AP to perform source NAT on packets. When configured, the source IP changes to the outgoing interface IP address (implied NAT pool) or from the pool configured (manual NAT pool).	—	—
ip <IP-addr>	Specifies the destination NAT IP address for the specified packets when dst-nat action is configured.	—	—
<port>	Specifies the destination NAT port for the specified packets when dst-nat action is configured.	—	—
deny	Creates a rule to reject the specified packets	—	—
<option1...option9>	Allows you to specify any of the following options: - Log—Creates a log entry when this rule is triggered. - Blacklist—Blacklists the client when this rule is triggered. - Classify-media—Performs a packet inspection on all non-NAT traffic and marks the critical traffic. - Disable-scanning—Disables ARM scanning when this rule is triggered. - DSCP tag—Specifies a DSCP value to prioritize traffic when this rule is triggered. 802.1p priority—Sets an 802.1p priority.	—	—
no...	Removes the configuration	—	—

Usage Guidelines

Use this command to configure inbound firewall rules for the inbound traffic coming through the uplink ports of an AP. The rules defined for the inbound traffic are applied if the destination is not a user connected to the AP. If the destination already has a user role assigned, the user role overrides the actions or options specified in inbound firewall configuration. However, if a deny rule is defined for the inbound traffic, it is applied irrespective of the destination and user role. Unlike the ACL rules in a WLAN SSID or wired profile, the inbound firewall rules can be configured based on the source subnet.

Note

For all subnets, a deny rule is created by default as the last rule. If at least one rule is configured, the deny all rule is applied to the upstream traffic by default.

Note

Management access to the AP is allowed irrespective of the inbound firewall rule. For more information on configuring restricted management access, see restricted-mgmt-access.

Note

The inbound firewall is not applied to traffic coming through GRE tunnel.

Example

The following example configures inbound firewall rules:

```
(AP) (config) # inbound-firewall
(AP) (inbound-firewall) # rule 192.0.2.1 255.255.255.255 any any match 6 631 631 permit
(AP) (inbound-firewall) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and inbound firewall configuration sub- mode.

4.9.6 internal-domains

Description

This command configures valid domain names for the enterprise network.

Syntax

```
internal-domains  
  
    domain-name <domain-name>  
  
no...
```

Parameter	Description	Range	Default
internal-domains	Enables the internal-domain configuration sub-mode	—	—
domain-name <domain- name>	Defines the valid domain names	—	—
no...	Removes any existing configuration	—	—

Usage Guidelines

Use this command to configure the DNS domain names that are valid on the enterprise network. This list is used for determining how the client DNS requests should be routed. When **Content Filtering** is enabled, the DNS request of the clients is verified and the domain names that do not match the names in the list are sent to the open DNS server.

Example

The following example configures the internal domains for a network:

```
(AP) (config) # internal-domains  
  
(AP) (domain) # domain-name www.example.com  
  
(AP) (domain) # end  
  
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and domains configuration sub-mode

4.9.7 iot transportProfile

Description

This command configures an IoT transport profile on a network. An IoT transport profile is a global profile that is created for transporting BLE information from an AP to an endpoint server.

Syntax

```

iot transportProfile <profile>

    endpointID <id>

    endpointToken <token>

    endpointType {Meridian-Asset-Tracking | Meridian-Beacon-Management | ZF}

    endpointURL <url>

    password <password>

    payloadContent {managed-beacons | managed-tags | zf-tags | all-ble-data}

    transportInterval <interval>

    username <user>

    no...

```

Parameter	Description	Range
endpointID <id>	Endpoint ID of the IoT management server	—
endpointToken <token>	Endpoint token of the IoT management server.	—
endpointType	Endpoint type of the IoT management server.	—
Meridian-Asset-Tracking	Stream data to meridian WebSocket server.	—
Meridian-Beacon-Management	Sends a POST request on a REST meridian API.	—
ZF	ZF deTagtive server.	—
endpointURL <url>	Endpoint URL of the IoT management server.	—
password <password>	Endpoint password.	—
payloadContent	Content of the messages sent to the IoT management server.	—
managed-beacons	Beacon management data.	—
managed-tags	Asset tag RSSI data	—
zf-tags	ZF tag data.	—
all-ble-data	All the BLE device data.	—
transportInterval <interval>	AP IoT data interval inseconds.	5 to 3600 seconds
username <user>	Endpoint user name.	—
no...	Removes any existing configuration.	—

Usage Guidelines

Use this command to create or modify an IoT transport profile.

Example

The following example configures an IoT transport profile:

```
(AP) (config)# iot transportProfile sample
(AP) (IoT Data Profile "sample")# endpointURL
https://edit.meridianapps.com/api/beacons/manage
(AP) (IoT Transport Profile "sample")# endpointType Meridian-Beacon-Management
(AP) (IoT Transport Profile "sample")# payloadContent managed-beacons
(AP) (IoT Transport Profile "sample")# transportInterval 300
(AP) (IoT Transport Profile "sample")# endpointToken
MzkxMTZlMWYtYTgzYS00YWUxLTkzYWEtYjQyNzElMGMyMjAxOjBiZWJjYWVlLTRjNjItNGEwNC1hMGlyLWYzZ
TM5ZDFlNGVhNg==
(AP) (IoT Transport Profile "sample")# end
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and iot transport profile configuration sub- mode.

4.9.8 **iot usetransportProfile**

Description

This command sets an IoT management server profile on a network. You can set up to two management server profiles.

Syntax

```
iot usetransportProfile <profile>
```

Parameter	Description
<profile>	Type of IoT management server profile.

Example

The following example sets an IoT transport profile:

```
(AP) (config) # iot usetransportProfile sample
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.9.9 ip-address

Description

This command configures an IP address for the AP.

Syntax

```
ip-address <ip-address> <subnet-mask> <nexthop-ip-address> <dns-ip-address> <domain-name>
```

Parameter	Description
<ip-address>	Assigns an IP address to the AP.
<subnet-mask>	Specifies the subnet mask.
<nexthop-ip-address>	Specifies the gateway IP address.
<dns-ip-address>	Specifies the DNS server IP address.
<domain-name>	Specifies the domain name.

Usage Guidelines

Use this command to assign a static IP address to the AP.

Example

The following example configures an IP address for the AP.

```
(AP)# ip-address 192.0.2.0 255.255.255.0 192.0.2.3 192.0.2.2 example.com
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.9.10 ip dhcp

Description

This command configures DHCP assignment modes and scopes for network.

Syntax

```
ip dhcp <dhcp_profile>
    bid <bid>
    client-count <idx>
    default-router <default_router>
    dhcp-relay
    dhcp-server <dhcp_server>
    disable-split-tunnel
    dns-cache
    dns-server <dns_server>
    domain-name <domain-name>
    dynamic-dns [key <algo-name:keyname:keystring>]
    exclude-address <exclude_address>
    host <mac>
    ip-range <start_IP> <end_IP>
    lease-time <lease_time>
    option <option_type> <option_value>
    option82 alu
    reserve {first <count>| last <count>}
    server-type <server_type>
    server-vlan <idx>
    subnet <subnet>
    subnet-mask <Subnet-Mask>
    vlan-ip <VLAN_IP> mask <VLAN mask>
```

no...

Parameter	Description	Range	Default
ip dhcp <profile>	Creates a DHCP profile with a unique name.	—	—
bid <bid>	Defines the branch ID. NOTE: You can allocate BID per subnet. The AP generates a subnet name from the DHCP IP configuration, which the controller can use as a subnet identifier. If static subnets are configured in each branch, all of them are assigned the with BID 0, which is mapped directly to the configured static subnet.	—	—
client-count <idx>	Defines the number of clients allowed per DHCP branch. NOTE: The client count configured for a branch determines the use of IP addresses from the IP address range defined for a DHCP scope. For example, if 20 IP addresses are available in an IP address range configured for a DHCP scope and a client count of 9 is configured, only a few IP addresses (in this example, 9) from this range will be used and allocated to a branch. The AP does not allow the administrators to assign the remaining IP addresses to another branch, although a lower value is configured for the client count.	—	—
default-router <default_router>	Defines the IP address of the default router for the Distributed, L2 DHCP scope.	—	—
dhcp-relay	Enables the APs to intercept the broadcast packets and relay DHCP requests directly to corporate network. The DHCP relay is enabled for the centralized DHCP scopes to reduce network traffic caused by the broadcasting of DHCP requests to the corporate network. With a centralized DHCP scope, the clients in the branch are in the same subnet as clients in the corporate network. Normally the DHCP request goes through the VPN tunnel and is broadcast into the corporate network. This feature allows it to succeed without requiring to broadcast and thus reduces the network traffic.	—	—
dhcp-server <dhcp_server>	Defines the IP address of the corporate DHCP server for DHCP request relay.	—	—
dynamic-dns	Enables dynamic dns updates for this pool.	—	Disabled

Parameter	Description	Range	Default
dynamic-dns [key <algo- name:keyname:keystr in g>]	You can optionally choose to configure a TSIG shared secret key to secure the dynamic updates. The following algorithm names are supported: • hmac-md5 (used by default if algo-name is not specified) • hmac-sha1 • hmac- sha256 NOTE: When a key is configured, the update is successful only if AP and DNS server clocks are in sync.	—	hmac- sha1:arubad dns: 16YüLPdH21r Q6PuK9udsVL tJw3 Y=
disable-split- tunnel	Disables split tunnel functionality for Centralized L2 subnets. Split tunneling allows a VPN user to access a public network and a local LAN or WA network at the same time through the same physical network connection. When split- tunnel is disabled, all the traffic including the corporate and Internet traffic is tunneled irrespective of the routing profile specifications. If the GRE tunnel is down and when the corporate network is not reachable, the client traffic is dropped.	—	—
dns-cache	Enables DNS caching on the AP, which allows the AP to respond to DNS requests from cache or deny the request immediately if the upstream DNS server is not reachable	—	—
dns-server <IP- address>	Defines the DNS server IP address.	—	—
domain-name <domain- name>	Defines the domain name.	—	—
host <mac>	Allows you to specify the host MAC address.	1 – 25	—
exclude-address <exclude_address>	Defines the IP address to exclude for the Local, L3 DHCP scope. The value entered in the field determines the exclusion range of the subnet. Based on the size of the subnet, the IP addresses that come before or after the IP address value specified in this field are excluded.	—	—

Parameter	Description	Range	Default
<code>ip-range <start_IP> <end_IP></code>	Defines a range of IP addresses to use in the distributed, L2 and distributed, L3 DHCP scopes. You can configure a range of DHCP IP addresses used in the branches and the number of client addresses allowed per branch. You can also specify the IP addresses that must be excluded from those assigned to clients, so that they are assigned statically. You can configure up to four different ranges of IP addresses - For Distributed, L2 mode, ensure that all IP ranges are in the same subnet as the default router. On specifying the IP address ranges, a subnet validation is performed to ensure that the specified ranges of IP address are in the same subnet as the default router and subnet mask. The configured IP range is divided into blocks based on the configured client count. - For Distributed, L3 mode, you can configure any discontinuous IP ranges. The configured IP range is divided into multiple IP subnets that are sufficient to accommodate the configured client count.	—	—
<code>lease-time <lease_time></code>	Defines a lease time for the client in seconds.	120–86400 seconds	43200 seconds (720 minutes)
<code>option <option_type> <option_value></code>	Defines the type and a value for the DHCP option to use. You can configure up to eight DHCP options supported by the DHCP server and enter the option value in "" not exceeding 255 characters.	—	—
<code>option82 allow</code>	Enables the DHCP Option 82 for the Centralized, L2 DHCP scope to allow clients to send DHCP packets with the Option 82 string.	—	—
<code>reserve {first <count> last <count>}</code>	Reserves the first few and last few IP addresses in the subnet.	—	—

Parameter	Description	Range	Default
server-type <server_type>	Defines any of the following DHCP assignment modes: • Distributed, L2 • Distributed, L3 • Local • Local, L2 • Local, L3 • Centralized, L2 • Centralized, L3	distributed,l2, distributed,l3, local, local,l2, local,l3,centralized,l2, centralized,l3	local
server-vlan <idx>	Configures a VLAN ID for the DHCP scope. To use this subnet, ensure that the VLAN ID specified here is assigned to an SSID profile.	1-4093	—
subnet <subnet>	Defines the network IP address	—	—
subnet-mask <subnet_mask>	Defines the subnet mask for Local, Local, L3, and distributed,l3 DHCP scopes. The subnet mask and the network determine the size of subnet.	—	—
vlan-id <VLAN_IP> mask <VLAN_mask>	Defines the IP address and subnet mask for vlan of the DHCP server.	—	—
no...	Removes any existing configuration.	—	—

Usage Guidelines

Use this command to configure the DHCP address assignment for the branches connected to the corporate network through VPN. You can configure the following types of DHCP profiles.

- **Distributed, L2** — In this mode, the Virtual Controller acts as the DHCP server, but the default gateway is in the data center. Based on the number of clients specified for each branch, the range of IP addresses is divided. Based on the IP address range and client count configuration, the DHCP server in the Virtual Controller controls a scope that is a subset of the complete IP Address range for the subnet distributed across all the branches. This DHCP Assignment mode is used with the L2 forwarding mode.
- **Distributed, L3** — In this mode, the Virtual Controller acts as the DHCP server and the default gateway. Based on the number of clients specified for each branch, the range of IP addresses is divided. Based on the IP address range and client count configuration, the DHCP server in the Virtual Controller is configured with a unique subnet and a corresponding scope.
- **Local** — In this mode, the Virtual Controller acts as both the DHCP Server and the default gateway. The configured subnet and the corresponding DHCP scope are independent of subnets configured in other AP clusters. The Virtual Controller assigns an IP address from a local subnet and forwards traffic to both **corporate** and **non-corporate** destinations. The network address is translated appropriately and the packet is forwarded through the IPsec tunnel or through the uplink. This DHCP assignment mode is used for the NAT forwarding mode.

- **Local, L2** — In this mode, the virtual controller acts as a DHCP server with data center as the gateway. When Local, L2 DHCP scope is selected, the network address translation for client IPs is not carried out at the source.
- **Local, L3** — In this mode, the Virtual Controller acts as a DHCP server and the gateway, and assigns an IP address from the local subnet. The AP routes the packets sent by clients on its uplink. This mode does not provide corporate access through the IPsec tunnel. This DHCP assignment mode is used with the L3 forwarding mode.
- **Centralized, L2** — When a Centralized, L2 DHCP scope is configured, the Virtual Controller bridges the DHCP traffic to the controller over the VPN or GRE tunnel. The IP address is obtained from the DHCP server behind the controller serving the VLAN or GRE of the client. This DHCP assignment mode also allows you to add the DHCP option 82 to the DHCP traffic forwarded to the controller.
- **Centralized, L3** — For Centralized, L3 clients, the Virtual Controller acts as a DHCP relay agent that forwards the DHCP traffic to the DHCP server located either in the corporate or local network. The centralized L3 VLAN IP is used as the source IP. The IP address is obtained from the DHCP server.

Example

The following example configures a Distributed, L2 DHCP scope:

```
(AP) (config)# ip dhcp corpNetwork1

(AP) (DHCP Profile"corpNetwork1")# ip dhcp server-type distributed,l2

(AP) (DHCP Profile"corpNetwork1")# server-vlan 1

(AP) (DHCP Profile"corpNetwork1")# subnet 192.0.1.0

(AP) (DHCP Profile"corpNetwork1")# subnet-mask 255.255.255.0

(AP) (DHCP Profile"corpNetwork1")# default-router 192.0.1.1

(AP) (DHCP Profile"corpNetwork1")# client-count 0

(AP) (DHCP Profile"corpNetwork1")# dns-server 192.0.1.2

(AP) (DHCP Profile"corpNetwork1")# domain-name www.example.com

(AP) (DHCP Profile"corpNetwork1")# lease-time 1200

(AP) (DHCP Profile"corpNetwork1")# ip-range 192.0.1.0 192.0.1.17

(AP) (DHCP Profile"corpNetwork1")# reserve first 2

(AP) (DHCP Profile"corpNetwork1")# option 176
"MCIPADD=10.72.80.34,MCPORT=1719,TFTPSRVR=10.80.0.5,L2Q=1,L2QVLAN=2,L2QAUD=5,L2QSIG=3
"

(AP) (DHCP Profile"corpNetwork1")# end

(AP)# commit apply
```

The following example configures a Distributed,L3 DHCP scope:

```
(AP) (DHCP Profile <profile-name>)# ip dhcp server-type <Distributed,L3>

(AP) (DHCP Profile <profile-name>)# server-vlan <vlan-ID>

(AP) (DHCP Profile <profile-name>)# client-count <number>
```

```

(AP) (DHCP Profile <profile-name>)# dns-server <name>

(AP) (DHCP Profile <profile-name>)# dynamic-dns key <algo-name:keyname:keystring>
(AP) (DHCP Profile <profile-name>)# domain-name <domain-name>

(AP) (DHCP Profile <profile-name>)# lease-time <seconds>

(AP) (DHCP Profile <profile-name>)# ip-range <start-IP> <end-IP>

(AP) (DHCP Profile <profile-name>)# reserve {first | last} <count>

(AP) (DHCP Profile <profile-name>)# option <type> <value>

(AP) (DHCP Profile <profile-name>)# end

(AP)# commit apply

```

To configure VLAN in a Local DHCP profile:

```

(AP) (config)# ip dhcp <profile-name>

(AP) (DHCP Profile <profile-name>)# vlan-ip <VLAN_IP> mask <VLAN mask>

(AP) (DHCP Profile <profile-name>)# end

(AP)# commit apply

```

To configure a default router in a Local DHCP profile:

```

(AP) (config)# ip dhcp <profile-name>

(AP) (DHCP Profile <profile-name>)# default-router <default_router>

(AP) (DHCP Profile <profile-name>)# end

(AP)# commit apply

```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and IP DHCP profile configuration sub- mode.

4.9.11 ip dhcp pool

Description

This command configures a DHCP pool on the Virtual Controller.

Syntax

```
ip dhcp pool
    dns-cache
    dns-server <IP-address>
    domain-name <domain-name>
    lease-time <minutes>
    subnet <IP-address-subnet>
    subnet-mask <Subnet_Mask>
no...
```

Parameter	Description	Range	Default
dns-cache	Enables DNS caching on the AP, which allows the AP to respond to DNS requests from cache or deny the request immediately if the upstream DNS server is not reachable. When DNS caching is enabled, the DNS server configuration details are ignored.	—	—
dns-server <address>	Defines the IP address of the DNS server. You can specify up to eight IP addresses as a comma separated list.	—	—
domain-name <domain-name>	Defines the name of domain to which the client belongs.	—	—
lease-time <minutes>	Configures the duration of the DHCP lease in minutes.	2–43200 minutes	720 minutes
subnet <IP- address-subnet>	Defines IP address of the subnet.	—	—
subnet-mask <Subnet_Mask>	Defines the subnet mask of the IP address,	—	—

Usage Guidelines

Use this command to configure a DHCP pool. The DHCP server is a built-in server, used for networks in which clients are assigned IP address by the Virtual Controller. You can customize the DHCP pool subnet and address range to provide simultaneous access to more number of clients. The pool can support up to 2048 addresses. The default size of the IP address pool is 512. When an AP receives a DHCP request from a client, it examines the origin of the request to determine if a response must be sent. If the IP address of the VLAN matches a configured DHCP pool, the AP answers the request.

Example

The following command configures a DHCP pool:

```
(AP) (config) # ip dhcp pool
(AP) (DHCP) # domain-name example.com
(AP) (DHCP) # dns-cache
(AP) (DHCP) # dns-server 192.0.2.1 (AP) (DHCP) # lease-time 20
(AP) (DHCP) # subnet 192.0.2.0
(AP) (DHCP) # subnet-mask 255.255.255.0
(AP) (DHCP) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and IP DHCP configuration sub-mode.

4.9.12 ip-mode

Description

This command configures the IP mode to enable the processing of IPv4 packets globally.

Syntax

```
ip-mode {v4-only|v4-prefer}
```

```
no...
```

Parameter	Description
ip-mode	Configures the IP mode to process IPv6 or IPv4 packets.
v4-only	Enables global processing of IPv4 packets.
v4-prefer	TBU
no...	Removes the configuration.

Usage Guidelines

Use this command to configure IP modes to enable global processing of IPv4 packets.

Example

The following example configures the IPv4 mode:

```
(AP) (config) # ip-mode v4-only
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.9.13 ipm

Description

This command configures IPM. It also helps set IPM power reduction steps and specify their priorities.

Syntax

```
ipm
    disable
    enable
    ipm-power-reduction-step-prio
    no
```

Parameter	Description	Default
ipm	IPM is a feature that actively measures the power utilization of an AP and dynamically adapts to the power resources.	Disabled
disable	Disables IPM on the AP.	—
enable	Enables IPM on the AP.	—
ipm-power-reduction-step-prio	Sets IPM power reduction steps and specifies their priorities.	—
no	Removes the IPM configuration.	—

Usage Guidelines

Use this command to enable or disable IPM on the AP and also to set power reduction steps and specify their priorities.

Example

The following example enables IPM:

```
(AP) (config) # ipm
(AP) (ipm) # enable
(AP) (ipm) # end
(AP) # commit apply
```

The following example alters the IPM priority list:

```
(AP) (ipm) # ipm-power-reduction-step-prio ipm-step
(AP) (ipm) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and IPM configuration sub-mode.

4.9.14 ip radius

Description

This command configures global parameters for configured RADIUS servers.

Syntax

```
ip radius rfc-3576-server udp-port <port>
```

Parameter	Description	Range	Default
rfc-3576-server	Configures the UDP port to receive requests from a RADIUS server. NOTE: This parameter can only be used on SCALANCE W Virtual Controller.	—	—
udp-port	Indicates the UDP port to receive server requests.	—	—
<port>	Indicates the port number.	1–65535	3799

Usage Guidelines

This command configures global RADIUS server parameters. The `rfc3576` parameter must be enabled in the **wlan auth-server** command for the global RADIUS server configuration to take effect.

Example

The following example configures the UDP port:

```
(AP) (config)# ip radius rfc-3576-server udp-port 1700
(AP) (config)# end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.10 L

4.10.1 l3-mobility

Description

This command configures Layer-3 mobility on an AP.

Syntax

```
l3-mobility
```

```
home-agent-load-balancing
```

```
subnet <IP-address-subnet> <subnet-mask> <vlan> <virtual-controller-IP-address>
```

```
virtual-controller <IP-address>
```

```
no...
```

Parameter	Description	Range	Default
l3-mobility	Enables Layer-3 mobility configuration sub-mode.	—	—
home-agent-load-balancing	Enables home agent load balancing. When enabled, the Virtual Controller assigns the home AP for roamed clients by using around robin policy. With this policy, the load for the APs acting as Home Agents for roamed clients is uniformly distributed across the AP cluster.	—	Disabled
<IP-address>	Configures the IP address for the subnets support in an AP cluster.	—	—
subnet <subnet-mask>	Specifies the subnet mask.	—	—
<vlan>	Assigns the VLAN applicable to the AP cluster.	1-4093	—
<virtual-controller IP>	Specifies the IP address of the Virtual Controller in an AP cluster.	—	—
virtual-controller <IP-address>	Adds the IP address of a Virtual Controller to the mobility domain. In a typical deployment scenario, all the APs are configured in one subnet and all the clients in another subnet. You can also deploy APs across different subnets, in which case the APs in each subnet will form a cluster with its own Virtual Controller IP address. To allow clients to roam seamlessly among all the APs, the Virtual Controller IP for each of the foreign subnets must be configured for each AP cluster.		
no...	Removes the configuration.	—	—

Usage Guidelines

Use this command to configure layer-3 mobility domains on an AP.

Example

The following example configures L3-mobility:

```
(AP) (config) # l3-mobility
(AP) (L3-mobility) # home-agent-load-balancing
(AP) (L3-mobility) # virtual-controller 192.0.2.1
(AP) (L3-mobility) # subnet 192.0.2.2 255.255.255.0 1 192.0.2.1
(AP) (L3-mobility) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and L3 mobility configuration sub-mode.

4.10.2 lacp-mode

Description

This command is introduced to support the static LACP configuration.

Syntax

```
lacp-mode {enable|disable}
```

```
no.
```

Parameter	Description
enable	This parameter enables the static LACP configuration. The AP will work on LACP mode irrespective of whether or not the peer switch works on the LACP mode.
disable	This parameter disables the static LACP configuration. The AP will not work on LACP mode even it detects any LACP PDUs from the peer switch.
no	Removes the static LACP configuration

Usage Guidelines

Use this command to enable, disable, and remove the static LACP configuration. When an AP boots up, it forms the LACP according to the static configuration.

Example

The following example configures the static LACP for the AP.

```
(AP)# lacp-mode enable
```

```
(AP)# lacp-mode disable
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.10.3 led-off

Description

This command disables LED display on an AP.

Syntax

```
led-off
```

```
no...
```

Command/Parameter	Description
led-off	Disables LED display.
no...	Re-enables LED display.

Usage Guidelines

Use this command to disable the LED display.

Example

The following example disables LED display on an AP:

```
(AP) (config) # led-off
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.10.4 loginsession

Description

This command configures the management session (Telnet or SSH) to remain active without any user activity.

Syntax

loginsession timeout <val>

Parameter	Description	Range	Default
timeout	Number of seconds or minutes that a management session remains active without any user activity.	5 .. 60 minutes or 1 .. 3600 seconds, 0 to disable	5 minutes

Usage Guidelines

The management user must re-login to the AP after a Telnet or SSH session times out. If you set the timeout value to 0, sessions do not time out.

Example

The following example configures management sessions on the AP to not time out:

```
(AP) (config) # loginsession timeout 0
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.10.5 logout

Description

This command logs you out of the current CLI session.

Syntax

```
logout
```

Usage Guidelines

Use this command to log out of the current CLI session and return to the user login prompt.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.11 M

4.11.1 mas-integration

Description

This command enables Mobility Access Switch integration on an AP.

Syntax

```
mas-integration
```

```
no...
```

Parameter	Description
mas-integration	Enables you to integrate the AP with a Mobility Access Switch.
no...	Removes the configuration.

Usage Guidelines

Use this command to integrate Mobility Access Switch with an AP.

You can integrate an AP with a Mobility Access Switch by connecting it directly to the switch port. The following Mobility Access Switch integration features can be applied while integrating with an AP:

- **Rogue AP containment**—When a rogue AP is detected by an AP, it sends the MAC Address of the rogue AP to the Mobility Access Switch. The Mobility Access Switch blacklists the MAC address of the rogue AP and turns off the PoE on the port.
- **PoE prioritization**— When an AP is connected directly into the Mobility Access Switch port, the Mobility Access Switch port increases the PoE priority of the port. This is done only if the PoE priority is set by default in the Mobility Access Switch.
- **GVRP Integration**— Configuring GVRP enables the switch to dynamically register or de-register VLAN information received from a GVRP applicant such as an AP. GVRP also enables the switch to propagate the registered VLAN information to the neighboring switches in the network.

Note

The associated static VLANs in the wired and wireless profiles are propagated to the upstream Mobility Access Switch using GVRP messages.

When an AP is integrated with a Mobility Access Switch, the LLDP is enabled. Using this protocol, the APs instruct the Mobility Access Switch to turn off the ports where rogue APs are connected, perform actions such as increasing the PoE priority, and configure the VLANs on the ports to which the APs are connected.

Example

The following example enables Mobility Access Switch integration for an AP:

```
(AP) (config)# mas-integration
```

```
(AP) (config)# end
```

```
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.11.2 managed-mode-profile

Description

This command is used to enable auto configuration of the APs in the management mode.

Syntax

```
managed-mode-profile
    automatic
    config-filename <filename>
    debug-managed-mode
    download-method <method>
    retry-poll-period <time-in-sync>
    server <server name>
    sync-time day <dd> | hour <hh> | min <mm> | window <window>
    username <username>
    password <password>
    no...
```

Parameter	Description
managed-mode-profile	Configures the managed-mode-profile for automatic configuration.
automatic	Enabled the automatic mode to automatically generate the user credentials based on AP MAC address.
config-filename <file_name>	Filename Indicates filename within the alphanumeric format. Ensure that configuration file name does not exceed 40 characters.
download-method <method>	Denotes the method used for downloading configuration files (FTP or FTPS).
server <server_name>	Denotes the name of the server or the IP address of the server from which the configuration file must be downloaded.
sync-time day <dd> hour <hh> min <mm> window <window>	Configures the day and time at which the APs can poll the configuration files from the server. - day <dd>— Indicates day, for example to configure Sunday as the day, specify 01. To configure the synchronization period as everyday, enter 00. - hour <hh>—Indicates hour within the range of 0-23. - min <mm>—Indicates minutes within the range of 0-59. - window <hh>—Defines a window for synchronization of the configuration file. The default value is 3 hours.
retry-poll-period <time-in-sync>	Configures the time interval in minutes between two retries, after which APs can retry downloading the configuration file

Parameter	Description
username <username> password <password>	Denotes the user credentials set by the user to enable automatic configuration.
no...	Removes the configuration.

Usage Guidelines

Use this command to enable automatic configuration of the APs in the management mode.

The following checks must be performed before the configuration:

- Ensure that the APs running SCALANCE W 8.3.0.x
- When the APs are in the management mode, ensure that the APs are not managed by AirWave.

Example

The following example configures an AP for automatic configuration:

```
(AP) (config) # managed-mode-profile
(AP) (managed-mode-profile) # username <username>
(AP) (managed-mode-profile) # password <password>
(AP) (managed-mode-profile) # config-filename instant.cfg
(AP) (managed-mode-profile) # download-method ftps
(AP) (managed-mode-profile) # sync-time day 00 hour 03 min 30 window 02
(AP) (managed-mode-profile) # retry-poll-period 10
(AP) (managed-mode-profile) # end
(AP) # commit apply
```

Command Information

AP Platform	Command Mode
All platforms	Configuration mode

4.11.3 managed-mode-sync-server

Description

This command is used to retrieve a new set of configuration from the server ahead of the next scheduled sync- time.

Syntax

```
managed-mode-sync-server
```

Parameter	Description
managed-mode-sync-server	Initiates the fetching of a new set of configuration from the server for the APs in the management mode.

Usage Guidelines

Use this command for a real-time retrieve and apply of the configuration from the server, even before its actual set sync-time.

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.11.4 mesh

Description

This command sets up mesh network on an AP.

Syntax

```
mesh
```

```
no...
```

Parameter	Description
mesh	Enables mesh network on the AP.
no...	Removes the configuration.

Usage Guidelines

Use this command to set up mesh network on an AP. Mesh network requires at least one valid uplink (wired or 3G) connection. Any provisioned AP that has a valid uplink (wired or 3G) functions as a mesh portal, and the AP without an Ethernet link functions as a mesh point. The mesh portal can also act as a Virtual Controller. A MPP uses its uplink connection to reach the Virtual Controller, a mesh point, or establishes an all wireless path to the mesh portal. Mesh portals and mesh points are also known as mesh nodes, a generic term used to describe APs configured for mesh.

Mesh APs detect the environment when they boot up, locate and associate with their nearest neighbor, to determine the best path to the mesh portal.

SCALANCE W mesh functionality is supported only on dual radio APs only. On dual-radio APs, the 5 GHz radio is always used for both mesh-backhaul and client traffic, while the 2.4 GHz radio is always used for client traffic.

Note

Mesh service is automatically enabled on 802.11a band for dual-radio AP only, and this is not configurable.

The mesh network must be provisioned for the first time by plugging into the wired network. After that, mesh works on AP ROWs like any other regulatory domain.

Example

The following example enables mesh network on an AP:

```
(AP) (config) # mesh
(AP) (config) # end
(AP) # commit apply
```

Command Information

Insant AP Platform	Command Mode
All platforms	Configuration mode

4.11.5 mgmt-accounting

Description

This command is used to enable accounting privileges on TACACS+ servers for management users.

Syntax

```
mgmt-accounting command all
```

```
no...
```

Parameter	Description
mgmt-accounting command all	Configures TACACS+ servers to enable accounting for management users.
no...	Removes the configuration.

Usage Guidelines

Use this command to record the user name of the management users and the respective IP address sending the request to account for the usage of the authorized network services.

Example

The following example configures a TACACS+ server for management accounting

```
(Access Point) (config) # mgmt-accounting command all tacacs1
```

```
(Access Point) (config) # end
```

```
(Access Point) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.11.6 mgmt-auth-server

Description

This command configures authentication servers for management UI of the Virtual Controller.

Syntax

```
mgmt-auth-server <server>
```

```
no...
```

Parameter	Description
mgmt-auth-server <server>	Configures a server for management user authentication.
no...	Removes the configuration.

Usage Guidelines

Use this command to configure a management authentication server for administrator users of a Virtual Controller.

Example

The following example configures an authentication server for the management user interface:

```
(AP) (config) # mgmt-auth-server server1
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.11.7 mgmt-auth-server-load-balancing

Description

This command enables load balancing when two authentication servers are configured for management user authentication.

Syntax

```
mgmt-auth-server-load-balancing
```

```
no...
```

Parameter	Description
mgmt-auth-server-load-balancing	Enables load balancing between the primary and the backup authentication servers
no...	Removes the configuration.

Usage Guidelines

Use this command to enable load-balancing when two servers are configured.

Example

The following example enables load-balancing between two authentication servers.

```
(AP) (config) # mgmt-auth-server-load-balancing
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.11.8 mgmt-auth-server-local-backup

Description

Configures a secondary internal authentication server that will validate the management interface user credentials at runtime.

Syntax

```
mgmt-auth-server-local-backup
```

```
no...
```

Parameter	Description
mgmt-auth-server-local-backup	Configures a backup internal server for management user authentication. When enabled, the authentication switches to Internal if there is no response from the RADIUS server (RADIUS server timeout).
no...	Removes the configuration.

Usage Guidelines

Use this command to configure a backup authentication server for the Virtual Controller management interface.

Example

The following example configures a backup internal authentication server:

```
(AP) (config) # mgmt-auth-server-local-backup
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.11.9 mgmt-user

Description

This command configures user credentials for access to the Virtual Controller Management UI.

Syntax

```
mgmt-user <username> [<password>] [<type>]
```

```
no.
```

Parameter	Description
mgmt-user	Configures administrator credentials.
<username>	Creates a User name for the administrator user.
<password>	Creates a password for the administrator user.
<type>	Indicates the type of the user. For example, users with read-only privilege or the guest management user.
no.	Removes the configuration.

Usage Guidelines

Use this command to configure administrator credentials to access and configure the AP.

Example

The following example configures administrator login credentials for the AP management interface:

```
(AP) (config) # mgmt-user User1 Password123 guest-mgmt
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.11.10 mtu

Description

This command configures the MTU size for the uplink interfaces.

Syntax

```
mtu <size>
```

```
no...
```

Parameter	Description
mtu <size>	Configures MTU size.
no...	Removes the configuration.

Usage Guidelines

Use this command to configures the MTU size for tunnel and br0 interfaces, and uplink interfaces such as 3G or 4G. The configured MTU size is applied when the uplink changes.

Example

The following example sets the MTU size to 1200 bytes:

```
(AP) (config) # mtu <1200>
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.12 N

4.12.1 name

Description

This command configures a unique name for the AP.

Syntax

```
name <name>
```

Parameter	Description
name <name>	Configures a name for the AP or the Virtual Controller.

Usage Guidelines

Use this command to configure a name for the AP:

Example

The following example configures a name for the AP:

```
(AP) # hostname <system-name>
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.12.2 ntp-server

Description

This command configures NTP server for an AP.

Syntax

```
ntp-server <Name>
```

```
no...
```

Parameter	Description	Default
ntp-server <Name>	Configures the IP address or the URL (domain name) of the NTP server.	pool.ntp.org
no	Removes the configuration	—

Usage Guidelines

The NTP helps obtain the precise time from a server and regulate the local time in each network element. If NTP server is not configured in the network, an AP reboot may lead to variation in time dat.

Example

The following command configures an NTP server for an AP:

```
(AP) (config) # ntp-server <name>
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.13 O

4.13.1 **opendns**

Description

This command configures OpenDNS credentials for filtering content and to create Internet access policies that allow or deny user access to websites based on website categories and security ratings.

Syntax

```
opendns <user> <password>
```

```
no...
```

Parameter	Description
opendns	Configures user credentials to enable access to OpenDNS to provide enterprise-level content filtering.
<user>	Configures user name to access OpenDNS.
<password>	Configures password to access OpenDNS.
no...	Removes the configuration.

Usage Guidelines

Use this command to configure OpenDNS credentials to allow SCALANCE W to filter content at the enterprise-level.

Example

The following example configures OpenDNS credentials:

```
(AP) (config) # opendns <username> <password>
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.13.2 openflow-server

Description

This command configures OpenFlow through TCP and TLS channels.

Syntax

```
openflow-server {host <addr> [tcp-port] <port>| tls-enable} no...
```

Parameter	Description	Default
<time>	Indicates the host name of the OpenFlow controller.	—
<addr>	Indicates the FQDN or the IPv4 address of the OpenFlow controller.	—
tcp-port	Indicates the TCP port address using with OpenFlow agent and OpenFlow controller communicate with each other.	30633
tls-enable	Indicates the status of TLS encryption between the OpenFlow agent and OpenFlow controller.	—
no...	Removes the OpenFlow configuration.	—

Usage Guidelines

Use this command to enable TCP configuration and TLS authentication to an OpenFlow controller.

Example

The following example shows how to configure a TCP connection in an OpenFlow controller:

```
(AP) (config)# openflow-server host 1.1.1.1 tcp-port 30633
(AP) (config)# end
(AP)# commit apply
```

The following example shows how to configure a TLS authentication between the OpenFlow agent and OpenFlow controller:

```
(AP) (config)# openflow-server tls-enable
(AP) (config)# end
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.13.3 organization

Description

This command configures an organization string for APs managed or monitored by the AirWave Management console.

Syntax

```
organization <name>
```

```
no...
```

Parameter	Description	Range
organization <name>	Specifies the name of your organization.	You can use any of the following strings: - AMP Role— "Org Admin" (initially disabled) - AMP User— "Org Admin" (assigned to the role "Org Admin") - Folder— "Org" (under the Top folder in AMP) - Configuration Group— "Org" You can also assign additional strings to create a hierarchy of sub folders under the folder named "Org": For example: - subfolder1 for a folder under the "Org" folder - subfolder2 for a folder under subfolder1
no...	Removes the configuration settings.	—

Usage Guidelines

Use this command to specify an organization string for integrating the AirWave Management Server with the AP. The organization is a set of colon-separated strings created by the AirWave administrator to accurately represent the deployment of each AP. This string is defined by the installation personnel on the site.

Example

The following command configures an AirWave organization string:

```
(AP) (config)# organization aruba
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.13.4 out-of-service-hold-on-time

Description

This command configures a hold on time in seconds, after which out-of-service operation is triggered. For example, if the VPN is down, the effect of this out-of-service state impacts the SSID availability after the configured hold on time

Syntax

```
out-of-service-hold-on-time <time>
```

```
no...
```

Command/Parameter	Description	Range	Default
<time>	Configures the hold on time of out-of-service operations.	30–300 seconds	30 seconds
no...	Removes the configuration	—	—

Usage Guidelines

Use this command to configure a hold time after which the out-of-service operation is triggered.

Example

The following example sets the out of service hold on interval to 45 seconds:

```
(AP) (config) # out-of-service-hold-on-time 45
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.14 P

4.14.1 pcap

Description

This command configures the wireless packet capture on an AP.

Syntax

```
pcap {start <bssid> <ip> <port> <format> <maxlen> [<channel>]|stop <bssid> <id>}
```

Parameter	Description
start	Starts the packet capture configuration.
<bssid>	Indicates the basic bssid.
<ip>	Indicates the IP address of the client running the packet analyzer.
<port>	Indicates the UDP port number on the client station where the captured packets are sent.
<format>	Indicates the number assigned to each format for captured packets.
<maxlen>	Indicates the maximum length of 802.11 frames to include in the capture.
<channel>	Indicates the number of a radio channel to tune into to capture packets.
stop	Stops the packet capture configuration.
<id>	Indicates the ID of the PCAP session.

Usage Guidelines

These commands direct an AP to send Wi-Fi packet captures to a client packet analyzer utility such as Airmagnet, Wireshark and so on, on a remote client.

Before using these commands, you need to start the packet analyzer utility on the client and open a capture window for the port from which you are capturing packets. The packet analyzer cannot be used to control the flow or type of packets sent from the APs.

The packet analyzer processes all packets. However, you can apply display filters on the capture window to control the number and type of packets being displayed. In the capture window, the timestamp displayed corresponds to the time that the packet is received by the client and is not synchronized with the time on the AP.

Example

The following example starts the packet capture configuration:

```
(AP)# pcap start ac:a3:1e:57:bd:60 10.163.148.35 5555 0 1518
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged Exec mode

4.14.2 per-ap-ssid**Description**

This command configures the SSID settings to every AP in a cluster.

Syntax

```
per-ap-ssid <ssid>
```

```
no...
```

Parameter	Description
<ssid>	Denotes the environment variable configured in apboot.
no...	Removes the environment variable.

Usage Guidelines

This command enables every AP in a cluster to assign a unique value to a given SSID profile. Users can connect to the defined SSID.

Example

The following example sets the environment variable:

```
(AP)# per-ap-ssid <ssid>
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged Exec mode

4.14.3 per-ap-vlan

Description

This command assigns a VLAN to a given SSID profile.

Syntax

```
per-ap-vlan <vlan>
```

```
no...
```

Parameter	Description
<vlan>	Denotes the environment variable configured in apboot.
no...	Removes the environment variable.

Usage Guidelines

This command enables every AP in a cluster to assign a unique VLAN to a specified SSID profile. Users connected to the SSID can configure the specified VLAN.

Example

The following example sets the environment variable:

```
(AP) # per-ap-vlan <vlan>
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged Exec mode

4.14.4 pin-enable

Description

This command enables locking of the SIM PIN for the 3G or 4G modems.

Syntax

```
pin-enable <pin_current_used>
```

```
no...
```

Parameter	Description
pin-enable <pin_current_used>	Enables locking of the SIM. To enable SIM PIN lock, the PIN code should be same as the PIN code that is currently used.
no...	Disables SIM PIN locking.

Usage Guidelines

Use this command to enable locking of SIM PIN of the cellular modem connected to an AP.

Example

The following example enables SIM PIN locking:

```
(host)# pin-enable 12345678
```

The following example disables SIM PIN locking:

```
(host)# pin-enable 12345678
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged Exec mode

4.14.5 pin-puk

Description

This command unlocks the cellular modems using the PUK code. The SIM PIN of a modem is locked if a user enters incorrect PIN code for three consecutive attempts.

Syntax

pin-puk <pin_puk>

Parameter	Description
pin-puk <pin_puk> <pin_new>	Unlocks the SIM PIN using the PUK code provided by the ISP and by entering a new PIN code.

Usage Guidelines

Use this command to unlock a cellular modem using the PUK code provided by your ISP.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.14.6 pin-renew

Description

This command renews PIN for the SIM card of the 3G or 4G modem.

Syntax

```
pin-renew <pin_current> <pin_new>
```

Parameter	Description
pin-renew	Renews the SIM PIN of the modem.
<pin-current>	Allows you to enter the current PIN of the modem SIM.
<pin_new>	Allows you to specify a new SIM PIN for the modem.

Usage Guidelines

Use this command to renew the SIM PIN of the cellular modem.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged Exec mode

4.14.7 ping

Description

This command sends ICMP echo packets, frame count, packet-size, source-address, and interface information to the specified IP address.

Syntax

```
ping <host>[count <count> | packet-size <size> | interface <interface> | source-  
address  
<address>]
```

Parameter	Description	Default
<host>	Indicates the host name.	—
<count>	Indicates the frame count.	—
<packet-size>	Indicates the packet-size data in bytes.	56
<interface>	Indicates the interface through which data is sent.	—
<address>	Indicates the source IP address to send Ping.	—

Usage Guidelines

You can send up to five ICMP echo packets to a specified IP address. The AP times out after two seconds.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.14.8 pppoe-uplink-profile

Description

Use this command to configure PPPoE uplink profile.

Syntax

```
pppoe-uplink-profile <profile>

    pppoe-username <username>

    pppoe-passwd <password>

    pppoe-svcname <svcname>

    pppoe-chapsecret <password>

    pppoe-unnumbered-local-l3-dhcp-profile <dhcp-profile>

no...
```

Parameter	Description
pppoe-uplink-profile <profile>	Creates an uplink profile and enables the PPPoE uplink profile configuration mode.
pppoe-username <username>	Configures a user name to allow a user to log into the DSL network.
pppoe-passwd <password>	Configures a password for the user to log into the DSL network.
pppoe-svcname <svcname>	Specifies the PPPoE service provided by your service provider.
pppoe-chapsecret <password>	Configures a secret key used for Challenge Handshake Authentication Protocol (CHAP) authentication. You can use a maximum of 34 characters for the CHAP secret key.
pppoe-unnumbered-local-l3-dhcp-profile <dhcp-profile>	Configures the Local, L3 DHCP gateway IP address as the local IP address of the PPPoE interface. When configured, the local interface acts as an unnumbered PPPoE interface and allows the entire Local, L3 DHCP subnet to be allocated to clients.
no...	Removes the configuration.

Usage Guidelines

Use this command to configure PPPoE uplink connection for an AP.

Example

The following example configures the PPPoE uplink on an AP:

```
AP) (config) # pppoe-uplink-profile
(AP) (pppoe-uplink-profile) # pppoe-username User1
(AP) (pppoe-uplink-profile) # pppoe-passwd Password123
(AP) (pppoe-uplink-profile) # pppoe-svcname internet03
(AP) (pppoe-uplink-profile) # pppoe-chapsecret 8e87644deda9364100719e017f88ebce
(AP) (pppoe-uplink-profile) # pppoe-unnumbered-local-l3-dhcp-profile dhcpProfile1
(AP) (pppoe-uplink-profile) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and PPPoE uplink profile configuration sub- mode.

4.14.9 proxy

Description

This command configures HTTP proxy settings.

Syntax

```
proxy {exception <host>| server <host> <port> [<username> <password>]}
```

Parameter	Description
exception <hostname>	Sets the IP address or the domain name of the host to be added under the exception list.
server <hostname> <port number> [<username> <password>]	Sets the HTTP proxy server's IP address or domain name and the port number. You can optionally configure a username and password to authenticate the proxy server. NOTE: The <code>username</code> and <code>password</code> options are applicable only to configure proxy support for web classification.

Usage Guidelines

This command configures the HTTP proxy settings in an AP to download the image from the cloud server. This command also configures the HTTP proxy settings in an AP to route the web classification queries through the proxy server.

Example

The following example configures an HTTP proxy settings in an AP:

```
(AP) (config)# proxy exception 10.15.107.214  
(AP) (config)# proxy server 10.15.107.210 1337 user1 passwd1  
(AP) (config)# end  
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.15 R

4.15.1 radius-vsa-redirect-url

Description

This command allows the user to manually add the VSA redirect URL for debugging purpose.

Syntax

```
radius-vsa-redirect-url {add| clear} <client MAC-address> <URL> [count]
```

Parameter	Description
add	Adds radius redirect url on the AP for debug.
clear	Clears radius redirect url on the AP for debug.
<client MAC-address>	Enter the MAC address of the client to the AP.
<URL>	Enter the URL of the website.
<count>	Allows you to add the number of clients.

Usage Guidelines

Use this command to manually add the VSA redirect URL for debugging purpose.

Example

The following output is displayed for **radius-vsa-redirect-url add <client MAC-address> <URL> [count]** command:

```
c8:b5:ad:c3:af:16# radius-vsa-redirect-url add 0e:00:32:f8:ef:10
https://172.10.10.10/guest 1
```

```
c8:b5:ad:c3:af:16# sh radius-redirect-url
```

```
Radius VSA Redirect URL
```

```
-----
```

```
MAC                                URL
```

```
---
```

```
0e:00:32:f8:ef:10 https://172.10.10.10/guest
```

The following output is displayed for **radius-vsa-redirect-url clear** command:

```
c8:b5:ad:c3:af:16# radius-vsa-redirect-url clear

c8:b5:ad:c3:af:16# sh radius-redirect-url

Radius VSA Redirect URL

-----

MAC      URL
---      ---
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.15.2 reload

Description

This command performs a reboot of the Virtual Controller.

Syntax

```
reload <all>
```

Parameter	Description
<all>	Reloads all APs in a cluster.

Usage Guidelines

Use this command to reboot an AP after making configuration changes or under the guidance of customer support. The reload command powers down the AP, making it unavailable for configuration. After the AP reboots, you can access it via a local console connected to the serial port, or through an SSH, Telnet, or UI session. If you need to troubleshoot the AP during a reboot, use a local console connection.

After you use the reload command, the AP prompts you to confirm this action. If you have not saved your configuration, the AP returns the following message:

```
Do you want to save the configuration (y/n):
```

- Enter **y** to save the configuration.
- Enter **n** to not save the configuration.
- Press [Enter] to exit the command without saving changes or rebooting the AP.

If your configuration has already been saved, the AP returns the following message:

Do you really want to reset the system(y/n):

- Enter **y** to reboot the AP.
- Enter **n** to cancel this action.

The command will timeout if you do not enter **y** or **n**.

Example

The following command assumes you have already saved your configuration and you must reboot the AP: The AP returns the following messages:

```
Do you really want to reset the system(y/n): y
```

```
System will now restart!
```

```
..
```

```
Restarting system.
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.15.3 remove-blacklist-client

Description

This command allows you to delete the clients that are blacklisted.

Syntax

```
a-remove-blacklist-client <MAC_address> <AP_name>
```

Parameter	Description
MAC-address	Adds the MAC address of the blacklisted client.
AP_name	Adds the access point name to which the client is connected to.
no...	Removes the specified configuration parameter.

Usage Guidelines

Use this command to remove the entries for the clients that are dynamically blacklisted.

Example

The following command deletes the blacklisted AP client entries:


```
(AP) (config)# remove-blacklist-client d7:a:b2:c3:45:67 AP125
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.15.4 reset drt

Description

This command resets the DRT version on an AP.

Syntax

```
reset drt
```

Usage Guidelines

Use this command to clear the upgraded DRT file and enable the AP cluster to use the default DRT file.

Example

The following command shows how to reset the DRT version:

```
(AP)# reset drt
```

The AP returns the following message if the AP is using the default DRT version:

```
DRT is already in default status.
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.15.5 restrict-corp-access

Description

This command configures restricted access to the corporate network.

Syntax

```
restrict-corp-access
```

```
no...
```

Parameter	Description
no...	Removes the configuration.

Usage Guidelines

Use this command to configure restricted corporate to block unauthorized users from accessing the corporate network. When restricted corporate access is enabled, corporate access is blocked from the uplink port of master AP, including clients connected to a slave AP.

Example

The following example enables restricted access to the corporate network;

```
(AP) (config) # restrict-corp-access
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

All platforms	Configuration mode
All platforms	Privileged EXEC mode

4.15.6 restrict-mgmt-access

Description

This command configures management subnet on an AP.

Syntax

```
restricted-mgmt-access <subnet> <mask>
```

```
no...
```

Parameter	Description
subnet	Configures a management subnet address.
mask	Configures the subnet mask for the management subnet address.
no...	Removes the configuration.

Usage Guidelines

Use this command to configure management subnets. This ensures that the AP management is carried out only from these subnets. When the management subnets are configured, Telnet, SSH, and UI access is restricted to these subnets only.

Example

The following example configures a management subnet;

```
(AP) (config) # restricted-mgmt-access 192.0.2.13 255.255.255.255
(AP) (config) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.15.7 rf dot11a-radio-profile

Description

This command configures a 5 GHz or 802.11a radio profile for an AP.

Syntax

```
rf dot11a-radio-profile [<profile_name>]
    40MHZ-intolerance
    beacon-interval <interval>
    cell-size-reduction <reduction>
    csa-count <count>
    csd-override
    disable-arm-wids-functions
    dot11h
    honor-40MHZ-intolerance-disable
    interference-immunity <level>
    legacy-mode
    max-distance <count>
    max-tx-power <power>
    min-tx-power <power>
    spectrum-band <type>
    spectrum-monitor
    very-high-throughput-disable
    zone <zone>

no...
```

Parameter	Description	Range	Default
rf dot11a-radio-profile	Enables the 5 GHz RF configuration sub-mode	—	—
40MHZ-intolerance	Controls whether or not APs using this radio profile will advertise intolerance of 40 MHz operation.	—	Disabled
beacon-interval <interval>	Enter the Beacon period for the AP in milliseconds. When enabled, the 802.11 beacon management frames are transmitted by the access point at the specified interval.	60-500	100

Parameter	Description	Range	Default
cell-size-reduction <reduction>	The cell size reduction feature allows you manage dense deployments and to increase overall system performance and capacity by shrinking an APs receive coverage area. It helps to minimize co-channel interference and optimizes channel reuse. The possible range of values for this feature are 0-55 dB. NOTE: This value should be changed if the network is experiencing performance issues. The default 0 dB reduction allows the radio to retain its current default Rx sensitivity value. Values from 1 dB - 55 dB reduce the power level that the radio can hear by that amount. If you configure this feature to use a non- default value, you must also reduce the radio's Tx power to match its new Rx power level. Failure to match a device's Tx power level to its Rx power level can result in a configuration that allows the radio to send messages to a device that it cannot hear.	1-55	0
csa-count <count>	Configures the number of channel switching announcements that must be sent before switching to a new channel. This allows associated clients to recover gracefully from a channel change.	0-10	2
csd-override	Most transmissions to HT stations are sent through multiple antennas using CSD. When you enable the CSD Override parameter, CSD is disabled and only one antenna transmits data, even if they are being sent to high-throughput stations. This enables interoperability for legacy or high-throughput stations that cannot decode 802.11n CDD data. This option is disabled by default, and should only be enabled under the supervision of technical support. Use this feature to turnoff antenna diversity when the AP must support legacy clients such as Cisco 7921g VoIP phones, or older 802.11g clients (e.g. IntelCentrino clients). NOTE: Enabling this feature can reduce overall throughput rates.	—	—

Parameter	Description	Range	Default
<code>disable-arm-wids-functions</code>	By default, WIDS protection is on dynamic mode. If an AP is heavily loaded with client traffic and the CPU utilization exceeds the threshold limit, the WIDS processing is suspended. This causes more CPU cycles to handle the client traffic. When the CPU utilization is within the threshold limit, the WIDS processing is resumed. When disable-arm-wids-functions is on, the AP will always process frames for WIDS purposes even when it is heavily loaded with client traffic. When disable-arm-wids-functions is off, the AP will stop process frames for WIDS purposes regardless of whether the AP is heavily loaded or not. The WIDS functionality will not take effect.		
<code>dot11h</code>	Allows the AP to advertise its 802.11d (country information) and 802.11h TPC capabilities.	—	Disabled
<code>honor-40MHZ-intolerance-disable</code>	Allows the AP to advertise its 802.11d (country information) and 802.11h TPC capabilities.	Dynamic, off, on	Dynamic
<code>interference-immunity</code> <level>	Configures the immunity level to improve performance in high-interference environments. You can specify any of the following immunity levels: - Level 0— no ANI adaptation. - Level 1— Noise immunity only. This level enables power-based packet detection by controlling the amount of power increase that makes a radio aware that it has received a packet. - Level 2— Noise and spur immunity. This level also controls the detection of OFDM packets, and is the default setting for the Noise Immunity feature. - Level 3— Level 2 settings and weak OFDM immunity. This level minimizes false detects on the radio due to interference, but may also reduce radio sensitivity. This level is recommended for environments with a high-level of interference related to 2.4 GHz appliances such as cordless phones. - Level 4— Level 3 settings, and FIR immunity. At this level, the AP adjusts its sensitivity to in-band power, which can improve performance in environments with high and constant levels of noise interference. - Level 5— The AP completely disables PHY error reporting, improving performance by eliminating the time the AP would spend on PHY processing. NOTE: Increasing the immunity level makes the AP to lose a small amount of range.	0-5	2

Parameter	Description	Range	Default
legacy-mode	Enables the APs to run the radio in non- 802.11n mode.	—	Disabled
max-distance <count>	When this parameter is set, the radio will still use the 40 MHz channels even if the 40 MHz intolerance indication is received from another AP or station.	—	Disabled
max-tx-power <power>	Configures the maximum transmit power value for the 5 GHz radio profile.	3-max	3 dBm
min-tx-power <power>	Configures the minimum transmit power value for the 5 GHz radio profile.	3-max	3 dBm
max-distance <count>	Configures the maximum distance between a client and an AP or between a mesh point and a mesh portal in meters. This value is used to derive ACK and CTS timeout times. A value of 0 specifies the default settings for this parameter, where timeouts are only modified for outdoor mesh radios which use a distance of 16km.	600-1000	0
spectrum-band <type>	Allows you to specify the portion of the channel to monitor for 5 GHz configuration.	—	—
spectrum-monitor	Allows the APs in access mode to continue with normal access service to clients, while performing additional function of monitoring RF interference (from both neighboring APs and non Wi-Fi sources such as, microwaves and cordless phones) on the channel they are currently serving clients.	—	—
very-high-throughput-disable	Disables VHT for clients connecting on the 5 GHz band.	—	—
zone <zone>	Configures a zone name for the radio profile. NOTE: This parameter cannot be configured on a default radio profile.	—	—
no...	Removes the configuration.	—	—

Usage Guidelines

Use this command to create a 5 GHz radio profile on an AP.

Example

The following example configures the 5 GHz radio profile:

```
(AP) (config) # rf dot11a-radio-profile
(AP) (RF dot11a Radio Profile) # beacon-interval 100
(AP) (RF dot11a Radio Profile) # legacy-mode
(AP) (RF dot11a Radio Profile) # dot11h
(AP) (RF dot11a Radio Profile) # interference-immunity 3
```

```
(AP) (RF dot11a Radio Profile)# max-tx-power 33
(AP) (RF dot11a Radio Profile)# min-tx-power 10
(AP) (RF dot11a Radio Profile)# max-distance 600
(AP) (RF dot11a Radio Profile)# csa-count 2
(AP) (RF dot11a Radio Profile)# spectrum-monitor
(AP) (RF dot11a Radio Profile)# end
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and RF dot11a Radio Profile configuration sub-mode

4.15.8 rf dot11g-radio-profile

Description

This command configures a 2.4.GHz or 802.11g radio profile for an AP

Syntax

```
rf dot11g-radio-profile [<profile_name>]
    40MHZ-intolerance
    beacon-interval <interval>
    cell-size-reduction <reduction>
    csa-count <count>
    csd-override
    disable-arm-wids-functions
    dot11h
    honor-40MHZ-intolerance-disable
    interference-immunity <level>
    legacy-mode
    max-distance <count>
    max-tx-power <power>
    min-tx-power <power>
    smart-antenna
    spectrum-monitor
    zone <zone>
```


no...

Parameter	Description	Range	Default
<code>rf-dot11g-radio-profile</code>	Enables the 2.4 GHz RF configuration sub- mode	—	—
<code>40MHz-intolerance</code>	Controls whether or not APs using this radio profile will advertise intolerance of 40 MHz operation.	—	Disabled
<code>beacon-interval</code> <interval>	Enter the Beacon period for the AP in milliseconds. When enabled, the 802.11 beacon management frames are retransmitted by the access point at the specified interval.	60-500	100
<code>cell-size-reduction</code> <reduction>	The cell size reduction feature allows you manage dense deployments and to increase overall system performance and capacity by shrinking an AP's receive coverage area. It helps to minimize co-channel interference and optimizes channel reuse. The possible range of values for this feature are 0-55 dB. NOTE: This value should be changed if the network is experiencing performance issues. The default 0 dB reduction allows the radio to retain its current default Rx sensitivity value. Values from 1 dB - 55 dB reduce the power level that the radio can hear by that amount. If you configure this feature to use a non-default value, you must also reduce the radio's Tx power to match its new Rx power level. Failure to match a device's Tx power level to its Rx power level can result in a configuration that allows the radio to send messages to a device that it cannot hear.	1-55	0
<code>csa-count</code> <count>	Configures the number of channel switching announcements that must be sent before switching to a new channel. This allows associated clients to recover gracefully from a channel change.	0-10	2
<code>csd-override</code>	Most transmissions to HT stations are sent through multiple antennas using CSD. When you enable the CSD Override parameter, CSD is disabled and only one antenna transmits data, even if they are being sent to high-throughput stations. This enables interoperability for legacy or high-throughput stations that cannot decode 802.11n CDD data. This option is disabled by default, and should only be enabled under the supervision of technical support. Use this feature to turn off antenna diversity when the AP must support legacy clients such as Cisco 7921g VoIP phones, or older 802.11g clients (e.g. Intel Centrino clients). NOTE: Enabling this feature can reduce overall throughput rates.	—	—

Parameter	Description	Range	Default
<code>disable-arm-wids-functions</code>	By default, WIDS protection is on dynamic mode. If an AP is heavily loaded with client traffic and the CPU utilization exceeds the threshold limit, the WIDS processing is suspended. This causes more CPU cycles to handle the client traffic. When the CPU utilization is within the threshold limit, the WIDS processing is resumed. When <code>disable-arm-wids-functions</code> is on, the AP will always process frames for WIDS purposes even when it is heavily loaded with client traffic. When <code>disable-arm-wids-functions</code> is off, the AP will stop processing frames for WIDS purposes regardless of whether the AP is heavily loaded or not. The WIDS functionality will not take effect.	Dynamic, off, on	Dynamic
<code>dot11h</code>	Allows the AP to advertise its 802.11d (country information) and 802.11h (transmit power control) capabilities.	—	Disabled
<code>honor-40MHz-intolerance-disable</code>	When this parameter is set, the radio will still use the 40 MHz channels even if the 40 MHz intolerance indication is received from another AP or station.	—	Disabled
<code>interference-immunity</code> <level>	Configures the immunity level to improve performance in high-interference environments. You can specify any of the following immunity levels: - Level 0— no ANI adaptation. - Level 1— Noise immunity only. This level enables power-based packet detection by controlling the amount of power increase that makes a radio aware that it has received a packet. - Level 2— Noise and spur immunity. This level also controls the detection of OFDM packets, and is the default setting for the Noise Immunity feature. - Level 3— Level 2 settings and weak OFDM immunity. This level minimizes false detects on the radio due to interference, but may also reduce radio sensitivity. This level is recommended for environments with a high-level of interference related to 2.4 GHz appliances such as cordless phones. - Level 4— Level 3 settings, and FIR immunity. At this level, the AP adjusts its sensitivity to in-band power, which can improve performance in environments with high and constant levels of noise interference. - Level 5— The AP completely disables PHY error reporting, improving performance by eliminating the time the AP would spend on PHY processing. NOTE: Increasing the immunity level makes the AP to lose a small amount of range.	0-5	2
<code>legacy-mode</code>	Enables the APs to run the radio in non- 802.11n mode.	—	Disabled

Parameter	Description	Range	Default
max-tx-power <power>	Configures the maximum transmit power value for the 2.4 GHz radio profile.	3-max	3 dBm
min-tx-power <power>	Configures the minimum transmit power value for the 2.4 GHz radio profile.	3-max	3 dBm
max-distance <count>	Configures the maximum distance between a client and an AP or between a mesh point and a mesh portal in meters. This value is used to derive ACK and CTS timeout times. A value of 0 specifies the default settings for this parameter, where timeouts are only modified for outdoor mesh radios which use a distance of 16km.	600-1000	0
spectrum-monitor	Allows the APs in access mode to continue with normal access service to clients, while performing additional function of monitoring RF interference (from both neighboring APs and non Wi-Fi sources such as, microwaves and cordless phones) on the channel they are currently serving clients.	—	Disabled
zone <zone>	Configures a zone name for the radio profile. NOTE: This parameter cannot be configured on a default radio profile.	—	—
no...	Removes the configuration.	—	—

Usage Guidelines

Use this command to create a 2.4 GHz radio profile on an AP.

Example

The following example configures the 2.4 GHz radio profile:

```
(AP) (config) # rf dot11g-radio-profile
(AP) (RF dot11g Radio Profile) # beacon-interval 200
(AP) (RF dot11g Radio Profile) # no legacy-mode
(AP) (RF dot11g Radio Profile) # dot11h
(AP) (RF dot11g Radio Profile) # interference-immunity 3
(AP) (RF dot11g Radio Profile) # max-tx-power 33
(AP) (RF dot11g Radio Profile) # min-tx-power 10
(AP) (RF dot11g Radio Profile) # max-distance 600
(AP) (RF dot11g Radio Profile) # csa-count 2
(AP) (RF dot11g Radio Profile) # spectrum-monitor
(AP) (RF dot11g Radio Profile) # end
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and RF dot11g Radio Profile sub-mode

4.15.9 rf-band

Description

This command configures the RF band for an AP.

Syntax

```
rf-band {2.4| 5.0| all}
```

Parameter	Description	Range	Default
<code>rf-band {2.4 5 all}</code>	Configures a radio frequency band for an AP. You can configure any of the following options: • 2.4—For 2.4 GHz band or 802.11g configuration • 5—For 5 GHz and 802.11a configuration • all - For a mixed configuration of 2.4.GHz and 5 GHz. If you do not specify any value, by default both 5 GHz and 2.4 GHz bands are selected.	2.4, 5.0, all	all

Usage Guidelines

Use this command to configure RF band for an AP.

Example

The following example configures the 5 GHz RF band for an AP.

```
(AP) (config) # rf-band 5
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.15.10 rf-zone

Description

This command configures the RF zone for an AP.

Syntax

```
rf-zone <zone>
```

```
no...
```

Parameter	Description
<zone>	Configures the RF zone and maps the RF zone to a radio profile.
no...	Removes the RF zone configuration.

Usage Guidelines

Use this command to configure the RF zone for an AP.

Example

The following example configures the RF zone of a guest SSID.

```
(AP)# rf-zone guest
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged Exec mode

4.15.11 routing-profile

Description

This command configures a routing profile for a specific destination address or destination subnet.

Syntax

```
routing-profile
    route <destination> <mask> <gateway> {<metric>}
    no...
no routing profile
```

Parameter	Description
routing-profile <profile>	Creates a routing profile for routing traffic into a specific destination address or destination subnet.
route	Configures route parameters.
<destination>	Configures the destination network that is reachable through the VPN tunnel.
<mask>	Specify the subnet mask of network that is reachable through the VPN tunnel.
<gateway>	Specify the gateway to which traffic must be routed. This IP address must be the controller IP address on which the VPN connection is terminated.
<metric>	This is an optional field and is configures a metric for the datapath route from source to destination. The default metric value is 15.
no...	Removes configuration settings for parameters under the routing-profile command.
no routing- profile	Removes the routing profile configuration.

Usage Guidelines

Use this command to configure a routing profile for a specific destination address or destination subnet.

Example

The following example configures a routing profile:

```
(AP) (config)# routing-profile
(AP) (Routing-profile)# route 192.0.1.0 255.255.255.0 192.0.2.0 15
(AP) (Routing-profile)# end
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and routing profile configuration sub-mode.

4.16 S

4.16.1 show 1xcert

Description

This command displays the details about the external server certificate, which is used by the AP for client authentication.

Syntax

```
show 1xcert
```

Usage Guidelines

Use this command to view information about the server certificates uploaded to an AP.

Example

The output of this command describes details such as the version, serial number, subject, issue date, expiry date, type of encryption, and RSA key information for the certificates uploaded to the AP.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.2 show aaa dns-query-interval

Description

This command displays the time interval range set for a dns query.

Syntax

```
show aaa dns-query-interval
```

Parameter	Description	Range	Default
dns-query-interval <minutes>	Displays the time interval at which the query must be sent. The interval is ranged in minutes	0 - 60 minutes	15

Usage Guidelines

Use this command to displays the time interval range set for a dns query.

Example

The following example shows the output of **show aaa dns-query-interval** command.

```
20:4c:03:24:89:18# show aaa dns-query-interval
```

```
DNS QUERY Interval:15
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.3 show aaa fqdn-server-names

Description

This command maintains a FQDN table that keeps the details of hostname and the mapping IP for an AP.

Syntax

```
show aaa fqdn-server-names
```

Usage Guidelines

Use this command to maintain a FQDN table for an AP.

Example

The following example shows the output of **show ap association** command.

```
20:4c:03:24:89:18# show aaa fqdn-server-names
```

```
Auth Server FQDN names
```

```
-----
```

```
FQDN IP Address IPv6 Address Refcount
```

```
----
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.4 show about

Description

This command displays information about SCALANCE W.

Syntax

```
show about
```

Usage Guidelines

Use this command to view information such as SCALANCE W version, build time and AP model.

Example

The **show about** command displays the Build Time, AP model number, the SCALANCE W version, website address of organization, and Copyright information. The following example shows the **show about** command output:

```
Name           :Siemens
Type            SCALANCE-W1750D-2IA-RJ45
Build Time      :2018-06-23 23:46:04 UTC
Version         :8.3.0.1
Website         :https://www.siemens.com/iwlan
Legal           :All Rights Reserved (c) 1996-2018,Siemens AG.
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.5 show access-rule

Description

This command displays the details of access rules configured for the wired or wireless clients associated with an AP.

Syntax

```
show access-rule <name>
```

Parameter	Description
<name>	Displays the access rule configuration details based the name specified for this parameter.

Usage Guidelines

Use this command to view information an access rule configured for a network profile.

Example

The following example shows the output displayed for the **show access-rule** command:

```
Access Rule Profiles
-----
Name
----
ethersphere-instant-wpa2 default_wired_port_profile wired-instant
ethersphere-instant-cp ethersphere-instant ether-wired
11-android
```

On specifying a name of the SSID or the port profile along with the show access-rule <name> command, the list of access rules configured for the specified profile is displayed. The following example shows the output of this command:

```
Access      Rules
-----
Dest IP     Dest Mask          Dest Match          Protocol (id:sport:eport)
              Application Action Log      TOS 802.1P          Blacklist App Throttle
(Up:Down)   Mirror              DisScan             Classify             Media
-----
```

```

-----
any          any          match      any
255 255.255. 255 match    h323-tcp          permit 192.0.2.7
.
                                permit

any          any          match      any
255 255.255. 255 match    h323-tcp          permit 192.0.2.7
.
                                permit

any          any          match      dhcp
                                permit

any          any          match
                                app babylon

                                deny

any          any          match          games      deny      app baidu-hi-

any          any          match          app bluejayfilms

deny
any          any          match          appcategory gaming

deny
any          any          match          webcategory shopping

deny
any          any          match          webcategory abused-drugs

deny
any          any          match          webcategory dead-sites

deny
any          any          match          webreputation

                                high-risk- sites deny

Blacklist App Throttle (Up:Down) Mirror DisScan ClassifyMedia
-----
-----

```

The output of this command displays information about the access rule parameters configured for a specific wired or wireless profile. It indicates whether a particular type of traffic is allowed to a particular destination, and the service and protocol in use and if options such as logging and prioritizing traffic are enabled when the rule is triggered. If the DPI access rules are configured, it displays the list of rules configured to allow or deny access to certain applications, application categories, web categories, and websites based on their reputation score.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.6 show access-rule-all

Description

This command displays the details of the access rules configured for all wired and wireless profiles on the AP.

Syntax

```
show access-rule-all
```

Usage Guidelines

Use this command to view information access rules configured for all wired and wireless profiles on the AP.

Example

The following example shows the partial output of the **show access-rule-all** command:

Access Rule Name :default_wired_port_profile

In Use :Yes

Access Rules

```
-----
Dest IP      Dest  Mask                Dest Match Protocol (id:sport:eport)
      ApplicationAction  Log   TOS 802.1P   Blacklist   App Throttle
(Up:Down)    Mirror    DisScan   ClassifyMedia
-----
-
-- -----
any any match any permit
masterip 0.0.0.0 match http permit
masterip 0.0.0.0 match 6:4343:4343 permit
any any match dhcp permit

Vlan Id      0
ACL Captive Portal :disable
ACL ECP Profile :default
CALEA        :disable
Bandwidth Limit :downstream disable upstream disable
Access Rule Name :NewRole17
In Use        :No
```

```

Access Rules
-----
Access Rules
-----

Dest IP      Dest    Mask                               Dest Match Protocol (id:sport:eport)
      ApplicationAction      Log      TOS 802.1P      Blacklist      App Throttle
(Up:Down)      Mirror      DisScan      ClassifyMedia
-----
-
-----

10.17.88.188 255.255.255.255 match http permit
10.17.88.188 255.255.255.255 match 6:4343:4343 permit
any any match dhcp permit
any any match dns permit

Vlan Id              0

ACL Captive Portal  :disable

ACL ECP Profile      :default

CALEA                :disable

Bandwidth Limit      :downstream disable upstream disable

Access Rule Name     :NewRole18
In Use               :No

```

The output of this command includes the following parameters:

Parameter	Description
Access Rule Name	Displays the name of the access rule.
In use	Indicates if the access rules are in use.
Access Rules	Displays the access rules parameter for each rule configured for the SSID or Wired profile users.
VLAN Id	Indicates the VLAN ID associated with the SSID or wired profile access rules
ACL Captive Portal	Indicates if the ACL rules are applicable to the captive portal users.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.7 show acl

Description

This command displays the ACL configuration details.

Syntax

```
show acl {domains}
```

Parameter	Description
domains	Displays the domains configured with an ACL.

Usage Guidelines

Use this command to view the ACL configuration details.

Example

The following example shows the output of the **show acl** command:

```
(AP)# show acl
role-domain
-----
role-domain inused
-----
d8:c7:c8:c4:42:98#
```

The output of this command displays information about the role-domain.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.8 show airgroup

Description

This command displays the AirGroup configuration details for an AP client.

Syntax

```
show airgroup {blocked-queries [dlna| mdns]| blocked-service-id [dlna| mdns]| cache
{<MAC-address> | entries [dlna| mdns]} | cppm {auth server [coa-capable | non-coa-
only] | entries | query-interval | server}| cppm-entry <MAC-address> | debug
statistics| internal-state statistics | servers [dlna| mdns| verbose]| status |
swarm-info| users [dlna| mdns| verbose]}
```

Parameter	Description
blocked-queries [dlna mdns]	Displays blocked queries if any.
blocked-service-id [dlna mdns]	Displays blocked services and service IDs if any.
cache <MAC-address> cache entries [dlna mdns]	Displays AirGroup cache details for a specific AP or for the AP clients in a cluster.
cppm {auth server [coa-capable non-coa-only] entries query-interval server}	Displays ClearPass Policy Manager server details associated with AirGroup configuration.
cppm-entry <MAC- address>	Displays ClearPass Policy Manager server details for an AirGroup client.
debug statistics	Displays debug statistics for AirGroup enabled APs.
internal-state statistics	Displays statistical details of queries and responses, and RADIUS client messages.
servers [dlna mdns verbose]	Displays AirGroup server details.
status	Indicates the AirGroup feature activation status.
swarm-info	Displays information about the AirGroup cluster.
users [dlna mdns verbose]	Displays the list of AirGroup users.

Usage Guidelines

Use the **show airgroup** commands to view the AirGroup configuration details on an AP.

Example

Example outputs for some of the **show airgroup** commands are as follows:

show airgroup blocked-queries

The **show airgroup blocked-queries** command output displays the blocked queries if any:

```
AirGroup dropped Query IDs
-----
Service ID #query-hits
-----
Num dropped Query IDs:0
```

show airgroup blocked-queries

The **show airgroup blocked-service-id** command output displays the blocked AirGroup service IDs if any:

```
AirGroup Blocked Service IDs
-----

Origin Service ID #response-hits
-----

Num Blocked Service-ID:0
```

show airgroup cache entries

The following output is displayed for the **show airgroup cache entries** command:

```
Cache Entries
-----
```

Name ----	Type ----	Class -----	TTL ---	Origin -----	Expiry -----	Last Update -----
_airplay._tcp.local	PTR	IN	450 0	10.16.94.236	3696.0 0	Tue May 13 19:32:11 2014
_raop._tcp.local	PTR	IN	450 0	10.16.94.236	3794.3 1	Tue May 13 19:32:11 2014
BLR-DPARASAR-T4. airplay. tcp.local	SRV/NBSTAT	IN	120	10.16.94.236	311.38	Tue May 13 19:32:11 2014
2577037A8680@BLR-DPARASAR-T4. raop. tcp.local	SRV/NBSTAT	IN	120	10.16.94.236	134.14	Tue May 13 19:32:11 2014
BLR-DPARASAR-T430S.local	A	IN	120	10.16.94.236	255.07	Tue May 13 19:32:11 2014
BLR-DPARASAR-T430S.local	AAAA	IN	120	10.16.94.236	393.69	Tue May 13 19:32:11 2014
BLR-DPARASAR-T4. airplay. tcp.local	TXT	IN	450 0	10.16.94.236	3784.5 1	Tue May 13 19:32:11 2014
2577037A8680@BLR-DPARASAR-T4. raop. tcp.local	TXT	IN	450 0	10.16.94.236	3840.3 8	Tue May 13 19:32:11 2014
urn:schemas-upnp-org:device:MediaRenderer:1	N/A	N/A	180 0	10.16.94.236	N/A	Tue May 13 19:33:51 2014

The output of this command includes the following information:

Column	Description
Name	Indicates the name of AirGroup server.
Type	Indicates the AirGroup model.
Class	Indicates the class of the mDNS record.
TTL	Indicates the duration after which the cache entries expire.
Origin	Indicates the origin IP address of the cache entries.
Expiry	Indicates the expiration details.
Last Update	Indicates when the entries were last updated.

show airgroup cppm auth server non-coa-only

The following output is displayed for the **show airgroup cppm auth server non-coa-only** command:

```
All Airgroup Non-CoA-only Servers known to MDNS
-----
Server IP-Address Port timeout rfc3576 rfc3576-only rfc3576-port
-----
test 192.0.2.0 1812 5 Disabled Disabled 5999
test123 192.0.2.1 1812 5 Disabled Disabled 5999
```

show airgroup cppm auth server coa-capable

The following output is displayed for the **show airgroup cppm auth server coa-capable** command:

```
All Airgroup CoA-capable Servers known to MDNS
-----
Server IP-Address Port timeout rfc3576 rfc3576-only rfc3576-port
-----
server1 192.0.1.1 1812 5 Enabled Enabled 5999
```

show airgroup cppm server

The following output is displayed for the **show airgroup cppm server** command:

```
CPPM Servers
-----
Server IP-Address Port timeout rfc3576 rfc3576-only rfc3576-port
-----
test 192.0.2.0 1812 5 Disabled Disabled 5999
test123 192.0.2.1 1812 5 Disabled Disabled 5999
```

The output of these commands provide the following information:

Column	Description
Server	Indicates the name of the ClearPass Policy Manager server.
IP address	Indicates the IP address of the ClearPass Policy Manager server.
Port	Indicates the authorization port number of the ClearPass Policy Manager server.
timeout	Indicates timeout value in seconds for one RADIUS request.
rfc3576	Indicates if the APs are configured to process RFC 3576-compliant Change of Authorization (CoA).
rfc3576-only	Indicates if APs are configured to be RFC 3576 compliant only.
rfc3576-port	Indicates the port number used for sending AirGroup CoA.

show airgroup cppm entries

The following output is displayed for the **show airgroup cppm entries** command:

```
swarm id = fc6520ad018ee6eb13bdc6b985e0fe6361bd37f7d25212a77e
-----

ap id = d8:c7:c8:c4:42:98 ap ip = 192.0.2.0 update no = 0
-----

Device device-owner shared location-id AP-name shared location-id AP-FQLN
-----

shared location-id AP-group shared user-list shared role-list
-----

Num CPPM Entries:0
```

The output of this command provides the following information:

Column	Description
swarm id	Indicates the cluster ID of the AP.
ap id	Displays the MAC address of the AP on which AirGroup is configured.
ap ip	Displays the IP address of the AP on which AirGroup is configured.
update no	Indicates the number of configuration updates if any.
Device	Indicates the device for which AirGroup is configured.
device- owner	Indicates the device owner's identity.
shared location-id AP-name	Indicates the shared location ID associated with the AP name
shared location-id AP-FQLN	Indicates the shared location ID associated with the FQDN of the AP
shared location-id AP-group	Indicates the shared location ID associated with the AP group.
shared user-list	Indicates the list of shared users.
shared role-list	Indicates the list of shared user roles.
Num CPPM Entries	Indicates the number of ClearPass Policy Manager entries.

show airgroup debug statistics

The following output is displayed for the **show airgroup debug statistics** command:

```
Airgroup slave status :TRUE
Airgroup master status :TRUE
Airgroup multi swarm status :TRUE
status value :0x7f
My ip address :192.168.10.251
My VC address :192.168.10.2
Peer VC address :192.168.10.2
Peer VC address :192.168.20.2
Peer VC address :192.168.30.2
```

```

Peer VC address :192.168.40.2
Peer VC address :0.0.0.0
Peer VC address :0.0.0.0
Peer VC address :0.0.0.0
Peer VC address :0.0.0.0 AirGroup Debug Statistics
-----

Key Value
--- ----

network cache init counter 2(2)
mdns apdb init counter 7(7)
  mdns apdb destroy counter 1(1)
user timed out 1(1)
airgroup restore count 1(1)
mdns mac move counter 4(4)
mdns master to vc hello rx 2060(2060)
mdns slave to slave hello rx 8240(8240)
mdns ap to ap mac sync resp rx 57(57)
mdns master to vc mac req rx 1580(1580)
swarm update counter rx 1(1)
mdns recieved valid swarm packet 11978(11978)
mdns recieved dlina pkt from device 177704(177704)
mdns partial hello tx 2059(2059)
mdns ap update tx 80(80)
mdns master to vc mac sync resp tx 232(232)
mdns ap to ap mac sync resp tx 1348(1348)
dropped init not done tx 6(6)
master to vc hello tx 2059(2059)
master to my swarm hello tx 2354(2354)
mdns ap to swarm hello tx 4118(4118)
mdns slave to slave mac sync req tx 57(57)
mdns total pkt sent to asap tx 112563(112563)
hello ap verification fail count 1(1)

```

Column	Description
Airgroup slave status	Indicates the AirGroup configuration status on the slave AP.
Airgroup master status	Indicates the AirGroup configuration status on the slave AP.

Column	Description
Airgroup multi swarm status	Indicates the status of the inter cluster mobility.
status value	Indicates the status value.
Key and Value	Displays details of AirGroup counters.

show airgroup internal-state statistics

The following output is displayed for the **show airgroup internal-state statistics** command:

Time: Fri May 16 09:30:22 2014

RADIUS Client Messages

Type	Sent	Since Last Read	Sent Total	Recv	Since Last Read	Recv Total
Auth Req/Resp	0		0	0		0
RFC3576	N/A		N/A	0		0
CPPM Device-Entry Added	N/A		N/A	0		0
CPPM Device-Entry Deleted	N/A		N/A	0		0

Internal MDNS Statistics

Functionality	Hit Count	Since Last Read	Hit Count Total
Average Time in microsec (since last read)	Average Time in microsec (alltime)		

Response - Cache Update	0	0	0
Response	0	0	0
Query - prepare records + Policy	0	0	0
Query - Policy 0 0 0	0	0	0
Query - resp pkt gen & send	0	0	0
Query - Response packet send	0	0	0
Query	0	0	0
	0		

Internal DLNA Statistics

Functionality	Hit Count Since Last Read		Hit Count Total
Average Time in			
microsec (since last read)	Average Time in microsec (alltime)		
-----	-----		-----

Response - Cache Update	0	0	0
	0		
Response	0	0	0
	0		
Query - prepare records + Policy	0	0	0
	0		
Query - Policy 0 0 0	0	0	0
	0		
Query - resp pkt gen & send	0	0	0
	0		
Query - Response packet send	0	0	0
	0		
Query	0	0	0
	0		

The output of this command displays information about queries and responses, and RADIUS client messages.

show airgroup servers

The following output is displayed for the **show airgroup servers** command:

```
AirGroup Servers
-----
MAC IP Type Host Name Service VLAN Wired/Wireless Role Group Username AP-Name
--- --
Num Servers: 0, Max Servers: 80.
```

The output of this command provides the following information:

Column	Description
MAC	Indicates the MAC address of the AirGroup servers.
IP	Indicates the IP address of the AirGroup servers.
Type	Indicates the type of server.
Hostname	Indicates the hostname of the AirGroup servers.
Service	Indicates if AirGroup services such as AirPlay or AirPrint are configured.
VLAN	Displays VLAN details of the AirGroup servers.
Wired/Wireless	Displays if the AirGroup server is connected to a wired or wireless interface.
Role	Displays the user role details.

Column	Description
Group	Displays the server group.
Username	Displays the username details.
AP-name	Displays the name of the AP.
Num servers	Displays the total number of servers.
Max Servers	Displays the maximum number of servers that are supported.

show airgroup status

The following output is displayed for the **show airgroup status** command:

```
AirGroup Feature
-----

Status
-----

Disabled

AirGroup- MDNS Feature
-----

Status
-----

Disabled

AirGroup- DLNA Feature
-----

Status
-----

Disabled

AirGroup Multi Swarm
-----

Status
-----

Disabled

AirGroup Guest Multicast
-----

Status
-----

Disabled

CPPM Parameters
-----

Parameter Value
```

```

-----
CPPM Enforce Registration Disabled
CPPM Server query interval 10 Hours
CPPM Server dead time 100 Seconds
AirGroup Service Information
-----

Service Status
-----

airplay Disabled
airprint Disabled
itunes Disabled
remotemgmt Disabled
sharing Disabled
chat Disabled
Chromecast Disabled
DLNA Media Disabled
DLNA Print Disabled
allowall Disabled

```

The output of this command provides the following information:

Column	Description
Airgroup feature status	Indicates if the AirGroup feature such as DLNA or MDNS support is enabled.
AirGroup Multi Swarm status	Indicates if the inter cluster mobility is enabled.
AirGroup Guest Multicast	Indicates if a guest VLAN is used for Bonjour services.
CPPM Parameters	Displays ClearPass Policy Manager configuration parameters associated with the AirGroup configuration.
AirGroup Service Information	Displays information about the status of the AirGroup services configuration.

show airgroup swarm-info

The following output is displayed for **show airgroup swarm-info** command:

```
AirGroup Swarm info
-----

Swarm id
-----

ef7501af01cd098223100f6d02733552765515ffcd7712c41c

AirGroup Swarm AP info
-----

Ap MAC                Ap Name                Ap Ip                Update no
-----                -
6c:f3:7f:c3:5c:12      6c:f3:7f:c3:5c:12      10.17.141.140        0x3
d8:c7:c8:cb:d3:b8      d8:c7:c8:cb:d3:b8      10.17.141.138        0x0
d8:c7:c8:cb:d3:9c      d8:c7:c8:cb:d3:9c      10.17.141.139        0x0
d8:c7:c8:cb:d4:20      d8:c7:c8:cb:d4:20      10.17.141.137        0x0

AirGroup Swarm AP's Client info
-----

Mac                Ip                Update no Record Hash APs Mac
---                --                -
9c:20:7b:df:3e:8a    10.17.141.141    0x1                0x12cc1003        6c:f3:7f:c3:5c:12
```

The output of this command displays the AirGroup cluster information.

show airgroup users

The following output is displayed for the **show airgroup users** command:

```
AirGroup Users
-----

MAC IP Host Name VLAN Wired/Wireless Role Username AP-Mac Query/Resp
--- --
Num Users:0
```

The output of this command provides the following information:

Column	Description
MAC	Indicates the MAC address of the AirGroup clients.
IP	Indicates the IP address of the AirGroup clients.
Host Name	Indicates the hostname of the AirGroup clients.
VLAN	Displays VLAN details of the AirGroup clients.
Wired/Wireless	Displays if the AirGroup user is connected to a wired or wireless interface.
Role	Indicates the AirGroup user role.
Username	Displays the username of the AirGroup user.

Column	Description
AP-Mac	Displays the MAC address of the AP to which the user is connected.
Query/Resp	Displays information query and response details exchanged between the AirGroup user and the AirGroup server.
Num Users	Indicates the number of AirGroup users.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.9 show airgroupservice

Description

This command displays the AirGroup service configuration details for an AP.

Syntax

```
show airgroupservice [disallow {role| vlan}]
```

Parameter	Description
show airgroupservice	Displays a summary of the configuration details for AirGroup services.
disallow {role vlan}	Displays the user roles or VLANs that are restricted from accessing AirGroup services. When the access to AirGroup services is restricted, the clients that are assigned with a specific role or VLAN will not be able to use the AirGroup service.

Usage Guidelines

Use the **show airgroupservice** command to view the AirGroup services configured on an AP.

Example

The following output is displayed for the **show airgroupservice** command:

```
AirGroupService Details
-----
Service Description status Disallowed-Role Disallowed-VLAN ID
-----
airplay AirPlay      Disabled
                                _airp
                                lay._tcp
    _raop              _tcp
    _appl              etv-v2._tcp
airprint AirPrint    Disabled
                                _ipp.
                                _tcp
    _pdl-              datastream._tcp
    _prin              ter._tcp
    _scan              ner._tcp
    _univ              ersal._sub._ipp._tcp
    _univ              ersal._sub._ipps._tcp
    _prin              ter._sub._http._tcp
    _http              ._tcp
```

```

_http          -alt._tcp
_ipp-          tls._tcp
_fax-         ipp._tcp
_riou         sbprint._tcp
_cups         ._sub._ipp._tcp
_cups         ._sub._fax-ipp._tcp
_ica-         networking._tcp
_ptp.         _tcp
_cano         n-bjnp1._tcp
_ipp-         ._tcp
_ica-         networking2._tcp
itunes iTunes Disabled _home-sharing._tcp
_appl         e-mobdev._tcp
_daap         ._tcp
_dacp         ._tcp
remotemgmt Remote management Disabled _ssh. _tcp
_sftp         -ssh._tcp
_ftp.         _tcp
_teln         et._tcp
_rfb.         _tcp
_net- assistant._tcp AirGroupService Details
-----
Service Description status Disallowed-Role Disallowed-VLAN ID
-----
sharing Sharing Disabled _odi sk._tcp
_afp overtcp._tcp
_xgr id._tcp
chat Chat Disabled _pre sence._tcp
Chromecast Chromecast Disabled urn: dial-multiscreen-org:service:dial:1
urn: dial-multiscreen-org:device:dial:1
DLNA Media Media Disabled urn: schemas-upnp-org:device:MediaServer:1
urn: schemas-upnp-org:device:MediaServer:2
urn: schemas-upnp-org:device:MediaServer:3
urn: schemas-upnp-org:device:MediaServer:4
urn: schemas-upnp-org:device:MediaRenderer:1

```

```

urn: schemas-upnp-org:device:MediaRenderer:2
urn: schemas-upnp-org:device:MediaRenderer:3
  urn: schemas-upnp-org:device:MediaPlayer:1
DLNA Print Print Disabled urn: schemas-upnp-org:device:Printer:1
urn: schemas-upnp-org:service:PrintBasic:1
urn: schemas-upnp-org:service:PrintEnhanced:1
allowall Remaining-Services Disabled
Num Services:10
Num Service-ID:49

```

The following example shows the partial output displayed for the **show airgroupservice disallow role** command:

```

airplay
-----
default_wired_port_profile port
airprint
-----
default_wired_port_profile port

```

The following example shows the partial output displayed for the **show airgroupservice disallow vlan**

```

command:
airplay
-----
1
100
200
airprint
-----
1
100
200

```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.10 show airgroupservice-ids

Description

This command displays the AirGroup service IDs configured on an AP for its AirGroup clients.

Syntax

```
show airgroupservice-ids <service>
```

Parameter	Description
service	Indicates the name of the service and displays the service ID details of specified AirGroup service.

Usage Guidelines

Use the **show airgroupservice** command to view the IDs of the AirGroup services configured on an AP.

Example

The following output is displayed for the **show airgroupservice-ids** command for the AirPlay service:

```
(AP)# show airgroupservice-ids airplay airplay
```

```
-----
```

```
Service ids
```

```
-----
```

```
_airplay._tcp
```

```
_raop._tcp
```

```
_appletv-v2._tcp
```

The output of this command displays the service IDs associated with the AirGroupservice.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.11 show ale

Description

This command displays the ALE configuration details.

Syntax

```
a-channel <channel> <tx-power>
```

Parameter	Description
config	Displays the ALE configuration details.
status	Displays the status of ALE server.

Usage Guidelines

Use this command to view the ALE configuration status.

Example

The following example shows the output of the **show ale config** command:

```
(AP)# show ale config
ALE Config
-----
Type                               Value
-----
ale-server                         AleServer1
ale-report-interval                60
```

The output of this command displays the ALE server details and the reporting interval at which the Virtual Controller sends data to the ALE server.

The following example shows the output of the **show ale status** command:

```
(AP)# show ale status
ALE Status
-----
Type                               Value
-----
ale login status                   False
ale login status                   code
ale fail times                     0
ale request state                  Idle
```

The output of this command displays information about the ALE server status and data request status.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.12 show ale stats

Description

This command displays the number of times a specific message type such as AppRF statistics, and uplink bandwidth report was sent to the ALE server.

Syntax

```
show ale stats
```

Usage Guidelines

Use this command to view the ALE statistics.

Example

The following example shows the output of the **show ale stats** command:

```
(AP)# show ale stats
```

```
ALE      Stats
-----  ----
Type     Value
----     -
VC        package 0
RSSI      package 0
APPRF     package 0
URLv      package 0
STATE     package 0
STAT      package 0
UPLINK BW package 0
Total     0
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.13 show alert global

Description

This command displays the list of client alerts for an AP.

Syntax

```
show alert global [count]
```

Parameter	Description
<count>	Filters client alerts based on the specified number.

Usage Guidelines

Use this command to view the client alerts for an AP. The client alerts occur when clients are connected to the network. Alerts are generated when a client encounters problems while accessing or connecting to the AP network.

Example

The **show alerts global** command displays information about the clients for which alerts (if any) are generated. The following example shows the output for the **show alerts global** command.

```
Client Alerts
-----

Timestamp Type MAC Address Description Access Point
-----
10:45:42 5 80:86:f2:85:51:6f 11 rno04-api-2
10:54:15 5 bc:3b:af:3d:32:bf 11 rno04-api-4
```

The output of this command provides the following information:

Parameter	Description
Timestamp	Displays the time at which the client alert was recorded.
Type	Displays the numeric value to indicate the type of event that triggered the alert. For more information, see .
MAC Address	Displays the MAC address of the client that caused the alert.
Description	Displays the description code for the alert. For example, Type 5 and Description 11 indicates that the DHCP request has timed out and the client did not receive a response to its DHCP request in time. For more information, see .
Access Point	Displays the IP address of the AP to which the client is connected.

Table 11: Client Alert —Type and Description Codes

Type code	Description Code	Detailed Description
1	1	Internal error The AP has encountered an internal error for this client.
	2	Unknown SSID in association request. The AP cannot allow this client to associate because the association request received contains an unknown SSID.
	3	Mismatched authentication/encryption setting The AP cannot allow this client to associate because its authentication or encryption settings do not match the configuration of the AP.
	4	Unsupported 802.11 rate The AP cannot allow this client to associate because it does not support the 802.11 rate requested by this client.
	5	Maximum capacity reached on AP The AP has reached maximum capacity and cannot accommodate any more clients.
2	6	Invalid MAC Address The AP cannot authenticate this client because its MAC address is not valid.
3	7	Client blocked due to repeated authentication failures The AP is temporarily blocking the 802.1x authentication request from this client because the credentials provided have been rejected by the RADIUS server too many times.
	8	Authentication server timeout The AP cannot authenticate this client using 802.1x because the RADIUS server did not respond to the authentication request. If the AP is using the internal RADIUS server, recommend checking the related configuration as well as the installed certificate and passphrase.
	9	RADIUS server authentication failure The AP cannot authenticate this client using 802.1x because the RADIUS server rejected the authentication credentials provided by the client.
4	10	Integrity check failure in encrypted message The AP cannot receive data from this client because the integrity check of the received MIC has failed. Recommend checking the encryption setting on the client and on the AP.
5	11	DHCP request timed out This client did not receive a response to its DHCP request in time. Recommend checking the status of the DHCP server in the network.
10	12	Wrong Client VLAN VLAN mismatch between the AP and upstream device. Upstream device can be upstream switch or RADIUS server.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.14 show alg

Description

This command displays the ALG protocol information configured on an AP.

Syntax

```
show alg
```

Usage Guidelines

Use this command to view configuration details for the ALG protocols. An application-level gateway consists of a security component that augments a firewall or NAT used in a network.

Example

The following output is displayed for the **show alg** command:

```
Current ALG
-----
ALG Status
--- -----
sccp Enabled
sip Enabled
vocera Enabled
```

The output of this command displays if the ALG protocols such as Skinny Call Control Protocol (SCCP), Session Initiation Protocol (SIP), and VOCERA are enabled.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.15 show allowed-aps

Description

This command displays the list of APs that are allowed to join the AP cluster.

Syntax

```
show allowed-aps
```

Usage Guidelines

Use this command to view the AP whitelist.

Example

The following example shows the output of the **show allowed-aps** command:

```
Allow New APs :enable AP Whitelist
```

```
-----
```

```
MAC Address
```

```
-----
```

```
d8:c7:c8:cb:d4:20
```

```
d8:c7:c8:cb:d3:98
```

```
d8:c7:c8:cb:d3:b4
```

```
d8:c7:c8:cb:d3:d4
```

The output of this command provides the following information:

Parameter	Description
Allow New APs	Indicates if the new APs are allowed to join the network.
MAC Address	Displays the MAC address of the APs that are allowed to join the network.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.16 show all monitor

Description

This command shows information for AMs.

Syntax

```
show all monitor active-laser-beams
```

Parameter	Description
active-laser-beams	Show active laser beam generators. The output of this command shows a list of all APs that are actively performing policy enforcement containment such as rogue containment. This command can tell us which AP is sending out deauthorization frames, although it does not specify which AP is being contained

Usage Guidelines

Use this command to view the information on AMs

Example

The following example shows the output of **show all monitor** command.

```
Swarm Active Laser Beam Sources
-----
bssid channel rssi ap name lms ip master ip inactive time reported by
-----
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.17 show a-max-clients

Description

This command displays the maximum number of clients allowed for an SSID profile on a 5 GHz radio channel.

Syntax

```
show a-max-clients <ssid_profile>
```

Parameter	Description	Range
<ssid_profile>	Denotes the SSID profile for which the maximum clients limit is to be configured.	-

Usage Guidelines

Use this command to view the maximum number of clients allowed for a 5 GHz radio channel SSID profile.

Example

The following **show a-max-clients** command output displays the maximum number of clients allowed to connect to the each SSID:

```
(AP)# show a-max-clients
test1 : 30
test2 : 200
test3 : 64
```

The following **show a-max-clients <ssid_profile>** command output displays the maximum number of clients allowed to connect to the **test1** SSID:

```
(AP)# show a-max-clients test1
a-max-clients: 30
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.18 show amp-audit

Description

This command displays the set of configurations on the AirWave Management Platform.

Syntax

```
show amp-audit
```

Usage Guidelines

Use this command to view the AMP related configurations.

Example

The following example shows the output of the **show amp-audit** command:

```
rule any any match any any any deny
wlan access-rule ssid1
    index 3
    rule any any match any any any deny
hotspot anqp-nai-realm-profile "name1"
    enable
    nai-realm-name ""
    nai-realm-eap-method eap-ttls
    nai-realm-auth-id-1 non-eap-inner-auth nai-realm-auth-
value-1 mschapv2
    nai-realm-auth-id-2 credential
    nai-realm-auth-value-2 uname-password nai-realm-
encoding utf8
    no nai-home-realm
hotspot anqp-nai-realm-profile "nr1"
    enable
    nai-realm-name "name1"
    nai-realm-eap-method eap-sim
    nai-realm-auth-id-1 non-eap-inner-auth nai-realm-auth-
value-1 mschapv2
    nai-realm-auth-id-2 credential
    nai-realm-auth-value-2 uname-password nai-realm-
```

```
encoding utf8
nai-home-realm
hotspot anqp-venue-name-profile "Vn1" enable
venue-group business
venue-type research-and-dev-facility venue-lang-
code en
venue-name ""
hotspot anqp-venue-name-profile "vn1"
enable
venue-group business
venue-type research-and-dev-facility venue-lang-
code eng
venue-name "vn1"
hotspot anqp-nwk-auth-profile "na1"
enable
nwk-auth-type accept-term-and-cond
url "www.nwkauth.com"
hotspot anqp-roam-cons-profile "rc1"
enable
roam-cons-oi-len 3
roam-cons-oi "888888"
hotspot anqp-3gpp-profile "3g"
enable
3gpp-plmn1 "40486"
3gpp-plmn2 ""
3gpp-plmn3 ""
3gpp-plmn4 ""
3gpp-plmn5 ""
3gpp-plmn6 ""
hotspot anqp-ip-addr-avail-profile "ip1"
enable
ipv4-addr-avail
no ipv6-addr-avail
hotspot anqp-domain-name-profile "dn1"
enable
```

```
domain-name "DomainName"

hotspot h2qp-oper-name-profile "on1"

enable

op-lang-code eng

op-fr-name "FriendlyName"

hotspot hs-profile "hs1"

enable

comeback-mode

no asra

no internet

pame-bi

group-frame-block

p2p-dev-mgmt

no p2p-cross-connect addtl-

roam-cons-ois 0

gas-comeback-delay 10

query-response-length-limit 20

access-network-type chargeable-public

venue-group business

venue-type research-and-dev-facility roam-cons-

len-1 3

roam-cons-oi-1 "123456"

roam-cons-len-2 3

roam-cons-oi-2 "223355"

roam-cons-len-3 0 roam-cons-

oi-3 ""

advertisement-profile anqp-nai-realm "nr1"

wlan ssid-profile test

enable

index 0

type employee

ssid instant

opmode opensystem

max-authentication-failures 0

rf-band all
```

```
captive-portal disable dtim-  
period 1  
inactivity-timeout 1000 broadcast-  
filter none  
dmo-channel-utilization-threshold 90  
local-probe-req-thresh 0  
max-clients-threshold 64  
dot11k  
dot11v  
wlan ssid-profile ssid1  
    enable  
    index 1  
    type employee  
    essid hsProf  
    opmode wpa2-aes  
    max-authentication-failures 0  
    vlan 200  
    rf-band all  
    captive-portal disable mac-  
    authentication  
    l2-auth-failthrough  
    dtim-period 1  
    inactivity-timeout 1000  
    broadcast-filter none  
    radius-accounting  
    blacklist  
    dmo-channel-utilization-threshold 90  
    local-probe-req-thresh 0  
    max-clients-threshold 64 hotspot-  
    profile "hs1"  
auth-survivability cache-time-out 24  
wlan external-captive-portal  
    url "/"  
    auth-text "Authenticated"  
    auto-whitelist-disable
```

```
https
blacklist-time 3600
auth-failure-blacklist-time 3600
ids
    wireless-containment none wired-
port-profile wired-instant
switchport-mode access
allowed-vlan all
native-vlan guest no shutdown
access-rule-name wired-instant
speed auto
duplex auto
no poe
type guest
captive-portal disable
no dot1x
wired-port-profile default_wired_port_profile switchport
    mode trunk
    allowed-vlan all
    native-vlan 1
    shutdown
    access-rule-name default_wired_port_profile
    speed auto
    duplex full no poe
    type employee
    captive-portal disable
    no dot1x
enet0-port-profile default_wired_port_profile uplink
    preemption
    enforce none
    failover-internet-pkt-lost-cnt 10
    failover-internet-pkt-send-freq 30
    failover-vpn-timeout 180
airgroup
    disable
```

```
airgroupservice airplay
    disable
    description AirPlay
airgroupservice airprint
    disable
    description AirPrint
per-ap-settings d8:c7:c8:c4:42:98
    hostname d8:c7:c8:c4:42:98
    ip-address 10.17.161.254 255.255.255.0 10.17.161.1 10.13.6.110 ""
    swarm-mode cluster
    wifi0-mode access
    wifi1-mode access
    g-channel 0 0
    a-channel 0 0
    uplink-vlan 0
    g-external-antenna 0
    a-external-antenna 0
```

The output of this command provides the following information:

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.19 show ap-alert

Description

This command displays all the alerts received for the specified APs.

Syntax

```
show ap-alert <count>
```

Usage Guidelines

Use this command to check all the alerts received for all the APs specified.

Example

The following example shows the output of **show ap-alert** command.

AP Alerts

Timestamp Type MAC Address IP Address Description

The output of this command includes the following information:

Column	Description
Timestamp	Indicates the time at which the alert was received.
Type	Indicates the type of alert received for the AP.
MAC Address	Indicates the MAC address of the AP clients.
IP Address	Indicates the IP address associated with the AP.
Description	Displays a brief description of the alert received.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.20 show ap-env

Description

This command displays all provisioned AP parameters such as the type of antenna used by an AP. The output of this command also indicates if the AP is provisioned as a master AP.

Syntax

```
show ap-env
```

Usage Guidelines

Use this command to view the antenna configuration details for an AP.

Example

The following output is displayed for the **show ap-env** command:

```
# show ap-env
Antenna Type:External
Need USB field:Yes
name:344
radio_0_5ghz_ant_gain:5.0
radio_1_5ghz_ant_gain:5.0
radio_0_5ghz_ant_pol:1
radio_1_5ghz_ant_pol:1
uap_controller_less:1
dual_5g_mode:enable
344#
```

The output of this command indicates if the AP is configured to use an external or integrated antenna and if the AP is configured as a master AP.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.21 show ap1x

Description

This command shows the status and the details of 802.1X supplicant configuration on an AP.

Syntax

```
show ap1x {config|debug-logs|status}
```

no...

Parameter	Description
config	Shows the 802.1X supplicant configuration details.
debug-logs	Displays debug logs pertaining to the 802.1X supplicant configuration.
status	Shows the status of the 802.1X supplicant configuration.

Usage Guidelines

Use this command to view the 802.1X supplicant configuration details on an AP.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.22 show ap1xcert

Description

This command displays the details of certificates used for 802.1X authentication with wired ports.

Syntax

```
show ap1xcert
```

Usage Guidelines

Use this command to view information server and CA certificates used for validating the authentication server to which AP authenticates as a 802.1X supplicant.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.23 show aps

Description

This command displays all active APs, AP scanning, and AP synchronization status.

Syntax

```
show aps [scanning][sync]
```

Parameter	Description
aps	Displays the list of all active APs in the cluster.
aps scanning	Displays AP scanning details.
aps sync	Displays AP synchronization details.

Usage Guidelines

Use this command to view the list of active APs, AP scanning and synchronization details.

Example

The following output is displayed for the **show aps** command:

```

c8:b5:ad:c3:ac:5c# show aps

1 Access Point
-----

Name IP Address Mode Spectrum Clients Type IPv6 Address
Mesh Role Zone Serial # 2.4 Channel 2.4 Power (dB) 2.4 Utilization (%) 2.4
Noise Floor (dBm) 5.0 Channel 5.0 Power (dB) 5.0 Utilization (%) 5.0 Noise Floor
(dBm) Need Antenna Config From Port Config Id Config Csum Ext SSID Active Age Link
Local IP Address

-----
-----
-----
-----
-----

c8:b5:ad:c3:ac:5c 192.168.1.128* access disable 1 345(indoor)
fe80::cab5:adff:fec3:ac5c N/A - CNDBK5106R 149E 19 51(ok)
-90(good) 52E 12 51(ok) -88(good)

No none 0 12495 enable

20h:22m:48s fe80::cab5:adff:fec3:ac5c

```

The output of this command includes the following parameters:

Column	Description
Name	Displays the Name of the APs.
IP address	Displays the IP address of the APs.
Mode	Displays the operating mode. For example, access, monitor, or spectrum monitor modes.
Spectrum	Indicates if spectrum monitoring is enabled or disabled.
Client	Indicates the number of client associated with the AP.
Type	Displays the AP model.
Mesh Role	Indicates if the AP is functioning as Mesh Point or mesh Portal.
Zone	Serial number of the AP.
2.4 Channel	Indicates the channels used by the AP in the 2.4 GHz band.
2.4 Power(dB)	Indicates the transmission power allocated for 2.4 Ghz band channels.
2.4 Utilization	Indicates the percentage of utilization of 2.4 GHz channels.
2.4 Noise Floor	Indicates the noise floor of the 2.4 GHz channels.
5.0 Channel	Indicates the channels used by the AP in the 5 GHz band.
5.0 Power(dB)	Indicates the transmission power allocated for 5 GHz band channels.
5.0 Utilization	Indicates the percentage of utilization of 5 GHz channels.
5.0 Noise Floor	Indicates the noise floor of the 5 GHz channels.
Need antenna config	Indicates if antenna configuration is required.

Column	Description
From port	Indicates the port details if any.
Config Id	Indicates the configuration ID.
Config Csum	Checksum that is used for configuration sync between master and slave access points.
Ext SSID Active	Extended SSID flag that indicates if mesh is enabled.
Age	Active time of the current master AP.
Link Local IP Address	IPv6 link local IP address of the AP.

The following output is displayed for the **show aps scanning** command:

AP Scanning Stats

```

-----
Name                IP Address    2.4 Reqs 2.4 Voice Rejs 2.4 Video Rejs 5.0 Reqs
-----
d8:c7:c8:cb:d4:20 10.17.88.188 5665      0              0              5675

5.0 Voice Rejs 5.0 Video Rejs
-----
0              0

```

The output of this command includes the following parameters:

Name	Displays the Name of the AP.
IP address	Displays the Name of the AP.
2.4 Reqs 5.0 Reqs	Displays the IP address of the AP.
2.4 Voice Rejs 5.0 Voice Rejs	Displays the counters that indicate the number of scanning rejects due to voice traffic.
2.4 Voice Rejs 5.0 Voice Rejs	Displays the counters that indicate the number of scanning rejects due to voice traffic.

The following output is displayed for the **show aps scanning** command:

AP Sync List

```

-----
MAC IP Address Class Current Version
---

```

The output of this command includes the following parameters:

Column	Description
MAC	Indicates MAC address of the AP with which the current AP is synchronized.
IP address	Displays the IP address of the AP.
Class	Indicates if the AP is serving as master or slave.
Current Version	Displays the SCALANCE W version currently running on the AP.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.24 show ap allowed-channels

Description

This command displays a list of allowed channels for an AP.

Syntax

```
show ap allowed-channels
```

Usage Guidelines

Specify the country code for your AP during the initial setup. Changing the country code causes the valid channel lists to be reset to the defaults for that country.

Example

The following example shows the output of the **show ap allowed-channels US** command:

```
Allowed Channels for AP Type 215 Country Code US
```

```
-----
```

PHY Type	Allowed Channels
-----	-----
802.11g (indoor)	1 2 3 4 5 6 7 8 9 10 11
802.11a (indoor)	36 40 44 48 149 153 157 161 165
802.11g (outdoor)	1 2 3 4 5 6 7 8 9 10 11
802.11a (outdoor)	149 153 157 161 165
802.11g 40MHz (indoor)	1-5 2-6 3-7 4-8 5-9 6-10 7-11

```

802.11a 40MHz (indoor)      36-40 44-48 149-153 157-161
802.11g 40MHz (outdoor)    1-5 2-6 3-7 4-8 5-9 6-10 7-11
802.11a 40MHz (outdoor)    149-153 157-161
802.11a 80MHz (indoor)     36-48 149-161
802.11a 80MHz (outdoor)    149-161
802.11a (DFS)

```

The output of this command includes the following information:

Parameter	Description
PHY Type	Indicates the PHY type.
Allowed Channels	Displays the list of allowed channels for a specific regulatory domain.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.25 show ap allowed-max-EIRP

Description

This command displays the maximum EIRP settings for the country in which the AP is currently operational. You can also view the maximum EIRP settings for a specific country.

Syntax

```
show ap allowed-max-EIRP
```

Usage Guidelines

Use this command to view the maximum EIRP settings for an AP. You can also filter the output to view the EIRP settings for a specific country.

Example

Example

The following example shows the output of the **show ap allowed-max-EIRP** command:

```

Max EIRP setting for Country Code US Country United States and AP type AP-105
-----
Channel 1 2 3 4 5 6 7 8 9 10 11 12 13 14 36 40 44 48 52 56 60 64 100 104 108 112 116
120 124

```

```

128 132 136 140 149 153 157 161 165
-----
b 20 20 20 20 20 20 20 20 20 20 20 20 20 * * * * * * * * * * * * * * * * * *
* *

g/a 22 22 22 22 22 22 22 22 22 22 22 22 22 * * * 22 22 22 22 24 24 24 24 22 22 22 22 * *
* 22 22

22 23 23 23 23 23
HT 20 22 22 22 22 22 22 22 22 22 22 22 * * * 21 21 21 21 24 24 24 24 22 22 22 22 * * *
22 22 22 23 24 24 24
HT 40 19 19 20 21 22 23 22 22 22 21 * * * 20 20 20 20 23 23 23 23 22 22 22 22 * * *
21 22 22
22 22 22 22 20 17

```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.26 show ap arm

Description

This command displays information about bandwidth management, historical statistics, AP neighbors, RF summary, and scanning details for the AP.

Syntax

```
show ap arm {bandwidth-management | history | neighbors | rf-summary | scan-times}
```

Parameter	Description
bandwidth management	Displays ARM bandwidth details for an AP.
history	Displays detailed information about the ARM configuration changes over a period of time.
neighbors	Displays details about the ARM neighbors.
rf-summary	Displays a summary of RF configuration information for an AP
scan-times	Displays ARM channel scanning details for an AP.

Usage Guidelines

Use this command to view information about the ARM bandwidth configuration, historical statistics, AP neighbors, RF summary, and scanning details on an AP.

Example

show ap arm bandwidth-management

The following example shows the output of **show ap arm bandwidth-management** command:

```
Interface :wifi0 Shaping Table
-----

Client Tx Pkt Tx Byte (KB) Tx Alloc (ms) Tx Time (ms) Rx Time (ms) Active Time (ms) -
-----

Tx Rate (mbps)
-----

Interface :wifi1 Shaping Table
-----

Client Tx Pkt Tx Byte (KB) Tx Alloc (ms) Tx Time (ms) Rx Time (ms) Active Time (ms) -
-----

Tx Rate (mbps)
-----
```

The output of this command includes the following information:

Column	Description
Interface	Displays the Wi-Fi interface configured on the AP.
Shaping table	Displays information on the ARM configuration details for the clients associated with the AP.
Client	Displays the list of AP clients connected through the Wi-Fi interface.
Tx Pkt	Displays the transmission packet details associated with the interface.
Tx Byte	Displays the number of bytes in the transmission packets associated with the interface.
Tx Alloc (ms)	Indicates the time allocated for transmission in milliseconds.
Tx Time (ms)	Indicates the transmission time in milliseconds.
Rx Time (ms)	Indicates the reception time in milliseconds.
Active time (ms)	Indicates duration until which the Wi-Fi devices are active.
Tx Rate (Mbps)	Indicates the current speed at which data is transmitted through the Wi-Fi interface.

show ap arm history

For each interface on an AP, the **show ap arm history** command shows the history of channel and power changes due to ARM. ARM can automatically change channel and power levels based on a number of factors such as noise levels and radio interference. The following example shows the output of the **show ap arm history** command:

```
Interface :wifi0 ARM History
-----
```


Time of Change Old Channel New Channel Old Power New Power Reason

```

-----
2013-05-11    04:24:31    149+    161-    27      27      I
2013-05-11    02:54:34    157+    149+    27      27      I
2013-05-11    02:46:13    153-    157+    27      27      I
2013-05-11    02:27:11    157+    153-    27      27      I
2013-05-11    02:22:18    149+    157+    27      27      I
2013-05-11    01:35:00    161-    149+    27      27      I
2013-05-11    01:28:58    149+    161-    27      27      I
2013-05-10    22:46:33    161-    149+    27      27      I
2013-05-10    22:38:09    153-    161-    27      27      I
2013-05-10    22:02:10    161-    153-    27      27      I
2013-05-10    21:55:21    153-    161-    27      27      I
2013-05-10    16:47:15    157+    153-    27      27      I
2013-05-10    16:28:16    149+    157+    27      27      I
2013-05-10    15:19:59    161-    149+    27      27      I
2013-05-10    15:14:29    149+    161-    27      27      I
2013-05-10    13:10:55    161-    149+    27      27      I
2013-05-10    13:03:47    149+    161-    27      27      I
2013-05-10    12:17:34    157+    149+    27      27      I
2013-05-10    12:10:21    153-    157+    27      27      I
2013-05-10    11:12:04    157+    153-    27      27      I
2013-05-10    11:00:07    149+    157+    27      27      I
2013-05-10    10:54:39    157+    149+    27      27      I
2013-05-10    10:49:33    149+    157+    27      27      I

```

```

2013-05-10    10:44:34    157+    149+    27      27      I
2013-05-10    10:39:51    149+    157+    27      27      I
2013-05-10    10:33:07    157+    149+    27      27      I
2013-05-10    10:25:35    149+    157+    27      27      I
2013-05-10    09:18:11    157+    149+    27      27      I
2013-05-10    09:04:24    149+    157+    27      27      I
2013-05-10    06:08:59    157+    149+    27      27      I
2013-05-10    05:55:10    153-    157+    27      27      I
2013-05-10    05:11:21    157+    153-    27      27      I

```

Interface :wifil

ARM History

Time of Change Old Channel New Channel Old Power New Power Reason

```

-----
2013-05-11    04:16:28    6 1 24 24 I
2013-05-11    03:58:53    11 6 24 24 I
2013-05-11    03:13:44    1 11 24 24 I
2013-05-11    01:23:32    6 1 24 24 I
2013-05-11    01:04:29    11 6 24 24 I
2013-05-11    00:26:16    1 11 24 24 I
2013-05-10    23:13:30    6 1 24 24 I
2013-05-10    23:04:49    11 6 24 24 Q
2013-05-10    22:51:10    6 11 24 24 I
2013-05-10    22:45:01    1 6 24 24 I
2013-05-10    21:52:39    6 1 24 24 I
2013-05-10    21:44:37    1 6 24 24 Q
2013-05-10    21:29:52    6 1 24 24 I
2013-05-10    21:19:16    11 6 24 24 I
2013-05-10    21:12:53    6 11 24 24 I
2013-05-10    20:52:07    1 6 24 24 I
2013-05-10    19:28:09    6 1 24 24 I

```

```

2013-05-10    19:02:08    11 6 24 24 I
2013-05-10    18:23:32    1 11 24 24 I
2013-05-10    17:40:55    6 1 24 24 I
2013-05-10    17:28:40    11 6 24 24 I
2013-05-10    17:01:24    1 11 24 24 I
2013-05-10    15:10:19    6 1 24 24 I
2013-05-10    15:03:41    11 6 24 24 I
2013-05-10    14:45:39    6 11 24 24 I
2013-05-10    14:19:32    11 6 24 24 I
2013-05-10    13:37:30    1 11 24 24 I
2013-05-10    11:34:27    6 1 24 24 I
2013-05-10    11:19:52    11 6 24 24 I
2013-05-10    10:30:51    1 11 24 24 I
2013-05-10    09:18:51    6 1 24 24 I
2013-05-10    09:06:31    11 6 24 24 I

```

I: Interference, R: Radar detection, N: Noise exceeded, Q: Bad Channel Quality E: Error threshold exceeded, INV: Invalid Channel, G: Rogue AP Containment, M: Empty Channel, P+: Increase Power, P-: Decrease Power, 40INT: 40MHZ intol detected on 2.4G, NO40INT: 40MHz intol cleared on 2.4G, OFF: Turn off Radio, ON: Turn on Radio

Column	Description
Time of change	Indicates the timestamp of the channel changes for each interface.
Old Channel	Displays the channel number used by the AP before the ARM change.
New channel	Displays the channel number used by the AP after the ARM change.
Old Power	Indicates power values configured on the AP before the ARM change.
New Power	Indicates power values configured on the AP after the ARM change.
Reason	Indicates the reason for changes in channels. For more information about the reason, see the description below the command output.

show ap arm neighbors

The **show ap arm neighbors** command displays the ARM settings on the AP neighbors. The following example shows the output of the **show ap arm neighbors** command:

```

ARM Neighbors
-----

bssid essid channel rssi tx-power PL (dB) AP Flags Last Update
-----
6c:f3:7f:45:57:20 7SPOT 1 8 0 0 Passive
6c:f3:7f:56:7e:a0 7SPOT 1 9 0 0 Passive
6c:f3:7f:56:7e:a1 NTT-SPOT 1 12 0 0 Passive
00:24:6c:80:77:c1 NTT-SPOT 1 9 0 0 Passive
6c:f3:7f:45:57:21 NTT-SPOT 1 8 0 0 Passive
6c:f3:7f:44:91:11 NTT-SPOT 1 9 0 0 Passive
00:24:6c:2b:fd:e8 qa-mv-vap3 161 5 9 98 Passive
00:24:6c:80:4d:62 docomo 1 10 0 0 Passive

(Total updates)
-----

```

Neighbor Summary:One hop 232 Two hop 0 Current Time: 2013-05-11 04:31:33

The output of this command includes the following information:

Column	Description
bssid	Indicates the BSSID of the AP neighbors.
essid	Indicates the ESSID of the AP neighbors.
Channel	Indicates the channels assigned to the AP neighbors
rssi	Indicates the Received signal strength indication (RSSI) values associated with the ARM channels to which AP neighbors are connected.
tx power	Indicates the transmission power.
PL	Indicates power loss.
AP Flags	Indicates the status of AP neighbors.
Last Update	Displays details of last updates if any.
Total updates	Displays a summary if updates.

show ap arm rf-summary

The **show ap arm rf-summary** command shows the statistics for all channels monitored by an AP. The following example shows the output of the **show ap arm rf-summary** command:

Channel Summary

channel retry phy-err mac-err noise util(Qual) cov-idx(Total) intf_idx(Total)

```

36   0   0   0   93   3/2/0/0/94       0/0(0)       97/40//0/0(137)
40   0   0   0   93   9/2/0/0/92       0/0(0)       120/82//0/0(202)
44   0   0   0   93   2/1/0/1/99       0/0(0)       161/88//0/0(249)
48   0   0   0   93   9/2/0/0/93       0/0(0)       157/59//0/0(216)
52   0   0   0   93   0/0/0/0/93       0/0(0)       15/52//0/0(67)
56   0   0   0   93   5/0/0/0/95       0/0(0)       0/18//0/0(18)
60   0   0   0   93   0/0/0/0/94       0/0(0)       29/14//0/0(43)
64   0   0   0   93   6/0/0/0/94       0/0(0)       43/10//0/0(53)
149  0   0   0   93   3/2/0/0/99       0/0(0)       113/41//0/0(154)
153  0   0   2   93   23/23/0/1/100    0/0(0)       124/68//0/0(192)
157  0   0   0   93   2/1/0/1/94       0/0(0)       97/79//0/0(176)
161  0   0   5   93   3/2/0/0/99       9/0(9)       115/66//0/0(181)
165  0   0   0   0    10/10/0/0/100    0/0(0)       99/38//0/0(137)
1    0   0   12  78   60/50/3/0/79     8/0(8)       448/79//0/0(527)
6    0   0   0   78   2/11/0/0/81      0/0(0)       483/227//0/0(710)
11   0   0   8   78   71/54/3/16/86    0/0(0)       703/126//0/0(829)

```

Columns:util(Qual): ch-util/rx/tx/ext-ch-util/quality

HT Channel Summary

channel_pair Pairwise_intf_index

149-153 346

36-40 339

157-161 357

```

44-48 465

Interface Name :wifi0

Current ARM Assignment :161-/27 Covered channels a/g :1/0

Free channels a/g :7/0 ARM Edge State :disable

Last check channel/pwr :2m:36s/4m:24s

Last change channel/pwr :8m:19s/1d:23h:47m:12s

Next Check channel/pwr :2m:36s/2m:15s

Assignment Mode :Single Band

Interface Name :wifil

Current ARM Assignment :1/24

Covered channels a/g :0/1

Free channels a/g :0/2

ARM Edge State :disable

Last check channel/pwr :5m:31s/3m:33s

Last change channel/pwr :15m:50s/1d:23h:47m:13s

Next Check channel/pwr :16s/2m:33s

Assignment

Mode :Single Band

```

The output of this command includes the following information:

Column	Description
channel	Displays the list of channels enabled on an AP.
retry	Indicates the number of retry attempts.
Phy-err	Indicates the PHY errors on the current channels of an AP.
Mac-err	Indicates the MAC errors on the current channels of an AP.
noise	Displays the current noise level on each channel.
Util (Qual)	Displays the percentage of the channel being used and the current relative quality of selected channels.
cov-idx(Total)	Displays RF coverage details. The AP uses this metric to measure RF coverage. The coverage index is calculated as x+y, where "x" is the AP's weighted calculation of the Signal-to- Noise Ratio (SNR) on all valid APs on a specified 802.11 channel, and "y" is the weighted calculation of the APs SNR detected by the neighboring APs on that channel.

Column	Description
<code>intf_idx</code> (Total	Displays channel interference details. The AP uses this metric to measure co- channel and adjacent channel interference. The Interference Index is calculated as $a/b/c/d$, where: - Metric value “a” is the channel interference the AP sees on its selected channel. - Metric value “b” is the interference the AP sees on the adjacent channel. - Metric value “c” is the channel interference the AP’s neighbors see on the selected channel. - Metric value “d” is the interference the AP’s neighbors see on the adjacent channel. - To calculate the total Interference Index for a channel add “a+b+c+d”.
<code>channel_pair</code>	Displays the list of paired channels.
<code>Pairwise_intf_index</code>	Displays the pairwise interference index.
Interface Name	Displays the interface name.
Current ARM Assignment	Displays the current ARM assignment details.
Covered channels	Displays the number of channels being used by the AP's BSSID in the 2.4 GHz and 5 GHz bands.
Free channels	Displays the number of available channels in the 2.4 GHz and 5 GHz bands.
ARM Edge State	Displays the ARM Edge status. If ARM edge status is enabled, the ARM-enabled APs on the network edge will not function as Air Monitors.
Last check channel/pwr	Indicates the time since the channel and power assignment was verified.
Last change channel/pwr	Indicates the time since the channel and power assignment was updated.
Next Check channel/pwr	Indicates the next interval at which the channel and power assignment will be verified.
Assignment Mode	Indicates if the ARM is assignment is applicable to a single band or dual band.

show ap arm scan-times

The **show ap arm scan-times** command shows the AM channel scan times for an AP. The following example shows the output of the **show ap arm scan-times** command:

```
Channel Scan Time
-----

channel assign-time(ms) scans-attempted scans-rejected dos-scans flags timer-tick
-----
36 2483300 1530 0 0 DVACFT 172120
40 576170 1547 0 0 DVACPT 172139
44 9945940 1454 0 0 DVACFT 172145
48 170500 1550 0 0 DVACPT 172158
```

```

52 167420 1522 0 0 DVACT 172046
56 65450 595 0 0 DVCT 171880
60 169840 1544 0 0 DVACT 172052
64 170390 1549 0 0 DVACT 172063
149 68631720 952 0 0 DVACFT 172074
153 32278480 1268 0 0 DVACPT 172088
157 38634770 1207 0 0 DVACFT 172132
161 20620710 1361 0 0 DVACPT 172161
165 170280 1548 0 0 DVACT 172110
1 86424330 903 0 0 DVACFT 172161
2 53570 487 0 0 DC 171936
3 55660 506 0 0 DC 171980
4 88550 805 0 0 DC 172030
5 327140 2974 0 0 DVACP 172124
6 40459820 2562 0 0 DVACT 172110
7 334620 3042 0 0 DVACF 172137
8 89210 811 0 0 DC 171627
9 92620 842 0 0 DC 171684
10 192940 1754 0 0 DAC 172144
11 45787400 1340 0 0 DVACPT 172159
12 132550 1205 0 0 DAC 172051
13 51260 466 0 0 DC 171890

```

Channel Flags: D: All-Reg-Domain Channel, C: Reg-Domain Channel, A: Activity Present
 L: Scan 40MHz Lower, U: Scan 40MHz Upper, Z: Rare Channel
 V: Valid, T: Valid 20MHZ Channel, F: Valid 40MHz Channel, P: Valid 40MHZ Channel Pair
 O: DOS Channel, K: DOS 40MHz Upper, H: DOS 40MHz Lower
 R: Radar detected in last 30 min, X: DFS required

WIF Scanning State

```
-----
```

```
Scan mode channel current-scan-channel last-dos-channel timer-milli-tick
```

```
----- ----- ----- ----- ----- Default 161-
48- 0 172161700
```

```
Default 1 11- 0 172161700
```

```
next-scan-milli-tick (jitter) scans (Tot:Rej:Eff(%):Last intvl(%))
```

```
-----
```

```
172172520(4420) 17627:0:100:100
```

```
172164890(-4108) 17697:0:100:100
```

The output of this command includes the following information:

Column	Description
channel	Displays the list of channels configured on the AP.
assign-time(ms)	Displays the time since AP is assigned a channel.
scans-attempted	Indicates the number times an AP has attempted to scan another channel.
scans-rejected	Displays the number of times an AP was unable to scan a channel, because the scan was halted due to other ARM settings.
dos-scans	Indicates the number of times services to a rogue device on a channel were denied by an AP.
flags	Indicates channel flags. For more information on channel flags, see the flag description below the channel scan time table.
timer-tick	Indicates the time interval since the last scan.
Scan mode	Indicates if the scan mode enabled on the Wi-Fi interface.
channel (under WIFI Scanning State)	Indicates the channels available on the Wi-Fi interface.
current-scan-channel	Indicates the current channel scanned.
last-dos-channel	Indicates the last channel on which Denial of Service (DOS) was detected.
timer-milli-tick	Indicates the time in milliseconds since the Wi-Fi interface channels were scanned.
next-scan-milli-tick (jitter)	Indicates the next interval at which the scanning will begin.
scans (Tot:Rej:Eff (%):Last intvl(%))	Provides a summary of the Wi-Fi scanning details.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.27 show ap association

Description

This command displays the association table for an AP group or for an individual AP.

Syntax

```
show ap association
```

Usage Guidelines

Use this command to view information about the clients associated with an AP.

Example

The following example shows the output of **show ap association** command.

```
The phy column shows client's operational capabilities for current association
Flags: A: Active, B: Band Steerable, H: Hotspot(802.11u) client, K: 802.11K client, R: 802.11R client, W: WMM client, w: 802.11w client
PHY Details: HT : High throughput; 20: 20MHz; 40: 40MHz
VHT : Very High throughput; 80: 80MHz; 160: 160MHz; 80p80: 80MHz + 80MHz
<n>ss: <n> spatial streams Association Table
-----
Name bssid mac auth assoc aid l-int essid vlan-id tunnel-id phy assoc.time num assoc
----
Flags
-----
Num Clients:0
```

The output of this command includes the following information:

Column	Description
Name	Indicates the Name of an AP or the AP group.
bssid	Indicates Basic Service Set Identifier (BSSID) associated with the AP. The Basic Service Set Identifier (BSSID) is usually the MAC address of the AP.
mac	Indicates the MAC address of the AP clients.
auth	Displays the status of client authentication. Indicates y if the AP is configured for 802.11 authorization frame types. Otherwise, it displays an n .
assoc	Displays the status of user association. Indicates y if the AP is configured for 802.11 association frame types. Otherwise, it displays an n .
aid	Indicates 802.11 association ID. A client receives a unique 802.11 association ID when it associates to an AP.
l-int	Indicates the number of beacons in the 802.11 listen interval. There are ten beacons sent per second, so a ten-beacon listen interval indicates a listening interval time of 1 second.
essid	Indicates the name that uniquely identifies the AP's Extended Service Set Identifier (ESSID).
vlan-id	Indicates the VLAN ID associated with the AP.
tunnel-id	Indicates the identification number of the AP tunnel.

Column	Description
assoc. time	Indicates the amount of time the client has been associated with the AP, in the hours:minutes:seconds format.
num assoc	Indicates the number of clients associated with the AP.
flags	Displays flags for this AP if any. For information on flag abbreviations, see the flag description at beginning of the output.
Num Clients	Indicates the number of clients associated with the AP.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.28 show ap bss-table

Description

This command displays the BSS of an AP.

Syntax

```
show ap bss-table
```

Usage Guidelines

The output of the show ap bss-table command shows the AP BSS table for all APs. To filter this information and view BSS table data for an individual AP or a specific port and slot number, include the ap-name, bssid, essid, ip-addr or port keywords.

Example

The following example shows the output of **show ap bss-table** command:

```
AP BSS Table
-----
bss ess port ip phy type ch/EIRP/max-EIRP cur-cl ap name in-t(s) tot-t
--- --
d8:c7:c8:3d:42:12 example1 ?/? 10.17.88.188 a-HT ap 149+/20/22.5 1 d8:c7:c8:cb:d4:20
0 18h:13m:58s
d8:c7:c8:3d:42:13 example-local-nw ?/? 10.17.88.188 a-HT ap 149+/20/22.5 0
d8:c7:c8:cb:d4:20 0 18h:13m:58s
d8:c7:c8:cb:d4:21 wired eth1 ?/? 10.17.88.188 b ap 0/0/0 0 d8:c7:c8:cb:d4:20 0
18h:13m:59s d8:c7:c8:3d:42:02 example1 ?/? 10.17.88.188 g-HT ap 7/21.5/21.5 0
d8:c7:c8:cb:d4:20 0 18h:13m:58s
d8:c7:c8:3d:42:03 example-local-nw ?/? 10.17.88.188 g-HT ap 7/21.5/21.5 0
d8:c7:c8:cb:d4:20 0 18h:13m:58s

Channel followed by "*" indicates channel selected due to unsupported configured
channel. "Spectrum" followed by "^" indicates Local Spectrum Override in effect.

Num APs:5

Num Associations:1
```

The output of this command includes the following information:

Column	Description
bss	Displays the AP BSSID. This is usually the MAC address of the AP.
ess	Displays the AP ESSID.
port	Displays port of an AP.
ip	Displays the IP address of an AP.

Column	Description
phy	Displays an AP radio type. Possible values are: • a—802.11a • a-HT—802.11a high throughput • g— 802.11g • g-HT—802.11g high throughput
type	Shows whether the AP is working as an access point or AM.
ch/EIRP/max-EIRP	Displays the radio channel used by the AP or current EIRP or maximum EIRP
cur	Displays the current number of clients on the AP.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.29 show ap cacert

Description

This command displays the details of the CA certificate on the AP.

Syntax

```
show ap cacert
```

Usage Guidelines

Use this command to view details of the CA certificate uploaded on the AP.

Example

The following example shows the certificate details displayed in the output of the **show ap cacert** command:

Local CA Certificates:

Version 3

Serial Number :16:90:C3:29:B6:78:06:07:51:1F:05:B0:34:48:46:CB

Issuer :/C=SE/O=AddTrust AB/ OU=AddTrust External TTP Network/CN=AddTrust
External CA Root

Subject :/C=GB/ST=Greater Manchester/L=Salford/O=COMODO CA Limited/CN=COMODO
High- Assurance Secure Server CA

Issued On :Apr 16 00:00:00 2010 GMT

Expires On :May 30 10:48:38 2020 GMT Signed Using :SHA1-RSA

RSA Key size :2048 bits

Version 3

Serial Number 01

Issuer :/C=SE/O=AddTrust AB/OU=AddTrust External TTP Network/CN=AddTrust
External CA Root

Subject :/C=SE/O=AddTrust AB/OU=AddTrust External TTP Network/CN=AddTrust
External CA Root

Issued On :May 30 10:48:38 2000 GMT

Expires On :May 30 10:48:38 2020 GMT Signed Using :SHA1-RSA

RSA Key size :2048 bits Version 3

Serial Number :02:34:56

Issuer :/C=US/O=GeoTrust Inc./CN=GeoTrust Global CA Subject
:/C=US/O=GeoTrust Inc./CN=GeoTrust Global CA

Issued On :May 21 04:00:00 2002 GMT

```

Expires On      :May 21 04:00:00 2022 GMT Signed Using :SHA1-RSA
RSA Key size    :2048 bits Version 3
Serial Number   :6E:CC:7A:A5:A7:03:20:09:B8:CE:BC:F4:E9:52:D4:91
Issuer          :/C=US/O=VeriSign, Inc./OU=VeriSign Trust Network/OU=(c) 2006
VeriSign, Inc. - For authorized use only/CN=VeriSign Class 3 Public Primary
Certification Authority - G5
Subject         :/C=US/O=VeriSign, Inc./OU=VeriSign Trust Network/OU=Terms of use at
https://www.verisign.com/rpa (c)10/CN=VeriSign Class 3 Secure Server CA - G3
Issued On       :Feb 8 00:00:00 2010 GMT
Expires On      :Feb 7 23:59:59 2020 GMT Signed Using :SHA1-RSA
RSA Key size    :2048 bits Version 3
Serial Number   :18:DA:D1:9E:26:7D:E8:BB:4A:21:58:CD:CC:6B:3B:4A
Issuer          :/C=US/O=VeriSign, Inc./OU=VeriSign Trust Network/OU=(c) 2006
VeriSign, Inc. -
For authorized use only/CN=VeriSign Class 3 Public Primary Certification Authority -
G5
Subject         :/C=US/O=VeriSign, Inc./OU=VeriSign Trust Network/OU=(c) 2006
VeriSign, Inc. -
For authorized use only/CN=VeriSign Class 3 Public Primary Certification Authority -
G5
Issued On       :Nov 8 00:00:00 2006 GMT
Expires On      :Jul 16 23:59:59 2036 GMT
Signed Using    :SHA1-RSA RSA Key size :2048 bits
Version        3
Serial Number   :
Issuer          :/C=US/O=The Go Daddy Group, Inc./OU=Go Daddy Class 2 Certification
Authority
Subject         :/C=US/O=The Go Daddy Group, Inc./OU=Go Daddy Class 2 Certification
Authority
Issued On       :Jun 29 17:06:20 2004 GMT
Expires On      :Jun 29 17:06:20 2034 GMT Signed Using :SHA1-RSA
RSA Key size    :2048 bits

```

The output of this command displays details such as the version, serial number, subject, issue date, expiry date, type of encryption, and RSA key information of the CA certificates uploaded on the AP.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.30 show ap client-match-history

Description

This command displays a historical record of the client match events and actions for the clients associated with an AP.

Syntax

```
show ap client-match-history [client-mac <mac-address>]
```

Parameter	Description
client-mac <mac-address>	Allows you to filter the output based on a client MAC address. When the client MAC address is specified and the command is executed, the client match actions pertaining to the specified client is displayed.

Usage Guidelines

Use this command to view the history of clients match actions for the clients associated with an AP.

Example

The following example shows the output of **show ap client-match-history** command:

Client Match Action Table

```

-----
Station           Old State  New State  Reason           Radio  Time
-----
00:db:df:0a:57:4e Normal    Normal    Client associated  1      18h:32m:5s
00:db:df:0a:57:4e Normal    Normal    Client associated  0      15h:20m:1s
00:db:df:0a:57:4e Normal    Normal    Client associated  0      9h:48m:57s
00:db:df:0a:57:4e Normal    Target    I am the better AP  0      7m:9s
00:db:df:0a:57:4e Normal    Deny      I am not the better AP  1      7m:9s
a0:88:b4:41:64:18 Normal    Deny      I am not the better AP  0      5m:20s
a0:88:b4:41:64:18 Normal    Deny      I am not the better AP  1      5m:20s
00:db:df:0a:57:4e Target    Adopted    Client match succeed  0      5m:17s

```

```

00:db:df:0a:57:4e Deny      Normal      Client match succeed      1      5m:17s
a0:88:b4:41:64:18 Deny      Normal      State aged out            0      2m:27s
a0:88:b4:41:64:18 Deny      Normal      State aged out            1      2m:23s

```

Total 11 Records

```
00:24:6c:c8:74:4c# show ap client-match-his client-mac 00:db:df:0a:57:4e
```

Client Match History for 00:db:df:0a:57:4e

Old State	New State	Reason	Radio	Time
-----	-----	-----	-----	-----
Normal	Normal	Client associated	1	18h:32m:5s
Normal	Normal	Client associated	0	15h:20m:1s
Normal	Normal	Client associated	0	9h:48m:57s
Normal	Target	I am the better AP	0	7m:9s
Normal	Deny	I am not the better AP	1	7m:9s
Target	Adopted	Client match succeed	0	5m:17s
Deny	Normal	Client match succeed	1	5m:17s

Total 7 Records

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.31 show ap client-match-live

Description

This command displays the current client match events and actions for clients associated with an AP.

Syntax

```
show ap client-match-live
```

Usage Guidelines

Use this command to view the current clients match actions for the clients associated with an AP.

Example

The following example shows the output of the **show ap client-match-live** command.

Client Match Table

Station	CM State	RSSI	Radio	Home AP	Target AP	Time
-----	-----	----	-----	-----	-----	----
00:db:df:0a:57:4e	Adopted	47	0	-	-	5m:17s

Total 1 Client Matches

00:24:6c:c8:74:4c# show ap client-match-his Client Match Action Table

Station	Old State	New State	Reason	Radio	Time
-----	-----	-----	-----	-----	----
00:db:df:0a:57:4e	Normal	Normal	Client associated	1	18h:32m:5s
00:db:df:0a:57:4e	Normal	Normal	Client associated	0	15h:20m:1s
00:db:df:0a:57:4e	Normal	Normal	Client associated	0	9h:48m:57s
00:db:df:0a:57:4e	Normal	Target	I am the better AP	0	7m:9s
00:db:df:0a:57:4e	Normal	Deny	I am not the better AP	1	7m:9s
a0:88:b4:41:64:18	Normal	Deny	I am not the better AP	0	5m:20s
a0:88:b4:41:64:18	Normal	Deny	I am not the better AP	1	5m:20s
00:db:df:0a:57:4e	Target	Adopted	Client match succeed	0	5m:17s
00:db:df:0a:57:4e	Deny	Normal	Client match succeed	1	5m:17s
a0:88:b4:41:64:18	Deny	Normal	State aged out	0	2m:27s
a0:88:b4:41:64:18	Deny	Normal	State aged out	1	2m:23s

Total 11 Records

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.32 show ap client-probe-report

Description

This command displays the client probe report for an AP.

Syntax

```
show ap client-probe-report [<radio>]
```

Parameter	Description
<radio>	Allows you to filter the output based the ID number of the radio (for example, 0 or 1).

Usage Guidelines

Use this command to view a probe report for the clients associated with an AP.

Example

The following example shows the output of the **show ap client-probe-report** command.

AP Client Probe Report for Wifi0 (5G)

```

-----
MAC                RSSI    In Swarm  Flags    Matched    Received
---                -
00:27:10:a9:98:60   12     No       4        -          1m:5s
60:f8:1d:ad:7f:f0   18     No       N        -          4s
24:77:03:8f:78:30   24     No       4        -          40s
24:77:03:f7:6d:20   20     No       4        -          17s
00:15:00:5b:3a:50   28     No       4        -          15s
02:36:00:00:00:30   58     No       4        -          45s
0c:84:dc:3b:63:f1   16     No       4        -          3m:27s
6a:10:00:00:00:01   43     No       8        -          2m:33s

```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.33 show ap client-match-refused

Description

This command displays the list of clients for which the channel allocation is refused based on the client match configuration parameters.

Syntax

```
show ap client-match-refused [<radio>]
```

Parameter	Description
<radio>	Allows you to filter the output based the ID number of the radio (for example, 0 or 1).

Usage Guidelines

Use this command to view the list of clients for which client match actions are refused. When the client match feature is enabled on an AP, the AP measures the RF health of its associated clients. If spectrum load balancing is triggered and a client's RSSI is or less than 20 dB, clients are moved from one AP to another for better performance and client experience.

Example

The following example shows the output of the **show ap client-match-refused** command.

```
Client Match Status:: RUNNING BALANCING Associated:1, Threshold:1

Leaving:0, Coming:0

Last Refused Clients Table
-----
```

MAC	RSSI	Refused Count	Last Refused Time
---	----	-----	-----
02:99:00:00:01:33	27	2	3
7e:17:7b:2c:f5:e2	5	4	6
00:27:10:c5:96:54	22	1	0
18:3d:a2:0a:48:3c	33	2	1
02:21:00:00:00:14	28	2	5
00:27:10:cf:ef:b4	32	2	7
7e:17:7b:27:6b:af	6	2	3
00:db:df:0a:6a:db	21	2	4

```
00:24:6c:c8:74:4c# show ap client-match-ref 1 Client Match Status:: RUNNING

Associated:0, Threshold:1 Leaving:0, Coming:0

Last Refused Clients Table
-----
```

MAC	RSSI	Refused Count	Last Refused Time
---	----	-----	-----
02:99:00:00:01:33	35	2	3
00:db:df:0a:6a:db	29	3	10
fc:75:16:03:40:d9	41	10	3
18:3d:a2:09:79:ac	27	2	11
00:db:df:05:1f:d6	37	2	6
02:21:00:00:00:14	23	3	3
00:27:10:cf:ef:b4	27	2	5
00:27:10:cf:f2:4c	18	1	6

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.34 show ap client-match-ssid-table

Description

This command displays the SSID table list over the radios for the current AP and all other neighboring APs.

Syntax

```
show ap client-match-ssid-table radio-mac <mac-address>
```

Parameter	Description
<mac-address>	Enter a specific radio belonging to the current AP and all its neighboring APs.

Usage Guidelines

Use this command to view the SSID details stored in the client match database for the radios belonging to the current AP and all its neighboring APs.

Example

The following example shows the output of the **show ap client-match-ssid-table** command:

```
(AP)# show ap client-match-ssid-table
```

```
Client Match SSID Table
```

```
-----
```

MAC	SSI Count	SSID Name	Clients	Threshold
---	-----	-----	-----	-----
40:e3:d6:7f:4c:70	2	CM zone b	0	64
CM2_zone_b 0	64	4		
40:e3:d6:7f:4c:60	2	CM zone b	0	64
CM2_zone_b 0	64			
f0:5c:19:1c:92:40	2	CM zone a	0	64
CM1_zone_a 0	64			
f0:5c:19:1c:92:50	2	CM zone a	0	64
CM1_zone_a 0	64			
9c:1c:12:3a:e8:e0	2	CM zone a	0	64
CM1_zone_a 0	64			
9c:1c:12:3a:e8:f0	2	CM zone a	0	64
CM1_zone_a 0	64			
Total 6 Radios				

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.35 show ap client-match-ssid-table radio-mac

Description

This command displays the SSID table list over a specific radio for the current AP and all other neighboring APs.

Syntax

```
show ap client-match-ssid-table radio-mac <mac-address>
```

Parameter	Description
<mac-address>	Enter a specific radio belonging to the current AP and all its neighboring APs.

Usage Guidelines

Use this command to view the SSID details stored in the client match database for a specific radio belonging to the current AP and all its neighboring APs.

Example

The following example shows the output of the **show ap client-match-ssid-table radio-mac** command:

```
(AP)# show ap client-match-ssid-table radio-mac f0:5c:19:1c:92:50
```

```
Client Match SSID Table
```

```
-----
```

MAC	SSI Count	SSID Name	Clients	Threshold
---	-----	-----	-----	-----
02:99:00:00:01:33f0: 2		CM_zone_a	0	64
5c:19:1c:92:50				
CM1_zone_a 0	64	4		6

```
Total 1 Radios
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.36 show ap client-match-triggers

Description

This command displays the configuration conditions that trigger client match events and actions for the clients associated with an AP.

Syntax

```
show ap client-match-triggers
```

Usage Guidelines

Use this command to view the clients match trigger records. When the client match feature is enabled on an AP, the AP measures the RF health of its associated clients. Based on the following trigger conditions, the clients are moved from one AP to another for better performance and client experience.

- Dynamic Load Balancing:
- Sticky Clients
- Band Steering
- Channel Utilization
- Client Capability Match

For more information on client match and client match trigger conditions, see *Configuration manual „SCALANCE W UI“*.

Example

The following example shows the output of the **show ap client-match-triggers** command:

```
Client Match Triggers
```

```
-----
```

Station	PHY	Target_AP		Reason	STA_CAP	rss	chan	ccnt
cutil	g	ccnt	RSSI	CHAN	CCNT	ROOM	CUTIL	
-----	----	-----	-----	-----	-----	----	----	----
A_CCNT	Time							
---	----							
00:15:00:5e:7e:3c		0	9c:1c:12:3a:e9:70	DynamicLoad	-	25	36+	12
- - 44		44+	2 - -	Balancing				
				3h:11m:19s				
5a:15:00:00:00:16		1	9c:1c:12:3a:e9:1	Stricky Client	-	17	6	-
- - 34		40-	- -	2h:11m:40s				
00:15:00:5e:77:c8		0	9c:1c:12:3a:e9:1	Dynamic Load	-	36	48-	19
- - 38		40-	- -	Balancing				
				2h:11m:40s				

4.16 S

```

a4:4e:31:97:da:74 0 9c:1c:12:3a:e9:1 Dynamic Load - 34 48- 19
0 Balancing
- - 42 40- 0 - - 2h:11m:34s
00:15:00:5b:72:1c 1 9c:1c:12:3a:e9:6 Stricky Client - 24 5 -
0
- - 35 6 - - - 1h:29m:37s
5a:12:00:00:00:11 0 9c:1c:12:3a:e6:7 Dynamic Load - 15 44+ 9
0 Balancing
- - 35 40- 9 - - - 1h:9m:41s

Total 6 Records

```

The output of this command displays client match trigger records with details such as station MAC, target AP MAC, trigger condition and so on

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.37 show ap client-view

Description

This command displays information about the clients in the AP neighborhood.

Syntax

```
show ap client-view
```

Usage Guidelines

Use this command to view information about the clients associated with the neighboring APs.

Example

The following example shows the output of **show ap client-view** command:

```
Client Match Neighbor Table
```

```
-----
```

```

MAC          Channel RSSI  Clients Threshold Channel Util (%) VC Key  Flags
Received
---          -
---
d8:c7:c8:44:50:c 6      13    1      -        -        -
0
8m:27s
d8:c7:c8:44:50:d 40      8     2      -        -        -
0                      V      1s

```

```

d8:c7:c8:44:51:b 44      40   10   -   -   -   VR
0
2m:49s
d8:c7:c8:44:61:a 1       36    3   -   -   -   VR   58s
0
d8:c7:c8:44:61:b 48      24    3   -   -   -   V    1s
0
d8:c7:c8:44:51:a 11      50    4   -   -   -   VR    1s
0
d8:c7:c8:44:62:a 6       19    2   -   -   -   V    20s
0
6c:f3:7f:ef:12:c 1       28    0   1    0   271d9383 VRIC  4s
0
6c:f3:7f:ef:12:d 149E    72    0   1    0   271d9383 VRIC  13s
0
d8:c7:c8:44:62:b 149     3     3   -   -   -           9m:8s
0
6c:f3:7f:ef:03:0 6       24    0   0    0   847face0 B    5m:7s
0
d8:c7:c8:44:63:9 153     9     2   -   -   -   V    19s
0
6c:f3:7f:ee:f7:8 3       76    0   1    0   271d9383 VRIC  6s
0
6c:f3:7f:ee:f7:9 52E     62    0   1    0   271d9383 VRIC  4s
0
d8:c7:c8:44:4a:3 161     7     2   -   -   -   S
0 12m:43s
d8:c7:c8:44:4b:8 6       10    3   -   -   -   VR
0
1m:24s
d8:c7:c8:44:4b:9 48      17    2   -   -   -   VR
0
2m:34s
6c:f3:7f:ee:dc:2 11      32    2   3    0   847face0      3m:6s
0
d8:c7:c8:44:4c:8 6       24    1   -   -   -   VR
0
2m:27s
d8:c7:c8:44:4c:9 36      20    11  -   -   -   VR
0
2m:34s
6c:f3:7f:e7:5d:4 1       59    1   3    0   847face0
0
14m:24s

```

Neighbor Flags: V - Valid; R - In RF Neighborhood; S - Same Channel;

B - Balancing; C - Client Match Enabled; I - In Same Swarm

Total 21 Neighbors

00:24:6c:c8:74:4c# show ap client-match-live Client Match Table

Station	CM State	RSSI	Radio	Home AP	Target AP	Time
-----	-----	----	-----	-----	-----	----
00:db:df:0a:57:4e	Adopted	47	0	-	-	5m:17s

Total 1 Client Matches

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.38 show ap debug airwave

Description

This command displays the list of AirWave servers configured on an AP.

Syntax

```
show ap debug airwave
```

Usage Guidelines

Use this command to view the list of AirWave servers configured for an AP.

Example

The following example shows the output of **show ap airwave** command

```
Airwave Server List
```

```
-----
Domain/IP Address          Type          Mode  Confi Rapid Statu
g-   s-
Only mode
-----
-   -   -
securelogin.arubanetworks.com  Primary      -   -   No
```

```
Airwave Server List
```

```
-----
Domain/IP Address          Type          Mode  Confi Rapid Status
g-   s-
Only mode
-----
-   -   -
```

```
70:3a:0e:cc:ee:b2#
```

```
70:3a:0e:cc:ee:b2# show ap debug am-config Radio
Configuration for wifi0
```

```
-----
Parameter          Value
-----
```

```
Preferred Channel    108
Tx Power             27.0
VHT Enabled          1
```

```
Radio Configuration for wifi1
```

```
-----
Parameter          Value
-----
```

```
Preferred Channel    1
```



```

Tx Power                24.0
VHT Enabled              0
ARM Configuration for wifi0
-----
Parameter                Value
-----
Assignment                0
Client Aware              1
Mode Aware                0
OTA Updates               0
Scanning                  1
Scan Interval             10
Rogue AP Aware            0
Max Tx Power (cfg/internal) 12. Okt
Min Tx Power (cfg/internal) 01. Jan
Scan Mode                  reg-domain
40 MHz/80 MHz             01. Jan
Channel Quality aware/qual 0/70/120 Error rate
thresh/qual wait time     thresh/error rate wait time
Noise thresh/noise wait time 75/120

Aggressive scans          0
Frequent scan action      0
Client Match/Upd intvl    0/0
Sticky (Intvl/SNR/SNR thr/Min Sig) 0/0/0/0
Bandsteer (g max sig/a min sig) 0/0
Ideal Coverage Index       10
Acceptable Coverage Index  4
Free Channel Index         25
Backoff Time               240
Intf AP Weight             25
ARM Configuration for wifi1
-----
Parameter                Value
-----
Assignment                0
Client Aware              1
Mode Aware                0
OTA Updates               0
Scanning                  1
Scan Interval             10
Rogue AP Aware            0

```

```

Max Tx Power (cfg/internal)      12/[282208.333178] ieee80211 smart ant_
8                               init: Smart Antenna is not supported -
Min Tx Power (cfg/internal)      01. Jan
Scan Mode                        reg-domain
40 MHz/80 MHz                    1/0
Channel Quality aware/qual       0/70/120 Error rate      70/90
thresh/qual wait time            thresh/error rate wait
                                time
Noise thresh/noise wait time     75/120
Aggressive scans                  0
Frequent scan action              0
Client Match/Upd intvl           0/0
Sticky (Intvl/SNR/SNR thr/Min    0/0/0/0
Sig)
Bandsteer (g max sig/a min sig) 0/0
Ideal Coverage Index              10
Acceptable Coverage Index         4
Free Channel Index                 25
Backoff Time                       240
Intf AP Weight                     25
Scanning Configuration for wifi0
-----
Parameter                          Value
-----
Scan-mode                           all-reg-domain
Dwell Time: Active Channel          500
Dwell Time: Reg-Domain Channel      250
Dwell Time: Other Reg-Domain
Channel                             200
Dwell Time: Rare Channel            100
Scanning Configuration for wifil
-----
Parameter                          Value
-----
Scan-mode                           all-reg-domain
Dwell Time: Active Channel          500
Dwell Time: Reg-Domain Channel      250
Dwell Time: Other Reg-Domain
Channel                             200
Dwell Time: Rare Channel            100
Regulatory Domain Configuration
-----
Parameter                          Value
-----

```

```

Country Code                67
G-Band 20MHz Channels
-----
Reg Info Type                Channels
-----
Reg Domain Profile
Downloadable Reg Table       1 6 11
AP Cert Info                 1 2 3 4 5 6 7 8 9 10 11
Valid (Assignment) Channels  1 6 11 A-Band 20MHz
-----
Reg Info Type                Channels
-----
Reg Domain Profile
Downloadable Reg Table       36 40 44 48 52 56 60 64 100 104 108
112 116 120 124 128 132 136
140 144 149 153 157 161 165
AP Cert Info                 36 40 44 48 52 56 60 64 100 104 108
112 116 120 124 128 132 136
140 144 149 153 157 161 165
Valid (Assignment) Channels  36 40 44 48 52 56 60 64 100 104 108
112 116 120 124 128 132 136
140 144 149 153 157 161 165
G-Band 40MHz Channels
-----
Reg Info Type                Channels
-----
Reg Domain Profile
Downloadable Reg Table       1 7
AP Cert Info                 1 2 3 4 5 6 7
Valid (Assignment) Channels  1 7 A-Band 40MHz Channels
-----
Reg Info Type                Channels
-----
Reg Domain Profile
Downloadable Reg Table       36 44 52 60 100 108 116
124 132 140 149 157
AP Cert Info                 36 40 44 48 52 56 60 64 100 104 108
112 116 120 124 128 132 136
140 144 149 153 157 161
Valid (Assignment) Channels  36 44 52 60 100 108 116 124 132 140
149 157 A-Band 80MHz Channels
-----
Reg Info Type                Channels
-----
Reg Domain Profile
Downloadable Reg Table       36 52 100 116 132 149
AP Cert Info                 36 40 44 48 52 56 60 64 100 104 108
112 116 120 124 128 132 136

```

4.16 S

```

140 144 149 153 157 161
Valid (Assignment) Channels      36 52 100 116 132 149 A-
-----                        Band 160MHz Channels

Reg Info Type                   Channels
-----                        -
Reg Domain Profile

Downloadable Reg Table          36 100

AP Cert Info                    36 40 44 48 52 56 60 64 100 104
                                108 112 116 120 124 128
Valid (Assignment) Channels      36 100 AP System
-----                        Configuration

Parameter                       Value
-----                        -
AM Scan RF Band                 all

Flex Radio Mode                 2g plus 5g RF Behavior
-----                        Configuration

Parameter                       Value
-----                        -
Station Handoff Assist          Disable RSSI Falloff Wait 0
                                Time
Low RSSI Threshold              0
RSSI Check Frequency            0
Event Thresholds Configuration
-----
Parameter                       Value
-----                        -
Detect Frame Rate Anomalies     Disable
Bandwidth Rate High Watermark   0
Bandwidth Rate Low Watermark    0
Frame Error Rate High Watermark 0
Frame Error Rate Low Watermark  0
Frame Fragmentation Rate High   0
Frame Fragmentation Rate Low    0
Frame Low Speed Rate High       0
Frame Low Speed Rate Low        0
Frame Non Unicast Rate High     0
Frame Non Unicast Rate Low      0
Frame Receive Error Rate High   0
Frame Receive Error Rate Low    0
Frame Retry Rate High Watermark 0
Frame Retry Rate Low Watermark  0
Interference Configuration

```

```

-----
Parameter                                Value
-----
Detect Interference                      Disable Interference      0
Interference Increase Threshold          Increase Threshold
Interference Increase Timeout            0
Interference Wait Time                   0
IDS General Configuration
-----

Parameter                                Value
-----
Stats Update Interval                    60
Monitored Device Stats Update Interval  60
AP Inactivity Timeout                    20
Adhoc AP Inactivity Timeout              5
AP Unseen Timeout                        600
Adhoc AP Unseen Timeout                  180
STA Inactivity Timeout                   120
STA Unseen Timeout                       600
Min Potential AP Beacon Rate             25
Min Potential AP Monitor Time            2
Signature Quiet Time                     900
Containment Confirmation                 Disable
Wireless Containment                     none
Debug Wireless Containment               Disable
Wired Containment                        Disable Wired Containment Disab
of AP's Adj MACs Disable 1e
Wired Containment of Suspected L3 Rogue
Disable Mobility Manager
RTLS
AP Event Generation                      traps-only
Send Adhoc Info to Controller            Disable
WMS Client Monitoring                    none
Packet SNR Threshold                     0
Frame Type for RSSI calculation          ba pr dlow mgmt ctrl null #####
Max Monitored Devices                    #####
Max Unassociated Stations                 256

Unclassified AP Updates                  Disable
Unclassified STA Updates                 Disable Unclassified      60
Device Update Interval
Client Detection Mode                     normal
Station RSSI Message                     Disable
Station RSSI Message Interval            0
AP Neighbors Message                     Disable
AP Neighbors Message Interval            0

```

```

IDS DOS Configuration
-----

Parameter                                Value
-----                                -
Detect Disconnect Station Attack          Disable Disconnect STA      5
                                           Detection Assoc Resp
                                           Threshold
Disconnect STA Detection Deauth-        8
Disassoc Threshold
Disconnect STA Detection Quiet           900
Time
Detect AP Flood Attack                    Enable
AP Flood Threshold                       50
AP Flood Increase Time                   3
AP Flood Quiet Time                      900
Detect Client Flood Attack                Disable
Client Flood Threshold                   150
Client Flood Increase Time                3
Client Flood Quiet Time                  900
Detect EAP Rate Anomaly                   Disable
EAP Rate Threshold                       60
EAP Rate Time Interval                   3
EAP Rate Quiet Time                      900
Detect CTS Rate Anomaly                   Disable
CTS Rate Threshold                       5000
CTS Rate Time Interval                   5
CTS Rate Quiet Time                      900
Detect RTS Rate Anomaly                   Disable
RTS Rate Threshold                       5000
RTS Rate Time Interval                   5
RTS Rate Quiet Time                      900
Detect Rate Anomalies                     Disable
Detect 802.11n 40MHz Intolerance          Disable
Client 40MHz Intolerance Quiet           900
Time
Detect Omerta Attack                      Disable
Omerta Attack Rate Threshold              10
Omerta Quiet Time                        900
Detect FATA-Jack Attack                   Disable
FATA-Jack Quiet Time                     900
Detect TKIP Replay Attack                 Disable
TKIP Replay Quiet Time                    900
Detect ChopChop Attack                    Disable
ChopChop Quiet Time                      900
Detect Invalid Address Combination         Disable

```

```

Invalid Address Combination Quiet Time          900
Detect Malformed Assoc Request                  Disable
Malformed Assoc Request Quiet Time              900
Detect Malformed HT IE                          Disable
Malformed HT IE -Jack Quiet Time                900
Detect Overflow EAPOL Key                       Disable
Overflow EAPOL key Quiet Time                   900
Detect Malformed Auth Frame                    Disable
Malformed Auth Frame Quiet Time                900
Detect Overflow IE                             Disable
Overflow IE Quiet Time                         900
Detect Malformed Large Duration                Disable
Malformed Large Duration Quiet Time            900

```

```

Detect Block ACK DoS                           Disable
Block ACK DoS Quiet Time                       900
Detect Power Save DoS Attack                   Disable
Power Save DoS Threshold                       80
Power Save DoS Quiet Time                     900
Detect WPA FT Attack                           Disable
WPA FT Attack Detection Time Interval          60
WPA FT Attack Detection Threshold              45
WPA FT Attack Detection Quiet Time            900
IDS Rate Parameters

```

```

-----
FrameType                                ChThreshold    ChTim  ChQui  NodeT  NodeT  NodeO
-----                                -
                                e      etTim hresh ime  uietT
                                -      e      old      me      ime
                                -      -      -      -      -
assoc                                300          15    900    200    15    900
disassoc                            300          15    900    200    15    900
deauth                              300          15    900    200    15    900
probe-request                       300          15    900    200    15    900
probe-response                      300          15    900    200    15    900
auth                                300          15    900    200    15    900
IDS Impersonation Configuration

```

```

-----
Parameter                                Value
-----                                -
Detect AP Impersonation                Disable
Protect from AP Impersonation          Disable
Beacon Diff Threshold                  50
Beacon Increase Wait Time              3
Detect AP Spoofing                    Disable

```

```

AP Spoofing Quiet Time          900

Detect Channel Based MitM(Man in the Middle) Disable Channel Based MitM Quiet Time #####
Detect Beacon on Wrong Channel Disable #####

Beacon on Wrong Channel Quiet Time 900
Detect Hotspotter Attack           Disable
Hotspotter Quiet Time             900

IDS Unauthorized Device Profile Configuration
-----
Parameter                        Value
-----
Detect Adhoc Networks             Disable
Protect from Adhoc Networks       Disable
Detect Windows Bridge             Disable
Protect Windows Bridge            Disable
Detect Wireless Bridge            Disable
Wireless Bridge detection Quiet Time 900
Detect Devices with an Invalid MAC OUI Disable
MAC OUI detection Quiet Time      900
Rogue AP Classification           Enable
Overlay Rogue AP Classification  Disable

OUI-based Rogue AP Classification Disable Propagated Wired MAC based Rogue AP Classification Disable Rogue Containment Disab
Suspected Rogue Containment       Disable
Suspect Rogue Confidence Level    100
Allow Well Known MACs

Protect Valid Stations            Disable
Detect Bad WEP                    Disable
Detect Misconfigured AP           Disable
Protect Misconfigured AP          Disable
Protect SSID                      Disable
Privacy                           Disable
Require WPA                       Disable

Detect Unencrypted Valid Clients Disable
Unencrypted Valid Clients Quiet Time 900
Protect 802.11n High Throughput Devices Disable Protect 802.11n High Throughput 40MHz Devices Disable Detect 802.11n Greenfield Activity Disab
Detect Adhoc Using Valid SSID     Disable
Adhoc Using Valid SSID Quiet Time 900
Protect Adhoc Using Valid SSID    Disable
Detect Valid Client Misassociation Disable

```



```

Detect STA Assoc To Rogue      Disable
Detect Wireless Hosted Network Disable
Wireless Hosted Network Quiet  0
Time
Protect From Wireless Hosted   Disable Valid 802.11b
Network                         channel
Valid 802.11a channel Config
Wired MAC Table
-----

```

```
mac
```

```
---
```

```
Valid OUIs
```

```
----- OUI
```

```
---
```

```
Valid and Protected SSIDs
```

```
----- SSID
```

```
----
```

```
334-Mesh 70:3a:0e:cc:ee:b2#
```

The following output of the **show ap debug airwave** command to displays the WebSocket debug information:

```
Airwave Server List
```

```
-----
```

Domain/IP Address	Type	Mode Config- only	Rapid mode	Status
-----	----	----	-----	-----
10.65.6.213	Primary Manage	-	Yes	Login done

```
Server Debug Statistics
```

```
-----
```

Key	Value
---	-----

Connect establish success	3(3)
Authentication failed	3(3)
Login done times	1(1)
Connect retry times	3(3)

```
Last connect status
```

```
-----
```

```

Last connect ID          3
Last connect time        :2018-01-25 07:12:36

Last connect trigger      :retry auth

Last connect fail status
-----

Last fail server Last fail time
Last fail reason

Last login done status
-----

Last connect done        :2018-01-25 07:12:37

```

The output of this command includes the following information:

Column	Description
Domain/IP Address	Displays the IP address or domain name of the AirWave server.
Type	Displays the type of the AirWave server. For example, backup or primary server.
Mode	Indicates the mode of AirWave operation. NOTE: AirWave can be configured to operate in the Manage Read/Write or Monitor-only+ Firmware Upgrades modes.
Config-only	Indicates whether AirWave is in the configuration mode. If yes, the AP simplifies the report for AirWave.
Rapids-mode	Indicates whether AirWave is in RAPIDS mode. RAPIDS is a powerful tool used for monitoring and managing security on wireless networks. The AP can perform different actions when RAPIDS mode is enabled.
Status	Indicates the AirWave login status.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.39 show ap debug airwave-config-received

Description

This command indicates if any configuration information is received by the AP from the AirWave server.

Syntax

```
show ap debug airwave-config-received
```

Usage Guidelines

Use this command to view if any configuration information is received from the AirWave server.

Example

The following example shows the output of the **show ap debug airwave-config-received** command:

```
show ap debug airwave-config-received  
  
No configuration received from AirWave yet
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.40 show ap debug airwave-data-sent

Description

This command displays information about data exchange between the AirWave server and the AP.

Syntax

```
show ap debug airwave-data-sent
```

Usage Guidelines

Use this command to view information about the data sent to the AirWave server.

Example

The following example shows the output of the **show ap debug airwave-data-sent** command:

```
cat: /tmp/awc_buf.txt: No such file or directory
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.41 show ap debug airwave-events-pending

Description

This command displays the pending AirWave server events.

Syntax

```
show ap debug airwave-events-pending
```

Usage Guidelines

Use this command to view the pending AirWave server events.

Example

The following example shows the partial output of the **show ap debug airwave-events-pending** command:

```
<t11>
<e61>1106</e61>
<e62>654</e62>
<e1005>6c:f3:7f:56:7f:60</e1005>
<e1006>7SPOT</e1006>
<e1001>d8:c7:c8:cb:d4:20</e1001>
<e1056>2</e1056>
<e1017>d8:c7:c8:cb:d4:20</e1017>
<e1018>1</e1018>
<e1058>Varbind deprecated</e1058>
</t11>
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.42 show ap debug airwave-restore-status

Description

This command displays information about the status of the AP configuration restoration on the AirWave server.

Syntax

```
show ap debug airwave-restore-status
```

Usage Guidelines

If the APs managed by AirWave are not able to connect to the AirWave server, AP can load the backed up configuration received by AirWave after five minutes. This command displays the restoration status of the AP configuration for the APs managed by AirWave.

Example

The output of the **show ap debug airwave-restore-status** command displays the restoration flag and time. The following example shows the output of this command:

```
Airwave Config Restore
-----
```

```
Restore flag Time
```

```
-----
```

```
No N/A
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.43 show ap debug airwave-signon-key

Description

This command displays the AirWave sign on key used by the used by the administrator to manually authorize the first Virtual Controller for an organization.

Syntax

```
show ap debug airwave-signon-key
```

Usage Guidelines

Use this command to view the AirWave sign on key details for debugging purpose.

Example

The following example shows the output of the **show ap debug airwave-signon-key** command:

```
awc_ui_key_new : 8adf05e0013cb69393335b32627b02db7b49af0705da9fbda6
```

```
awc_ui_key_old : 9418cf5e0137b6b2d99e78c64e8604522948881d78fd7781e2
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.44 show ap debug airwave-state

Description

This command displays the configuration details and status of AirWave events associated with an AP.

Syntax

```
show ap debug airwave-state
```

Usage Guidelines

Use this command to view the current state of AirWave events associated with the AP.

Example

The following example shows the output of the **show ap debug airwave-state** command:

```
<t1>
<e1>fc6520ad018ee6eb13bdc6b985e0fe6361bd37f7d25212a77e</e1>
<e2>Scalance-C4:42:98</e2>
<e3></e3>
<e5>0.0.0.0</e5>
<e8>6.2.0.0-3.3.0.0_37557</e8>
<e60>Siemens </e60>
<e79>c3abebcd0138eb8997a5ee52abf418883ee1356fbf0befba81</e79>
<e63></e63>
<e64></e64>
</t1>

<t4>
<e25>test</e25>
<e26>2</e26>
<e27></e27>
<e28>64</e28>
<e29>1</e29>
<e30>2</e30>
</t4>

<t4>
<e25>test123</e25>
```

```
<e26>3</e26>
<e27></e27>
<e28>64</e28>
<e29>1</e29>
<e30>2</e30>
</t4>
<t2>
<e1>d8:c7:c8:c4:42:98</e1>
<e6>BE0000315</e6>
<e2>d8:c7:c8:c4:42:98</e2>
<e7>1.3.6.1.4.1.14823.1.2.34</e7>
<e18></e18>
<e5>10.17.88.59</e5>
<e15>10</e15>
<e16>129183744</e16>
<e17>71094272</e17>
<e13>1</e13>
<e14>257137</e14>
<e65>0</e65>
<t3>
<e1>d8:c7:c8:c4:29:88</e1>
<e23>48-</e23>
<e24>22</e24>
<e10>0</e10>
<e11>1</e11>
<e47>93</e47>
<e46>3</e46>
</t3>
<t3>
<e1>d8:c7:c8:c4:29:80</e1>
<e23>1</e23>
<e24>22</e24>
<e10>1</e10>
<e11>0</e11>
<e47>80</e47>
```


<e46>61</e46>

</t3>

</t2>

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.45 show ap debug airwave-stats

Description

This command displays the configuration statistics associated with an AP managed or monitored by the AirWave server.

Syntax

```
show ap debug airwave-stats
```

Usage Guidelines

Use this command to view configuration details of an AP managed or monitored by the AirWave server.

Example

The following example shows the partial output of the **show ap debug airwave-stats** command:

```
<t7>
<e1>d8:c7:c8:3d:3a:83</e1>
<e25>test_wep</e25>
<e23>1</e23>
<e22>1</e22>
<e21>1</e21>
<e19>2</e19>
<e20>1</e20>
</t7>
<t7>
<e1>6c:f3:7f:a5:df:32</e1>
<e25>sw-san-rapng-13</e25>
<e23>153</e23>
<e22>1</e22>
<e21>1</e21>
<e19>1</e19>
<e20>1</e20>
</t7>
<t7>
<e1>d8:c7:c8:3d:46:d2</e1>
```

```

<e25>test_1x_term</e25>

<e23>48</e23>

<e22>1</e22>

<e21>1</e21>

<e19>1</e19>

<e20>2</e20>

</t7>

```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.46 show ap debug am-config

Description

This command displays the information required for debugging an AP.

Syntax

```
show ap debug am-config
```

Parameter	Description
mac	MAC address in the trace buffer.

Example

The following example shows the partial output of **show ap debug am-config** command:

```

Channel Number
-----
1
7
Valid 40MHz A-Channel Pairs
-----
Channel Number
----- 36
44

```

```

52
60
149
157
AP System Configuration
-----
Parameter Value
-----
AM Scan RF Band all
RF Behavior Configuration
-----
Parameter Value
-----
Station Handoff Assist Disable
RSSI Falloff Wait Time 0
Low RSSI Threshold 0
RSSI Check Frequency 0
Frequent scan action 2
Event Thresholds Configuration
-----
Parameter Value
-----
Detect Frame Rate Anomalies Disable
Bandwidth Rate High Watermark 0
Bandwidth Rate Low Watermark 0
Frame Error Rate High Watermark 0
Frame Error Rate Low Watermark 0
Frame Fragmentation Rate High Watermark 0
Frame Fragmentation Rate Low Watermark 0
Frame Low Speed Rate High Watermark 0
Frame Low Speed Rate Low Watermark 0
Frame Non Unicast Rate High Watermark 0
Frame Non Unicast Rate Low Watermark 0
Frame Receive Error Rate High Watermark 0
Frame Receive Error Rate Low Watermark 0

```

```
Frame Retry Rate High Watermark 0
Frame Retry Rate Low Watermark 0
Interference Configuration
-----
Parameter Value
-----
Detect Interference Disable
Interference Increase Threshold 0
Interference Increase Timeout 0
Interference Wait Time 0
IDS General Configuration
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.47 show ap debug auth-trace-buf

Description

This command displays the trace buffer for authentication events associated with the AP.

Syntax

```
show ap debug auth-trace-buf [<Mac>]
```

Parameter	Description
<Mac>	Displays the authentication trace information for a specific MAC address.

Usage Guidelines

Use the output of this command to troubleshoot authentication errors. Include the <MAC> parameter to filter data by the MAC address of the client to view specific details.

Example

The following example shows the output of **show ap debug auth-trace-buf** command:

```
Auth Trace Buffer
```

```
-----
```

```
May 10 13:05:09 station-up * ac:81:12:59:5c:12 d8:c7:c8:3d:42:13 - - wpa2 psk aes
May 10 13:05:09 wpa2-key1 <- ac:81:12:59:5c:12 d8:c7:c8:3d:42:13 - 117
May 10 13:06:30 station-up * 08:ed:b9:e1:51:7d d8:c7:c8:3d:42:12 - - wpa2 psk aes
May 10 13:06:30 wpa2-key1 <- 08:ed:b9:e1:51:7d d8:c7:c8:3d:42:12 - 117
May 10 13:06:30 wpa2-key2 -> 08:ed:b9:e1:51:7d d8:c7:c8:3d:42:12 - 117
May 10 13:06:30 wpa2-key3 <- 08:ed:b9:e1:51:7d d8:c7:c8:3d:42:12 - 151
May 10 13:06:30 wpa2-key4 -> 08:ed:b9:e1:51:7d d8:c7:c8:3d:42:12 - 95
May 10 13:07:03 station-up * 08:ed:b9:e1:51:7d d8:c7:c8:3d:42:12 - - wpa2 psk aes
May 10 13:07:03 wpa2-key1 <- 08:ed:b9:e1:51:7d d8:c7:c8:3d:42:12 - 117
May 10 13:07:03 wpa2-key2 -> 08:ed:b9:e1:51:7d d8:c7:c8:3d:42:12 - 117
May 10 13:07:03 wpa2-key3 <- 08:ed:b9:e1:51:7d d8:c7:c8:3d:42:12 - 151
May 10 13:07:03 wpa2-key4 -> 08:ed:b9:e1:51:7d d8:c7:c8:3d:42:12 - 95
```

The command output displays the most recent ten trace buffer entries for the AP. Each row in the output of this table may include some or all of the following information:

- A timestamp that indicates when the entry was created.
- The type of exchange that was made.
- The direction the packet was sent.

4.16 S

```

Beacon Mgmt Update Intvl (in sec)      60
APB Info Update Intvl (in sec)         103 (3092/3010)
BLE debug log                          Enabled
Operational Mode                      Beaconing (APB: Beaconing)
AP USB Power Override                  Disabled (-1)
Uplink Status                         Up (APB: -NA-)
APB Connection Status                 0
Last BLE Device Update Attempted      8c:8b:83:3d:72:6c
Last AP to APB Message Time           2017-09-06 03:07:59
Last Update to Endpoint Time          No Update Sent
Log Levels Available
{ All(0xffff), Info(0x04), Warning(0x02),
  Error(0x01), Ageout(0x08), BMReq(0x10), FW-
  Upgrade(0x20), FW-UpgradeErr(0x40),
  CfgUpdate(0x80), CfgUpdateErr(0x100),
  Beacon(0x200), BcnTLV(0x400), BcnErr(0x800),
  APB(0x1000), AssetUpdate (0x2000), None(0x00)
}
Current Log Level
{ 0x61 : Error(0x0001), FW-Upgrade(0x0020),
  FW-UpgradeErr (0x0040) }
Log Mac Filter                        None
Bundled BluOS Images
Bank A(/aruba/bin/UpgradeImage_Nano_OAD-
A 1.2-19.bin) Bank
B(/aruba/bin/Beacon Nano OAD-B 1.2-19.bin)

-----
BLE IoT Transport Context Configuration #0
Config ID: 4
-----
-----
Item                                Value
-----
Endpoint Type                      0 (Meridian Beacon Management) 30
Interval
Content                            0 (Managed Beacons)

```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged Exec mode

4.16.49 show ap debug ble-connect

Description

This command displays a log showing the BLE connection details.

Syntax

```
show ap debug ble-connect
```

Usage Guidelines

Use this command to view the BLE connection details.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged Exec mode

4.16.50 show ap debug ble-daemon

Description

This command displays the BLE daemon log messages.

Syntax

```
show ap debug ble-daemon
```

Usage Guidelines

Use this command to view the BLE daemon log messages.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged Exec mode

4.16.51 show ap debug ble-relay

Description

This command displays the BLE process logs.

Syntax

```
show ap debug ble-relay [disp-attr | iot-profile | jobs [<profile>] | report
[<profile>] | tag-report [<profile>] | ws-log [<profile>]]
```

Usage Guidelines

Use this command to view the BLE process logs.

Examples

The following command displays the values of various settings related to an asset tag reporting:

```
(AP)# show ap debug ble-relay disp-attr
```

```

WebSocket Connect Request           :Yes
WebSocket Connect Status           :3
WebSocket Connection Established    :Yes
WebSocket LogLevel                  :0
Tag Logging                         :Off
Websocket Address                   :beacons.meridianapps.com
WebSocket Host                      : beacons.meridianapps.com
WebSocket Path                      : /ingestion/ingest

=====

Note: Websocket Loglevel List: Error (0x1), Warn (0x2), Notice (0x4), Info (0x8),
Debug (0x10), Parser (0x20), Header (0x40), Ext (0x80), Client (0x100), Latency
(0x200).
```

The following command displays the BLE tag data for the AP:

```
(AP)# show ap debug ble-relay tag-report
```

```

Incoming Tag messages               65102
Tag messages processed :            5114
Tag messages dropped :              59988
Tag messages WS queue success       5114
```

```

Tag messages WS queue unavailable      4359
Tag messages WS not connected          55629
Tag messages WS sent                    5114

```

The following command displays the WebSocket logs of the AP:

```
(AP)# show ap debug ble-relay ws-log
```

```

WS:  2017-03-03    08:17:18:  Initial logging level 65535
WS:  2017-03-03    08:17:18:  Library version: 1.3 unknown-build-hash
WS:  2017-03-03    08:17:18:  LWS_MAX_HEADER_LEN: 1024
WS:  2017-03-03    08:17:18:  LWS_MAX_PROTOCOLS: 5
WS:  2017-03-03    08:17:18:  LWS_MAX_EXTENSIONS_ACTIVE: 3
WS:  2017-03-03    08:17:18:  SPEC_LATEST_SUPPORTED: 13
WS:  2017-03-03    08:17:18:  AWAITING_TIMEOUT: 5
WS:  2017-03-03    08:17:18:  SYSTEM_RANDOM_FILEPATH: '/dev/urandom'
WS:  2017-03-03    08:17:18:  LWS_MAX_ZLIB_CONN_BUFFER: 65536
WS:  2017-03-03    08:17:18:  Started with daemon pid 0
WS:  2017-03-03    08:17:18:  static allocation: 4448 + (12 x 1024 fds) = 16736
                               bytes
WS:  2017-03-03    08:17:18:  canonical_hostname = 10.65.65.238
WS:  2017-03-03    08:17:18:  Protocol: http-only
WS:  2017-03-03    08:17:18:  libwebsocket_client_connect: direct conn
WS:  2017-03-03    08:17:18:  libwebsocket_client_connect_2
WS:  2017-03-03    08:17:18:  libwebsocket_client_connect_2:
                               address tags.meridianapps.com
WS:  2017-03-03    08:17:48:  Unable to get host name from tags.meridianapps.com
WS:  2017-03-03    08:18:04:  Initial logging level 65535
WS:  2017-03-03    08:18:04:  Library version: 1.3 unknown-build-hash
WS:  2017-03-03    08:18:04:  LWS_MAX_HEADER_LEN: 1024
WS:  2017-03-03    08:18:04:  LWS_MAX_PROTOCOLS: 5
WS:  2017-03-03    08:18:04:  LWS_MAX_EXTENSIONS_ACTIVE: 3
WS:  2017-03-03    08:18:04:  SPEC_LATEST_SUPPORTED: 13
WS:  2017-03-03    08:18:04:  AWAITING_TIMEOUT: 5
WS:  2017-03-03    08:18:04:  SYSTEM_RANDOM_FILEPATH: '/dev/urandom'
WS:  2017-03-03    08:18:04:  LWS_MAX_ZLIB_CONN_BUFFER: 65536
WS:  2017-03-03    08:18:04:  Started with daemon pid 0

```

```
WS: 2017-03-03 08:18:04: static allocation: 4448 + (12 x 1024 fds) = 16736
bytes
WS: 2017-03-03 08:18:04: canonical_hostname = 10.65.65.238
WS: 2017-03-03 08:18:04: Protocol: http-only
WS: 2017-03-03 08:18:04: libwebsocket_client_connect: direct conn
WS: 2017-03-03 08:18:04: libwebsocket_client_connect_2
WS: 2017-03-03 08:18:04: libwebsocket_client_connect_2: address
tags.meridianapps.com
WS: 2017-03-03 08:18:34: Unable to get host name from tags.meridianapps.com
```

The following command displays the IoT profile details:

```
(AP)# show ap debug ble-relay iot-profile
```

```
----- Profile[test] -----
```

```
EndpointURL      : https://edit.meridianapps.com/api/beacons/manage
EndpointType     : Meridian Beacon Management
PayloadContent   : Managed Beacons
TransportInterval : 300s
Token            :MzkxMTZlMWYtYTgzYS00YWUxLTkzYWVtYjQyNzE1MGMyMjAxOjBiZWJjYWViL
                 TRjNjItNGEwNC1hMGlyLWYzZTM5ZDFlNG VkNg==
TransportContext : Spawn
SpawnThread      : 4100
TransType        : Https(Meridian Beacon Management-Managed Beacons)
```

The following command displays the BLE relay job queue status:

```
(AP)# show ap debug ble-relay jobs
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged Exec mode

4.16.52 show ap debug ble-table

Description

This command displays beacon details for the BLE devices detected by the AP.

Syntax

```
show ap debug ble-table
```

Usage Guidelines

Use this command to view the beacon details for the BLE devices detected by the AP.

Example

The following example shows the output of the **show ap debug ble-config** command:

```
(host)# show ap debug ble-config BLE Configuration
-----
Item                                Value
----                                -
Master IP                          127.0.0.1
Authorization Token                 Not Configured
Endpoint URL                        Not Configured
BLE Ready                           No
Update Intvl (in sec)              300
BLE debug log                       Enabled
Operational Mode                    0 (APB: 0)
Uplink Status                       0 (APB: 0)
APB Connection Status               0
Last BLE Device Update Attempt      00:00:00:00:00:00
Last Update Sent Time               No Update Sent
```

The following example shows the output of the **show ap debug ble-table** command:

```
BLE Device Table
-----
MAC HW_Type FW_Ver Flags Status Batt(%) RSSI Major# Minor# UUID Tx_Power Last Update
Uptime
-----
```

Total beacons:0

Note: Battery level for LS-BT1USB devices is indicated as USB. Note: Uptime is shown as Days hour:minute:second.

Note: Last Update is time in seconds since last heard update.

Status Flags:L:AP's local beacon; I:iBeacon; A: Beacon; H: HiPower Beacon

:U:Image Upgrade Pending

Command Information

Access Point Platform	Command Mode
All platforms	Privileged Exec mode

4.16.53 show ap debug ble-table assettags

Description

This command displays beacon details for the BLE tags detected by the AP.

Syntax

```
show ap debug ble-table assettags
```

Usage Guidelines

Use this command to view the beacon details for the BLE tags detected by the AP.

Example

The following example shows the output of the **show ap debug ble-table assettags** command:

```
(host)# show ap debug ble-table assettags

BLE Device Table [Asset Tags]

-----

MAC HW_Type FW_Ver Flags Status Batt(%) RSSI Asset_Tag_Id Last Update Uptime
---
a0:e6:f8:38:1b:46 AT-BT10 OAD E 7.5-7 0x0001 T 82 -81 0000-0000-0000 12s 2h:50m:15s
a0:e6:f8:2c:09:b8 AT-BT10 OAD E 7.14-254 0x0001 T 100 -78 0000-0000-0000 21s
2h:57m:30s
a0:e6:f8:38:1b:4c AT-BT10 OAD E 7.5-7 0x0001 T 87 -91 0000-0000-0000 1s
2h:50m:0s
a0:e6:f8:38:11:0e AT-BT10 OAD E 7.5-7 0x0001 T 100 -75 0000-0000-0000 4s
1h:47m:0s
a0:e6:f8:2c:0e:1a AT-BT10 OAD E 7.14-254 0x0001 T 100 -71 0000-0000-0000 16s 19m:30s
a0:e6:f8:2c:0d:52 AT-BT10 OAD E 7.14-254 0x0001 T 100 -82 0000-0000-0000 12s
23h:59m:30s
a0:e6:f8:38:1d:54 AT-BT10 OAD E 7.5-7 0x0001 T 100 -76 0000-0000-0000 25s 1h:46m:30s
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged Exec mode

4.16.54 show ap debug client-match

Description

This command displays the information about the client match configuration status on an AP radio interface.

Syntax

```
a-channel <channel> <tx-power>
```

Parameter	Description
<radio>	Allows you to specify the ID number of the radio (for example, 0 or 1) for which you want to view client match configuration status.

Usage Guidelines

Use this command to view the status of client match configuration for a specific radio interface.

Example

The following example shows the output of **show ap debug client-match <radio ID>** command:

```
Client Match Status:: RUNNING
Associated:0, Threshold:MAX
Leaving:0, Coming:0
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.55 show ap debug client-stats

Description

This command displays detailed statistics about an AP client.

Syntax

```
show ap debug client-stats <mac>
```

Parameter	Description
<mac>	Displays data based on the client MAC address.

Usage Guidelines

Use this command to view information about an AP client.

Example

The following command output displays statistics for packets received from and transmitted to the specified client:

```
Station Stats
-----

Parameter          Value
-----
-----
General Per-radio Statistics
Transmit specific Statistics
Frames Rcvd For TX  22
Tx Frames Dropped   0
Frames Transmitted  22
Success With Retry  1
Tx Mgmt Frames      2
Tx Probe Responses  0
Tx Data Frames      20
Tx CTS Frames       0
Dropped After Retry  0
Dropped No Buffer    0
Missed ACKs         1
Long Preamble       22
Short Preamble      0
Tx EAPOL Frames     13
Tx 6 Mbps           15
Tx 48 Mbps          5
Tx 54 Mbps          2
Tx WMM [VO]         15
UAPSD OverflowDrop  0
-----
Receive specific Statistics
Last SNR            31
Last SNR CTL0       28
Last SNR CTL1       25
Last SNR CTL2       22
Last ACK SNR        32
Last ACK SNR CTL0   30
Last ACK SNR CTL1   28
```

```

Last ACK SNR CTL2      21
Last ACK SNR EXT0      5
Last ACK SNR EXT1      4
Frames Received        2932
Rx Data Frames         2930
Null Data Frames       2879
Rx Mgmt Frames         1
PS Poll Frames         0
Rx 6 Mbps              11
Rx 12 Mbps              6
Rx 18 Mbps              5
Rx 18 Mbps              5
Rx 24 Mbps              2
Rx 36 Mbps              13
Rx 48 Mbps             1162
Rx 54 Mbps             1730
Rx WMM [BE]            39

```

The output of this command includes the following information:

Parameter	Description
Frames Rcvd For TX	Shows the number of frames received for transmission.
Tx Frames Dropped	Shows the number of transmission frames that were dropped.
Frames Transmitted	Shows the number of frames successfully transmitted.
Success With Retry	Shows the number of frames that were transmitted after being retried.
Tx Mgmt Frames	Shows the number of management frames transmitted.
Tx Probe Responses	Shows the number of transmitted probe responses.
Tx Data Frames	Shows the number of transmitted data frames.
Tx CTS Frames	Shows the number of clear-to-send (CTS) frames transmitted.
Dropped After Retry	Shows the number of frames dropped after an attempted retry.
Dropped No Buffer	Shows the number of frames dropped because the AP's buffer was full.
Missed ACKs	Shows the number of missed acknowledgements (ACKs)
Long Preamble	Shows the number of frames sent with a long preamble.
Short Preamble	Shows the number of frames sent with a short preamble.
Tx EAPOL Frames	Shows the number of Extensible Authentication Protocol over LAN (EAPOL) frames transmitted.
Tx <n> Mbps	Shows the number of frames transmitted at <n> Mbps, where <n> is a value between 6 and 300.
Tx WMM	Shows the number of Wi-Fi Multimedia (WMM) packets transmitted for the following access categories. If the AP has not transmitted packets in a category type, this data row will not be displayed in the output of the command. Tx WMM [BE]: Best Effort Tx WMM [BK]: Background Tx WMM [VO]: VoIP Tx WMM [VI]: Video
UAPSD OverflowDrop	Shows the number of packets dropped due to Unscheduled Automatic Power Save Delivery (U-APSD) overflow.
Last SNR	Indicates the last recorded signal-to-noise ratio.
Last SNR CTLO	Indicates the signal-to-noise ratio for the last received data packet on the primary (control) channel 0. This parameter is only displayed for APs operating in 40 MHz mode.

Parameter	Description
Last SNR CTL1	Indicates the signal-to-noise ratio for the last received data packet on the secondary (control) channel 1. This parameter is only displayed for APs operating in 40 Mhz mode.
Last SNR CTL2	Indicates the signal-to-noise ratio for the last received data packet on the secondary (control) channel 2. This parameter is only displayed for APs operating in 40 MHz mode.
Last ACK SNR	Indicates the signal-to-noise ratio for the last received ACK packet.
Last ACK SNR CTL0	Indicates the signal-to-noise ratio for the last received ACK packet on the primary (control) channel 0. This parameter is only displayed for APs operating in 40 MHz mode.
Last ACK SNR CTL1	Indicates the signal-to-noise ratio for the last received ACK packet on the primary (control) channel 1. This parameter is only displayed for APs operating in 40 MHz mode.
Last ACK SNR CTL2	Indicates the signal-to-noise ratio for the last received ACK packet on the primary (control) channel 2. This parameter is only displayed for APs operating in 40 MHz mode.
Last ACK SNR EXT0	Indicates the signal-to-noise ratio for the last received ACK packet on the secondary (extension) channel 0. This parameter is only displayed for APs operating in 40 MHz mode.
Last ACK SNR EXT1	Indicates the signal-to-noise ratio for the last received ACK packet on the secondary (extension) channel 1. This parameter is only displayed for APs operating in 40 MHz mode.
Frames Received	Shows the number of frames received.
Rx Data Frames	Shows the number of data frames received.
Null Data Frames	Shows the number of null data frames received.
Rx Mgmt Frames	Shows the number of management frames received.
PS Poll Frames	Shows the number of power save poll frames received.
Rx<n>Mbps	Shows the number of frames received at <n> Mbps, where <n> is a value between 6 and 300.
.Tx WMM	Shows the number of Wi-Fi Multimedia (WMM) packets transmitted for the following access categories. If the AP has not transmitted packets in a category type, this data row will not be displayed in the output of the command. Tx WMM [BE]: Best Effort Tx WMM [BK]: Background Tx WMM [VO]: VoIP Tx WMM [VI]: Video

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.56 show ap debug client-table

Description

This command shows the clients associated with an AP.

Syntax

```
show ap debug client-table
```

Usage Guidelines

Use this command to view a list of AP clients

Example

The following example shows the output of **show ap debug client-table** command:

```
Client Table
-----
MAC ESSID BSSID Assoc_State HT_State AID PS_State -----
--- ----
----
08:ed:b9:e1:51:7d example1 d8:c7:c8:3d:42:12 Associated WSSM 0x1 Awake

UAPSD Tx_Pkts Rx_Pkts PS_Qlen Tx_Retries Tx_Rate Rx_Rate Last_ACK_SNR
-----
(0,0,0,0,N/A,0) 101 12888 0 0 300 300 45
-----

Last_Rx_SNR TX_Chains Tx_Timestamp Rx_Timestamp MFP Status (C,R)
-----
50 3[0x7] Sun May 12 07:41:25 2013 Sun May 12 07:42:13 2013 (0,0)

UAPSD: (VO,VI,BK,BE,Max SP,Q Len)
HT Flags: A - LDPC Coding; W - 40Mhz; S - Short GI HT40; s - Short GI HT20
D - Delayed BA; G - Greenfield; R - Dynamic SM PS
Q - Static SM PS; N - A-MPDU disabled;
B - TX STBC b - RX STBC; M - Max A-MSDU; I - HT40 Intolerant
```

The output of this command includes the following information:

Parameter	Description
MAC	Indicates the MAC address of the AP.
ESSID	Indicates the Extended Service Set identifier (ESSID) used by the client. An ESSID is a user-defined name for a wireless network.
BSSID	Filters the AP Config table by BSSID. The Basic Service Set Identifier (BSSID) is usually the AP's MAC address.
Assoc_State	Shows whether or not the client is currently authorized and/or associated with the AP.
HT_State	Shows the client's high-throughput (802.11n) transmission type: none: AP is a legacy access point that does not support the 802.11n standard. 20Mhz: A high-throughput APs using a single 20 Mhz channel. 40Mhz: A high-throughput APs using two 20 Mhz channels.
AID	Indicates the 802.11 association ID. A client receives a unique 802.11 association ID when it associates to an AP.
UAPSD	Shows the following values for Unscheduled Automatic Power Save Delivery (UAPSD) in comma-separated format: VO, VI, BK, BE, Max SP, Q Len. - VO: If 1, UAPSD is enabled for the VoIP access category. If UAPSD is disabled for this access category, this value is 0. - VI: If 1, UAPSD is enabled for the Video access category. If UAPSD is disabled for this access category, this value is 0. - BK: If 1, UAPSD is enabled for the Background access category. If UAPSD is disabled for this access category, this value is 0. - BE: If 1, UAPSD is enabled for the Best Effort access category. If UAPSD is disabled for this access category, this value is 0. - Max SP: The maximum service period is the number of frame sent per trigger packet. This value can be 0, 2, 4 or 8. - Q Len: The number of frames currently queued for the client, from 0 to 16 frames.
Tx_Pkts	Shows the number of packets transmitted by the client.
Rx_Pkts	Shows the number of packets received by the client.
PS_Qlen	Shows power save queue length, in bytes.
Tx_Pkts	Shows the packet rate from the AP to client.
Rx_Pkts	Show the packet rate from the client to AP.
Tx_Retries	Shows the number of packets that the client had to resend due to an initial transmission failure.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.57 show ap debug client-frame-history

Description

This command displays the latest RSSI information about the incoming packets for a client connected to an AP.

Syntax

```
show ap debug client-frame-history client-mac <mac-address> radio {0|1}
```

Parameter	Description
client-mac <mac-address>	Allows you to filter the output based on a client MAC address.
radio {0 1}	Allows you to specify the AP radio ID to which the client is associated.

Usage Guidelines

Use this command to verify if the RSSI information is frequently updated. If the RSSI information is not frequently updated, a client may be steered to an improper new AP in the cluster

Example

The following example shows the output of **show ap debug client-frame-history** command:

```
Frame History count: 5
Client Frame History Report
-----
Received Time RSSI Previous RSSI
-----
1s 42 42
1s 42 42
1s 42 42
1s 42 42
1s 42 42
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.58 show ap debug crash-info

Description

This command displays log information for an AP that crashed. The stored crash information is cleared from the flash after the AP reboots.

Syntax

```
show ap debug crash-info
```

Usage Guidelines

Use this command to view the AP crash information for debugging purpose.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.59 show ap debug dhcp-packets

Description

This command displays information about the DHCP packets sent or received by an AP.

Syntax

```
show ap debug dhcp-packets
```

Usage Guidelines

Use this command to view information about the DHCP packets trace information for an AP. You can view DHCP information only when the **dhcp-option** parameter is configured with the **set-vlan** or **set-role** rule.

Example

The following example shows the output of **show ap debug dhcp-packets** command:

```
Traced Dhcp Packets
```

```
-----
```

```
Timestamp Mtype Htype Hops TID Cip Yip Sip Gip Cmac
```

```
-----
```

The output of this command includes the following parameters:

Column	Description
Timestamp	Displays the timestamp for DHCP packets.
Mtype	Indicates the message type.
Htype	Indicates the hardware address type
Hops	Shows the number of hops.
TID	Shows the transaction ID.
Cip	Indicates the client IP address.
Yip	Indicates the IP address of the AP.
Sip	Indicates the source IP address from which the DHCP packets originated.
Gip	Indicates the Gateway IP address.
Cmac	Indicates the MAC address of the client.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.60 show ap debug dot1x-statistics

Description

This command displays the aggregate 802.11X debug statistics for an AP.

Syntax

```
show ap debug dot1x-statistics
```

Usage Guidelines

Use this command to view information about the 802.11x authentication.

Example

The following output is displayed for the **show ap debug dot1x-statistics** command:

```
802.1X Statistics
-----
Mac Name AP Auth-Succs Auth-Fails Auth-Tmout Re-Auths

-----
08:ed:b9:e1:51:7d d8:c7:c8:3d:42:12 0 0 0 0

Total: 0 0 0 0

Supp-Naks UKeyRot MKeyRot ----- 0 0 0
0 0 0

802.1x Counters WPA2
Message-1 ..... 3
Message-2 ..... 2
Message-3 ..... 2
Message-4 ..... 2
```

The output of this command includes the following parameters:

Parameter	Description
Mac	Displays the MAC address of the authenticated client.
Name	Displays the name of the client device
AP	Displays the AP device details to which the client is connected.
Auth-Succs	Displays the number of times the client authenticated successfully.

Parameter	Description
Auth-Fails	Displays the number of times the client failed to authenticate.
Auth-Timeout	Displays if client authentication timeout details.
Reauths	Displays the reauthentication attempts if any.
Supp-Naks	Displays the number of supplementary NAKs.
UkeyRot	Displays the unicast key rotation details.
MkeyRot	Displays the multicast key rotation details.
802.1X counters	Displays the 802.1X authentication counters.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.61 show ap debug driver-config

Description

This command displays AP driver configuration.

Syntax

```
show ap debug driver-config
```

Usage Guidelines

Use this command to review configuration changes made since the AP driver was last reset.

Example

The **show ap debug driver-config** command displays the BSSID, SSID, and radio configuration details associated with the AP driver. The following output is displayed for the **show ap debug driver-config** command:

```
Downloaded Config for WIFI 0
-----

Item Value
----
BSSID d8:c7:c8:3d:42:12
LMS IP
Master IP 0.0.0.0
Mode AP Mode
```

Group Key Received Yes

QBSS Probe Response Allow Access

Native VLAN ID 1

LED operating mode (11n APs only) normal

SAP MTU 1500 bytes

Heartbeat DSCP 0

High throughput enable (radio) Enabled

Channel 44+

Transmit EIRP 24 dBm

Non-Wi-Fi Interference Immunity 2

Enable CSA Disabled

CSA Count 4

Advertise 802.11d and 802.11h Capabilities Disabled

TPC Power 0 dBm

Spectrum Load Balancing Disabled

Spectrum Load Balancing Mode channel

Spectrum Load Balancing Update Interval (sec) 30 seconds

Spectrum Load Balancing Threshold (%) 2 percent

Infrastructure assisted client association management Disabled

Beacon Period 100 msec

Beacon Regulate Disabled

Advertized regulatory max EIRP 0

ARM/WIDS Override Dynamic

Reduce Cell Size (Rx Sensitivity) 0 dB

Management Frame Throttle interval 0 sec

Management Frame Throttle Limit 0

Maximum Distance 600 meters

RX Sensitivity Threshold 0 dB

RX Sensitivity Tuning Based Channel Reuse disable

Active Scan Enabled

ARM Over the Air Updates Disabled

VoIP Aware Scan Enabled

Power Save Aware Scan Disabled

Video Aware Scan Enabled

Load aware Scan Threshold 1048576 Bps

```
40 MHz intolerance Disabled
Honor 40 MHz intolerance Enabled
CSD override Enabled
Advertise 802.11K Capability Disabled
Measurement Mode for Beacon Reports passive
Channel for Beacon Requests in 'A' band 0
Channel for Beacon Requests in 'BG' band 0
Channel for AP Channel Reports in 'A' band 0
Channel for AP Channel Reports in 'BG' band 0
Time duration between consecutive Beacon Requests 0 sec
Time duration between consecutive Link Measurement Requests 0 sec
Time duration between consecutive Transmit Stream Measurement Requests 0
sec Enable Handover Trigger feature Disabled
Advertise Enabled Capabilities IE Disabled
Advertise Country IE Disabled
Advertise Power Constraint IE Disabled
Advertise TPC Report IE Disabled Advertise QBSS Load IE Disabled
Advertise BSS AAC IE Disabled
Advertise Quiet IE Disabled
Advertise Fast-BSS Transition (802.11r) Capability Disabled
Fast-BSS Transition Mobility Domain ID 0
Country Code IN
ESSID example1
Encryption wpa2-psk-aes WPA2 Pre-Auth Disabled
Enable Management Frame Protection Disabled
Require Management Frame Protection Disabled
DTIM Interval 1 beacon periods
802.11a Basic Rates 6 12 24
802.11a Transmit Rates 6 9 12 18 24 36 48 54
Station Ageout Time 1000 sec
Max Transmit Attempts 16 RTS
Threshold 2333 bytes Max Associations 64
Wireless Multimedia (WMM) Enabled
Wireless Multimedia U-APSD (WMM-UAPSD) Powersave Enabled
WMM TSPEC Min Inactivity Interval 0 msec
```

DSCP mapping for WMM voice AC N/A
DSCP mapping for WMM video AC N/A
DSCP mapping for WMM best-effort AC N/A D
SCP mapping for WMM background AC N/A
Hide SSID Disabled
Deny_Broadcast Probes Disabled
Local Probe Response Enabled
Local Probe Request Threshold (dB) 0
Disable Probe Retry Enabled
Maximum Transmit Failures 0
BC/MC Rate Optimization Disabled
Rate Optimization for delivering EAPOL frames Enabled
Strict Spectralink Voice Protocol (SVP) Disabled
802.11a Beacon Rate 0
Advertise QBSS Load IE Enabled
Advertise Location Info Disabled
Advertise AP Name Disabled
40 MHz channel usage Enabled
BA AMSDU Enable Disabled
Temporal Diversity Enable Enabled
High throughput enable (SSID) Enabled
Low-density Parity Check Enabled
Maximum number of spatial streams usable for STBC reception 1
Maximum number of spatial streams usable for STBC transmission 1
MPDU Aggregation Enabled
Max received A-MPDU size 65535 bytes
Max transmitted A-MPDU size 65535 bytes
Min MPDU start spacing 16 usec
Short guard interval in 20 MHz mode Enabled
Short guard interval in 40 MHz mode Enabled
Supported MCS set
Explicit Transmit Beamforming Disabled
Transmit Beamforming Compressed Steering Disabled
Transmit Beamforming non Compressed Steering Disabled
Transmit Beamforming delayed feedback support Disabled

```

Transmit Beamforming immediate feedback support
Disabled Transmit Beamforming Sounding Interval 0 sec
40 MHz channel usage Enabled
BA AMSDU Enable Disabled
Temporal Diversity Enable
Enabled High throughput enable (SSID) Enabled
Low-density Parity Check Enabled
Maximum number of spatial streams usable for STBC reception 1
Maximum number of spatial streams usable for STBC transmission 1
MPDU Aggregation Enabled
Max received A-MPDU size 65535 bytes
Max transmitted A-MPDU size 65535 bytes
Min MPDU start spacing 16 usec
Short guard interval in 20 MHz mode Enabled
Short guard interval in 40 MHz mode Enabled
Supported MCS set
Explicit Transmit Beamforming Disabled
Transmit Beamforming Compressed Steering Disabled
Transmit Beamforming non Compressed Steering Disabled
Transmit Beamforming delayed feedback support Disabled
Transmit Beamforming immediate feedback support Disabled
Transmit Beamforming Sounding Interval 0 sec
Forward mode bridge
Band Steering Enabled
Steering Mode prefer-5ghz
Dynamic Multicast Optimization (DMO) Disabled
Dynamic Multicast Optimization (DMO) Threshold 0

VAP on radio 1 : is not created and is not enabled
-----

```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.62 show ap debug lldp counters

Description

This command displays LLDP counters for a specific AP, or all APs sending or receiving LLDP PDUs.

Syntax

```
show ap debug lldp counters
```

Example

The following example shows the output of **show ap debug lldp counters** command.

```
(AP)# show ap debug lldp counters
```

Interface	Received	Unknown TLVs	Malformed	Overflow	Transmitted
eth0	3259	0	0	0	3255
eth1	0	0	0	0	0

The output of this command includes the following information: The following example shows the output of **show ap debug lldp counters** command:

Parameter	Description
Interface	Name of the AP interface sending or receiving LLDP PDUs.
Received	Number of packets received on the specified interface.
Unknown TLVs	Number of LLDP PDUs with an unknown TLV.
Malformed	Number of malformed packets received on that interface.
Overflow	Number of times that an LLDP neighbor could not be added to the neighbor table (there is a limit of 8 per port).
Transmitted	Number of packets transmitted from that interface.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.63 show ap debug lldp neighbor

Description

This command displays LLDP neighbors for a specific AP or all APs sending or receiving LLDP PDUs.

Syntax

```
show ap debug lldp neighbor [interface <name> detail]
```

Parameter	Description
<name>	Displays the name of the AP interface sending or receiving LLDP PDUs.
detail	Displays details about the interface and number of neighbors.

Usage Guidelines

By default, this command displays LLDP neighbors for the entire list of LLDP interfaces. Include the IP address of an AP to display neighbor information only for that one device.

Example

The following example shows the output of **show ap debug lldp neighbor** command.

```
(AP)# show ap debug lldp neighbor

Capability codes: (R)Router, (B)Bridge, (A)Access Point, (P)Phone, (O)Other LLDP
Neighbor Information

-----

Interface Neighbor ID Capabilities Remote Interface Expiry-Time (Secs)
-----
eth0 00:0b:86:6b:57:80 B:R GE0/0/22 93
```

The output of this command includes the following information:

Parameter	Description
<interface>	Indicates the interface on the AP sending or receiving LLDP PDUs.
Neighbor ID	Indicates the LLDP neighbor number.
Capabilities	This data column can list any of the following data codes to indicate LLDP neighbor capabilities. • R: Router • B: Bridge • A: Access Point • P: Phone • O: Other
Remote Interface	Indicates the interface name on a peer device to which the AP port is connected.
Expiry-Time (Secs)	Indicates the maximum time limit for sending and receiving LLDP PDUs.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.64 show ap debug lldp state

Description

This command displays the LLDP interfaces information.

Syntax

```
show ap debug lldp state
```

Example

The following example shows the output of **show ap debug lldp state** command.

```
(AP)# show ap debug lldp state
LLDP Interface Information
-----
Interface LLDP TX LLDP RX LLDP-MED TX interval Hold Timer
-----
eth0 Enabled Enabled Disabled 30 120
eth1 Enabled Enabled Disabled 30 120
```

The output of this command includes the following information:

Parameter	Description
Interface	Indicates the LLDP interface name.
LLDP TX	Shows if LLDP PDU transmission is enabled or disabled.
LLDP RX	Shows if the AP has enabled or disabled processing of received LLDP PDUs.
LLDP-MED	Shows if LLDP MED protocol is enabled or disabled.
TX interval	Indicates the LLDP transmit interval in seconds.
Hold Timer	Indicates the LLDP transmit hold multiplier.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.65 show ap debug mgmt-frames

Description

This command displays the trace information for the 802.11 management frames.

Syntax

```
show ap debug mgmt-frames <mac>
```

Parameter	Description
<mac>	Displays trace information for an AP based on MAC address.

Example

The following example shows the partial output of **show ap debug mgmt-frames** command:

```
Traced 802.11 Management Frames
```

```
-----
```

```
Timestamp stype SA DA BSS signal Misc
```

```
-----
```

```
May 9 23:09:42 deauth d8:c7:c8:c4:29:82 08:ed:b9:e1:51:87 d8:c7:c8:c4:29:82 15 -
```

```
May 9 23:09:42 disassoc d8:c7:c8:c4:29:82 08:ed:b9:e1:51:87 d8:c7:c8:c4:29:82 15 -
```

```
May 9 23:09:03assoc-respd8:c7:c8:c4:29:82 08:ed:b9:e1:51:87 d8:c7:c8:c4:29:82  
15Success
```

```
May 9 22:02:40 auth d8:c7:c8:c4:29:8b c4:85:08:de:06:d4 d8:c7:c8:c4:29:8b 15Success
```

```
May 9 01:25:51 auth 08:ed:b9:e1:51:87 d8:c7:c8:c4:29:8a d8:c7:c8:c4:29:8a 60 -
```

The output of this command includes the following information:

Column	Description
Timestamp	Indicates timestamp for the authentication management frame.
stype	Indicates the type of the packet.
SA	Indicates the source of the packets.
DA	Indicates the destination to which the packets are intended.
BSS	Indicates the BSSID.
Signal	Indicates the signal level.
Misc	Indicates miscellaneous information such as status and other relevant details.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.66 show ap debug persistent-clients

Description

This command displays the information about the persistent AP clients.

Syntax

```
show ap debug persistent-clients
```

Usage Guidelines

Use this command to view information about the clients that are persistently connected to an AP.

Example

The following example shows the output of **show ap debug persistent-clients** command:

```
Persistent Clients
```

```
-----
```

```
MAC Address  ESSID  State  Expired  Update Time  Expiration Time
```

```
-----
```

The output of this command includes the following information:

Column	Description
MAC Address	Shows the MAC address of the client.
ESSID	Shows the ESSID used by the client.
State	Indicates the connection status of the client
Expired	Indicates if the client session is expired.
Update Time	Indicates the update time.
Expiration Time	Indicates the time at which the client session expires.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.67 show ap debug power-table

Description

This command displays the following information for a specific radio:

- Power limit table based on regulatory powers, user configured power, and override powers.
- Board limit table.
- A combination of all the above fields to calculate the actual transmit power of the packets.

Syntax

```
show ap debug power-table {<radio>}
```

Parameter	Description	Range
<radio>	Denotes the polarization value for the radio channel	0 or 1

Example

The following example shows the output of the **show ap debug power-table** command.

```
(AP)# show ap debug power-table 1

Combined CONDUCTED Limits (dBm) 11

#Antenna 1:

#NSS 1: CCK:

CDD 18.0 18.0 18.0 18.0

CDD+CRPOL 18.0 18.0 18.0 18.0

TXBF * * * * TXBF+CRPOL * * * * OFDM:

CDD 18.0      18.0      18.0      18.0      18.0      18.0      18.0      18.0
CDD+CRPOL      18.0      18.0      18.0      18.0      18.0      18.0      18.0      18.0

TXBF * * * * * * * * TXBF+CRPOL * * * * * * * *

Mode HT/VHT 20:

CDD 18.0      18.0      18.0      18.0      18.0      18.0      18.0      17.0      16.0      15.0
CDD+CRPOL      18.0      18.0      18.0      18.0      18.0      18.0      18.0      18.0      17.0      16.0
15.0
TXBF 18.0      18.0      18.0      18.0      18.0      18.0      18.0      17.0      16.0      15.0
TXBF+CRPOL      18.0      18.0      18.0      18.0      18.0      18.0      18.0      18.0      17.0      16.0
15.0
Mode HT/VHT 40:
CDD 18.0      18.0      18.0      18.0      18.0      18.0      17.0      16.0      15.0      14.0
CDD+CRPOL      18.0      18.0      18.0      18.0      18.0      18.0      18.0      17.0      16.0      15.0
14.0
TXBF 18.0      18.0      18.0      18.0      18.0      18.0      17.0      16.0      15.0      14.0
```

```

TXBF+CRPOL  18.0    18.0    18.0    18.0    18.0    18.0    17.0    16.0    15.0
14.0
Note:

NSS: Number of Spatial Streams

CDD: Cyclic Diversity Delay

TXBF: Transmit Beamforming

MCS: Modulation and Coding Index

Combined Conducted limits = Min(Board limits, User configured conducted power(floored
to min

conducted power), override board limit, regulatory limits)

Combined EIRP Limits = Combined Conducted Limited + Effective Antenna Gain + Power
gain +

correlation gain

```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.68 show ap debug radio-stats

Description

This command displays the aggregate radio debug statistics of an AP.

Syntax

```
show ap debug radio-stats [<radio-ID>]
```

Parameter	Description
<radio-ID>	Allows you to specify the ID number of the radio (for example, 0 or 1) for which you want to view statistics.

Usage Guidelines

Use this command to view the radio debug statistics for an AP.

Example

The output of this command displays general statistics for the radio, as well as statistics for transmitted and received frames.

```
RADIO Stats
```

```
-----  
Parameter Value  
-----  
  
Tx Powersave Queue Timeouts 0  
Tx Dropped After Retry 158551  
Tx Dropped No Buffer 0  
Tx Missed ACKs 158581  
Tx Failed Beacons 1  
Tx Multi-Beacon Fail 0  
Tx Long Preamble 557658  
Tx Short Preamble 0  
Tx Beacon Interrupts 2597365  
Tx Interrupts 780044  
Tx FIFO Underrun 0  
Tx Allocated Desc 557660  
Tx Freed Desc 557660  
Tx EAPOL Frames 15  
TX STBC Frames 0  
TX LDPC Frames 0 Tx AGGR Good 0  
Tx AGGR Unaggr 0  
Tx Data Priority [BE] 125  
Tx Data 6 Mbps (Mon) 125  
Tx Data 12 Mbps (Mon) 0  
Tx Data 24 Mbps (Mon) 0  
Tx Data 36 Mbps (Mon) 0  
Tx Data 54 Mbps (Mon) 0  
Tx Data 108 Mbps (Mon) 0  
Tx Data 108 Mbps+ (Mon) 0  
Tx Data Bytes 6 Mbps (Mon) 16648  
Tx Data Bytes 12 Mbps (Mon) 0  
Tx Data Bytes 24 Mbps (Mon) 0  
Tx Data Bytes 36 Mbps (Mon) 0  
Tx Data Bytes 54 Mbps (Mon) 0  
Tx Data Bytes 108 Mbps (Mon) 0
```

```
RADIO Stats
-----

Parameter Value
-----

Tx Data Bytes 108 Mbps+ (Mon) 0
Tx 6 Mbps 557650
Tx WMM [BE] 125
Tx WMM [VO] 557532
Tx WMM [BE] Dropped 158561
Tx UAPSD OverflowDrop 0
TX Timeouts 36
Lost Carrier Events 8
Tx HT40 Hang Detected 0
Tx HT40 Hang Stuck 0
Tx HT40 Hang Possible 0
Tx HT40 Dfs IMM WAR 0
Tx HT40 Dfs HT20 WAR 0
Tx MAC/BB Hang Stuck 0
Tx Mgmt Bytes 1434583125
Tx Beacons Bytes 1202571538
----- Receive Specific Statistics Rx Last SNR 16
Rx Last SNR CTL0 14
Rx Last SNR CTL1 13
Rx Last ACK SNR 0
Rx Frames Received 5622989
Rx Good Frames 4517471
Rx Bad Frames 1105518
Rx Total Data Frames Recvd 518806
Rx Total Mgmt Frames Recvd 3261635
Rx Total Control Frames Recvd 736829
Rx Total Bytes Recvd 755424522
Rx Total Data Bytes Recvd 78179450
Rx Total RTS Frames Recvd 230212
Rx Total CTS Frames Recvd 204854
Rx Total ACK Frames 2344801
```

The output of this command provides the following information:

Column	Description
Parameter	Displays the transmission and reception parameters.
Value	Displays the values associated with the transmission and reception parameters.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.69 show ap debug radius-statistics

Description

This command displays the RADIUS statistics for the authentication servers configured on an AP.

Syntax

```
show ap debug radius-statistics
```

Usage Guidelines

Use this command to view the authentication server details.

Example

The output of this command displays general statistics of the authentication servers configured on an AP.

```

RADIUS Statistics
-----
Statistics                TerminationServer  InternalServer  testserver  test1234
-----
In Service: Management Auth Not used        Not used        Not used        Not used
In Service: Example1 Not      used           Up    67920s    Not      used    Not used
Accounting Requests 0           0              0              0              0
Raw Requests 0           0              0              0              0
PAP Requests 0           0              0              0              0
CHAP Requests 0          0              0              0              0
MS-CHAP Requests 0      0              0              0              0

```


MS-CHAPv2 Requests	0	0	0
Mismatch Response	0	0	0
Invalid Secret	0	0	0
Access-Accept	0	0	0
Access-Reject	0	0	0
Accounting-Response	0	0	0
Access-Challenge	0	0	0
Unknown Response code	0	0	0
Timeouts	0	0	0
AvgRespTime (ms)	0	0	0
Total Requests	0	0	0
Total Response	0	0	0
Read Error	0	0	0
SEQ first/last/free	0/0/0	0/0/0	0/0/0

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.70 show ap debug rfc3576-radius-statistics

Description

This command displays the CoA statistics for the servers configured on an AP.

Syntax

```
show ap debug rfc3576-radius-statistics [termination]
```

Parameter	Description
termination	Displays termination details.

Usage Guidelines

Use this command to view the CoA details for debugging authentication and authorization related issues.

Example

The following example shows the output of the **show ap debug rfc3576-radius-statistics** command:

RADIUS RFC3576 Statistics

```

-----
Statistics                                InternalServer                test                testServer
-----
In Service: Management Auth              Not used                  Not used            Not used
In Service: Test1                        Up 699292s                Not used            Not used
In Service: ssid1                        Up 699292s                Not used            Not used

Disconnect Accepts                        0
Disconnect Rejects                       0
No Secret                               0
No Session ID                           0
Bad Authenticator                        0
Invalid Request                          0
Packets Dropped                          0
Unknown service                          0
CoA Requests                            0
CoA Accepts                              0
CoA Rejects                              0
No permission                            0
SEQ first/last/free                      0/0/0                    0/0/0              0/0/0
Packets received from                    unknown clients           ::0
Packets received with                    unknown request           ::0
Total RFC3576 packets                    Received                  ::0

```

The following example shows the output of the **show ap debug rfc3576-radius-statistics termination** command:

RADIUS RFC3576 Statistics

```

-----
Statistics                                t_cppm                t_HOVCLEARPASS  LDAP-none          free-
LDAP
-----
--

In Service: OCSPTTEST                    Not used              Not used          Not used           Not used
In Service: Management Auth              Not used              Not used          Not used           Not used
In Service: IPFHUNTV                     Not used              Not used          Not used           Not used
In Service: wired eth1                    Not used              Not used          Not used           Not used
In Service: IPFHUN                        Not used              Not used          Not used           Not used
In Service: IPFHUNGuest                   Not used              Not used          Not used           Not used
In Service: booth-psk-225                 Not used              Not used          Not used           Not used
In Service: booth-open-205                Not used              Not used          Not used           Not used
In Service: IPFNET                        Not used              Not used          Not used           Not used
In Service: booth-cp-225                  Not used              Not used          Not used           Not used

```

```

In Service: booth-dot1x-225      Not used      Not used      Not used      Not used
In Service: aaa                  Not used      Not used      Not used      Not used
Disconnect Requests 0            0            0            0            0
Disconnect Accepts 0             0            0            0            0
Disconnect Rejects 0             0            0            0            0
No Secret 0                     0            0            0            0
No Session ID 0                  0            0            0            0
Bad Authenticator 0              0            0            0            0
Invalid Request 0                0            0            0            0
Packets Dropped 0                0            0            0            0
Unknown service 0                0            0            0            0
CoA Requests 0                   0            0            0            0
CoA Accepts 0                    0            0            0            0
CoA Rejects 0                    0            0            0            0
No permission 0                  0            0            0            0
SEQ first/last/free 0/0/0        0/0/0        0/0/0        0/0/0
Packets received from unknown clients ::0
Packets received with unknown request ::0
Total RFC3576 packets Received   ::0

```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.71 show ap debug shaping-table

Description

This command displays the shaping information for clients associated to an AP.

Syntax

```
show ap debug shaping-table
```

Usage Guidelines

Use this command to view the shaping information for clients connected to an AP.

Example

The following output is displayed for the **show ap debug shaping-table** command:

```

Interface :wifil

VAP aruba102

in out drop fail q cmn[C:O:H] Numcl TotCl BWmgmt

28 28 0 0 0 328787-328787-328787 0-0-0 0 1 -0

d1 d2 d3 d4 d5 d6 d7 d8 d9 0 28 0 28 0 28 0 0 0

idx tokens last-t bw-t in out drop fail q tx-t rx-t al-t rate

idx d1 d2 d3 d4 d5 d6 d7 d8 d9 d10

0 2147483647 0 0 0 0 0 0 0 0 0

VAP aruba103

in out drop fail q cmn[C:O:H] Numcl TotCl BWmgmt

0 0 0 0 0 328787-328787-328787 0-0-0 0 1 -0

d1 d2 d3 d4 d5 d6 d7 d8 d9 0 0 0 0 0 0 0 0 0

idx tokens last-t bw-t in out drop fail q tx-t rx-t al-t rate

idx d1 d2 d3 d4 d5 d6 d7 d8 d9 d10

0 2147483647 0 0 0 0 0 0 0 0 0

```

The output of this command provides the following information:

Column	Description
in	Shows the number of packets received by the AP.
out	Shows the number of packets sent by the AP.
drop	Shows the number of packets dropped by the AP.
fail	Shows the number of packets failed.
Numcl	Shows the number of CCK (802.11b) and OFDM (802.11a/g) packets dropped.
TotCl	Shows the total number of clients associated with the AP
Bwmgmt	Displays 1 if the bandwidth management feature has been enabled. Otherwise, it displays a 0.
idx	Shows the association index value.
tokens	Represents the credits the station has to transmit tokens.
last-t	Shows the number of tokens that were allocated to the station last time token allocation algorithm ran.
in	Shows the number of packets received.
out	Shows the number of packets sent.
drop	Shows the number of dropped packets.
q	Shows the number of queued packets
tx-t	Shows the total time spent transmitting data.
rx-t	Shows the total time spent receiving data.
al-t	Shows the total time allocated for transmitting data to this station.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.72 show ap debug spanning-tree

Description

This command displays the STP information for an AP.

Syntax

```
show ap debug spanning-tree
```

Usage Guidelines

Use this command to view STP details on an AP. STP is enabled for a wired port profile to ensure that there are no loops in any bridged Ethernet network. STP operates on all downlink ports, regardless of forwarding mode. STP will not operate on the uplink port and is supported only on APs with three or more ports.

Example

The following example shows the output displayed for the **show ap debug spanning-tree** command when there are no STP devices found:

```
stpdev: can't get info No such device
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.73 show ap debug stm-config

Description

This command displays the AP STM configuration information.

Syntax

```
show ap debug stm-config
```

Usage Guidelines

Use this command to view the details of STM configuration.

Example

The following output is displayed for the **show ap debug stm-config** command:

```
SSID:

Server Load Balancing:disable

MAC Authentication:disable

RADIUS Accounting:disable

SSID: wired eth1

Server Load Balancing:disable

MAC Authentication:disable

RADIUS Accounting:disable

SSID:wireless-local-nw

Server Load Balancing:disable

MAC Authentication:disable

RADIUS Accounting:disable

Associated RADIUS

Server:InternalServer
```

The output of this command provides the following information for each SSID:

Column	Description
SSID	Indicates the name of the SSID.
Server Load Balancing	Indicates if server load balancing is enabled.
MAC Authentication	Indicates if MAC authentication is enabled.
RADIUS Accounting	Indicates if RADIUS accounting is enabled.
Associated RADIUS Server	Displays the authentication server details configured for an SSID.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.74 show ap debug stm-role

Description

This command displays the STM user roles configured for the SSIDs in an AP.

Syntax

```
show ap debug stm-role
```

Usage Guidelines

Use this command to view the user roles configured for the AP STM. This includes details of the VLANs assigned to each SSID and also shows if the Calea feature is enabled or disabled.

Example

The following example shows the output of **show ap debug stm-role** command:

```
User Role
-----
Name                               Index      Vlan      Calea
----
Test                               4          0         OFF
wired-scalance                     2          0         OFF
ssid1                               3          0         OFF
default wired port profile         1          0         OFF
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.75 show ap debug system-status

Description

This command displays the detailed system configuration information for an AP.

Syntax

```
show ap debug system-status
```

Usage Guidelines

Use this command under the guidance of technical support to troubleshoot network issues. The output of this command displays the following types of information if any for the selected AP:

• Bootstrap information	• Per-radio statistics	• Ethernet duplex/speed settings
• Descriptor Usage	• Encryption statistics	• Tunnel heartbeat stats
• Interface counters	• AP uptime	• Boot version
• MTU discovery	• memory usage	• LMS information
• ARP cache	• Kernel slab statistics	• Power status
• Route table	• Interrupts	• CPU type
• Interface Information	• Crash Information	• CPU usage statistics

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.76 show ap debug tacacs-statistics

Description

This command displays the TACACS statistics for the authentication servers configured on an AP.

Syntax

```
show ap debug tacacs-statistics
```


Usage Guidelines

Use this command to view the authentication server details.

Example

The output of this command displays general statistics of the authentication servers configured on an AP.

```
Tacacs Statistics
-----

Statistics
-----

In Service: Management Auth
In Service: Test1
In Service: ssid1
Accounting Requests
Authen Requests
Author Requests
Authen Response Pass
Authen Response Fail
Author Response Pass
Author Response Fail
Accounting Response Pass
Accounting Response Fail
Login Success
Login Failure
Timeouts AvgRespTime (ms)
Outstanding Auths
SEQ first/last/free
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.77 show ap dot11k-beacon-report

Description

This command displays the beacon report details for the 802.11k clients of an AP.

Syntax

```
show ap dot11k-beacon-report <mac>
```

Parameter	Description
<mac>	Allows you to specify the MAC address of the client for which you want to view the beacon report details.

Usage Guidelines

Use this command to view the beacon report details for 802.11k clients connected to an AP.

Example

The following example shows the output of the **show ap dot11k-beacon-report <mac>** command:

```
(AP)# show ap dot11k-beacon-report 70:11:24:56:02:72
```

```
Client: 70:11:24:56:02:72
Status: Success Nbr count: 4
Last received: 31s
Client 11k Beacon Report
-----
```

BSSID	Channel	RSSI	Antenna
-----	-----	-----	-----
6c:f3:7f:b6:62:f0	38	92	0
6c:f3:7f:b6:69:30	38	94	0
6c:f3:7f:4a:43:d0	46	94	0
6c:f3:7f:b6:66:30	46	92	0

The output of this command displays information on the number of 802.11k neighbors, connection status, and the channel, RSSI and antenna details for the specified MAC address.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.78 show ap dot11k-nbrs

Description

This command displays the neighboring details of the 802.11k clients connected to an AP.

Syntax

```
show ap dot11k-nbrs
```

Usage Guidelines

Use this command to view neighbors of the 802.11k clients connected to an AP.

Example

```
Radio: 0
Nbr count: 3
11k Neighbours
-----
BSSID                      Channel      Last Update
-----
6c:f3:7f:b6:62:f0          292          1s
6c:f3:7f:b6:69:30          816          6s
6c:f3:7f:b6:66:30          808          5s
Radio: 1
Nbr count: 3
11k Neighbours
-----
BSSID                      Channel      Last Update
-----
6c:f3:7f:b6:62:e0          1            13s
6c:f3:7f:b6:66:20          6            33s
6c:f3:7f:b6:69:20          6            33s
```

The output of this command displays information on the number of 802.11k neighbors on each radio of the AP.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.79 show ap flash-config

Description

This command shows the statistics of the AP configuration stored in flash memory.

Syntax

```
show ap flash-config
```

Usage Guidelines

Use this command to view the configuration details in the flash memory.

Example

The following example shows the output of **show ap flash-config** command:

```
IP Address: 10.15.20.252
Network Mask:10.15.22.257
Gateway IP:10.15.20.255
DNS Server: 92.168.1.10
Domain Name: floor1.test.com
Name:Undefined
```

The output of this command includes the following information:

Parameter	Description
IP Address	Displays the IP address of the AP.
Network Mask	Displays the Network mask of the network.
Gateway IP	Displays the Gateway IP address to which traffic is sent.
DNS Server	Displays the IP address of the DNS server.
Domain Name	Displays the Domain name of the server
Name	Displays the name of the AP.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.80 show ap mesh counters

Description

This command displays the mesh counters for an AP.

Syntax

```
show ap mesh counter
```

Usage Guidelines

Use this command to view a list of mesh counters available for an AP.

Example

The following example shows the output of **show ap mesh counter** command.

```
Mesh Packet Counters
-----

Interface Echo Sent Echo Recv Probe Req Probe Resp Assoc Req Assoc Resp Assoc Fail
Link up/down Resel. Switch Other Mgmt
-----
-----
- -----

Parent 0 0 770 770(770 HT) 0 0 0 0 - - 0

Received Packet Statistics: Total 7013859, Mgmt 7013859 (dropped non-mesh 0), Da ta 0
(dropped unassociated 0)HT: pns=770 ans=0 pnr=0 ars=0 arr=0 anr=0

Recovery Profile Usage Counters
-----

Item Value
-----

Enter recovery mode 0 Exit recovery mode 0

Total connections to switch 0

Mesh loop-prevention Sequence No.:370765 Mesh timer ticks:370764 d8:c7:c8:c4:42:98#
show ap mesh counters Mesh Packet Counters
-----

Interface Echo Sent Echo Recv Probe Req Probe Resp Assoc Req Assoc Resp Assoc Fail
Link up/down Resel. Switch Other Mgmt
-----
-----
- -----
```

4.16 S

```
Parent 0 0 770 770(770 HT) 0 0 0 0 - - 0
```

```
Received Packet Statistics: Total 7016747, Mgmt 7016747 (dropped non-mesh 0), Data 0  
(dropped unassociated 0)HT: pns=770 ans=0 pnr=0 ars=0 arr=0 anr=0
```

```
Recovery Profile Usage Counters
```

```
-----
```

```
Item Value
```

```
---- ----
```

```
Enter recovery mode 0 Exit recovery mode 0
```

```
Total connections to switch 0
```

```
Mesh loop-prevention Sequence No.:370891 Mesh timer ticks:370890
```

Column	Description
Interface	Indicates whether the mesh interface connects to a Parent AP or a Child AP. Each row of data in the Mesh Packet Counters table shows counter values for an individual interface.
Echo Sent	Number of echo packets sent.
Echo Recv	Number of echo packets received.
Probe Req	Number of probe request packets sent from the interface specified in the Mesh-IF parameter.
Probe Resp	Number of probe response packets sent to the interface specified in the Interface parameter.
Assoc Req	Number of association request packets from the interface specified in the Interface parameter.
Assoc Resp	Number of association response packets from the interface specified in the Interface parameter. This number includes valid responses and fail responses.
Assoc Fail	Number of fail responses received from the interface specified in the Interface parameter.
Link up/down	Number of times the link up or link down state has changed.
Resel.	Number of times a mesh point attempted to reselect a different mesh portal.
Switch	Number of times a mesh point successfully switched to a different mesh portal.
Other Mgmt	Management frames of any type other than association and probe frames, either received on child interface, or sent on parent interface.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.81 show ap mesh link

Description

This command shows the mesh link of the AP.

Syntax

```
show ap mesh link
```

Example

The following example shows the output of **show ap mesh link** command:

```
(AP)# show ap mesh link Neighbor list
-----
MAC Portal Channel Age Hops Cost Relation Flags RSSI Rate Tx/Rx
---
00:0b:86:e8:09:d1 00:1a:1e:88:01:f0 157 0 1 11.00 C 3h:15m:42s - 65
54/54
00:1a:1e:88:02:91 00:1a:1e:88:01:f0 157 0 1 4.00 C 3h:35m:30s HL 59
300/300
00:0b:86:9b:27:78 Yes 157 0 0 12.00 N 3h:22m:46s - 26 -
00:0b:86:e8:09:d0 00:1a:1e:88:01:f0 157 0 1 11.00 N 3h:15m:36s - 65 -
00:1a:1e:88:02:90 00:1a:1e:88:01:f0 157+ 0 1 2.00 N 3h:35m:6s HL 59 -
A-Req A-Resp A-Fail HT-Details Cluster ID
-----
1 1 0 Unsupported sw-ad-GB32
1 1 0 HT-40MHzsgi-2ss sw-ad-GB322
0 0 0 Unsupported mc1
0 0 0 Unsupported sw-ad-GB32
0 0 0 HT-40MHzsgi-2ss sw-ad-GB32 Total count: 5, Children: 2
```

The output of this command includes the following information:

Parameter	Description
MAC	MAC address of the mesh node.
Portal	By default, this column displays the BSSID of the mesh point. If you include the optional names parameter, this column will display AP names, if available. The AP names will include [p] (parent), or [c] (child) suffixes to indicate the role of the mesh BSSID.
Channel	Number of a radio channel used by the AP.

Parameter	Description
Age	Number of seconds elapsed since the AP heard from the neighbor.
Hops	Indicates the number of hops it takes traffic from the mesh node to get to the mesh portal. The mesh portal advertises a hop count of 0, while all other mesh nodes advertise a cumulative count based on the parent mesh node.
Cost	A relative measure of the quality of the path from the AP to the controller. A lower number indicates a better quality path, where a higher number indicates a less favorable path (For example, a path which may be longer or more congested than a path with a lower value.) For a mesh point, the path cost is the sum of the (parent path cost) + (the parent node cost) + (the link cost).
Relation	Shows the relationship between the specified AP and the AP on the neighbor list and the amount of time that relationship has existed. • P = Parent • C = Child • N = Neighbor • B = Blacklisted-neighbor
Flags	This parameter shows additional information about the mesh neighbor. The key describing each flag is displayed at the bottom of the neighbor list.
RSSI	The Receive Signal Strength Indicator (RSSI) value displayed in the output of this command represents signal strength as a signal to noise ratio. For example, a value of 30 would indicate that the power of the received signal is 30 dBm above the signal noise threshold.
Rate Tx/Rx	The rate, in Mbps, that a neighbor transmits data to or receives data from the mesh-node specified by the command.
A-Req	Number of association requests from clients.
A-Resp	Number of association responses from the mesh node.
A-Fail	Number of association failures.
Cluster ID	Name of the Mesh cluster that includes the specified AP or BSSID.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.82 show ap mesh neighbors

Description

This command shows all mesh neighbors for an AP.

Example

The following example shows the output of **show ap mesh neighbors** command:

```
Neighbor list
-----

MAC Portal Channel Age Hops Cost Relation Flags RSSI Rate Tx/Rx A-Req A-Resp A-Fail
HT-Details Cluster ID
-----
-----

6c:f3:7f:a5:df:90 Yes 157 23 0 5.00 N 23s HLK 33 - 0 0 0 HT-20MHzsgi-3ss
78042e34005c8b372de0472df0727ef

6c:f3:7f:a5:df:30 Yes 153 0 0 5.00 N 3d:18h:16m:4s HLK 13 - 0 0 0 HT-20MHzsgi-3ss
b8e356bcb60d4ce984d9a7077a43936

d8:c7:c8:3d:3b:10 Yes 161 15 0 5.00 N 15s HLK 50 - 0 0 0 HT-20MHzsgi-3ss
78042e34005c8b372de0472df0727ef

Total count: 3, Children: 0

Relation: P = Parent; C = Child; N = Neighbor; B = Blacklisted-neighbor

Flags: R = Recovery-mode; S = Sub-threshold link; D = Reselection backoff; F = Auth-
failure; H

= High Throughput; L = Legacy allowed

K = Connected; U = Upgrading; G = Descendant-upgrading; Z = Config pending; Y =
Assoc- resp/Auth pending

a = SAE Accepted; b = SAE Blacklisted-neighbour; e = SAE Enabled; u = portal-
unreachable; o = opensystem
```

The output of this command includes the following information:

Parameter	Description
MAC	MAC address of the mesh node.
Portal	By default, this column displays the BSSID of the mesh point. If you include the optional names parameter, this column will display AP names, if available. The AP names will include [p] (parent), or [c] (child) suffixes to indicate the role of the mesh BSSID.
Channel	Number of a radio channel used by the AP.
Age	Number of seconds elapsed since the AP heard from the neighbor.

Parameter	Description
Hops	Indicates the number of hops it takes traffic from the mesh node to get to the mesh portal. The mesh portal advertises a hop count of 0, while all other mesh nodes advertise a cumulative count based on the parent mesh node.
Cost	A relative measure of the quality of the path from the AP to the Virtual Controller. A lower number indicates a better quality path, where a higher number indicates a less favorable path (e.g, a path which may be longer or more congested than a path with a lower value.) For a mesh point, the path cost is the sum of the (parent path cost) + (the parent node cost) + (the link cost).
Relation	Shows the relationship between the specified AP and the AP on the neighbor list and the amount of time that relationship has existed. • C = Child • N = Neighbor • B = Blacklisted-neighbor
Flags	This parameter shows additional information about the mesh neighbor. The key describing each flag is displayed at the bottom of the neighbor list.
RSSI	The RSSI value displayed in the output of this command represents signal strength as a signal to noise ratio. For example, a value of 30 would indicate that the power of the received signal is 30 dBm above the signal noise threshold.
Rate Tx/Rx	The rate, in Mbps, that a neighbor transmits data to or receives data from the mesh-node specified by the command.
A-Req	Number of association requests from clients.
A-Resp	Number of association responses from the mesh node.
A-Fail	Number of association failures.
Cluster ID	Name of the Mesh cluster that includes the specified AP or BSSID.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.83 show ap monitor

Description

This command shows information for AP AMs.

Syntax

```
show ap monitor {active-laser-beams|ap-list|ap-wired-mac <mac>|arp-cache|arp-vlan-  
cache|containment-info|enet-wired-mac <mac>|ids-state <type>|pot-ap-list |pot-  
sta-list|rogue-ap <mac>|routers|scan-info|sta-list|state <mac>|stats <mac>|  
status}
```

Parameter	Description
active-laser-beams	Shows active laser beam generators. The output of this command shows a list of all APs that are actively performing policy enforcement containment such as rogue containment. This command can tell us which AP is sending out deauthorization frames, although it does not specify which AP is being contained.
ap-list	Shows list of APs being monitored.
ap-wired-mac	Shows the MAC address of the wired AP.
arp-cache	Shows ARP Cache of learned IP to MAC binding
arp-vlan-cache	Shows ARP cache that contains VLAN tags.

Parameter	Description
<code>containment-info</code>	Shows containment events and counters triggered by the wired containment and wireless containment features configured in the ids. The output of this command shows device and target data for wired containment activity, as well as data for the following counters. Wireless Containment Counters: • Last Deauth Timer Tick • Deauth frames to AP • Deauth frames to Client • Last Tarpit Timer Tick • Tarpit Frames: Probe Response • Tarpit Frames: Association Response • Tarpit Frames: Authentication • Tarpit Frames: Data from AP • Tarpit Frames: Data from Client • Last Enhanced Adhoc Containment Timer Tick • Enhanced Adhoc Containment: Frames To Data Sender • Enhanced Adhoc Containment: Frames To Data Receiver • Enhanced Adhoc Containment: Response to Request Enhanced Adhoc Containment: Replay Response Wired Containment Counters: • Last Wired Containment Timer Tick • Last Tagged Wired Containment Timer Tick • Spoof frames sent • Spoof frames sent on tagged VLAN
<code>enet-wired-mac</code>	Shows Wired MAC Addresses learned.
<code>ids-state <type></code>	Shows IDS State.

Parameter	Description
pot-ap-list	Display the Potential AP table. The Potential AP table shows the following data: • bssid: The BSSID of the AP. • channel: e current radio channel of the AP • phy type: The radio's PHY type. Possible values are 802.11a, 802.11a-HT-40, 802.11b/g, 802.11b/g-HT-20. • num-beacons: Number of beacons seen during a 10-second scan • tot-beacons: Total number of beacons seen since the last reset. • num-frames: Total number of frames seen since the last rest. • mt: Monitor time; the number of timer ticks elapsed since the first AP is recognized. • at: Active time, in timer ticks. • ibss: Shows if ad-hoc BSS is enabled or disabled. It will be enabled if the bssid has detected an ad-hoc BSS (an ibss bit in an 802.11 frame). • rssi: The RSSI value displayed in the output of this command represents signal strength as a signal to noise ratio. For example, a value of 30 would indicate that the power of the received signal is 30 dBm above the signal noise threshold.
pot-sta-list	Shows the Potential client table. The Potential Client table shows the following values: • last-bssid: the Last BSSID to which the client associated. • from-bssid, • to-bssid • mt: Monitor time; the number of timer ticks elapsed since the first client is recognized. • it: Client Idle time, expressed as a number of timer ticks.
rogue-ap <mac>	Displays rogue APs information for the current AP.
routers	Shows the Router MAC Addresses that were learned. The output of this command includes the router's MAC address, IP address and uptime.
scan-info	Shows scanned information for the AP.
sta-list	Shows the configuration and status of monitor information of the AP.
state	Shows the AP monitoring state.
stats	Shows the AP monitoring statistics.
status	Shows the status of the AP monitoring.

Example

show ap monitor active-laser-beams

The following example shows the output of **show ap monitor active-laser-beams** command:

```
Active Laser Beam Sources
-----
bssid channel rssi ap name lms ip master ip inactive time
```

show ap monitor ap-list

The following example shows the output of **show ap monitor ap-list** command:

Monitored AP Table

```

-----
bssid essid chan ap-type transition-type
confirmed phy-type dos dt/mt ut/it encr nstas avg-snr curr-
snr avg-rssi curr-rssi wmacs ibss cl-delay
-----
---
-----

c8:b5:ad:ba:f9:80 345 1 valid valid no
80211b/g-HT-20 disable 12182/12182 0/0 open 0 45 45 50
50 0 no 0

f0:5c:19:1e:39:e0 345 36E valid valid yes 80211a-VHT-80 disable 12177/12177 0/0 open
0 64 64 30
31 2 no 0

ac:a3:1e:dd:c7:f0 UCC-Campus 36 interfering interfering no 80211a-VHT-20 disable
12177/12177 0/0 wpa2-8021x-aes 1 55 56 39
39 0 no 0

ac:a3:1e:dd:c7:f4 UCC-Employee 36 interfering interfering no 80211a-VHT-20 disable
12177/12177 0/0 wpa2-psk-aes 0 55 55 39
40 0 no 0

ac:a3:1e:dd:c7:f5 UCC-Student 36 interfering interfering no 80211a-VHT-20 disable
12177/12177 0/0 wpa2-8021x-aes 0 55 55 39
40 0 no 0

ac:a3:1e:dd:c7:f7 225 36 interfering interfering no
80211a-VHT-20 disable 12177/12177 0/0 open 0 55 56 39
39 0 no 0

6c:f3:7f:77:b6:d2 155 36 interfering interfering no
80211a-HT-20 disable 12177/12177 0/0 open 0 56 55 38
40 0 no 0

f0:5c:19:1d:b6:b2 207mesh 36 interfering interfering no
80211a-VHT-20 disable 12177/12177 0/0 wpa2-8021x-aes 0 71 71 23
24 0 no 0

f0:5c:19:1d:b6:b3 2200 36 interfering interfering no

```

```

80211a-VHT-20 disable 12177/12177 0/0 open 0 71 71 24
24 0 no 0

f0:5c:19:1d:b6:b4 222 36 interfering interfering no
80211a-VHT-20 disable 12177/12177 0/0 open 0 70 71 24
24 0 no 0

6c:f3:7f:78:60:92 155 36 interfering interfering no
80211a-HT-20 disable 12177/12177 0/3 open 0 52 52 42
43 0 no 0

6c:f3:7f:78:60:82 155 6 interfering interfering no
80211b/g-HT-20 disable 12176/5813 1/0 open 0 59 58 35
37 0 no 0

f0:5c:19:1f:9c:60 zefeng325psk 1 interfering interfering no
80211b/g-HT-20 disable 12176/10093 0/0 wpa2-psk-aes 0 62 55 32
40 0 no 0

f0:5c:19:1f:9c:61 hm 1 interfering interfering no
80211b/g-HT-20 disable 12176/10093 0/0 wpa2-psk-aes 0 62 55 32
40 0 no 0

f0:5c:19:1f:9c:62 hml 1 interfering interfering no
80211b/g-HT-20 disable 12176/10093 0/0 wpa2-psk-aes 0 62 55 32
40 0 no 0

f0:5c:19:1d:b6:a4 222 11 interfering interfering no
80211b/g-HT-20 disable 12176/1936 4/0 open 0 0 73 0
22 0 no 0

f0:5c:19:1d:b6:a3 2200 11 interfering interfering no
80211b/g-HT-20 disable 12174/1933 3/0 open 0 0 73 0
22 0 no 0

f0:5c:19:1d:b6:a2 207mesh 11 interfering interfering no
80211b/g-HT-20 disable 12174/1934 1/0 wpa2-8021x-aes 0 0 73 0
22 0 no 0

f0:5c:19:1e:39:f0 345 6 interfering interfering no
80211b/g-HT-20 disable 12146/543 0/0 open 0 0 46 0
49 0 no 0

ac:a3:1e:d2:a6:e0 rfcagel 6 interfering interfering no
80211b/g-HT-20 disable 12117/387 11/0 wpa2-psk-aes 0 51 52
43 0 no 0 44

```

```

6c:f3:7f:77:b6:c2:155      1 interfering open 0 interfering 69no
80211b/g-HT-20      disable 12098/5402 32/31      25
26 0      no      0

d0:bf:9c:3d:1f:0e HP-Print-0E-Deskjet 4640 series 11 interfering interfering no
80211b/g disable 11897/2280 47/1 wpa2-psk-aes 0 0 57 0
38 0 no 0

c8:b5:ad:ba:f9:90 345 36E valid valid no

80211a-VHT-80      disable 7640/7640 0/0      open 1      25 25      70
70      2 no      0

ac:a3:1e:d2:a6:      rfcagel      132E interfering      interfering 59no
f0 80211a-VHT-      disable      wpa2-psk-aes 0      59
80      2834/63      22/0
36      0 no      0      36

Start:0
Length:24
Total:24

345--c8:b5:ad:c3:af:98#

```

show ap monitor ap-wired-mac

The following example shows the output of **show ap monitor ap-wired-mac <mac>** command:

Wired MAC Table

mac age

show ap monitor arp-cache

The following example shows the output of **show ap monitor arp-cache** command:

```

br0:10.17.88.188
ARP Cache Table
mac ip vlanid age
--- --
d8:c7:c8:cb:d4:20      10.17.88.188      0      1s
d8:c7:c8:cb:d3:d4      10.17.88.186      0      1s
00:0b:86:40:1c:a0      10.17.88.129      0      1m:18s

```

show ap monitor containment-info

The following example shows the output of **show ap monitor containment-info** command:

```

br0:10.17.88.188
ARP Cache Table
-----
mac ip vlanid age
--- --
d8:c7:c8:cb:d4:20      10.17.88.188      0      1s
d8:c7:c8:cb:d3:d4      10.17.88.186      0      1s
00:0b:86:40:1c:a0      10.17.88.129      0      1m:18s

```

show ap monitor enet-wired-mac

The following example shows the output of **show ap monitor enet-wired-mac** command:

```
Wired MAC Table
```

```
-----
```

```
mac age
```

show ap monitor ids-state

Use this command to view information about the Intrusion Detection System (IDS) the following detection polices:

- Detect Block ACK DOS
- Disconnect station attack
- Intrusion event Type
- Intrusion rate parameters
- Detect Omerta attack
- Detect Power Save DOS Attack
- Detect Rate Anomaly
- Sequence
- IDS Signature— Deauthentication Broadcast and Deassociation Broadcast
- Detect AP Spoofing
- Valid and Protected SSIDs (from IDS Unauthorized Device Profile)

The following example shows the output of **show ap monitor ids-state valid-ssid** command.

```
System Generated (using WLAN SSID profile configuration)
```

```
----- SSID
```

```
----
```

```
Valid and Protected SSIDs (from IDS Unauthorized Device Profile)
```

```
----- SSID
```

```
----
```

```
example1
```

```
example-local-nw a36534e02eelf3a7edeb0c247d07c9b
```

show ap monitor pot-ap-list

The following example shows the output of **show ap monitor pot-ap-list** command.

```
Potential AP Table
```

```
-----
```

```
bssid channel phy num-beacons tot-beacons num-frames mt it at ibss rssi
```

```
-----
```

```

d8:c7:c8:3d:3b:13 161 80211a 0 9 0 3 352 1 disable 26
d8:c7:c8:3d:3b:03 1 80211b 0 9 0 4 363 1 disable 43
00:24:6c:81:64:a8 36 80211a 0 9 0 3 185 2 disable 17
00:24:6c:81:64:a9 36 80211a 0 9 0 1 45 1 disable 17
00:24:6c:80:7a:a2 6 80211b 0 0 0 1 1 1 disable 30
Num Potential APs:5

```

show ap monitor pot-sta-list

The following example shows the output of **show ap monitor pot-sta-list** command.

Potential Client Table

mac last-bssid from-bssid to-bssid mt it channel rssi

--- -----

```

00:24:d7:40:bb:b0 00:1a:1e:17:dc:62 00:00:00:00:00:00 00:00:00:00:00:00 133 50 7 44
60:67:20:5f:e1:94 00:1a:1e:17:d4:a0 00:00:00:00:00:00 00:00:00:00:00:00 6 43 7 0
58:94:6b:a0:47:74 00:1a:1e:17:d4:a1 00:00:00:00:00:00 00:00:00:00:00:00 217 104 7 0
b0:ec:71:98:da:44 00:24:6c:80:55:b0 00:00:00:00:00:00 00:00:00:00:00:00 37 2 7 0
00:27:10:2a:c6:ac 00:1a:1e:17:d4:a1 00:00:00:00:00:00 00:00:00:00:00:00 72 50 7 30
b0:65:bd:dc:51:8a 00:24:6c:80:03:4e 00:00:00:00:00:00 00:00:00:00:00:00 217 10 149 11
74:e1:b6:15:1b:5f d8:c7:c8:3d:42:13 00:00:00:00:00:00 00:00:00:00:00:00 164 19 149 10
60:67:20:5b:33:28 00:1a:1e:17:d4:a1 00:00:00:00:00:00 00:00:00:00:00:00 6 5 7 0
00:27:10:5c:23:78 00:24:6c:80:fd:72 00:00:00:00:00:00 00:00:00:00:00:00 56 53 7 27
00:24:d6:9d:7c:28 00:24:6c:80:a3:90 00:00:00:00:00:00 00:00:00:00:00:00 97 96 7 28
58:94:6b:b3:14:a8 00:24:6c:80:03:4e 00:00:00:00:00:00 00:1c:b0:eb:d7:00 154 1 7 14
24:77:03:d0:0a:d8 00:1a:1e:17:dc:62 00:00:00:00:00:00 00:00:00:00:00:00 19 14 7 16
24:77:03:7a:7f:40 6c:f3:7f:94:63:80 00:00:00:00:00:00 00:00:00:00:00:00 42 41 7 0
24:77:03:ce:a5:fc 00:24:6c:80:4f:80 00:00:00:00:00:00 00:00:00:00:00:00 143 16 7 0
00:23:14:9d:ba:f0 00:1a:1e:17:d4:a1 00:00:00:00:00:00 00:00:00:00:00:00 158 36 7 0
24:77:03:cf:09:2c 00:24:6c:80:4f:81 00:00:00:00:00:00 00:00:00:00:00:00 117 57 7 22
24:77:03:d1:05:b0 00:1a:1e:17:dc:62 00:00:00:00:00:00 00:00:00:00:00:00 169 33 7 37
24:77:03:7a:89:50 00:24:6c:80:a3:91 00:00:00:00:00:00 00:24:6c:80:a3:9a 248 20 7 37

```

show ap monitor routers

The following example shows the output of **show ap monitor routers** command.

Wired MAC of Potential Wireless Devices

```
-----
mac ip age
---
```

show ap monitor scan-info

The following example shows the output of **show ap monitor scan-info** command.

```
WIF Scanning State: wifi0: d8:c7:c8:3d:42:10
-----

Parameter Value
-----

Probe Type m-portal
Phy Type 80211a-HT-40
Scan Mode reg-domain
Scan Channel no
Disable Scanning yes
RegDomain Scan Completed yes
DOS Channel Count 0
Current Channel 149+
Current Scan Channel 153-
Current Channel Index 9
Current Scan Start Milli Tick 232927000
Current Dwell Time 110
Current Scan Type active Scan-
Type-Info
-----

Info-Type Active Reg-domain All-reg-domain Rare DOS
-----

Dwell Times 500 250 200 100 500
Last Scan Channel 153- 44+ 0 0 0
```

show ap monitor state

The following example shows the output of **show ap monitor state** command.

```
DoS State
-----
```

```
tx old-tx rx old-rx last-dos-time ap-ev-time sta-ev-time last-enhanced-cm-time
enhanced-cm-ev- time
```

```
-----
-----
-----
0 0 0 0 0 0 0 0 0
```

show ap monitor stats

The following example shows the output of **show ap monitor stats** command.

```
(AP)# show ap monitor stats d8:c7:c8:cb:d4:22 Aggregate Stats
-----

retry low-speed non-unicast rcv-error frag bwidth
-----

0 0 0 0 0 0

RSSI
-----

avg-signal low-signal high-signal count duration (sec)
-----

40 40 40 748 70

AP Impersonation State
-----

beacons prev-beacons exp-beacons beacon-interval imp-time imp-active wait-time
-----

0 11 11.00 100 0 0 0

AP Non-beacon-Frames:0 AP Tarpit Fake Channel:0 Raw Stats
-----

tx-pkt tx-byte rx-pkt rx-byte tx-retry-pkt rx-retry-pkt tx-frag-pkt rx-frag-pkt
short-hdr-pkt long-hdr-pkt
-----

2662202 830665629 31438 440132 0 0 0 0 2662202 0

Frame Type Stats
-----

type mgmt-pkt mgmt-byte ctrl-pkt ctrl-byte data-pkt data-byte
-----

tx 2662202 830665629 0 0 0 0
```

```

rx 0 0 0 31438 440132 0 0
Dest Addr Type Stats
-----
bcast-pkt bcast-byte mcast-pkt mcast-byte ucast-pkt ucast-byte
-----
0 0 0 0 0 0
Frame Size Packet Stats
-----
type 0-63 64-127 128-255 256-511 512-1023 1024+
----
tx 0 0 0 0 0 0
rx 0 0 0 0 0 0
Frame Rate Stats
-----
type pkt-6m byte-6m pkt-9m byte-9m pkt-12m byte-12m pkt-18m byte-18m pkt-24m byte-24m
pkt-36m byte-36m pkt-48m byte-48m pkt-54m byte-54m
-----
tx 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
rx 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
HT RX Rate Stats
-----
Rate Pkts Bytes
----
HT TX Rate Stats
-----
Rate Pkts Bytes
----
Detailed RSSI
-----
10s 2m 3m 4m 5m 6m 7m 8m 9m 10m 11m 12m 13m 14m 15m
- - - - -
average 40 40 40 40 40 40 40 40 40 40 40 40 40 40 40
high 40 40 40 40 40 40 40 40 40 40 40 40 40 40 40
low 40 40 40 40 40 40 40 40 40 40 40 40 40 40 40
count 110 638 638 638 638 638 638 649 649 638 638 429 649 638 528 649

```

```
Monitored Time:233496 Last Packet Time:233528 Uptime:233529
```

```
DoS State
```

```
-----
```

```
tx old-tx rx old-rx last-dos-time ap-ev-time sta-ev-time last-enhanced-cm-time
enhanced-cm-ev- time
```

```
-- -----
```

```
----
```

```
0 0 0 0 0 0 0 0 0
```

show ap monitor status

The following example shows the output of **show ap monitor status** command.

```
AP Info
```

```
-----
```

```
key value
```

```
--- -----
```

```
Uptime 233059
```

```
AP Name d8:c7:c8:cb:d4:20 LMS IP 0.0.0.0
```

```
Master IP 0.0.0.0
```

```
AP Type 135
```

```
Country Code 21 Wired Interface
```

```
-----
```

```
mac ip gw-ip gw-mac status pkts macs gw-macs dot1q-pkts vlans
```

```
--- -- -----
```

```
d8:c7:c8:cb:d4:20 10.17.88.188 10.17.88.129 00:0b:86:40:1c:a0 enable 2660 4 1 0 0
WLAN Interface
```

```
-----
```

```
bssid scan monitor probe-type phy-type task channel pkts
```

```
-----
```

```
d8:c7:c8:3d:42:10 enable enable m-portal 80211a-HT-40 tuned 149+
```

```
17332616 d8:c7:c8:3d:42:00 enable enable sap 80211b/g-HT-20 tuned 1 56090990
```

```
WLAN packet counters
```

```
-----
```

```
Interface Packets Read Bytes Read Interrupts Buffer Overflows Max PPS Cur PPS Max PPI
Cur PPI Invalid OTA msg
```

```
-----
```

```
-----
```

```

-----
d8:c7:c8:3d:42:10(wifi0) 17332616 401055780 12288142 703 1445 216 20 3 0
d8:c7:c8:3d:42:00(wifi1) 56090990 3565742575 50110266 13315 1024 275 20 1 0
Data Structures
-----

ap sta pap psta ch msg-hash ap-1
-- --- --- ----- ---- 256 288 45 136 26 2 256

Other Parameters
-----

key value
--- -----

Classification enable Wireless Containment disable Wired Containment disable Rogue
Containment disable System OUI Table
-----

oui
---

RTLS Configuration and State
-----

Type Server IP Port Freq Active Rpt-Tags Tag-Mcast-Addr Tags-Sent Rpt-Sta Incl-
Unassoc-Sta Sta-Sent Cmpd-Msgs-Sent
-----
-----

MMS N/A N/A 30 disable 01:0c:cc:00:00:00 N/A disable N/A N/A N/A
Aer scout N/A N/A N/A disable 00:00:00:00:00:00 N/A disable N/A N/A N/A
RTLS N/A N/A 30 disable 01:18:8e:00:00:00 N/A disable N/A N/A N/A

```

The outputs of the AP monitor command displays the following:

- Active laser beam sources for the AP.
- List of APs monitored by the AP.
- ARP cache details for the AP.
- List of clients monitored by the AP.
- Containment details for the AP.
- List of potential APs for the AP.
- List of potential clients for the AP.
- Information about the potential wireless devices.
- Scanned information for the AP.
- Configuration and status of monitor information of the AP.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.84 show ap pmkcache

Description

This command displays the PMK cache table for clients associated with the AP.

Syntax

```
show ap pmkcache
```

Usage Guidelines

Use this command to view PMK cache table contents for the clients associated with an AP.

Example

The following example shows the output of **show ap pmkcache** command.

PMK Cache Table

Client

MAC	Key	OKC/11r	Expiry	Name	Role	VLAN	E
-----	-----	---------	--------	------	------	------	---

SSID

-----	---	-----	-----	----	----	-----	-
-------	-----	-------	-------	------	------	-------	---

00:90:7a:0d:a0:62	1F4C17D8A70C..okc		6h:52m:18s	polycom1	okc-		
internal	1 okc-internal						

00:90:7a:0d:b2:ce	F20E35DB311F..okc		7h:31m:15s	polycom2	okc-		
internal	1 okc-internal						

Column	Description
Client MAC	Indicates the MAC address of the client from the which PMK is derived.
Key	Displays the cached key for the client.
OKC/11r	Indicates if OKC or 802.11r roaming is enabled.
Expiry	Displays the PMK cache expiration details in HH:MM:SS format.
Name	Indicates the name of client.
Role	Indicates the user role assigned to the client.

Column	Description
VLAN	Indicates the VLAN to which the client is assigned.
ESSID	Displays the ESSID details to which the client is connected.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.85 show ap virtual-beacon-report

Description

This command displays a report with the MAC address details and RSSI information of an AP.

Syntax

```
show ap virtual-beacon-report
```

Usage Guidelines

Use this command to view virtual beacon table of an AP. The virtual beacon table with the details of clients associated an AP is broadcast by each table.

Example

The following example shows the output of **show ap virtual-beacon-report** command.

Virtual Beacon Table

```

-----
Station      CM State   TriggeredSucceeded Owner   AP                                     RSSI
Received
-----
00:db:df:0a:5Adopted    1         1         Yes    00:24:6c:07:44:c8 (Local 0) 47
7:4e 59s
Normal
No           6c:f3:7f:ef:12:c0      44      18s
No           6c:f3:7f:ee:f7:80      44      11s
No           6c:f3:7f:ee:f7:90      36      13s
No           6c:f3:7f:ef:12:d0      43      13s

a0:88:b4:41:64:18 Normal 1 0 No 00:24:6c:07:44:c8 (Local 0) 34
20s

```

```

Normal                               No           00:24:6c:07:44:c0   (Local 1) 40       18s
No      6c:f3:7f:ef:12:c0             43   18s
No      6c:f3:7f:ee:f7:80             48   11s
No      6c:f3:7f:ee:f7:90             35   13s
Yes     6c:f3:7f:ef:12:d0             36   13s

Normal      Working well
Home        Current AP found a better AP for the client
Deny        Current AP is not the better AP
Target      Current AP is the better AP
Voice       Ready to move, but client is doing voice
Refused     Too many clients try to move to me
Done        Current AP just deauth the client
Adopted     Client has moved to me successfully

Total 2 VBRs

00:24:6c:c8:74:4c# show ap debug client-match 0

Client Match Status:: RUNNING BALANCING

Associated:1, Threshold:1

Leaving:0, Coming:0

```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.86 show app-services

Description

This command displays the list of application services available on an AP.

Syntax

```
show app-services
```

Usage Guidelines

Use this command to view the list of application services available on an AP.

Example

The following example shows the output of the **show app-services** command:

Application Service

Name	IP Protocol	Start Port	End Port
----	-----	-----	-----
any	0	0	65535
adp	17	8200	8200
bootp	17	67	69
cfgm-tcp	6	8211	8211
cups	6	515	515
dhcp	17	67	68
dns	17	53	53
esp	50	0	65535
ftp	6	21	21
gre	47	0	65535
h323-tcp	6	1720	1720
h323-udp	17	1718	1719
http-proxy2	6	8080	8080
http-proxy3	6	8888	8888
http	6	80	80
https	6	443	443
icmp	1	0	65535
ike	17	500	500
kerberos	17	88	88
l2tp	17	1701	1701
lpd-tcp	6	631	631
lpd-udp	17	631	631
msrpc-tcp	6	135	139
msrpc-udp	17	135	139
natt	17	4500	4500
netbios-dgm	17	138	138
netbios-ns	17	137	137
noe	17	32512	32512
noe-oxo	17	5000	5000
netbios-ssn	6	139	139
nterm	6	1026	1028
ntp	17	123	123
papi	17	8211	8211
pop3	6	110	110
pptp	6	1723	1723

4.16 S

rtsp	6	554	554
sccp	6	2000	2000
sips	6	5061	5061
sip-tcp	6	5060	5060
sip-udp	17	5060	5060
smb-tcp	6	445	445
smb-udp	17	445	445
smtp	6	25	25
snmp	17	161	161
snmp-trap	17	162	162
ssh	6	22	22
svp	119	0	65535
syslog	17	514	514
telnet	6	23	23
tftp	17	69	69
vocera	17	5002	5002

The output of this command provides the following information:

Parameter	Description
Name	Indicates the list of application services available on an AP.
IP Protocol	Displays the IP protocol numbers for each application service.
Start Port and End Port	Indicates the range of port numbers on which the application services are enabled.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.87 show audit-trail

Description

This command displays the history of the trail logs generated from the configuration commands.

Syntax

```
show audit-trail
```

Example

The following example shows the output of the **show audit-trail** command:

```
time                From                Command
-----
2017-03-21 02:22:01 from Cli <f0:5c:19:c9:f9:6c (SSID Profile "liying-TP2-1") # no
explicit-ageout-client> -- successfully.
2017-03-21 02:22:01 from Cli <f0:5c:19:c9:f9:6c (config) # exit> -- successfully.
2017-03-21 02:22:01 from Cli <f0:5c:19:c9:f9:6c (Access Rule "liying-TP2-1") # wlan
access-rule liying-TP2-1> --successfully.
2017-03-21 02:22:01 from Cli <f0:5c:19:c9:f9:6c (Access Rule "liying-TP2-1") # no
rule> -- successfully.
2017-03-21 02:22:01 from Cli <f0:5c:19:c9:f9:6c (Access Rule "liying-TP2-1") #
bandwidth-limit peruser downstream 1500> -- successfully.
2017-03-21 02:22:01 from Cli <f0:5c:19:c9:f9:6c (Access Rule "liying-TP2-1") # rule
any any match any any any permit> -- successfully.
2017-03-21 02:22:01 from Cli <f0:5c:19:c9:f9:6c (config) # exit> -- successfully.
```

Parameter	Description
time	Displays the time when the configuration command was executed.
From	Displays the source from which the configuration command was executed (CLI, WebUI, or other servers)
Command	Displays the configuration details.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.88 show arm-channels

Description

This command displays the ARM channel details configured on an AP.

Syntax

```
show arm-channels
```

Usage Guidelines

Use this command to view the channel details configured on an AP.

Example

The following example shows the output of **show arm-channels** command:

```
2.4 GHz
```

```
-----
```

```
Channel Status
```

```
-----
```

```
1 disable
```

```
2 disable
```

```
3 disable
```

```
4 disable
```

```
5 disable
```

```
6 disable
```

```
7 disable
```

```
8 disable
```

```
9 disable
```

```
10 disable
```

```
11 enable
```

```
12 disable
```

```
disable
```

```
1+ enable
```

```
2+ disable
```

```
3+ disable
```

```
4+ disable
```

```
5+ disable
```

```

6+ disable
7+ enable
5.0 GHz
-----
Channel Status
-----

36 disable
40 disable
44 disable
48 disable
52 disable
56 enable
60 enable
64 enable
149 enable
153 enable
157 enable
161 enable
165 enable
36+ enable
44+ enable
52+ disable
60+ disable
149+ enable
157+ enable

```

The output of this command provides the following information:

Parameter	Description
Channel	Displays the list of channels available in the 2.4 GHz and 5 GHz bands.
Status	Indicates if the channels in the 2.4 GHz and 5 GHz bands are enabled or disabled.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.89 show arm config

Description

This command displays the ARM configuration details for an AP.

Syntax

```
show arm config
```

Usage Guidelines

Use this command to view the ARM configuration details for an AP.

Example

The following example shows the output of **show arm config** command:

```
Minimum Transmit Power :18
Maximum Transmit Power :127
Band Steering Mode :prefer-5ghz
Client Aware :enable
Scanning :enable
Wide Channel Bands :5ghz
Air Time Fairness Mode :fair-access
Spectrum Load Balancing :disable
SLB NB Matching Percent :75
SLB Calculating Interval :30
SLB Threshold :2
Custom Channels :No
2.4 GHz Channels
-----
Channel Status
-----
1 enable
2 disable
3 disable
4 disable
5 disable
6 enable
```



```
7 disable
8 disable
9 disable
10 disable
11 enable
12 disable
13 disable
1+ enable
2+ disable
3+ disable
4+ disable
5+ disable
6+ disable
7+ enable
5.0 GHz Channels
-----
Channel Status
-----
36 enable
40 enable
44 enable
48 enable
52 enable
56 enable
60 enable
64 enable
149 enable
153 enable
157 enable
161 enable
165 enable
36+ enable
44+ enable
52+ disable
60+ disable
```

4.16 S

```
149+ enable
```

```
157+ enable
```

The output of this command provides the following information:

Parameter	Description
Minimum Transmit Power	Displays the minimum transmission power configured for the ARM channels.
Maximum Transmit Power	Displays the maximum transmission power configured for the ARM channels.
Band Steering Mode	Displays the band steering mode configuration parameters
client aware	Indicates the activation status of the Client aware feature.
Scanning	Indicates if scanning for available channels is enabled.
Wide Channel Bands	Indicates if 40MHz channel are enabled on 2.4 GHz or 5 GHz band.
Air Time Fairness Mode	Displays configuration details for the Airtime Fairness Mode feature.
Spectrum Load Balancing	Indicates if the Spectrum load balancing feature is enabled or disabled.
SLB NB Matching Percent	Indicates the percentage for comparing client density of AP neighbors for spectrum load balancing.
SLB Calculating Interval	Indicates the frequency at which the client density on AP is calculated for spectrum load balancing.
Custom Channels	Displays custom channels if any.
Channel	Displays the list of channels available in the 2.4 GHz and 5 GHz bands.
Status	Indicates if the channels in the 2.4 GHz and 5 GHz bands are enabled or disabled.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.90 show arp

Description

This command displays the ARP entries for the Virtual Controller.

Syntax

```
show arp
```

Usage Guidelines

Use this command to view the ARP messages sent or received by the Virtual Controller.

Example

The following example shows the output of **show arp** command

IP address	HW type	Flags	HW address	Mask	Device
192.168.10.2	0x1	0x6	D8:C7:C8:C4:42:98	*	br0
10.17.88.2	0x1	0x2	00:0B:86:40:1C:A0	*	br0

The output of this command includes the following information:

Parameter	Description
IP address	Displays the IP address of the device.
HW Type	Displays the type of the device.
Flags	Displays any flags for this AP.
HW address	Displays the MAC address of the device.
Mask	Displays the network mask or the IP address range.
Device	Displays the device used to send ARP requests and replies.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.91 show attack

Description

This command displays information about firewall settings configured on an AP to protect the network against wired attacks such as ARP attacks or malformed DHCP packets.

Syntax

```
show attack {config| stats}
```

Parameter	Description
config	Displays firewall configuration details to protect the network from wired attacks.
stats	Displays attack counters.

Usage Guidelines

Use this command to view firewall configuration details or attack counters enabled on an AP to protect the network from ARP attacks and malformed DHCP packets.

Example

The following example shows the output of **show attack config** command:

```
Current Attack
-----
Attack Status
-----
drop-bad-arp Disabled
fix-dhcp Disabled
poison-check Enabled
```

The output of this command indicates if the firewall settings to block invalid ARP packets and fix malformed DHCP packets are enabled. You can also view the status of the Poison-check parameter, which triggers an alert to notify the user about the ARP poisoning when enabled.

The following example output for the **show attack stats** command shows the attack counters:

```
attack counters
-----

Counter Value
-----

arp packet counter 0
drop bad arp packet counter 0
dhcp response packet counter 0
fixed bad dhcp packet counter 0
send arp attack alert counter 0
send dhcp attack alert counter 0
arp poison check counter 0
garp send check counter 1628
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.92 show auth-survivability

Description

This command displays the authentication survivability information for an AP.

Syntax

```
show auth-survivability {cached-info| debug-log [<count>]| time-out}
```

Command/Parameter	Description
cached-info	Displays authentication credentials cached by the AP.
debug-log [<count>]	Displays the log details for troubleshooting. The count attribute allows you to specify the number of logs to display.
time-out	Displays the duration configured for the cache expiry.

Usage Guidelines

Use this command to view the information cache expiry duration, cached information, and log details to debug when the authentication survivability feature is enabled. The authentication survivability feature supports a survivable authentication framework against the remote link failure when working with the external authentication servers. When enabled, this feature allows the APs to authenticate the previously connected clients against the cached credentials if the connection to the authentication server is temporarily lost.

Example

The following example shows the output of the **auth-survivability cached-info** command:

```
UserName Remaining Cache-Time(minutes)
```

```
-----
```

```
admin1 20
```

The following example shows the output of the **show auth-survivability time-out** command:

```
Auth Survivability time out :24
```

The output of these commands provide the following information:

Parameter	Description
UserName	Indicates the username of the client whose credentials are cached.
Remaining Cache-Time	Displays the remaining duration for cache expiry.
Auth Survivability time out	Indicates the configured duration for cache expiry.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.93 show backup-config

Description

This command displays the backup configuration information on an AP.

Syntax

```
show backup-config
```

Usage Guidelines

Use this command to view the current configuration information stored in the AP flash memory.

Example

The following text provides an example for the **show backup-config** command output:

```
version 6.4.0.0-4.1.0
virtual-controller-country IN
virtual-controller-key 0cb5770401cdeb6e4363c25fdfde17d907c4b095a9be5e4258
name instant-C4:42:98
terminal-access
clock timezone none 00 00
rf-band all
allow-new-aps
allowed-ap d8:c7:c8:c4:42:98
arm
wide-bands 5ghz 80mhz-support min-
tx-power 18
max-tx-power 127
band-steering-mode prefer-5ghz
air-time-fairness-mode fair-access
client-aware
scanning
client-match
syslog-level warn ap-debug syslog-
level warn network syslog-level
warn security syslog-level warn
```

```
system syslog-level warn user
syslog-level warn user-debug syslog-
level warn wireless
mgmt-user admin 82c496d47485380deb0a01d41345d3f1
wlan access-rule default_wired_port_profile
index 1
rule any any match any any any permit
wlan access-rule wired-instant
index 2
rule masterip 0.0.0.0 match tcp 80 80 permit
rule masterip 0.0.0.0 match tcp 4343 4343 permit
rule any any match udp 67 68 permit
rule any any match udp 53 53 permit
wlan access-rule test
index 3
rule any any match any any any deny
wlan external-captive-portal
server localhost
port 80
url "/"
auth-text "Authenticated"
auto-whitelist-disable
https
blacklist-time 3600
auth-failure-blacklist-time 3600
ids classification
ids
wireless-containment none
airgroup
disable
airgroupservice airplay
disable
description AirPlay
airgroupservice airprint
disable
```



```
description AirPrint
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.94 show banner

Description

This command displays the current login banner of an AP.

Syntax

```
show banner
```

Usage Guidelines

Use this command to review the banner message that appears when you first log in to the CLI of the AP.

Example

The following output is displayed for the **show banner** command:

```
(AP)# show banner
```

```
#####welcome to login SCALANCE W#####
```

```
###please start to input admin and password#####
```

```
###Don't leak the password###
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.95 show blacklist-client

Description

This command shows the configuration details for blacklisting clients and lists the clients blacklisted by an AP.

Syntax

```
show blacklist-client [config]
```

Parameter	Description
config	Displays the parameters and values configured for manual or dynamic blacklisting of clients.

Usage Guidelines

Use this command to view information about the clients blacklisted by an AP.

Example

The following output is displayed for the **show blacklist-client** command:

```
Blacklisted Clients
-----
MAC Reason Timestamp Remaining time(sec) AP name
---
00:24:6c:ca:41:51 user-defined 14:46:18 Permanent -
```

The output of this command provides information on the MAC address of client that is blacklisted, the reason for blacklisting, timestamp, the associated AP name, and the duration until which the client is blacklisted.

The following output is displayed for the **show blacklist-client config** command:

```
Blacklist Time :3600
Auth Failure Blacklist Time :3600
Manually Blacklisted Clients
-----
MAC Time
---
00:24:6c:ca:41:51 14:46:18
Dynamically Blacklisted Clients
-----
MAC Reason Timestamp Remaining time(sec) AP name
```

```
-----
Dyn Blacklist Count :0
```

The output of this command provides the following information:

Parameter	Description
Blacklist Time	Indicates the duration in seconds since the blacklisting has been triggered due to an ACL rule.
auth-survivability cache-time- out	Indicates the duration in seconds after which the clients that exceed the maximum authentication failure threshold are blacklisted.
Manually Blacklisted clients	Displays the details of clients that are blacklisted manually.
Dynamically Blacklisted Clients	Displays the list of clients that dynamically blacklisted due to multiple authentication rules or an ACL rule trigger.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.96 show ble-config

Description

This command displays the BLE configuration details.

Syntax

```
show ble-config
```

Parameter	Description
ble-config	Displays the BLE configuration details.

Usage Guidelines

Use this command to view the BLE configuration.

Example

The following example shows the output of the **show ble-config** command:

```
(host)# show ble-config
BLE Configuration
-----
Item Value
```

Master IP 127.0.0.1

Authorization Token Not Configured

Endpoint URL Not Configured

BLE Ready No

Update Intvl (in sec) 300

BLE debug log Enabled

Operational Mode 0 (APB: 0)

Uplink Status 0 (APB: 0)

APB Connection Status 0

Last BLE Device Update Attempt 00:00:00:00:00:00

Last Update Sent Time No Update Sent

Command Information

Access Point Platform	Command Mode
All platforms	Privileged Exec mode

4.16.97 show calea config

Description

This command displays the details configured for CALEA server integration on an AP.

Syntax

```
show calea config
```

Usage Guidelines

Use this command to CALEA configuration details.

Example

The following example shows the output of the **show calea config** command:

```
(AP)# show calea config  
calea-ip :10.0.0.5  
encapsulation-type :gre  
gre-type :25944  
ip mtu : 150
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.98 show calea statistics

Description

This command displays the tunnel encapsulation statistics for an AP.

Syntax

```
show calea statistics
```

Usage Guidelines

Use this command to view the GRE encapsulation statistics for the APs with CALEA server integration feature enabled.

Example

The following example shows the output of the **show calea statistics** command:

```
(AP)# show calea statistics
```

```
Rt resolve fail : 0
```

```
Dst resolve fail:
```

```
0 Alloc failure : 0
```

```
Fragged packets : 0
```

```
Jumbo packets : 263
```

```
Total Tx fail : 0
```

```
Total Tx ok : 263
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.99 show captive-portal

Description

This command shows the external and internal captive portal parameters configured for a network profile.

Syntax

```
show captive-portal
```

Usage Guidelines

Use this command to view information about the contents displayed on the internal and external captive portal pages for guest users.

Example

The following output is displayed for the **show captive-portal** command:

```
:Captive Portal Configuration
Background Color:13421772
Banner Color :16750848
Decoded Texts :
Banner Text :Welcome to Guest Network
Use Policy :Please read terms and conditions before using Guest Network
Terms of Use :This network is not secure, and use is at your own risk
Internal Captive Portal Redirect URL:
Captive Portal Mode:Acknowledged
:External Captive Portal Configuration
Server:localhost
Port :80
URL :/
Authentication Text:Authenticated
External Captive Portal Redirect URL:
Server Fail Through:No
```

The output of this command provides the following information:

Parameter	Description
Background Color	Displays the color code configured for the internal captive portal splash page.
Banner Color	Displays the color code configured for the banner on the internal captive portal splash page.
Banner Text	Displays the banner text for the internal captive portal splash page.
decoded-texts	Displays decoded texts.
Terms of use	Displays the terms and conditions that the internal captive portal user must be aware of.
Use Policy	Displays usage policy text for the internal captive portal splash page.
Captive Portal Mode	Indicates if the authentication is successful and acknowledged.
Internal Captive Portal Redirect URL External Captive Portal Redirect URL	Displays the URL that the users are redirected to, after a successful authentication.
Server	Displays the external Captive port server.
URL	Displays the URL of the external captive portal splash page server.
Authentication Text	Indicates if the external captive portal user authentication is successful.
Port	Displays the port used for communicating with the external captive portal splash page server.
Server Fail Through	Indicates if the guest clients are allowed to access the Internet when the external captive portal server is not available.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.100 show captive-portal-domains

Description

This command displays the internal and external captive portal server domains.

Syntax

```
show captive-portal-domains
```

Usage Guidelines

Use this command to view information about the internal and external captive portal domains.

Example

The following output is displayed for the **show captive-portal-domains** command:

```
Internal Captive Portal Domain:
securelogin.arubanetworks.com
External Captive Portal Domains:
localhost
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.101 show cellular

Description

These commands display the status and cellular configuration of the AP.

Syntax

```
show cellular {config | status}
```

Parameter	Description
show cellular config	Displays the cellular configuration details available for the AP.
show cellular status	Displays the status of the cellular configuration for the AP.

Usage Guidelines

Use these commands to view the details of the cellular configuration and status.

Example

The following example shows the partial output of the **show cellular config** command:

```
No Comm USB Plugged in

Cellular configuration
-----
Type                Value
----                -
4g-usb-type
usb-type
usb-dev
usb-tty
usb-init
usb-auth-type
usb-user
usb-passwd
usb-dial
usb-modeswitch
modem-isp
modem-country
Supported Modem Types
-----
```

Modem Type	Driver Used
-----	-----
option	option
acm	acm
airprime	airprime
hso	hso
sierra-evdo	sierra-evdo
sierra-gsm	sierra-gsm
pantech-uml290	pantech-3g
novatal-mc551	ether-3g
sierra-net	sierra-net
franklin-u770	rndis-u770
rndis-l800	rndis-l800
huawei-cdc	huawei-cdc
novatel-u620	novatel-u620
pantech-uml295	rndis-uml295
sierra-gobi	sierra-gobi

Supported Country list

Country list

France

NZ

Israel

HK

Sweden

Spain

China

UK

Norway

Germany

Croatia

Saudi-Arabia

US

Japan

Aus
Canada
India

The output of this command includes the following parameters:

Parameters	Description
type	Displays the type of cellular configuration. For example, 3G or 4G modems.
value	Displays the values associated with the cellular configuration parameters.
Supported Country list	Lists the countries that support cellular deployment.
ISP List	Lists the service providers that support cellular connections.

The following output is displayed for **show cellular status** command:

Cellular Status

card	detect	link	SIM PIN
----	-----	----	-----
Present	detect-ok	Linkup	N/A

USB Modem Information

Parameter	Value
-----	-----
Manufacturer	Linux
Product	OHCI Host Controller
Serial Number	0000:00:04.0
Driver	hub
Vendor ID	1d6b
Product ID	0001
Manufacturer	
Product	USB2.0 Hub
Serial Number	
Driver	hub
Vendor ID	05e3
Product ID	0608
Manufacturer	ZTE, Incorporated
Product	ZTE Wireless Ethernet Adapter
Serial Number	MF8310ZTED000000
Driver	option
Vendor ID	19d2
Product ID	1405
Model	MF831

```

Supported Network Services      LTE WCDMA GSM
Firmware Version               BD_MF831HDV1.0.0B02
ESN Number                     862828022611876

```

```

Cellular Link Status
-----
Parameter                      Value
-----
USB Modem State                 Active
USB Uplink RSSI (in dBm)       -69
Current Network Service         4G-LTE
plugin counter                  0
plugout counter                 0

```

The output of this command includes the following parameters:

Parameters	Description
card	Indicates if the cellular cards are currently configured on the AP.
detect	Indicates if cellular modems are detected on the AP.
Link	Indicates the current status of cellular link.
SIM PIN	Displays the SIM PIN of the model.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.102 show cert all

Description

This command displays the details about the certificates uploaded on an AP.

Syntax

```
show cert all
```

Usage Guidelines

Use this command to view information about the certificates uploaded to an AP.

Example

The output of this command displays details such as the version, serial number, subject, issue date, expiry date, type of encryption, and RSA key information for the certificates uploaded to the AP.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.103 show clarity config

Description

This command displays the status of the clarity configuration parameters on the AP.

Syntax

```
show clarity config
```

Usage Guidelines

Use this command to view the status of the inline monitoring statistics configured on the AP.

Example

The following example shows the output of **show clarity config** command:

```
Clarity config
-----
Parameter          Value
-----
inline Sta stats    enabled
inline Auth stats   enabled
inline DHCP stats   enabled
inline DNS stats    enabled
```

The output of this command provides the following information:

Parameter	Description
inline Sta stats	Indicates the status of the station passive monitor statistics.
inline Auth stats	Indicates the status of the authentication statistics.
inline DHCP stats	Indicates the status of the DHCP statistics.
inline DNS stats	Indicates the status of the DNS statistics.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.104 show clarity history

Description

This command displays the history of the clarity configuration parameters

Syntax

```
show clarity history {auth|dhcp|dns}
```

Parameter	Description
auth	Displays the history of the authentication statistics generated by inline monitoring.
dhcp	Displays the history of the DHCP related statistics generated by inline monitoring.
dns	Displays the history of the DNS statistics generated by inline monitoring.

Usage Guidelines

Use this command to view the history of the clarity configuration parameters.

Example

The following example shows the output of **show clarity history auth** command:

```
Clarity Auth Trace Buffer
```

```
-----
```

```
Jan 1 15:47:33 DOT1X_EVENT 00:db:df:0a:41:6e ac:a3:1e:c9:32:31 192.168.0.118 3 4
AUTHSERVER TIMEOUT
Jan 1 15:47:59 DOT1X_EVENT 00:db:df: 0a:41:6e ac:a3:1e:c9:32:31 192.168.0.118 3 6
AUTHSERVER TIMEOUT
Jan 1 16:05:03 DOT1X_EVENT 00:db:df:0a:41:6e ac:a3:1e:c9:32:31 192.168.0.118 3 6
AUTHSERVER TIMEOUT
Jun 21 09:25:27 00:db:df:0a:41:6e ac:a3:1e:c9:32:21 192.168.0.118 3 13
DOT1X_EVENT
AUTHSERVER TIMEOUT
Jun 21 09:25:48 00:db:df:0a:41:6e ac:a3:1e:c9:32:31 192.168.0.118 3 4
DOT1X_EVENT
AUTHSERVER TIMEOUT
Jun 21 09:26:49 00:db:df:0a:41:6e ac:a3:1e:c9:32:31 192.168.0.118 3 5
DOT1X_EVENT
AUTHSERVER TIMEOUT
```

The following example shows the output of **show clarity history dns** command:

```
DNS Server Stats Table ---- In Transaction
```

```
-----
```

```

Server Ip Max Delay Min Delay Avg Delay RCODE0 RCODE1 RCODE2 RCODE3 RCODE4 RCODE5
Last Query Last Resp Samples Anomaly Cnt Anomaly Ip RCODE History

```

```

-----
-----

```

```

10.65.6.33 7758 7758 7758 1 0 0 0 0 0
107870 4799346 1 1 10.65.66.110 1 0 0 0 0 0

```

Total dns servers in transaction: 1

DNS Server Stats Table ---- In Pending Send

```

-----

```

```

Server Ip Max Delay Min Delay Avg Delay RCODE0 RCODE1 RCODE2 RCODE3 RCODE4 RCODE5
Last Query Last Resp Samples Anomaly Cnt Anomaly Ip RCODE History

```

```

-----
-----

```

Total pending send: 0

The following example shows the output of **show clarity history dhcp** command:

DHCP Server Stats Table ---- In Transaction

```

-----

```

Client Mac Ip	Sequenc e	Timestam p	Time Diff1	Time Diff2	Time Diff3	Time Diff4	Serve r
----- ---	----- -	----- -	----- -	----- -	----- -	----- -	----- -
88:32:9b:a5:59: 0c 0.0.0.0	1	552762	0	0	0	0	

Total dhcp clients in transaction: 1

DHCP Server Stats Table ---- In Pending Send

----- ----							
Client Mac	Sequence	Timestamp	Time Diff1	Time Diff2	Time Diff3	Time Diff4	Server Ip
-----	-----	-----	-----	-----	-----	-----	-----
Total pending send: 0							

The output of this command provides the following information:

Parameter	Description
inline Sta stats	Indicates the status of the station passive monitor statistics.
inline Auth stats	Indicates the status of the authentication statistics.
inline DHCP stats	Indicates the status of the DHCP statistics.
inline DNS stats	Indicates the status of the DNS statistics.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.105 show clients

Description

This command displays details about the AP clients.

Syntax

```
show clients [<diff>| accounting <mac>| checksum <mac>| debug| roaming| status <mac>|
wired [debug]]
```

Parameter	Description
<diff>	Displays difference summary of the client table since the specified interval.
accounting <mac>	Displays accounting information for a specific client MAC address.
checksum <mac>	Filters checksum errors for a specific client MAC address.
debug	Displays the AP client configuration details, which can be used for debugging purpose.
roaming	Displays information about roaming clients.
status <mac>	Displays the current status for a client based on the specified MAC address.
wired [debug]	Displays the list of clients connected to wired or Ethernet interface. You can also use the optional debug parameter to view the end-to-end information of the wired clients for debugging purpose.

Usage Guidelines

Use this command to view information about the AP clients. The AP client table provides basic information about the clients. For detailed information of each client, use the required parameter and specify the MAC address of the client.

Example

show clients and show clients wired

The following output is displayed for the **show clients** command:

```
Client List
-----

Name IP Address MAC Address OS ESSID Access Point
-----
132-15-Auto-PC-Change 10.17.133.241 08:ed:b9:e1:51:7b rev_ipv6 ac:a3:1e:cd:46:94

Channel Type Role IPv6 Address Signal Speed (mbps)
-----
36+ AN rev_ipv6 2001:470:36:5c3:ffff:ffff:ffff:64 0 (poor) 0 (poor)
```

```
Number of Clients 1
```

```
Info timestamp :605085
```

A similar output is displayed for the **show clients wired** command.

The client list in the command output for both wireless and wired clients provides the following information:

Column	Description
Name	Displays the name of the client
IP address	Displays the IP address of the client.
MAC address	Displays the MAC address of the client.
OS	Indicates the OS running on the client system.
Network	Indicates the SSID and network to which the client is connected.
Access Point	Indicates the IP address of the Access Point to which the client is connected.
Channel	Indicates the channel assigned to the client.
Type	Indicates the type of the Wi-Fi client device.
Role	Indicates the role assigned to the client.
Signal	Indicates the current signal strength of the client, as detected by the AP.
Speed (Mbps)	Indicates the current speed at which data is transmitted. When the client is associated with an AP, it constantly negotiates the speed of data transfer. A value of 0 means that the AP has not received any packets from the client for some time.

show clients <diff>

The **show clients <diff>** command displays the change in the clients table data that occurred during the specified interval. For example, if the value specified for <diff> parameter is 10 seconds, the client table displays the changes such as signal strength or speed that occurred since the last 10 seconds.

show accounting <mac>

The **show accounting <mac>** command displays the accounting information such as status and session ID for a specific client MAC address.

show checksum <mac>

The following output is displayed for the **show checksum <mac>** command:

```
Mac Address:08:ed:b9:e1:51:7d Basic info
-----
mac
---
08 ed b9 e1 51 7d bssid
```

The **show checksum <mac>** command displays the checksum errors associated with the AP clients.

The **show clients debug** command displays detailed information about the clients MAC and IP addresses, client role, authentication aging time, and accounting intervals, ESSID and BSSID details, VLAN and multicast groups to which the client is associated, and DHCP roles and options associated with the client. The **show clients wired debug** command displays a similar output.

Client List

Name	IP Address	MAC Address	OS ESSID	Access Point
-----	-----	-----	--	-----
132-15-Auto-PC-Change	10.17.133.241	08:ed:b9:e1:51:7b	rev_ipv6	ac:a3:1e:cd:46:94
ChannelType Role	IPv6 Address		Signal	Speed (mbps) Reauth Age

```

36+      AN      rev_ip6 2001:470:36:5c3:ffff:ffff:ffff:0 (poor)  0 (poor)      0
64

```

```

Reauth Interval Reauth ESSID Auth Type Authenticated DEL Age Vlan ESSID
-----

```

```

0 N/A no no 9 1 (SSID) ()

```

```

Private role      Accounting Session      BSSID      Idle Timeout csum mcast groups
info
-----
0 (0-0)          132-15-Auto-PC-Change ac:a3:1e:54:69:50 1000      0000 (0)

```

```

Acct Interval Class Attribute Dhcp-Opt Vlan Dhcp-Opt role Intercept Offline FB Token
-----
0          null          0, (null)      , 0, 0-0      no          no          null

```

```

FB RxBytes FB TxBytes SLAAC IP Address Link Local IP Address
-----

```

```

2001:470:36:5c3:406b:7c14:9d1d:142d fe80::9198:30aa:5217:d22a

```

```

DHCP Status DHCP v6 Status
-----

```

```

Completed Soliciting

```

show clients status

The **show clients status <mac>** command displays the status of an AP client.

show clients roaming

The **show clients roaming** command displays the MAC address and IP address details of AP from which the client has roamed and IP address of the AP to which the client is roamed.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.106 show clock

Description

This command displays the system clock, current timezone, and the daylight saving time configured on an AP

Syntax

```
show clock [summer-time| timezone all]
```

Parameter	Description
summer-time	Displays the summer (daylight saving) time settings.
timezone all	Displays the configured timezone for the AP.

Usage Guidelines

Use this command to display the system clock. Include the optional summer-time parameter to display configured daylight savings time settings. The timezone parameter shows the current timezone, with its time offset from Greenwich Mean Time.

Example

show clock timezone all

The following example shows the partial output of **show clock timezone all** command:

```
Support Timezones
-----

Country Timezone DST Name DST Recurring
-----
International-Date-Line-West UTC-11
Coordinated-Universal-Time-11 UTC-11
Hawaii UTC-10
Alaska UTC-09 AKDT second sunday march 02:00 first sunday november 02:00
Baja-California UTC-08 MDT first sunday april 02:00 last sunday october 02:00
Pacific-Time UTC-08 PDT second sunday march 02:00 first sunday november 02:00 Arizona
UTC-07
Chihuahua UTC-07 MDT first sunday april 02:00 last sunday october 02:00
La-Paz UTC-07 MDT first sunday april 02:00 last sunday october 02:00
Mazatlan UTC-07 MDT first sunday april 02:00 last sunday october 02:00
```

```
Indiana(East) UTC-05 EDT second sunday march 02:00 first sunday november 02:00
```

Parameter	Description
Start Month	Enter the month when the time change begins.
Start Hour	Enter the hour when the time change begins.
End Week	Enter the week number when the time change ends.
End Day	Enter the weekday when the time change ends.
End Month	Enter the month when the time change ends.
End Hour	Enter the hour when the time change ends.
End Hour	Enter the hour when the time change ends.

Related Commands

Command	Description	Mode
clock timezone	Configures timezones for the AP.	Config mode
clock summer-time	Configures the summer-time for the daylight savings time settings.	Config mode

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.107 show cluster-security

Description

This command displays cluster security configuration details for all the APs in the cluster.

Syntax

```
show cluster-security [connections] [peers] [stats]
```

Parameter	Description
cluster-security	Displays the status of the DTLS configuration and DTLS state, whether enabled or disabled.
connections	Displays the total number of connections monitored in the swarm by cluster security dtls.
peers	Displays the details and status of the peers monitored by cluster security dtls.
stats	Displays the cluster security dtls monitoring stats for the cluster.

Usage Guidelines

Use this command to view information about the cluster security configuration and monitoring statistics for the APs in the cluster.

Example

The following output is displayed for the **show cluster-security** command:

```
Cluster Security Profile
-----
Parameter                                     Value
-----
DTLS config                                  Disabled
DTLS state                                  Disabled Low assurance devices
Disallow Reboot required No
```

The following output is displayed for the **show cluster-security connections** command:

```
-----
IDX :Connection Index
Flags :I-Initiator, R-Responder

Inactivity :Time remaining till inactivity      :Time remaining till Re-negotiation
timeout Re-Neg
-----

Cluster Security DTLS Connections
-----

Local IDX Remote IDX State Flags Local Address  Peer  Rx bytes
bytes Age Inactivity Re-Neg Address Address Tx
-----
-----

19bb00b0 7df90024 connected R 10.17.142.77[4434] 10.17.142.673511
138016 05h:04m:32s 01m:55s 01h:54m:37s .74[4434]
19bb00b1 4db20024 connected R 10.17.142.77[4434] 10.17.142.394516
80788 02h:58m:17s 01m:53s 04h:21m:06s .73[4434]
19bb00b2 1f6e0024 connected R 10.17.142.77[4434] 10.17.142.354332
74632 02h:44m:18s 01m:57s 03h:55m:52s .76[4434]
19bb00b3 7d6f0024 connected I 10.17.142.77[4434] 10.17.142.269882
57304 02h:09m:39s 01m:57s 04h:33m:12s .71[4434]
19bb00b4 57fd0024 connected R 10.17.142.77[4434] 10.17.142.90933
18544 40m:59s 01m:52s 05h:56m:43s .75[4434]

Total connections count:5
```

The following output is displayed for the **show cluster-security peers** command:

```
-----
IDX                                     :Connection Index
-----

Cluster Security DTLS Peers
-----

Peer Address                           State      Local IDX
-----
10.17.142.76[4434] active      19bb00b2
```

```

10.17.142.73[4434]          active    19bb00b1
10.17.142.75[4434]          active    19bb00b4
10.17.142.74[4434]          active    19bb00b0
10.17.142.71[4434]          active    19bb00b3

```

Total peers count:5

The following output is displayed for the **show cluster-security stats** command:

Cluster Security Statistics

```

-----
Statistic Name                      Counts
-----
No resource                         0
Dropped messages                    0
New connection alloc success/fail/free 180/0/175180/0
New Connection lookup fail         0
Connection establishment success/fail 83
Connection init attempts            83
Connection renegotiations attempts  83
Connection init request fail         0
Connection response attempts        97
Connection disallow, low assurance pki cert 0
New peers alloc success/fail/freed  5/0/0
Peer init response fail              0
Peer connection slots full           0
Signing module not init/async fail   3/0
Entropy not available                0
Retrieve date-time fail               0
Inits retried                        3
Connection timeouts                  0
Connection timeouts (inactivity)     0
Connection responses timeouts        0
Handshake fail after retransmit       0
Handshake fail after signing in retries 0
Signing module op attempts/success/fail/busy 180/180/01221386/0
Socket msgs rx success/fail         0/0
Discovery msg tx success/fail         0
Discovery msg rx (allowed)            0
Msg rx on old ports (dropped)         0
Unsecure msg tx success/fail         0/0
Unsecure msg rx allow/drop           586369/0
Loopback msg sent to AP's uplink IP   0

```

The following output is displayed for the **show cluster-security connections stats** command:

```
Cluster Security Connections Statistics for: Local Idx =
19bb00b0
-----
Statistic Name                               Counts
-----
IO Send success/fail                         1835/0
IO Receive success/fail                      2583/0
IO Receive peek fail                          0
Peer connection mismatch                      1

Handshake success after signing in retries    0
Signing still in progress (dropped)           0
Negotiate msg rx success/fail                 5/0
Peer init request tx/response rx              0/0
Signing module op attempts/success/fail       01.01.200
Signing in module busy                        0
Verify peer mac address fail                   0
Disallow low assurance pki cert                0
Verify peer certificate fail                   0
Retransmitted handshakes                      0
SSL msg write fail (out of resources)          0
SSL msg write fail (error)                    0
SSL msg read fail (out of resources)           0
SSL msg read fail (error)                     0
Total DTLS msg tx/rx                          1825/2575
Cluster Security Connections Statistics for: Local Idx =
19bb00b1
-----
Statistic Name                               Counts
-----
IO Send success/fail                         1082/0
IO Receive success/fail                      1522/0
IO Receive peek fail                          0
Peer connection mismatch                      0
Handshake success after signing in retries    0
Signing still in progress (dropped)           0
Negotiate msg rx success/fail                 5/0
Peer init request tx/response rx              0/0      1/1/0      0
Signing module op in module                   0
attempts/busy                                 0
success/fail                                  0
Verify peer mac address fail                   0
Disallow low assurance pki cert                0
```

4.16 S

```

Verify peer certificate fail                                0
Retransmitted handshakes                                  0
SSL msg write fail (out of resources)                      0
SSL msg write fail (error)                                0
SSL msg read fail (out of resources)                       0
SSL msg read fail (error)                                  0
Total DTLS msg tx/rx                                     1072/1514
Cluster Security Connections Statistics for: Local Idx =
19bb00b2
-----
Statistic Name                                           Counts
-----
IO Send success/fail                                     1001/0
IO Receive success/fail                                   1424/0
IO Receive peek fail                                      0
Peer connection mismatch                                  0
Handshake success after signing in retries               0
Signing still in progress (dropped)                      0
Negotiate msg rx success/fail                            5/0
Peer init request tx/response rx                         0/0      1/1/0      0
                                           Signing Signing
                                           module op in module
                                           attempts/busy
                                           success/f
                                           ail
Verify peer mac address fail                              0
Verify peer certificate fail                              0
Retransmitted handshakes                                  0
SSL msg write fail (out of resources)                     0
SSL msg write fail (error)                                0
SSL msg read fail (out of resources)                      0
SSL msg read fail (error)                                  0
Total DTLS msg tx/rx                                     991/1416
Cluster Security Connections Statistics for: Local Idx =
19bb00b3
-----
Statistic Name                                           Counts
-----
IO Send success/fail                                     772/0
IO Receive success/fail                                   1086/0
IO Receive peek fail                                      0
Peer connection mismatch                                  0
Handshake success after signing in retries               0
Signing still in progress (dropped)                      0
Negotiate msg rx success/fail                            5/0

```

```

Peer init request tx/response rx          1/1      1/1/0    0
                                           Signing Signing
                                           module op in module
                                           attempts/busy
                                           success/f
                                           ail
Verify peer mac address fail              0
Verify peer certificate fail              0
Retransmitted handshakes                 0
SSL msg write fail (out of resources)     0
SSL msg write fail (error)               0
SSL msg read fail (out of resources)      0
SSL msg read fail (error)               0
Total DTLS msg tx/rx                     763/1077
Cluster Security Connections Statistics for: Local Idx =
19bb00b4
-----
Statistic Name                           Counts
-----
IO Send success/fail                    263/0
IO Receive success/fail                 384/0
IO Receive peek fail                   0
Peer connection mismatch                0
Handshake success after signing in retries 0
Signing still in progress (dropped)      0
Negotiate msg rx success/fail           6/0
Peer init request tx/response rx          0/0      1/1/0    0
                                           Signing Signing
                                           module op in module
                                           attempts/busy
                                           success/f
                                           ail
Verify peer mac address fail              0
Verify peer certificate fail              0
Retransmitted handshakes                 0
SSL msg write fail (out of resources)     0
SSL msg write fail (error)               0
SSL msg read fail (out of resources)      0
SSL msg read fail (error)               0
Total DTLS msg tx/rx                     253/376 18:64:72:cf:ec:9a# show
                                           cluster-security peers stats
Cluster Security Peers' Statistics for: Remote Address =
10.17.142.76
-----
Statistic Name                           Counts
-----
Peer collisions occurred/resolved        0/0
Peer connections active/connected/recvd 36/16/0/215
data/close notify/shutdown              0/0 Peer
                                           connectio
                                           ns being
                                           renegotia
                                           ted
Cluster Security Peers' Statistics for: Remote Address =
10.17.142.73

```

4.16 S

```

-----
Statistic Name                               Counts
-----
Peer collisions occurred/resolved           0/0

Peer connections active/connected/recvd    36/21/0/120
data/close notify/shutdown                 5/0 Peer
connections being renegotiated

Cluster Security Peers' Statistics for: Remote Address =
10.17.142.75
-----
Statistic Name                               Counts
-----
Peer collisions occurred/resolved           0/0

Peer connections active/connected/recvd    36/17/0/19/0 Peer 16
data/close notify/shutdown                 connections being
renegotiated

Cluster Security Peers' Statistics for: Remote Address =
10.17.142.74
-----
Statistic Name                               Counts
-----
Peer collisions occurred/resolved           0/0

Peer connections active/connected/recvd    36/18/0/117
data/close notify/shutdown                 8/0 Peer
connections being renegotiated

Cluster Security Peers' Statistics for: Remote Address =
10.17.142.71
-----
Statistic Name                               Counts
-----
Peer collisions occurred/resolved           0/0

Peer connections active/connected/recvd    36/16/0/20/0 Peer connections being
data/close notify/shutdown                 renegotiated

```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.108 show configuration

Description

This command displays the configuration saved on the AP.

Syntax

```
show configuration
```

Usage Guidelines

Use this command to view the entire configuration saved on the AP, including all wireless and wired profiles, uplink configuration, ARM settings, radio profiles, ACLs, and interface settings.

Example

The following example displays the **show configuration** command output:

```
version 6.2.1.0-3.3.0.0 virtual-controller-country IN
virtual-controller-key e10e371601fae77a3ba78e44585d06c407f0a3e9a83835c1c4
name scalance-CB:D4:20
terminal-access
clock timezone none 00 00
rf-band all
allow-new-aps
allowed-ap d8:c7:c8:cb:d4:20
allowed-ap d8:c7:c8:cb:d3:98
allowed-ap d8:c7:c8:cb:d3:b4
routing-profile
route 192.0.2.0 255.0.0.0 192.0.2.1
arm
wide-bands 5ghz
a-channels 56,60,64,149,153,157,161,165,36+,44+,149+,157+
g-channels 11,1+,7+
min-tx-power 18
max-tx-power 127
band-steering-mode prefer-5ghz
air-time-fairness-mode fair-access
client-aware
scanning
syslog-level debug ap-debug
syslog-level debug network syslog-
level debug security syslog-level
debug system syslog-level debug
```

```
user
syslog-level debug user-debug syslog-
level debug wireless
mgmt-user admin 16e8d1cbd13f13a18cdladb8b0d23022
wlan access-rule default_wired_port_profile
rule any any match any any any permit
wlan access-rule wired-instant
rule 192.0.2.1 255.255.255.255 match tcp 80 80 permit
rule 192.0.2.2 255.255.255.255 match tcp 4343 4343 permit
rule any any match udp 67 68 permit
rule any any match udp 53 53 permit
wlan access-rule rule-1
rule any any match any any any permit
wlan access-rule rule-local-nw
rule any any match any any any permit h
otspot anqp-nai-realm-profile "test" enable
nai-ralm-name ""
nai-realm-eap-method eap-ttls
nai-realm-auth-id-1 non-eap-inner-auth
nai-realm-auth-value-1 mschapv2
nai-realm-auth-id-2 credential
nai-realm-auth-value-2 uname-password
nai-realm-encoding utf8
no nai-home-realm
hotspot anqp-nwk-auth-profile "test" enable
nwk-auth-type http-redirect
url "http:///"
hotspot anqp-3gpp-profile "test"
enable
3gpp-plmn1 ""
3gpp-plmn2 ""
3gpp-plmn3 ""
3gpp-plmn4 ""
3gpp-plmn5 ""
3gpp-plmn6 ""
```



```
hotspot anqp-ip-addr-avail-profile "test"
enable
ipv4-addr-avail
no ipv6-addr-avail
hotspot h2qp-wan-metrics-profile "test"
enable
wan-metrics-link-status (null)
no symm-link
no at-capacity
uplink-speed 0
downlink-speed 0
uplink-load 0
downlink-load 0
load-duration 0
hotspot hs-profile "test"
enable
no comeback-mode
no asra
no internet
no pame-bi
no group-frame-block
no p2p-dev-mgmt
no p2p-cross-connect
query-response-length-limit 127
access-network-type private venue-
group business
venue-type research-and-dev-facility
roam-cons-len-1 0
roam-cons-oi-1 ""
roam-cons-len-2 0
roam-cons-oi-2 ""
roam-cons-len-3 0
roam-cons-oi-3 ""
wlan ssid-profile profile-1
enable
```

```
index 0

type employee

ssid profile-1

wpa-passphrase c52acfeb3e59ef254a6d14fe2ad565382e46f7eecd33af3

opmode wpa2-psk-aes

max-authentication-failures 0

vlan 333

rf-band all

captive-portal disable

dtim-period 1

inactivity-timeout 1000

broadcast-filter none

external-server bandwidth-
limit 65535

dmo-channel-utilization-threshold 90

local-probe-req-thresh 0

max-clients-threshold 64

wlan ssid-profile profile-local-nw

enable

index 1

type employee

ssid profile-local-nw

wpa-passphrase dd4da86c25c31bf83417024a338982ed4f01e1751e7a4502

opmode wpa2-psk-aes

max-authentication-failures 0

vlan 2

auth-server InternalServer

rf-band all

captive-portal disable

dtim-period 1

inactivity-timeout 1000 broadcast-
filter none

dmo-channel-utilization-threshold 90

local-probe-req-thresh 0

max-clients-threshold 64
```

```
auth-survivability cache-time-out 24

wlan external-captive-portal

server localhost

port 80

url "/"

auth-text "Authenticated" auto-

whitelist-disable blacklist-time

3600

auth-failure-blacklist-time 3600

ids classification

ids

wireless-containment none

ip dhcp something-vlan10

server-type Centralized,L2

server-vlan 333

ip dhcp local-vw-vlan2

server-type Local server-

vlan 2

subnet 192.0.2.5

subnet-mask 255.255.255.0

wired-port-profile wired-instant

switchport-mode access

allowed-vlan all

native-vlan guest

no shutdown

access-rule-name wired-instant

speed auto

duplex auto

no poe

type guest

captive-portal disable

no dot1x

wired-port-profile default_wired_port_profile switchport-

mode trunk

allowed-vlan all
```

```
native-vlan 1

shutdown

access-rule-name default_wired_port_profile

speed auto

duplex full

no poe

type employee

captive-portal disable

no dot1x

enet0-port-profile default_wired_port_profile

uplink

preemption

enforce none

failover-internet-pkt-lost-cnt 10

failover-internet-pkt-send-freq 30

failover-vpn-timeout 180

airgroup

enable

airgroupservice airplay

disable

description AirPlay

airgroupservice airprint

disable

description AirPrint
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.109 show config-status

Description

This command displays the details about the configuration status of an AP.

Syntax

```
show config-status
```

Usage Guidelines

Use this command to view the current configuration status of the AP in flash memory.

Example

The following example shows the output of the **show config-status** command:

```
Config Status
-----
Config Name Compressed
-----
Primary No
Backup No
```

The backup configuration is used when the primary configuration is lost. And the **Compressed** option indicates that the configuration file has been compressed if the file size is large.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.110 show console-settings

Description

This command displays the details about the console settings of an AP.

Syntax

```
show console-settings
```

Usage Guidelines

Use this command to view if the access to AP console is enabled or disabled.

Example

The following example shows the output of the **show console-settings** command:

```
(AP)# show console-settings
Console Setting
-----
Status
-----
enabled
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.111 show country-codes

Description

Use this command to view a list of the supported country codes.

Syntax

```
show country-codes
```

Usage Guidelines

This command shows the list of supported country codes for the AP.

Example

The following example shows a partial output of the **show country-codes** command .

```
CA:Canada
DE:Germany
NL:Netherlands
IT:Italy
PT:Portugal
LU:Luxembourg
NO:Norway
SE:Sweden
FI:Finland
DK:Denmark
CH:Switzerland
CZ:Czech Republic
BE:Belgium
ES:Spain
GB:United Kingdom
KR:Republic of Korea (South Korea)
CN:China
FR:France
HK:Hong Kong
SG:Singapore
TW:Taiwan
MY:Malaysia
```

BR:Brazil
SA:Saudi Arabia
LB:Lebanon
AE:United Arab Emirates
ZA:South Africa
AR:Argentina
AU:Australia
AT:Austria
BO:Bolivia
CL:Chile
GR:Greece
HU:Hungary
IS:Iceland
IN:India
IE:Ireland
KW:Kuwait
LV:Latvia
LI:Liechtenstein
LT:Lithuania
MX:Mexico
MA:Morocco
NZ:New Zealand
PL:Poland
PR:Puerto Rico
SK:Slovak Republic
SI:Slovenia
TH:Thailand
UY:Uruguay
PA:Panama
RU:Russia
EG:Egypt
TT:Trinidad and Tobago
TR:Turkey
CR:Costa Rica
EC:Ecuador

HN:Honduras
KE:Kenya
UA:Ukraine
VN:Vietnam
BG:Bulgaria
CY:Cyprus
EE:Estonia
MT:Malta
MU:Mauritius
RO:Romania
CS:Serbia and Montenegro
ID:Indonesia
PE:Peru
VE:Venezuela
JM:Jamaica
BH:Bahrain
OM:Oman
JO:Jordan
BM:Bermuda
CO:Colombia
DO:Dominican Republic
GT:Guatemala
PH:Philippines
LK:Sri Lanka
SV:El Salvador
TN:Tunisia
MO:Macau
PK:Islamic Republic of Pakistan
QA:Qatar
DZ:Algeria
NG:Nigeria
HR:Croatia
GH:Ghana
BA:Bosnia and Herzegovina
MK:Macedonia

MI:Maritime Offshore

MB:Maritime Forward Operating Base

KZ:Kazakhstan

TD:Chad

ML:Mali

The following output of the **show country-codes** command displays the country codes of the US and its territories:

US:United States

PR:Puerto Rico

GU:Guam MH:Marshall Islands

FM:Federated States of Micronesia

MP:Northern Mariana Islands

VI:US Virgin Islands

AS:American Samoa

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.112 show cpcert

Description

This command displays the details of the captive portal server certificate used by the AP for guest authentication.

Syntax

```
show cpcert
```

Usage Guidelines

Use this command to view information about the captive portal server certificate uploaded on an AP.

Example

The output of this command describes details such as the version, serial number, subject, issue date, expiry date, type of encryption, and RSA key information for the captive portal certificates uploaded to the AP.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.113 show cpu

Description

This command displays the CPU details.

Syntax

```
show cpu [details]
```

Parameter	Description
[details]	Include this optional parameter at the request of technical support to display additional CPU troubleshooting statistics.

Usage Guidelines

Use this command to view CPU load for application and system processes.

Example

The following example shows the output of **show cpu** command:

```
user 0% nice 8% system 1% idle 89% io 0% irq 0% softirq 2%
```

The following example shows the output of **show cpu details** command:

```
Mem: 66488K used, 59668K free, 0K shrd, 0K buff, 22540K cached

Load average: 0.12 0.09 0.09 (Status: S=sleeping R=running, W=waiting)

PID USER STATUS RSS PPID %CPU %MEM COMMAND
1434 root R N 5540 1377 8.3 4.3 sapd
13137 root R < 356 12694 2.3 0.2 top
1430 root R < 7256 1377 0.0 5.7 cli
12694 root S < 2880 12685 0.0 2.2 cli

1682 root S < 2392 1377 0.0 1.8 radiusd-term
1699 root S < 2384 1377 0.0 1.8 radiusd
1442 root S < 2092 1377 0.0 1.6 snmpd
1436 root S < 1804 1377 0.0 1.4 stm
1449 root S < 1472 1377 0.0 1.1 meshd
1413 root R N 1408 1377 0.0 1.1 awc
1448 root S < 1332 1377 0.0 1.0 lldpd
1445 root S < 1164 1377 0.0 0.9 mdns

1429 root S 2508 1 0.0 1.9 cli
1259 root S 948 1 0.0 0.7 tinyproxy
1377 root S < 844 1 0.0 0.6 nanny

1281 root S < 748 1 0.0 0.5 mini httpd
1284 root S < 740 1 0.0 0.5 mini httpd
1278 root S < 728 1 0.0 0.5 mini httpd

1450 root S < 796 1377 0.0 0.6 hostapd
1382 root S < 688 1377 0.0 0.5 msgHandler
1451 root S < 624 1377 0.0 0.4 wpa_supplicant
```

The output of this command shows the percentage of CPU utilization

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.114 show datapath

Description

This command shows the system statistics for your AP.

Syntax

```
show datapath {acl <ID>|acl-all|acl-allocation|acl-rule <rule>|acl-rule-
detail<acl>|bridge|bwm-table|counters|device <statistics>|https-blocked-ip-cache|ipv6
{session|user}|dmo-session|dmo-station <mac>
|dns-id-map|mcast|nat-pool <ID>|route|sbr|session[ucc|dpi
<verbose>]|statistics|user|vlan|vlan-mcast[vlan-ID]|vlan-port-mapping}
```

Parameter	Description
acl <ID>	Displays datapath statistics associated with a specified ACL.
acl-all	Displays datapath statistics associated with all ACLs.
acl-allocation	Displays ACL table allocation details.
acl-rule <rule>	Displays the name of the ACL.
acl-rule-detail <acl>	Displays the ACL rule details.
bridge	Shows bridge table entry statistics including MAC address, VLAN, assigned VLAN, Destination and flag information for anAP.
bwm-table	Displays the configured bandwidth contracts and the allocated bandwidth contracts.
counters	Displays various counters maintained in the datapath. This parameter is useful in debugging any datapath issue.
device <statistics>	Displays various datapath counters for packets that are received from and sent to the devices.
https-blocked-ip-cache	Displays cached entries for the HTTPS error page ACL in datapath.
ipv6 session	Displays datapath for IPv6 session table.
ipv6 user	Displays datapath statistics for IPv6 users.
dmo-session	Displays details of a DMO session.
dmo-station <mac>	Displays details of a DMO station.
dns-id-map	Displays IP address of the domain name configured in a domain-based ACL.
mcast	Displays multicast table statistics for the AP.
nat-pool <ID>	Displays the contents of the datapath NAT entries table. It displays NAT pools as configured in the datapath. Statistics include pool, SITP start, SIP end and DIP.
route	Displays datapath route table statistics.
sbr	Displays the destination servers that are reachable through a particular IP address.
session {ucc dpi<verbose>}	Displays datapath session statistics.
statistics	Displays datapath station association table statistics.

Parameter	Description
user	Displays datapath user statistics such as current entries, pending deletes, high water mark, maximum entries, total entries, allocation failures, invalid users and maximum link length.
vlan	Displays VLAN table information such as VLAN memberships inside the datapath including L2 tunnels which tunnel L2 traffic.
vlan-mcast	Displays the multicast table statistics for the AP.
vlan-port-mapping	Displays the user VLAN details for the AP.
Packets	Displays the packet count on the destination interface.
Bytes	Displays the bytes on the destination interface.
MTU	Displays the MTU values for an active interface.

Usage Guidelines

Use the show **datapath** command to display various datapath statistics for debugging purposes

Example

show datapath acl

The following example shows the output of show datapath acl command.

```
Datapath ACL 3 Entries
-----

Flags: P - permit, L - log, E - established, M/e - MAC/etype filter
S - SNAT, D - DNAT, R - redirect, r - reverse redirect m - Mirror
I - Invert SA, i - Invert DA, H - high prio, O - set prio, C - Classify Media
A - Disable Scanning, B - black list, T - set TOS, 4 - IPv4, 6 - IPv6
-----
```

show datapath acl-all

The following example shows the output of show datapath acl-all command.

```
ACL Name {magic-vlan} Number
{106}
01:00          any          any          17 0-65535 8209-    P4
8211
02:00          192.168.10.0 255.255.254.0 192.168.10.0
255.255.254.0 any   P4
03:00          192.168.10.0 255.255.254.0 224.0.0.0 224.0.0.0
any P4
04:00          192.168.10.0 255.255.254.0 any any PS4
05:00          any          any          any          P4          hits 2127
-----
ACL Name {internal-cp-magic}
Number {107}
01:00          any          192.168.10.1 6 0-65535 80-80    PSD4
255.255.255.255
5
```

```

02:00          any          192.168.10.1 6 0-65535 443-443 PSD4
                    255.255.255.25
03:00          any          any          6 0-65535 80-80 PSD4
04:00          any          any          6 0-65535 443-443 PSD4
05:00          192.168.10.0 192.168.10.0 17 0-65535 67-68 P4
                    255.255.254.0 255.255.254.0
06:00          192.168.10.0 224.0.0.0 17 0-65535 67-68 P4
                    255.255.254.0 224.0.0.0

07:00          192.168.10.0 255.255.254.0 any 17 0-65535 67-
                    68 PS4
08:00          any any 17 0-65535 67-68 P4
09:00          192.168.10.0 255.255.254.0 192.168.10.0 53-53 P4
                    255.255.254.0 17 0-
                    65535
10:00          192.168.10.0 255.255.254.0 224.0.0.0 224.0.0.0 P4
                    17 0-65535 53-53
11:00          192.168.10.0 255.255.254.0 any 17 0-65535 53-
                    53 PS4
12:00          any any 17 0-65535 53-53 P4
13:00          192.168.10.0 255.255.254.0 192.168.10.0 8081- P4
                    255.255.254.0 6 0- 8081
                    65535
14:00          192.168.10.0 224.0.0.0 6 0-65535 8081-8081 P4
                    255.255.254.0 224.0.0.0
15:00          192.168.10.0 any 6 0-65535 8081-8081 PS4
                    255.255.254.0
16:00          any          any 6 0-65535 8081-8081 P4
17:00          any          any          any 4

```

```

-----
-----

```

```

ACL Name {external-cp-magic}
Number {108}

```

```

01:00          any          192.168.10.1 6 0-65535 80-80 PSD4
                    255.255.255.25
02:00          any          192.168.10.1 6 0-65535 443-443 PSD4
                    255.255.255.25
03:00          any          any          6 0-65535 80-80 PSD4
04:00          any          any          6 0-65535 443-443 PSD4
05:00          192.168.10.0 192.168.10.0 17 0-65535 67-68 P4
                    255.255.254.0 255.255.254.0
06:00          192.168.10.0 224.0.0.0 17 0-65535 67-68 P4
                    255.255.254.0 224.0.0.0
07:00          192.168.10.0 any 17 0-65535 67-68 PS4
                    255.255.254.0
08:00          any          any 17 0-65535 67-68 P4
09:00          192.168.10.0 192.168.10.0 17 0-65535 53-53 P4
                    255.255.254.0 255.255.254.0
10:00          192.168.10.0 224.0.0.0 17 0-65535 53-53 P4
                    255.255.254.0 224.0.0.0
11:00          192.168.10.0 any 17 0-65535 53-53 PS4
                    255.255.254.0
12:00          any          any 17 0-65535 53-53 P4
13:00          192.168.10.0 192.168.10.0 6 0-65535 8081-8081 P4
                    255.255.254.0 255.255.254.0
14:00          192.168.10.0 224.0.0.0 6 0-65535 8081-8081 P4
                    255.255.254.0 224.0.0.0
15:00          192.168.10.0 any 6 0-65535 8081-8081 PS4
                    255.255.254.0
16:00          any          any 6 0-65535 8081-8081 P4
17:00          any          any          any 4

```

```

-----
-----

```

show datapath acl-allocation

The following example shows the output of **show datapath acl-allocation** command.

ACL	ACE Start	ACE Block Size
----	-----	-----
105	3200	32
103	3234	16
107	3250	32
104	3282	16
108	3298	32
100	3330	2
101	3332	4
102	3336	4
134	3340	4
135	3344	8
136	3352	4
143	3360	8
145	3372	8
130	3380	16
131	3412	16
132	3444	16
133	3476	16
137	3508	8
139	3520	8
141	3532	8
146	3540	4
147	3544	8
148	3552	4
149	3556	8
150	3564	4
151	3568	4
152	3572	4
153	3576	4
138	3580	8
140	3588	8
142	3596	8
144	3604	8
106	3612	8

show datapath acl-rule

The following example shows the output of **show datapath acl-rule** command.

Datapath SSID: test ACL Entries

Flags: P - permit, L - log, E - established, M/e - MAC/etype filter S - SNAT, D - DNAT, R - redirect, r - reverse redirect m - Mirror

I - Invert SA, i - Invert DA, H - high prio, O - set prio, C - Classify Media A - Disable Scanning, B - black list, T - set TOS, 4 - IPv4, 6 - IPv6

ACL Name {test 0} Number {142}

1: any any 17 0-65535 8209-8211 P4

2: 192.168.10.0 255.255.254.0 192.168.10.0 255.255.254.0 any P4

3: 192.168.10.0 255.255.254.0 224.0.0.0 224.0.0.0 any P4

4: 192.168.10.0 255.255.254.0 any any PS4

5: any any any P4


```

-----
ACL Name {test 1} Number {143}
1: any any 17 0-65535 8209-8211 P4
2: 192.168.10.0 255.255.254.0 192.168.10.0 255.255.254.0 any P4
3: 192.168.10.0 255.255.254.0 224.0.0.0 224.0.0.0 any P4
4: 192.168.10.0 255.255.254.0 any any PS4
5: any any any P4
-----

```

```

-----
ACL Name {test 2} Number {144}
1: any any 17 0-65535 8209-8211 P4
2: 192.168.10.0 255.255.254.0 192.168.10.0 255.255.254.0 any PT4
3: 192.168.10.0 255.255.254.0 224.0.0.0 224.0.0.0 any PT4
4: 192.168.10.0 255.255.254.0 any any PST4
5: any any any PT4
-----

```

```

-----
ACL Name {test 3} Number {145}
1: any any 17 0-65535 8209-8211 P4
2: 192.168.10.0 255.255.254.0 192.168.10.0 255.255.254.0 any PT4
3: 192.168.10.0 255.255.254.0 224.0.0.0 224.0.0.0 any PT4
4: 192.168.10.0 255.255.254.0 any any PST4
5: any any any PT4
-----

```

show datapath bridge

The following example shows the output of **show datapath bridge** command.

Datapath Bridge Devices

```

-----
Flags: F - source-filter, T - trusted, Q - tagged, I - IP
S - split-tunnel, B - bridge, M - mesh, P - PPPoE
C - content-filter, O - corp-access, h - to HAP, f - to FAP
h - dhcp-redirect

```

```

Dev Name VLANs PVID ACLs FramesRx FramesTx Flags

```

```

--- -----
3 eth1 1 3333 134/0 0 1700 0 0 FB
5 bond0 3 1 0/0 106 3500 359364 69733 FTQB

```

```
12 br0 0 1 105/0 0 1300 45731 0 IB
```

```
16 aruba000      1 111 130/0      0 1500 0 0      B
17 aruba100      1 111 130/0      0 1500 0 0      B
18 aruba001      1 1 136/0      0 1500 23443    1142 B
19 aruba101      1 1 136/0      0 1500 0 0 B
```

Datapath Bridge Table Entries

Flags: P - Permanent, D - Deny, R - Route, M - Mobile, X - Xsec, A - Auth

AP Flags: X - Awaiting 1X reply, B - Block all non-1X traffic, F - Force bridge role

MAC	VLAN	Assigned VLAN	Destination	Flags	AP Flags	Bridge Role ACL
-----	----	-----	-----	----	-----	-----
00:1A:1E:0D:7E:D3	1	1	dev3			0
D8:C7:C8:C4:42:98	1	1	local	P		0
D8:C7:C8:C4:42:98	3333	3333	local	P		0
00:0B:86:40:1C:A0	1	1	dev3			0
6C:F3:7F:C3:5C:12	64	64	dev3			0

show datapath bwm-table

The following example shows the output of **show datapath bwm-table** command.

Received BWM Config:

ACL	DIR	Contract- ID	PerUser	UseCount	Rate
---	---	-----	-----	-----	----
		-			
135	up	2	1	1	1000000
135	down	1	1	1	1000000
139	up	4	0	2	5000000
139	down	3	0	2	5000000
143	up	6	1	1	4555000
143	down	5	1	1	4555000
173	up	8	0	1	1111000
173	down	7	0	1	1111000
175	up	10	0	1	1111000
175	down	9	0	1	1111000
177	up	12	0	1	1111000
177	down	11	0	1	1111000
179	up	14	0	1	1111000
179	down	13	0	1	1111000
181	up	16	0	1	1111000
181	down	15	0	1	1111000
183	up	18	0	1	1111000
183	down	17	0	1	1111000
185	up	20	0	1	1111000
185	down	19	0	1	1111000
187	up	22	0	1	1111000
187	down	21	0	1	1111000
189	up	24	0	1	1111000

```

189 down 23      0      1      1111000
Allocated Contracts:
-----

```

Contract- ID	Rate	UseCount	ACL	Available- Bytes	Max-Bytes	Policed-Bytes	Queued-Bytes
Queued- Pkts	Dropped- pkts						
---	---			-----	-----	-----	-----
1	1000000	1	0/0	3907	3907	0	0
0	0						
2	1000000	1	0/0	3907	3907	0	0
0	0						
3	5000000	2	0/0	19532	19532	0	0
0	0						
4	5000000	2	0/0	19532	19532	0	0
0	0						
5	4555000	1	0/0	17793	17793	0	0
0	0						
6	4555000	1	0/0	17793	17793	0	0
0	0						
7	1111000	1	0/0	4340	4340	0	0
0	0						
8	1111000	1	0/0	4340	4340	0	0
0	0						
9	1111000	1	0/0	4340	4340	0	0
0	0						
10	1111000	1	0/0	4340	4340	0	0
0	0						
11	1111000	1	0/0	4340	4340	0	0
0	0						
12	1111000	1	0/0	4340	4340	0	0
0	0						
13	1111000	1	0/0	4340	4340	0	0
0	0						
14	1111000	1	0/0	4340	4340	0	0
0	0						
15	1111000	1	0/0	4340	4340	0	0
0	0						
16	1111000	1	0/0	4340	4340	0	0
0	0						
17	1111000	1	0/0	4340	4340	0	0
0	0						
18	1111000	1	0/0	4340	4340	0	0
0	0						
19	1111000	1	0/0	4340	4340	0	0
0	0						
20	1111000	1	0/0	4340	4340	0	0
0	0						
21	1111000	1	0/0	4340	4340	0	0

4.16 S

```

0          0
22         1111000  1      0/0    4340    4340    0      0
0          0
23         1111000  1      0/0    4340    4340    0      0
0          0
24         1111000  1      0/0    4340    4340    0      0
0          0

```

Bandwidth Contracts for cpu type 0 has 25 contracts

BWM divisor for type:0 : 32(32)

```

1(cpu:0):  flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:1000000  t:0
2(cpu:0):  flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:1000000  t:0
3(cpu:0):  flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:5000000  t:0
4(cpu:0):  flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:5000000  t:0
5(cpu:0):  flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:4555000  t:0
6(cpu:0):  flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:4555000  t:0
7(cpu:0):  flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:1111000  t:0
8(cpu:0):  flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:1111000  t:0
9(cpu:0):  flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:1111000  t:0
10(cpu:0): flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:1111000  t:0
11(cpu:0): flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:1111000  t:0
12(cpu:0): flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:1111000  t:0
13(cpu:0): flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:1111000  t:0
14(cpu:0): flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:1111000  t:0
15(cpu:0): flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:1111000  t:0
16(cpu:0): flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0

```

```

r:1111000 t:0
17(cpu:0): flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:1111000 t:0
18(cpu:0): flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:1111000 t:0
19(cpu:0): flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:1111000 t:0
20(cpu:0): flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:1111000 t:0
21(cpu:0): flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:1111000 t:0
22(cpu:0): flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:1111000 t:0
23(cpu:0): flags 0, 1000192 bps, policed 0, dropped 0, queued 0/0, avail 3907, pktq 0/0
r:1111000 t:0

```

Bandwidth Contracts for cpu type 0 has 0 cp contracts total queued in CPU 0 total queuing fail 0

Queued pkts in cpus:

show datapath counters

The following example shows the output of show datapath counters command.

AP Datapath Counter Stats

Firewall Queue scheduled 5919 Firewall Queue scheduled 345724

Firewall Rx Queue: length 0, dropped 0

Firewall Tx Queue: length 0, dropped 0

DMO queue: size:512, dropped:0, rescheduled:0, length:0, high-water:0

CPU 0: Tlet Calls=0 Rx=0/0 SJRx=0/0 Tx=0 yields=0/0 EthIn=0

CPU 1: Tlet Calls=0 Rx=0/329806 SJRx=0/0 Tx=21835 yields=0/2 EthIn=329806

GMAC 0 Statistics:

```

RX Frames:          bf5690c0          TX   Frames:          00000000
RX Failures:        00055d99          TX   Failures:        00000000

```

Dot1dDiscards: 000000c7 Policed Frames: 00000000

v4 FW Denied: 00000008 v6 FW Denied: 00000000

GMAC 1 Statistics:

```

TX           Frames:          00000000
TX           Failures:        00000000

```

RX Frames: bf569310 GMAC 2 Statistics:

RX Frames: bf569560

```

Dot1dDiscards: 0000081d Policed Frames: 00000000

Maintenance Statistics: Application Statistics:

RX ICMP Errors: 0000081d RX ICMP Denied: 00000003

Bridge Statistics:

Cur Entries:          00000007          High Entries:          00000009
Max Entries:          00004000          Total Entries:          0000191e

IP Reassembly Statistics:

cpu| cur | high | max | tot | full | ageidx|
IP Reverse Fragment Statistics:

cpu| cur | high | max | tot | full | ctx_w_buf | aged |
IPv6 Reassembly Statistics:

cpu| cur | high | max | tot | full | ageidx|
IPv6 Reverse Fragment Statistics:

cpu| cur | high | max | tot | full | ctx_w_buf | aged |
WiFi Reassembly Statistics:

cpu| cur | high | max | tot | full | ageidx|
0| 0000 | 0000 | 0000 | 0000 | 0000 | 0000 |
1| 0000 | 0000 | 0000 | 0000 | 0000 | 0000 |

Route Cache Statistics:

Cur Entries(v4/v6): 00000003/00000000 High Entries: 00000007
Max Entries: 00001000 Total Entries: 00000003

Overflows: 00000000 Stale Entries: 0000000d/00000000

session_fib 0 session_fib_routed 0 session_fib_stale 0 session_fib_rt_fallback 0
session_fib_
race 0

Route Table Statistics:

Cur Entries(v4/v6): 00000003/00000000 High Entries: 00000003
Max Entries: 00000080 Total Entries: 00000009

Patricia: Cur 00000003 Full 00000000 Dup 00000000 Ignore 00000000

Null: Cur 00000000 Full 00000000 ECMP Full 00000000

Session Statistics:

Cur Entries: 00000003/00000000 High Entries: 0000005b/00000003
Max Entries: 00008000 Total Entries: 000021fc/0000003a
Aged Entries: 000021ed/0000003a
Stale Entries: 00000001/00000000
Max link length :

```

```

Cur Entries: 00000001 High Entries: 00000003
User Statistics:
Uke Cur Entries: 00000003/00000001/00000002/00000000 High Entries: 00000008
Max Entries: 00000fff Total Entries: 00000026
Full: 00000000 Denied: 00000000/00000000
Uae Cur Entries: 00000002 High Entries: 00000006
Station list Statistics:
Cur Entries: 00000002 High Entries: 00000000
Max Entries: 000007ff Total Entries: 00000002

```

show datapath device statistics

The following example shows the output of **show datapath device statistics** command.

dev	InPkts	FAST	IP	UDP	DHCP	TCP	ARP	MCAST	UCAST	OutPkts	FAST
IP UDP	DHCP	TCP	ARP	MCAST	UCAST						
eth1	0	0	0	0	0	0	0	0	0	448	0
36 36	36	0	0	448	0						
bond0	638	0	225	37	36	178	1	448	190	168	0
167 11	0	156	1	0	168						
br0	167	0	167	11	0	156	0	0	167	601	0
189 1	0	178	0	412	189						

show datapath ipv6 session

The following example shows the output of the **show datapath ipv6 session** command:

```

Datapath Session Table Entries (v6)
-----
Flags: F - fast age, S - src NAT, N - dest NAT
D - deny, R - redirect, Y - no syn
H- high prio, P - set prio, T - set ToS
I C - client, M - mirror, V - VOIP
J Deep inspect, U - Locally destined
s - media signal, m - media mon, a - rtp analysis
E - Media Deep Inspect, G - media signal
A - Application Firewall Inspect
RAP Flags: 0 - Q0, 1 - Q1, 2 - Q2, r - redirect to master, t - time based
Source IP Destination IP Prot SPort Dport
-----
fe80::aea3:1eff:fe80::4708      ff02::16 58 5782 36608

```

```

fe80::6273:5cff:fe65:ee19      ff02::16 58 53973 36608
fe80::9198:30aa:5217:d22a      ff02::16 58 47682 36608
fe80::6273:5cff:fe65:ee19      ff02::d 103 0 0
fe80::6273:5cff:fe65:ee19      ff02::1 58 43684 33280
fe80::f25c:19ff:feeb:34d0      ff02::16 58 64552 36608
fe80::9198:30aa:5217:d22a      ff02::16 58 30486 36608
fe80::3e97:eff:fe48:9e45       ff02::16 58 59459 36608
fe80::aea3:1eff:febd:4694      ff02::16 58 5968 36608
fe80::aea3:1eff:febd:471a      ff02::16 58 1289 36608

```

Cntr Prio ToS Age Destination TAge Flags

0 0 0 1 dev8 6e C

0 0 0 1 dev8 63 C

0 0 0 1 dev8 60 C

0 0 0 0 dev8 8 C

0 0 0 1 dev8 88 C

0 0 0 1 dev8 82 C

0 0 0 1 dev8 6c C

0 0 0 1 dev8 59 C

0 0 0 1 dev8 62 C

0 0 0 1 local 76 C

show datapath ipv6 user

The following example shows the output of the show datapath ipv6 user command:

Datapath User Table Entries (v6)

Flags: P - Permanent, W - WEP, T- TKIP, A - AESCCM, R - ProxyARP to User, N - VPN, L - local, I - Intercept, D - Deny local routing FM(Forward Mode), S - Split, B - Bridge, N - N/A

IP MAC ACLs Contract Location Age

2001:470:36:5c3:ffff:ffff:ffff:5b AC:A3:1E:CD:47:1A 105/0 0/0 0 0

fe80::aea3:1eff:febd:471a AC:A3:1E:CD:47:1A 105/0 0/0 0 0

Sessions Flags Vlan FM

0/65535 1 N


```
0/65535 1 N
```

show datapath dmo-session

The following example shows the output of **show datapath dmo-session** command.

```
MCAST Groups:
```

```
-----
```

```
Source Group Vlan Age[s] BSSs Received Multicast Converted Unicast Dropped _Stas
_l2grp _l3grp
```

```
DMO queue: size:256, dropped:0, rescheduled:0, length:0, high-water:0
```

```
DMO Sessions:
```

```
-----
```

show datapath dmo-station

The following example shows the output of **show datapath dmo-station** command.

```
Group Ref_count Position
```

show datapath dns-id-map

The following example shows the output of **show datapath dns-id-map** command.

```
entry:0 id:1 www.google.com
```

```
93.46.8.89 173.252.71.184
```

```
entry:1 id:2 facebook.com
```

```
93.46.8.89 173.252.120.6
```

```
entry:2 id:3 twitter.com
```

```
104.244.42.129 104.244.42.1 74.117.182.194
```

show datapath https-blocked-ip-cache

The following example shows the output of **show datapath https-blocked-ip-cache** command.

IP	Network	LifeTime
-----	-----	-----
106.38.179.32	4	95
106.39.178.1	4	59
54.239.25.192	4	7
54.239.26.128	3,4	0
119.188.142.1	3	26
61.135.144.254	4	16

show datapath mcast

The following example shows the output of **show datapath mcast** command.

```
Dev Vlans
```

```
-----
```

```
dev3 1
```

```
dev11 1
```

```
dev12 1
```

```
dev13 1
```

```
dev14 1
```

show datapath nat-pool

The following example shows the output of **show datapath nat-pool** command.

```
Datapath NAT Pool Entries
```

```
-----
ID Begin Source IP End Source IP Destination IP Flags
-- -----
```

show datapath route

The following example shows the output of **show datapath route** command.

```
Route Table Entries
```

```
-----
Flags: L - Local, P - Permanent, T - Tunnel, I - IPsec, M - Mobile, A - ARP, D - Drop
IP Mask Gateway Cost VLAN Flags
-----
```

0.0.0.0	0.0.0.0	10.17.88.2	0	0	
192.168.10.0	255.255.254.0	192.168.10.1	0	3333	D
0.0.0.0	255.255.255.192	10.17.88.59	0	1	L

```
Route Cache Entries
```

```
-----
Flags: L - local, P - Permanent, T - Tunnel, I - IPsec, M - Mobile, A - ARP, D - Drop
IP MAC VLAN Flags
-----
```

10.17.88.2	00:0B:86:40:1C:A0	1	A
10.17.88.59	D8:C7:C8:C4:42:98	1	LP
192.168.10.1	D8:C7:C8:C4:42:98	3333	LP

show datapath sbr

The following example shows the partial output of **show datapath sbr** command.

```
Source Based Routing Datapath Table
```

```
-----
```

Source	SBR Index	Mask	Gateway	VLAN	Used
1.1.1.2	1	255.255.255.0	1.1.1.254	4	1

show datapath session

The following example shows the output of **show datapath session** command.

Datapath Session Table Entries

Flags: F - fast age, S - src NAT, N - dest NAT

D - deny, R - redirect, Y - no syn

H - high prio, P - set prio, T - set ToS

C - client, M - mirror, V - VOIP

I - Deep inspect, U - Locally destined

s - media signal, m - media mon, a - rtp

analysis RAP Flags: 0 - Q0, 1 - Q1, 2 - Q2

Source IP Destination IP Prot SPort DPort Cntr Prio ToS Age Destination TAge Flags

10.17.88.59 10.13.110.198 6 22 62719 0 0 0 0 dev3 733

10.17.88.59 10.0.0.1 6 64104 443 0 0 0 1 local 5b YC

10.13.110.198 10.17.88.59 6 62719 22 0 0 0 0 dev3 733 C

10.13.23.237 10.17.88.59 6 55302 22 0 0 0 0 dev3 8be C

10.17.88.59 10.13.23.237 6 22 55302 0 0 0 0 dev3 8be

10.0.0.1 10.17.88.59 6 443 64104 0 0 0 1 local 5b Y

The following example shows the partial output of **show datapath session ucc** command.

Datapath Session Table Entries

Flags: F - fast age, S - src NAT, N - dest NAT

D - deny, R - redirect, Y - no syn

H - high prio, P - set prio, T - set ToS

I C - client, M - mirror, V - VOIP

J - Deep inspect, U - Locally destined

s - media signal, m - media mon, a - rtp analysis

E - Media Deep Inspect, G - media signal

A - Application Firewall Inspect

L - ALG session

RAP Flags: 0 - Q0, 1 - Q1, 2 - Q2, r - redirect to master, t - time based

Source IP	Destination IP	Prot	SPort	Dport	Cntr	Prio	ToS	Destination	Flags	Codec
10.17.138.91	10.17.138.90	17	50023	50022	0	0	40	dev18	FHTCVL	
									X H264UC	
10.17.138.90	10.17.138.91	17	50022	50023	0	0	40	dev18	FHTVL X	H264UC
10.17.138.91	10.17.138.90	17	50012	50014	0	0	48	dev18	FHTCVL	SILK
10.17.138.90	10.17.138.91	17	50014	50012	0	0	48	dev18	FHTVL	SILK

The following example shows the output of **show datapath session dpi** command.

Datapath Session Table Entries

Flags: F - fast age, S - src NAT, N - dest NAT

D - deny, R - redirect, Y - no syn

H - high prio, P - set prio, T - set ToS

C - client, M - mirror, V - VOIP

I - Deep inspect, U - Locally destined

s - media signal, m - media mon, a - rtp analysis

E - Media Deep Inspect, G - media signal

A - Application Firewall Inspect L - ALG session

RAP Flags: 0-Q0, 1-Q1, 2 - Q2, r-redirect to master, t-time based DPI Flags: a-app
extraction done, b-URL extraction done

c - copied to dpimgr, d - dropped reverse session on bca cache miss

w - waiting for classification, e - enforcement done

f - app classification done, g - webcc classification done

DPI WebRep: 1 - High Risk Sites, 2 - Suspicious Sites

3 - Moderate Risk Sites, 4 - Low Risk Sites

5 - Trustworthy Sites

Source IP Destination IP Prot SPort Dport App Webcat WebRep Packets Bytes PktsDpi
Flags DPIFlags

173.223.235.19	6	63421	80	linkedin	[305]	content-
0	0	1	C	abcdefg		

17	50338	53	incomplete	[6]		Web-Not-Class
1	FCIA		ac			

6	443	63460	[68]	https		Web-Not-Class
3	acef					

6	54365	443	office365	[1448]	computer-	
0	1	CGs	abcefg			

6	5228	5844	gtalk	[1441]	category-	
0	acef				unknown	

6	139	63391	incomplete	[6]		category-unknown
		te				

```

3      F      ace
6      5222    50783 [0      ] Web-Not-Class
           App-Not-
           Class
0      YA
17     57576 443 incomplete [6      ] Web-Not-Class
           te
5      FC      ace
6      50162 22  ssh      [198 ] category-unknown
1      C      acef
6      51324 443 office36 [1448] business-
           5 and-
           1 CGs      abcefg ] 5
                           computer-
                           and-
                           intern [5
10.20.50 6      55956    epm      [37      ] category-unknown
.10      135
0      0      1      FC      acef
172.217. 6      56432    google    [54      ]
26.78    443          shopping
] 5      1      29      1      CGs      abcefg
[63 ] 5
10.44.96 6      62236    [0      ] Web-Not-Class
.64      44591
           App-Not-
           Class
] 0      0      0      0      C
10.20.12 6      443      54673    [1448] computer-
0.198      5 office36 and-
0      0      abcefg
6      56463 445 incomplete [6      ] category-unknown
           te
6      FC      ace
6      37685 8080 incomplete [6      ] category-unknown
           te
3      C      ace
10.20.12 6      443      50119    [1448] computer-
0.173      5 office36 and-
] 5      0      0      0      abcefg
10.20.12 6      80      49543    [191 ] private-ip-
0.153      soap
7      354      0      F      abcefg
10.20.12 6      22      63997    [198 ] category-
0.173      ssh      unknown
1      28      0      acef
806      App-Not- [0      ] Web-Not-Class
           Class
] 0      0      0      0      F
10.20.12 6      443      8590      google- [1122] shareware-and-
0.228      play
1      34      0      abcefg
                                           [198      ] category-
                                           unknown
                                           [54      ] search-
                                           engines
10.53.12 6      5017      22      ssh      [191      ] private-
.175      ip-
0      0      0      C      acef      [68      ] Web-Not-
                                           Class

```

```

172.217. 6      56433  google
26.78          443
1          29      1      CGs      abcefg

10.1.8.5 6      63454 80 soap
3
0          0      2      FC      abcefg

10.20.12 6      443      63269 https
0.252
] 0          0      0      3      acef

10.22.15
2.66
[0 ] 0

10.20.12
0.240
[0 ] 0

10.20.12
0.173
[0 ] 0

1          FC      acef

17          60658 53  incomple [6      ] Web-Not-Class
te

1          FCIA      ac

          10.20.120. 6      139      63390
252          incomplet [6      ] category 0
e          -unknown
[84 ] 7

```

show datapath statistics

The following example shows the partial output of **show datapath statistics** command.

Datapath Counters

Counter Value

Tagged frames dropped on untagged interface 0

Frames dropped for being too short 0

Frames received on port not in VLAN 0

Non-dot1x frames dropped during L2 blocking 0

Frames dropped for ingress change on permanent bridge entry 0

Frames received on port not in VLAN 0

Unicast frames filtered 86

Frames dropped due to FP firewall 6

Frames that failed FP spoofing check 0

Frames dropped with logging 0

Frames dropped due to unknown FP opcode 0

Frames freed by FP 3

Frames that failed SP spoofing check 0

Frames dropped due to excessive user misses 0

Frames dropped due to no buffers 0

Frames dropped due to no 'br0' device 0

Frames dropped due to no stack IP address 0

Frames dropped while user miss pending 0

Frames dropped when user entry creation failed 0

Frames dropped due to unknown FP opcode 0

Frames dropped due to initial IP route lookup failure 0

Frames dropped due to final IP route lookup failure 0

Frames dropped due to ARP processing failure 0

Frames dropped due to illegal device index 0

Frames dropped due to interface being down 0

Unicast frames not bridged due to split-tunnel destination 0

Unicast frames from bridge role user dropped 0

Unicast frames that could not be bridged to split tunnel 0

Frames dropped due to missing PPP device 0

Frames dropped due to pullup failure 0

Frames dropped due to misalignment 0

Frames received by firewall 715679

DHCP frames on DHCP local VLAN 96041

PPPOE frames to session processing 0

Frames needing bridging 716075

Mesh frames forwarded 0

Thin AP frames forwarded 0

Frames to session processing 718714

Frames to SP 21792

Frames bridged by SP 396

Frames routed by SP 0

Frames for SP session processing 17454

Frames for FP application processing 3942

Frames bridged by FP 0

Frames for FP session processing 2725

Frames routed by FP 18577

FP user misses 73

Frames not tunneled from bridge role user 0

SP user misses 73

```

Frames to DHCP 18
Frames to DNS 0
Frames held 0
Frames needed routing 715572
Frames needed forwarding 634373
Frames redirected to CSS tunnel 0
Frames sent by firewall 94681
Frames delivered to stack 82061
Frames delivered to CP 0
Frames to be flooded 538842
Frames potentially needing flooding 637659

```

show datapath user

The following example shows the partial output of **show datapath user** command.

Datapath User Table Entries

Flags: P - Permanent, W - WEP, T- TKIP, A - AESCCM

R - ProxyARP to User, N - VPN, L - local

FM(Forward Mode): S - Split, B - Bridge, N - N/A

IP MAC ACLs Contract Location Age Sessions Flags Vlan FM

----- --

10.17.88.59 D8:C7:C8:C4:42:98 105/0 0/0 0 0 1/65535 1 N

0.0.0.0 D8:C7:C8:C4:42:98 105/0 0/0 0 0 0/65535 P 1 N

192.168.10.1 D8:C7:C8:C4:42:98 105/0 0/0 0 11115 0/65535 P 3333 B

show datapath vlan

The following example shows the partial output of **show datapath vlan** command.

Datapath VLAN Table Entries

Flags: N - Nat Inside, M - Route Multicast, R - Routing

S - Snoop MLD, G - Snoop IGMP, P - Proxy IGMP

VLAN Flags Ports

1 R dev3

1 R dev11

1 R dev12


```
1 R dev13
```

```
1 R dev14
```

show datapath vlan-mcast

The following example shows the output of the **show datapath vlan-mcast** command.

```
Datapath VLAN Multicast Entries
```

```
-----
```

```
VLAN Destinations
```

```
----
```

```
1 dev8
```

```
121 dev8, dev18, dev19, dev20, dev21
```

```
3333 dev3, dev8, dev22, dev23
```

show datapath vlan-port-mapping

The following example shows the partial output of the **show datapath vlan-port-mapping** command.

```
Datapath VLAN-Port-Mapping Table Entries
```

```
-----
```

```
VLAN Port Users
```

```
----
```

The outputs of the **show datapath** command indicates the following:

- CL table allocation details for the AP.
- AP Datapath ACL Tables.
- List of ACL rules configured for the SSID and Ethernet port profiles.
- Bridge table entry statistics including MAC address, VLAN, assigned VLAN, destination and flag information for the AP.
- Details of a DMO session.
- Multicast table statistics for the AP.
- Route table statistics for the AP.
- Datapath session table statistics for the AP
- Hardware packet statistics for the AP.
- Datapath user statistics such as current entries, pending deletes, high water mark, maximum entries, total entries, allocation failures, invalid users, and maximum link length for the AP
- VLAN table information such as VLAN memberships inside the datapath including L2 tunnels for the AP.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.115 show ddns

Description

This command displays the DDNS status of the AP and the list of DDNS clients.

Syntax

```
show ddns [clients]
```

Usage Guidelines

Use this command to view information about the DDNS clients.

Example

The following output is displayed for the **show ddns** command:

```
DDNS Enabled           :Enabled
DDNS Server            :10.17.132.85
DDNS Key :hmac-sha1:   ddns-key:asdafsdasdfsfgdsgs=
DDNS Interval          900
```

The following output is displayed for the **show ddns clients** command:

```
DDNS Client List

Host Name      Domain Name IP Address      DHCP profile name Success Count Failure Count
-----
iap1-ddns-home test.ddns  192.192.192.17 None           16           22
132-13-Auto-PC test.ddns  192.168.99.18 DistL3         9            3
132-14-Auto-PC test.ddns  192.168.99.4  DistL3         2            0

Last updated Last update status
-----
7 seconds ago Success
7 seconds ago Success
7 seconds ago Success
```

Note

DHCP profile name is None for the Master AP update sent.

The output of this command provides the following information:

Command/Parameter	Description
Host Name	Displays the hostname of the DDNS client
Domain Name	Displays the domain name mapped to the DDNS client.

Command/Parameter	Description
IP Address	Denotes the IP address of the DDNS client.
DHCP profile name	Denotes the profile name of the DHCP server.
Success Count	Indicates the number of times the update sent to the DNS server succeeded.
Failure Count	Indicates the number of times the update sent to the DNS server got failed.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.116 show delta-config

Description

This command displays the difference between the current configuration in the current CLI session and the configuration that is saved on the AP

Syntax

```
show delta-config cfgid
```

Usage Guidelines

Use this command to view the difference between the current configuration information stored in the AP flash memory and the configuration information saved in the AP memory.

Example

The following example shows the output of the **show delta-config** command:

```
103-Master# show delta-config
AP delta configuration current_config_id:7
AP delta configuration top_config_id:7
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.117 show derivation-rules

Description

This command displays the list of role and VLAN derivation rules configured for the WLAN SSIDs and wired profiles in an AP.

Syntax

```
show derivation-rules
```

Usage Guidelines

Use this command to view the derivation rules configured for a network profile.

Example

The following example shows the output of the **show derivation-rules** command:

```
SSID:Example1
Role Derivation Rules
-----
Attribute Operation Operand Role Name Index Hits
-----
Filter-Id contains 123456 Example1 8 0
AP-Name contains instant instant 9 0 Vlan Derivation Rules
-----
Attribute Operation Operand Vlan Id Hits
-----
AP-Group contains instant 200 0
Filter-Id contains 123456 200 0
```

The output of the command provides a list of role and VLAN derivation rules configured for each SSID and wired profile.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.118 show dhcp-allocation

Description

This command displays information about the DHCP address allocation.

Syntax

```
show dhcp-allocation
```

Usage Guidelines

Use this command to view DHCP address allocation for network address translated clients to allow mobility of the clients across APs.

Example

The following example shows the output of **show dhcp-allocation** command:

```
(AP)# show dhcp-allocation

-----/etc/dnsmasq.conf-----

listen-address=127.0.0.1

addn-hosts=/etc/ld_eth_hosts addn-hosts=/etc/ld_ppp_hosts dhcp-src=192.168.10.1

dhcp-leasefile=/tmp/dnsmasq.leases dhcp-authoritative

filterwin2k

#magic-vlan

{

vlan-id=3333

dhcp-range=192.168.10.3,192.168.11.254,255.255.254.0,12h

dhcp-option=1,255.255.254.0 dhcp-option=3,192.168.10.1 dhcp-option=6,10.1.1.50

dhcp-option=54,192.168.10.1

}

-----/tmp/dnsmasq.leases-----
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.119 show dhcpc-opts

Description

This command displays the DHCP options configured on an AP.

Syntax

```
show dhcpc-opts
```

Usage Guidelines

Use this command to view the current status of the vendor-specific DHCP options configured on an AP. The DHCP options are configured and enabled for assignment and distribution to DHCP clients based on the type of DHCP server, scope, and clients.

Example

The following output is displayed for the **show dhcpc-opts** command:

```
-----DHCP option43 -----
```

```
Not available
```

The output of this command displays

the vendor-specific DHCP option configured for a DHCP scope and the current status of the DHCP option

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.120 show dhcps config

Description

This command provides information about the DHCP scopes configured for an AP.

Syntax

```
show dhcps config
```

Usage Guidelines

Use this command to view configuration details associated with the DHCP scopes enabled on an AP.

Example

The following example shows the output of the **show dhcps config** command:

Distributed DHCP Scopes

Name	Type	VLAN	Netmask	Default Router	DNS Server	Domain Name
------	------	------	---------	----------------	------------	-------------

dhcp-11	Distributed,L2	11	11.11.11.0	255.255.255.0	0.0.0.0	0.0.0.0
---------	----------------	----	------------	---------------	---------	---------

Lease Time	IP Address Range	Client Count	DHCP Option	Reserve First	Reserve Last
------------	------------------	--------------	-------------	---------------	--------------

43200	5	None			
-------	---	------	--	--	--

Branch ID	Branch Netmask	Branch Router	DHCP Host
-----------	----------------	---------------	-----------

Centralized DHCP Scopes

Name	Type	VLAN	DHCP Relay Tunnel	DHCP Relay Servers	DHCP Option 82	VLAN IP	VLAN Mask	Split
------	------	------	-------------------	--------------------	----------------	---------	-----------	-------

-

Local DHCP Scopes

Name	Type	VLAN network	Netmask	Exclude Address	DNS Server	Domain Name	Lease Time	DHCP Option
------	------	--------------	---------	-----------------	------------	-------------	------------	-------------

local	Local	12	12.12.12.0	255.255.255.0	0.0.0.0	0.0.0.0		
-------	-------	----	------------	---------------	---------	---------	--	--

DHCP Host	DNS Cache
-----------	-----------

None

The output of this command displays the following information:

Parameter	Description
Name	Displays the name of the DHCP scope.
type	Displays the DHCP assignment modes. The current release of SCALANCE W supports the following DHCP assignment modes. • Distributed, L2 • Distributed, L3 • Local • Local, L3 • Centralized, L2
VLAN	Indicates the VLAN ID assigned to DHCP scope.
Netmask	Displays the subnet mask.
DNS Server	Displays the DNS server IP address.
Domain Name	Displays the domain name configured for the DHCP scope.
Default router	Displays the IP address of the default router.
lease-time	Displays the lease-time configured for the DHCP clients.
IP Address Range	Displays the range of IP addresses configured for the distributed DHCP scopes.
client-count <number>	Displays the number of clients allowed per DHCP branch.
DHCP Option	Displays the DHCP option if configured.
Reserve First and Reserve Last	Displays the first few and the last few IP addresses reserved in the subnet.
Branch ID	Displays the DHCP branch ID.
Branch Netmask	Displays the branch subnet mask.
Branch Router	Displays the IP address if the branch router.
Exclude IP address	Displays the excluded IP address. The value displayed in this determines the exclusion range of the subnet. Based on the size of the subnet, the IP addresses that come before or after the IP address value specified in this field are excluded.
DHCP Relay	Displays the DHCP relay information that enables the APs to intercept the broadcast packets and relay DHCP requests directly to corporate network.
DHCP Relay Server	Displays the IP address of the corporate DHCP server for the DHCP request relay.
Split Tunnel	Indicates if the split-tunnel function is enabled or disabled.
DHCP Host	Indicates the DHCP host name if configured.
DNS cache	Indicates if DNS caching is enabled or disabled.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.121 show dhcp subnets

Description

This command displays the subnet details and the gateway IP for Distributed, L2 and Distributed, L3 networks.

Syntax

```
show dhcp subnets
```

Usage Guidelines

Use this command to view the subnet details for the Distributed, L2 and Distributed, L3 networks.

Example

The following example shows the output of the **show dhcp subnets** command:

DHCP Subnet Table

```

-----
VLAN  Type  Subnet      Mask           Gateway        Mode           Rolemap
----  -
532   12      192.168.132.0 255.255.255.0 0.0.0.0        remote,full-tunnel VLAN532
539   nat     192.168.1.0   255.255.255.0 192.168.1.1    local,split-tunnel VLAN532
538   13      192.168.2.0   255.255.255.0 192.168.2.1    local,split-tunnel VLAN532
534   12      0.0.0.0        255.255.255.255 0.0.0.0        remote,full-tunnel VLAN532

```

The output of this command displays the following information:

Parameter	Description
VLAN	Displays the VLAN details.
Type	Displays the type of DHCP assignment mode.
Subnet	Displays the subnet details.
Mask	Displays the subnet mask details.
DNS Server	Displays the DNS server IP address.
Gateway	Displays the gateway IP address.
Mode	Displays details of the tunnel mode.
Rolemap	Displays the role assigned to the clients.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.122 show distributed-dhcp-branch-counts

Description

This command displays the branch count for the distributed DHCP scopes configured on an AP.

Syntax

```
show distributed-dhcp-branch-counts <type> <sip> <eip>
```

Parameter	Description
type	Displays the branch details for the distributed DHCPs based on the type of the DHCP scope specified. The current release of SCALANCE W supports the following distributed DHCP assignment modes. • Distributed, L2 • Distributed, L3
<sip> <eip>	Filters the branch count information based on an IP address range specified for the starting IP address <sip> and ending IP address parameters. You can specify up to four different ranges of IP addresses to filter the command output.

Usage Guidelines

Use this command to view branch details for the distributed DHCP scopes.

Example

The following example shows the output of the **show distributed-dhcp-branch-counts** command:

```
Branch Count Table
```

```
-----
```

```
Client Count UptoBranch Count
```

```
-----
```

```
1          10
2           4
3           3
7           1
```

The output of this command displays the following information:

Parameter	Description
Client Count Upto	Displays the number of clients allowed for each DHCP branch.
Branch Count	Displays the number of branches allowed for the specified range of IP addresses.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.123 show domain-names

Description

This command displays the list of enterprise-domains configured on an AP.

Syntax

```
show domain-names
```

Usage Guidelines

Use this command to view enterprise-domains list. The enterprise domains list displays the DNS domain names that are valid on the enterprise network.

This list is used to determine how client DNS requests should be routed. When Content Filtering is enabled, the DNS request of the clients is verified and the domain names that do not match the names in the list are sent to the open DNS server.

Example

The following example shows the output of the **show domain-names** command:

```
example1.com
```

```
example.com
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.124 show dpi

Description

This command displays the DPI configuration information.

Syntax

```
show dpi {app <name> all|appcategory <name> all|debug <statistics>|<status>|qsessions
[detail [<session_id>]]|webcategory <name> all|webcategory-lookup <url>}
```

Command/Parameter	Description
app <name> <all>	Displays a list of all applications (with the all keyword) and details such as application name, ID, application category, and default ports when a specific application name is provided.
appcategory <name> <all>	Displays the list of all application categories (with the all keyword) and details of the applications that belong to a specific application category when an application category is specified.
debug {statistics status}	Displays DPI statistics or status that can be used for debugging.
qsessions [detail [<session_id>]]	Displays advanced debug statistics for troubleshooting the DPI issues.
webcategory <name> <all>	Displays the list of web categories.
webcategory-lookup <URL>	Displays the details for a given URL and the reputation score based on security rating. Run this command twice to fetch information from the cloud server.

Usage Guidelines

Use this command to view the DPI configuration details.

Example

show dpi app

The following example shows the output of the **show dpi app <name>** command:

```
(AP)# show dpi app wikipedia
```

Pre-defined Application

Name	App ID	App Category	Default Ports
----	-----	-----	-----
wikipedia	222	web	tcp 80

The output of this command displays details such as the name of the application, application category, default ports configured for deep packet inspection.

show dpi appcategory

The following example shows the output of the **show dpi appcategory all** command:

```
(AP)# show dpi appcategory all Pre-
defined Application Categories
-----

Name                               App Category ID
----                               -
antivirus                          1
authentication                     2
behavioral                         3
cloud-file-storage                 4
collaboration                     5
encrypted                         6
enterprise-apps                   7
gaming                            8
im-file-transfer                  9
instant-messaging                 10
mail-protocols                   11
mobile-app-store                 12
network-service                  13
peer-to-peer                     14
social-networking                15
standard                        16
streaming                        17
thin-client                      18
tunneling                       19
unified-communications           20
web                              21
webmail                          22
mobile                          23
```

Total application categories = 23

The output of this command displays all application categories

show dpi debug statistics

The following example shows the output of the **show dpi debug statistics** command.

```
DPI Engine Version: 4.20.0-34 (build date Aug 21 2016)
API Version: 1.190.0
Protocol Bundle Version: 1.230.0-20 (build date Aug 21 2016)
Dpimgr Debug Statistics
-----

Key Value
--- ----

dpimgr total pkt handled 2043(1961)
dpimgr total classified 581(556)
dpimgr qsession total alloc 1026(981)
dpimgr qsession total uapp alloc 800(765)
dpimgr qsession total uapp alloc free 799(764)
```

```
dpimgr qsession total session age 1024(979)
dpimgr qsession classified skipped 73(73)
dpimgr qsession event param error 16(16)
dpimgr qsession total classified 562(537)
dpimgr qsession total request received 1691(1624)
dpimgr bca total cloud lookup 23(17)
dpimgr bca total cached lookup 226(225)
dpimgr bca total request received 258(242)
dpimgr bca total classified 19(19)

Dpimgr cloud internal stats
-----
dns/name server configured yes
url cloud lookup server reachable yes
number of cache hits 227
number of cloud hits 22
number of cloud lookups 22
Max time taken for cloud lookups 0.230000
number of local database hits 0
number of uncategorized responses 1
number of cache entries 16
maximum queue depth reached 1
trusted user rep average 91
guest user rep average 0
total number of lookup errors: 0 (net: 0 + http: 0 + proto: 00
current minor version 0

DPI datapath stats
-----
number of pkts send to dpimgr: 1691
number of msg prepare failure 0
number of visibility stats cpy to dpimgr failure 0
number of cloud dpi session mismatch 0
number of cloud dpi session unclassified 0
number of bytes in tx socket buffer 0
```

```

number of bytes in rx socket buffer 0
total number of incomplete session 0
number of dpi session mismatch 0
AP average cpu usage in 10 secs 20
allowed unclassified session in 10 secs (max=0) 0
unclassified dpi session in 10 secs 8
total number of unclassified session 406

```

show dpi debug status

The following example shows the output of the **show dpi debug status** command:

```

Dpimgr Running :TRUE
Dpimgr Hello count 1
Dpimgr Agent :All set - App, Webcc & URL
Dpimgr Status value :0x3b
Dpimgr Platform Status :App + WebCC + URL
Dpimgr Visibility Status :App + WebCC
Dpimgr Enforcement Status :None
Dpimgr External Visibility Status :None
Dpimgr BCA Proxy Connection :Established
Dpimgr BCA Server SSL Established :True
Dpimgr BCA Server Reachable :Unknown

```

The output of this command includes the following parameters:

Parameter	Description
Dpimgr Running	Displays the current state of the DPIMGR process.
Dpimgr Hello count	Denotes the number of times the DPIMGR process has restarted and completed initialization.
Dpimgr Agent	Displays the DPIMGR components that are currently running.
Dpimgr Status value	Denotes the DPIMGR configuration flags set.
Dpimgr Platform Status	Denotes the DPIMGR configuration that the current platform can support.
Dpimgr Visibility Status	Displays the DPIMGR components that are configured for visibility.
Dpimgr Enforcement Status	Denotes if the DPIMGR statistics are reported to ALE or AMP
Dpimgr External Visibility Status	Denotes the DPIMGR components that are configured for enforcement.

Parameter	Description
Dpimgr BCA Proxy Connection	Indicates if a connection is established between the AP and the proxy server. This parameter has 4 states: - Configured—Denotes that the proxy configuration is present. - Not Configured—Denotes that the proxy configuration is not present. - Established—Denotes that a TCP connection has been established between the AP and the BCA proxy server. - Failure—Denotes a failure in establishing a TCP connection between the AP and the BCA proxy server.
Dpimgr BCA Server SSL Established	Indicates if an SSL connection has been established with the Bright Cloud server or not.
Dpimgr BCA Server Reachable	Indicates if the Bright Cloud server is reachable or not. This parameter has 3 states: - Unknown—Indicates the state when the DPI manager does not know if the BCA server is reachable or not. - Reachable—Indicates the state when the BCA server is reachable during a web category lookup. - Not Reachable—Indicates the state when the BCA server is unreachable during a web category lookup.

show dpi webcategory

The following example shows the output of the **show dpi webcategory all** command:

```
(AP)# show dpi webcategory all Pre-defined BrightCloud Web Categories
```

```
-----
```

Name	Web Category ID
----	-----
real-estate	1
computer-and-internet-security	2
financial-services	3
business-and-economy	4
computer-and-internet-info	5
auctions	6
shopping	7
cult-and-occult	8
travel	9
abused-drugs	10
adult-and-pornography	11
home-and-garden	12
military	13
social-networking-web	14
dead-sites	15
individual-stock-advice-and-tools	16
training-and-tools	17
dating	18
sex-education	19
religion	20
entertainment-and-arts	21
personal-sites-and-blogs	22
legal	23
local-information	24
streaming-media	25
job-search	26
gambling	27

translation	28
reference-and-research	29
shareware-and-freeware	30
peer-to-peer-web	31
marijuana	32
hacking	33
games	34
philosophy-and-political-advocacy	35
weapons	36
pay-to-surf	37
hunting-and-fishing	38
society	39
educational-institutions	40
online-greeting-cards	41
sports	42
swimsuits-and-intimate-apparel	43
questionable	44
kids	45
hate-and-racism	46
personal-storage	47
violence	48
keyloggers-and-monitoring	49
search-engines	50
internet-portals	51
web-advertisements	52
cheating	53
gross	54
web-based-email	55
malware-sites	56
phishing-and-other-frauds	57
proxy-avoidance-and-anonymizers	58
spyware-and-adware	59
music	60
government	61
nudity	62
news-and-media	63
illegal	64
content-delivery-networks	65
internet-communications	66
bot-nets	67
abortion	68
health-and-medicine	69
spam-urls	71
dynamically-generated-content	74
parked-domains	75
alcohol-and-tobacco	76
private-ip-addresses	77
image-and-video-search	78
fashion-and-beauty	79
recreation-and-hobbies	80
motor-vehicles	81
web-hosting	82
category-incomplete	83
category-unknown	84

Total web categories = 81

The output of this command displays the list of web categories and the IDs associated with these categories.

show dpi webcategory-lookup

The following example shows the output of the **show dpi webcategory-lookup <url>** command:

```
(AP)# show dpi webcategory-lookup www.yahoo.com
```

```
Input URL: www.yahoo.com
```

```
Request sent for CLOUD LOOKUP, please try again.
```

On running command again, the following information is retrieved from the cloud server and displayed as the output:

```
Input URL: www.yahoo.com
```

```
Found CACHED RESULT:
```

```
URL: yahoo.com REP: 81 A1: 0, Serial = 0x200001
```

```
Index: 0 Category: internet-portals(51) Confidence level: 98
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.125 show dpi-error-page-url

Description

This command displays the list of custom error page URLs that are displayed when web access is blocked by the AppRF policies.

Syntax

```
show dpi-error-page-url
```

Usage Guidelines

Use this command to view the list of custom error page URLs. The error page URLs are displayed when client access to certain websites is blocked by the AppRF policies configured on the AP. The custom error page URLs are configured using **dpi-error-page-url** command.

Example

The following example shows the output of the **show dpi-error-page-url** command:

```
(AP)# show dpi-error-page-url
```

```
Global DPI error page URLs Config
```

```

-----
ID URL
--

```

The output of this command displays ID and URLs that are blocked.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.126 show dpi-stats

Description

This command displays the DPI statistics.

Syntax

```
show dpi-stats
```

```

app [id <app> [deny] [full] |user ip <ipaddr> [deny] [full] | [ssid <ssid-name>]
full | deny [full] | full]

```

```

appcategory [id <appcat> [deny] [full] |user ip <ipaddr> [deny] [full] | [ssid
<ssid-name>] full | deny [full] | full]

```

```
session [full]
```

```

webcategory [id <web> [deny] [full] |user ip <ipaddr> [deny] [full] | [ssid <ssid-
name>] full | deny [full] | full]

```

```

webreputation [id <rep> [deny] [full] |user ip <ipaddr> [deny] [full] | [ssid
<ssid-name>] full | deny [full] | full]

```

Command/Parameter	Description
app	Displays application statistics.
appcategory	Displays the DPI statistics for application category.
session	Displays datapath session details for DPI.
webcategory	Displays the DPI statistics for web category.
webreputation	Displays the DPI statistics for web reputation score.
ssid	Displays the DPI statistics for the last 15 minutes from each AP connected to the SSID in the network.
ssid name	Displays DPI statistics for the last 15 minutes for the specified SSID.
id	Displays DPI statistics for the specified application, application category, web category or web reputation ID.
user ip <ip-addr>	Displays DPI statistics for specified user IP address.

Command/Parameter	Description
full	Displays the complete DPI statistics for the application, application category, session, web category, and web reputation stored on the AP since the last 15 minutes.
deny	Displays the blocked URLs and web content related traffic.

Usage Guidelines

This command displays the DPI statistics.

Example

show dpi-stats app

The following example shows the output of the **show dpi-stats app full** command:

```
Last snapshot timestamp 17:10:47

Dpi Top Application list
-----

App            AppId      Total bytes
---            -
apple          306        10172
apns           1118       278
Not-Classified 0          160
-----

Total bytes :10610

Classification percentage 98
```

show dpi-stats appcategory

The following example shows the output of the **show dpi-stats appcategory full** command:

```
Last snapshot timestamp 17:10:47

Dpi Top Application category list
-----

App            AppId      Total bytes
---            -
apple          306        10172
apns           1118       278
Not-Classified 0          160
-----

Total bytes :10610

Classification percentage 98
```

show dpi-stats appcategory

The following example shows the output of the **show dpi-stats appcategory full** command:

Last snapshot timestamp 17:10:47

Dpi Top Application category list

App Category	App Category Id	Total bytes
web	20	10172
mobile-app-store	11	278
Not-Classified	0	160

Total bytes :10610

Classification percentage 98

show dpi-stats session

The following example shows the output of the **show dpi-stats session full** command:

Datapath DPI CDR Session Table Entries

Source IP	App	Webcat	TX Bytes	Rx Bytes	Webrep
172.31.98.103	google-plus(1125)	social-networking-web(14)			trustworthy-sites(5)
3697					
172.31.98.103	krb5(97)	Not-Classified(0)			Not-Classified
		(0) 8237		5998	
172.31.98.189	smb(185)	Not-Classified(0)	(0) 886		Not-Classified
				0	
172.31.98.103	http(67)	Not-Classified(0)	(0) 507		Not-Classified
				4074	
172.31.98.103	https(68)	computer-and-internet-info(5)			trustworthy-sites(5)
449597	64440				
1					
172.31.98.103	yahoo(1294)	web-based-email(55)			trustworthy-si
		tes(5)		604	
		10818			
172.31.98.103	gtalk(1441)	Not-Classified(0)			Not-Classified
		(0)		3375	
			5904		
172.16.100.17	ssdp(197)	Not-Classified(0)			Not-Classified
4		(0)		4339	
			0		

Datapath DPI CDR Session Table Entries

```

-----
Source IP      App      Webcat      Rx Bytes      Webrep
-----      ---      -
10.17.139.167  ssdp(197)  Not-Classified(0) (0) 6923  Not-Classified
10.17.139.183  ssdp(197)  Not-Classified(0) (0) 5458  Not-Classified

172.16.100.174 udp(216)  Not-Classified(0) 0  Not-Classified

10.17.139.167 windowslive(298) internet-  trustworthy-sites(5) 893
5907 portals(51)
172.31.98.103 http(67) computer-and- trustworthy-sites(5) 439
1783 internet-info(5)
10.17.139.183 http(67) computer-and- trustworthy-sites(5) 643
620 internet-info(5)

Num of Entries:47

```

show dpi-stats webcategory

The following example shows the output of the **show dpi-stats webcategory full** command:

```

Last snapshot timestamp 17:25:43

Dpi Top Web Category list

-----
Web Category      Web Category Id  Total bytes
-----
computer-and-internet-info  5  740
-----

Total bytes      740

```

show dpi-stats webreputation

The following example shows the output of the **show dpi-stats webreputation full** command:

```

Last snapshot timestamp 15:39:32

Dpi Top Web Reputation list

-----
Web Reputation      Web Reputation Id  Total bytes
-----
trustworthy-sites  5  1211900
moderate-risk-sites  3  2998

```

```
-----
Total bytes                :1214898
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.127 show drt state

Description

This command displays the status of DRT upgrade in an AP cluster.

Syntax

```
show drt state
```

Example

The following output is displayed for the **show drt state** command:

```
swarm drt upgrade status
```

```
-----

Mac                               IP Address                AP Class                Status
---                               -
70:3a:0e:cc:ed:5a                192.168.100.244          Lupus                   drt-ok
84:d4:7e:c5:23:ae                192.168.100.251          Hercules                drt-ok
a8:bd:27:c7:a5:3e                192.168.100.237          Ursa                    drt-ok
a8:bd:27:c7:a4:0e                192.168.100.174          Ursa                    drt-ok
f0:5c:19:cb:3f:b4                192.168.100.245          Hercules                drt-ok
f0:5c:19:cb:3e:94                192.168.100.177          Hercules                drt-ok
40:e3:d6:cf:f7:46                192.168.100.236          Ursa                    drt-ok
f0:5c:19:c9:c7:be                192.168.100.240          Vela                    drt-ok
ac:a3:1e:c5:c5:58                192.168.100.238          Centaurus               drt-ok
20:4c:03:0e:c4:74                192.168.100.248          Vela                    drt-ok
94:b4:0f:c1:bc:84                192.168.100.249          Centaurus               drt-ok
00:0b:86:8f:54:12                192.168.100.254          Aries                   drt-ok
94:b4:0f:ca:ba:e4                192.168.100.241          Centaurus               drt-ok
40:e3:d6:cf:f4:de                192.168.100.252          Ursa                    drt-ok
94:b4:0f:ca:d7:38                192.168.100.243          Centaurus               drt-ok
20:4c:03:17:d7:84                192.168.100.135          Ursa                    drt-ok
c8:b5:ad:c3:ad:0a                192.168.100.250          Draco                   drt-ok
a8:bd:27:cf:ec:4c                192.168.100.253          Hercules                drt-ok
a8:bd:27:ca:2b:5c                192.168.100.242          Vela                    drt-ok
DRT version                       :1.0_63044
DRT build time                     :Jan 2,2018
Default from Image                 :Yes
Upgrade in process                 :No
```



```

Upgrade status           :drt ok
DRT sync in process      :No
Reset in process         :No

```

Parameter	Description
DRT version	Shows the DRT version of the AP.
DRT build time	Shows the date the DRT build has passed.
Default from Image	Shows whether the AP is using the default DRT from the image.
Upgrade in process	Shows whether the DRT upgrade of the SCALANCE W cluster is in progress.
Upgrade status	Shows the status of DRT upgrade.
DRT sync in process	Shows if there is a slave AP synchronizing the DRT file from the master AP.
Reset in process	Shows if the new DRT file is being reset to the default DRT of the image

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.128 show election

Description

This command shows master AP election statistics.

Syntax

```
show election {statistics}
```

Parameter	Description
statistics	Shows master election statistics.

Usage Guidelines

Use this command to view the statistics of the AP selected as Virtual Controller.

Example

The following example shows the output of **show election statistics** command:

```

State : Master
master_beacon : sent=8162 rcvd=0

```

```

hierarchy_beacon: sent=7685 rcvd=0
hierarchy_ack : sent=0 rcvd=0
beacon_req : sent=0 rcvd=0
Slave->Pot-Master : 0
time Pot-master->Master: 0 time
Pot-master->Slave : 0
time spoof arp rcvd: 0
last spoof mac: 00:00:00:00:00:00

```

The output of this command includes the following information:

Parameter	Description
State	Indicates if the AP is provisioned as master
master_beacon	Displays the number of beacons transmitted and received by the master AP.
hierarchy_beacon	Displays the number of hierarchy beacons transmitted and received.
hierarchy_ack	Displays the number of hierarchy messages transmitted and received.
beacon_req	Displays the number of beacons required.
beacon_resp	Displays a response from the master AP to the beacon request of the slave AP.
election wait	Displays the shortest waiting time of an AP between one Virtual Controller going down and the new Virtual Controller becoming active.
timer slow	Indicates that the AP has waited longer than expected, and that the timer slow is caused by a CPU overload.
master high cpu	Indicates the CPU usage of the master AP. The allowed limit is 85.
ap cpu usage	Indicates the CPU usage of the existing AP.
Slave->Pot-Master	Displays a count of transitions from slave to pot-master state.
Pot-master->Master	Displays a count of transitions from pot master to master state.
Pot-master->Slave	Displays a count of transitions from pot master to slave state.
last spoof arp rcvd	Displays the last detected ARP spoof attack.
last spoof mac	Displays the MAC address of the last spoof detected. last beacon received ticks
max beacon miss ticks	Displays the maximum time between the current beacon and last beacon
hierarchy mode	Indicates that the AP is in hierarchy mode.
last hierarchy beacon received ticks	Displays the time between the current hierarchy beacon and last hierarchy beacon.
provisioned master denied	Indicates that the preferred AP has been denied as a master.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.129 show external-captive-portal

Description

This command displays the external captive portal configuration details.

Syntax

```
show external-captive-portal [<name>]
```

Parameter	Description
name	Filters the output based on an existing external captive portal profile.

Usage Guidelines

Use this command to view information about the external captive portal server configuration details.

Example

The following output is displayed for the **show external-captive-portal** command:

```
External Captive Portal
```

```
-----
```

```
Name      Server  Port      Url      Auth Text      Redirect Url      Server Fail
Through   Disable Auto Whitelist  Use HTTPs      Server Offload  Prevent Frame
Overlay  In Use      Redirect Mode
```

```
----      -
-----      -
-----      -
-----      -
```

```
default  localhost      80      /      Authenticated      Disable  Enable
Yes      No

Samuel    localhost      80      /      Authenticated      Disable  Disable
No      No

test      localhost      80      /      Authenticated      Disable  Disable
No      No
```

The output of this command displays details such as the external captive portal profile name, server name, server port, redirection URL, and automatic whitelisting status.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.130 show facebook

Description

This command displays the Facebook configuration details when an AP successfully registers with Facebook.

Syntax

```
show facebook
```

Usage Guidelines

Use this command to view Facebook configuration details.

Example

The following example shows the output of **show facebook** command:

```
Facebook Id      :461857943969928
```

```
Config Url       :https://www.facebook.com/wifiauth/config?gw_id=461857943969928
```

The output of this command displays the Facebook ID and the configuration URL if the AP registration with Facebook is successful.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.131 show fault

Description

This command displays the list of active faults that occur in the event of a system fault and the faults that were cleared from the system.

Syntax

```
show fault [history]
```

Parameter	Description
history	Displays the list of faults that were cleared.

Usage Guidelines

Use this command to view the active faults for an AP. Active faults are generated due to system faults.

Example

The following example shows the output for the **show fault** command:

```
Active Faults
-----

Time Number Description
---- -
Total number of entries in the queue :0
```

The following example shows the output for the **show fault history** command:

```
Cleared Faults
-----

Time Number Cleared By Description
---- -
Total number of entries in the queue :0
```

The output of these commands provide the following information:

Parameter	Description
Timestamp	Displays the system time at which an event occurs.
Number	Indicates the sequence
Cleared By	Displays the module which cleared this fault.
Description	Provides a short description of the event details.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.132 show firewall

Description

This command displays the status of firewall settings of an AP.

Syntax

```
show firewall
```

Usage Guidelines

Use this command to view the firewall configuration details of the AP.

Example

The following example shows the output of **show firewall** command:

```
Firewall
-----
Type                Value
----                -
Auto topology rules  disable
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.133 show g-max-clients

Description

This command displays the maximum number of clients allowed for an SSID profile on a 2.4 GHz radio channel.

Syntax

```
show g-max-clients <ssid_profile>
```

Parameter	Description	Range
<ssid_profile>	Denotes the SSID profile for which the maximum clients limit is to be configured.	-

Usage Guidelines

Use this command to view the maximum number of clients allowed for a 2.4 GHz radio channel SSID profile.

Example

The following **show g-max-clients** command output displays the maximum number of clients allowed to connect to the each SSID:

```
(AP)# show g-max-clients

test1 : 77
test2 : 200
test3 : 64
```

The following **show g-max-clients <ssid_profile>** command output displays the maximum number of clients allowed to connect to the **test1** SSID:

```
(AP)# show g-max-clients test1

g-max-clients: 77
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.134 show ids

Description

This command displays the list of unknown APs and clients detected by the AP with the IDS feature enabled.

Syntax

```
show ids {ap <mac>| aps| client <mac>|clients| phy-types| rap-types| rogue-ap <mac>}
```

Parameter	Description
ap <mac>	Displays the signal details for the AP.
aps	Displays the unknown Access Points detected by the AP.
client <mac>	Displays a details of the AP to which the client is connected.
clients	Displays a list of unknown clients detected by the AP.
phy-types	Displays the PHY details of the AP.

Parameter	Description
rap-types	Displays a list of Remote APs (RAPs) detected by the AP.
rogue-ap <mac>	Displays the list of rogue APs detected by the master AP in the AP cluster.

Usage Guidelines

Use this command to view the intrusion detection details.

Example

The following output is displayed for the **show ids aps** command:

```
Unknown Access Points Detected
-----
MAC Address Network Classification Chan. Type Last Seen
-----
6c:f3:7f:56:6d:01 NTT-SPOT Interfering 1 G 17:32:19
6c:f3:7f:56:67:41 NTT-SPOT Interfering 1 G 17:37:49
00:24:6c:2a:78:d2 edward-suiteb-178 Interfering 11 GN 20MZ 17:37:19
6c:f3:7f:94:63:30 avyas_vap1 Interfering 6 G 17:40:20
6c:f3:7f:94:63:02 avyas_vap2 Interfering 6 G 17:40:20 00:24:
6c:2a:7d:0b edward-suiteb Interfering 149 AN 40MZ 17:39:19
6c:f3:7f:a5:df:34 sw-san-rapng-nat Interfering 153 AN 20MZ 17:38:49
6c:f3:7f:56:7d:00 7SPOT Interfering 1 GN 20MZ 17:32:19
00:24:6c:80:8e:82 instant Interfering 11 GN 20MZ 17:29:48
00:1a:1e:40:06:00 test123 Interfering 11 G 17:37:49
00:24:6c:2a:78:d3 ssid_edward_psk_178 Interfering 11 GN 20MZ 17:37:49
6c:f3:7f:94:63:31 avyas_vap2 Interfering 6 G 17:40:20
6c:f3:7f:b5:bd:22 iClarice2 Interfering 6 GN 20MZ 17:39:19
6c:f3:7f:94:63:03 avyas_vap1 Interfering 6 G 17:40:20 00:24:
6c:2a:7d:0c edward_tls2k Interfering 149 AN 40MZ 17:39:19
6c:f3:7f:a5:df:35 sw-san-native Interfering 153 AN 20MZ 17:38:49
00:24:6c:80:4f:88 ethersphere-wpa2 Interfering 52 AN 40MZ 17:40:20
```

The **show ids aps** command output provides information on the MAC address of interfering APs, the network to which the unknown APs are connected, the interference classification, channels on which the unknown APs are detected, the radio configuration type and recent timestamp of the interference.

The following output is displayed for the **show ids clients** command:

Unknown Clients Detected

MAC Address	Network	Classification	Chan.	Type	Last Seen
-----	-----	-----	-----	-----	-----
00:26:c6:4d:2b:74	ethersphere-wpa2	Interfering	1	GN 20MZ	17:26:48
00:24:d7:40:a8:64	akvoicel	Interfering	6	G	17:38:49
00:24:d7:40:ca:88	akvoicel	Interfering	6	G	17:39:50
74:e5:43:4b:3b:ff	manju34-vap1	Interfering	44	AN 40MZ	17:39:50

The **show ids clients** command output provides information on the MAC address of interfering clients, the network to which the unknown clients are connected, the interference classification, channels on which the unknown clients are detected, the radio configuration type and recent timestamp of the interference.

The following output is displayed for the **show ids phy-types** command:

Physical Types

Keyword Value

b 0

a 1

g 2

ag 3

The following output is displayed for the **show ids rap-types** command:

RAP Types

Keyword Value

valid 0

interfering 1

rogue 2

dos-attack 3

unknown 4

known-interfering 5

suspect-rogue 6

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.135 show ids-detection config

Description

This command displays the list of intrusion detection policies configured on an AP.

Syntax

```
show ids-detection config
```

Usage Guidelines

Use this command to view a list of intrusion detection policies enabled for an AP.

Example

The following output is displayed for the **show ids-detection** command:

```
infrastructure detection level :      off
-----
Policies                          Status    Low      Medium    High
-----
detect-ap-spoofing                disable  enable   enable    enable
detect-windows-bridge             disable  enable   enable    enable
signature-deauth-broadcast        disable  enable   enable    enable
signature-deassociation-broadcast  disable  enable   enable    enable
detect-adhoc-using-valid-ssid      enable   disable  enable    enable
detect-malformed-large-duration    enable   disable  enable    enable
detect-ap-impersonation            enable   disable  disable   enable
detect-adhoc-network               enable   disable  disable   enable
detect-valid-ssid-misuse           enable   disable  disable   enable
detect-wireless-bridge             disable  disable  disable   enable
detect-ht-40mhz-intolerance        disable  disable  disable   enable
detect-ht-greenfield               disable  disable  disable   enable
detect-ap-flood                    disable  disable  disable   enable
detect-client-flood                disable  disable  disable   enable
detect-bad-wep                     disable  disable  disable   enable
detect-cts-rate-anomaly            disable  disable  disable   enable
detect-rts-rate-anomaly            disable  disable  disable   enable
detect-invalid-addresscombination  disable  disable  disable   enable
detect-malformed-htie              disable  disable  disable   enable
detect-malformed-assoc-req         disable  disable  disable   enable
detect-malformed-frame-auth        disable  disable  disable   enable
detect-overflow-ie                 disable  disable  disable   enable
detect-overflow-eapol-key          disable  disable  disable   enable
detect-beacon-wrong-channel        disable  disable  disable   enable
detect-invalid-mac-oui              disable  disable  disable   enable
client detection level :off
-----
Policies                          Status    Low      Medium    High
-----
detect-valid-clientmisassociation  disable  enable   enable    enable
detect-disconnect-sta              disable  disable  enable    enable
detect-omerta-attack                disable  disable  enable    enable
detect-fatajack                     disable  disable  enable    enable
detect-block-ack-attack             disable  disable  enable    enable
detect-hotspotter-attack            disable  disable  enable    enable
detect-unencrypted-valid           disable  disable  enable    enable
```

detect-power-save-dos-attack	disable	disable	enable	enable
detect-eap-rate-anomaly	disable	disable	disable	enable
detect-rate-anomalies	disable	disable	disable	enable
detect-chopchop-attack	disable	disable	disable	enable
detect-tkip-replay-attack	disable	disable	disable	enable
signature-airjack	disable	disable	disable	enable
signature-asleep	disable	disable	disable	enable

The output for this command provides the following information:

Parameter	Description
Infrastructure detection level	Indicates if the detection level for the policies is set to off, low, medium, or high.
Policies	Displays the list of intrusion detection policies.
Status	Indicates if a policy is enabled or disabled.
Low	Indicates if the detection level for a policy is set to low.
Medium	Indicates if the detection level for a policy is set to medium.
High	Indicates if the detection level for a policy is set to high.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.136 show ids-protection config

Description

This command displays the list of infrastructure protection policies for an AP.

Syntax

```
show ids-protection config
```

Usage Guidelines

Use this command to view the status of infrastructure protection policies on an AP.

Example

The following output is displayed for the **show ids-protection config** command:

```
Wireless Containment :none
Wired Containment :off
infrastructure protection level :off
-----
```

```

Policies Status Low High
-----
protect-ssid disable enable enable
rogue-containment disable enable enable protect-adhoc-
network disable disable enable
protect-ap-impersonation disable disable enable
client protection level :off
-----

Policies Status Low High
-----
protect-valid-sta disable enable enable protect-windows-
bridge disable disable enable

```

Parameter	Description
Infrastructure protection level	Indicates if the protection level for the policies is set to off, low, medium, or high.
Policies	Displays the list of wired and wireless network infrastructure protection policies.
Status	Indicates if a policy is enabled or disabled.
Low	Indicates if the protection level for a policy is set to low.
Medium	Indicates if the protection level for a policy is set to medium.
High	Indicates if the protection level for a policy is set to high.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.137 show image

Description

This command displays the SCALANCE W software version running on an AP.

Syntax

```
show image version
```

Example

The following example shows the output of **show image version** command:

```
Primary Partition Build Time :2013-03-31 11:47:06 PDT
Primary Partition Build Version :6.2.1.0-3.3.0.0_37845
AP Images Classes
-----
Class
-----
Hercules
```

Parameter	Description
Primary Partition Build Time	Shows the AP image build time.
Primary Partition Build Version	Shows the AP build version.
AP Image Class	Indicates the AP class.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.138 show inbound-firewall-rules

Description

This command displays the details of inbound firewall rules configured on an AP.

Syntax

```
show inbound-firewall-rules
```

Usage Guidelines

Use this command to view the details of the inbound firewall rules configured for an AP network.

Example

The following output is displayed for the **show inbound-firewall-rules** command:

Access Rules

Src IP (id:sport:eport)	Src Mask	Dest IP Application	Dest Mask Action	Dest Match Log	Protocol TOS	802.1P	Blacklist	App
Throttle (Up:Down)		Mirror	DisScan	ClassifyMedia				
-----	-----	-----	-----	-----	-----	-----	-----	-----
any	any	any	any	match	h323-			
tcp			permit					
any	any	192.0.2.0	255.255.255.0	match	h323-			
udp			permit					

The output of this command displays information about the inbound firewall access rule configuration parameters, which indicate whether a particular type of traffic is to allowed to a particular destination from the source subnet, and the service and protocol in use. It also indicates if other options such as logging and prioritizing traffic are enabled when the rule is triggered.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.139 show interface counters

Description

This command shows the Ethernet interface packet counters for the AP.

Syntax

```
show interface counters
```

Usage Guidelines

Use this command to view table of L2 interface counters.

Example

The following example shows the partial output of **show interface counters** command:

```
bond0 is up, line protocol is up
Hardware is Gigabit Ethernet, address is d8:c7:c8:c4:42:98
Speed 1000Mb/s, duplex full
Received packets 9441
Received bytes 1134064
Receive dropped 0
Receive errors 0
Receive missed errors 0
Receive overrun errors 0
Receive frame errors 0
Receive CRC errors 0
Receive length errors 0
Transmitted packets 16435
Transmitted bytes 841278
Transmitted dropped 0
Transmission errors 0
Lost carrier 0
```

Parameter	Description
Speed	Shows speed of the Ethernet interface.
Received packets	Shows total number of received packets.
Received bytes	Shows the total number of received bytes.
Receive dropped	Shows total number of packets dropped.

Parameter	Description
Receive errors	Shows total number of errors during packet receive.
Receive missed errors	Shows total number of errors missed during packet receive.
Receive overrun errors	Shows total number of received overrun errors.
Receive frame errors	Shows total number of frame errors during packet receive.
Receive CRC errors	Shows total number of CRC errors during packet receive.
Receive length errors	Shows total length of the error.
Transmitted packets	Shows total number of transmitted packets.
Transmitted bytes	Shows total number of transmitted bytes.
Transmitted dropped	Shows total number of packets dropped.
Transmission errors	Shows total number of errors during packet transmit.
Lost carrier	Shows total number of lost carriers.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.140 show iot transportProfile

Description

This command displays the IoT profile status information.

Syntax

```
show iot transportProfile [<profile-name>]
```

Example

The following example shows the output of **show iot transportProfile** command:

```
Default Meridian Profile for BLE
-----

Endpoints                               References
-----
Beacon-Management                       0
Asset-Tracking-WSS                      0
Asset-Tracking-HTTPS                    0
=====
```


IoT Data Profile List

Name	References	EndpointType
test10	1	Meridian-Asset-Tracking
test3	1	ZF
test2	1	Meridian-Beacon-Management

Total:3
 xg_test# show iot transportProfile test3 IoT Data Profile "test3"

Parameter	Value
EndpointURL	https://app.detagtive.com
EndpointType	ZF
PayloadContent	zf-tags
TransportInterval	10s
Token	N/A
ID	N/A
Username	ankur.kamthe@gmail.com
Password	It2GbjTXFAYEpHg43VOK2_2KrWePwmVPKwSHBTEj-jM

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.141 show ip dhcp database

Description

This command displays the DHCP server settings.

Syntax

```
show ip dhcp database
```

Usage Guidelines

Use this command to the DHCP server settings. The DHCP server is a built-in server, used for networks in which clients are assigned IP address by the Virtual Controller.

Example

The following output is displayed for the **show ip dhcp database** command:

```
DHCP Subnet          :192.0.2.0
DHCP Netmask         :255.255.255.0
DHCP Domain Name     :example.com
DHCP DNS Server      :192.0.2.1
DHCP DNS Cache       :Disabled
```

The output of this command provides the following information:

Column	Description
DHCP subnet	Indicates the network range for the client IP addresses.
DHCP Netmask	Indicates the subnet mask specified for the IP address range for the DHCP subnet.
DHCP Lease Time (m)	Indicates the duration of DHCP lease. The lease time refers to the duration of lease that a DHCP-enabled client has obtained for an IP address from a DHCP server.
DHCP Domain Name	Indicates the domain-name of the DHCP client.
DHCP DNS Server	Indicates the IP address of the DNS server.
DHCP DNS Cache	Indicates if the DNS cache is enabled.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.142 show ip igmp

Description

This command displays information about the IGMP table.

Syntax

```
show ip igmp group [maddr <multicast-addr>]
```

Parameter	Description
maddr <multicast-addr>	Filters group table information based on the multicast IP address.

Usage Guidelines

Use this command to view the IGMP group table information for an AP.

Example

The following output is displayed for the **show ip igmp group** command:

```
IGMP Group Table
```

```
-----
```

Group	Members	vlan
239.255.255.250	1	333
224.0.0.251	1	333
224.0.0.252	1	333

The following output is displayed for the **show ip igmp group maddr <multicast-addr>** command:

```
IGMP Group 224.0.0.251 Table
```

```
-----
```

Member	Mac	Vlan	Destination	Age
-----	---	----	-----	---
10.17.88.226	08:ed:b9:e1:51:7d	333	aruba002	15

The output of this command includes the following parameters:

Parameter	Description
IGMP Group Table	Displays details for the IGMP multicast group.
Group	Indicates the IP addresses for the multicast group.
Members	Indicates the number of members assigned to the multicast group.
VLAN	Indicates the VLAN ID associated with the multicast group.
IGMP Group <multicast- address> Table	Displays the IGMP details specific to a multicast address.
Member	Indicates the IP address of the member associated with the specified multicast group address.

Parameter	Description
MAC	Indicates the MAC address of member associated with the specified multicast group address.
VLAN	Indicates the VLAN ID associated with the multicast groups or a specific multicast group address.
Destination	Indicates the destination to which the multicast packets are routed.
Age	Indicates the aging time of the forwarding table entries.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.143 show ip interface brief

Description

This command displays a summary of IP related information for all interfaces configured on an AP.

Syntax

```
show ip interface brief
```

Usage Guidelines

Use this command to view a brief summary of IP related information for the AP interfaces.

Example

The following output is displayed for the **show ip interface brief** command:

```
Interface IP Address / IP Netmask Admin Protocol  
br0 10.17.88.188 / 255.255.255.192 up up
```

The output of this command provides the following information:

Column	Description
Interface	Lists the interface and interface identification, where applicable.
IP Address /IP Netmask	Lists the IP address and subnet mask for the interface.

Column	Description
Admin	Displays the administrative status of the interface. • Enabled—up • Disabled—down
Protocol	Displays the status of the IP on the interface. • Enabled—up • Disabled—down

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.144 show ip route

Description

This command displays the AP routing table.

Syntax

```
show ip route
```

Usage Guidelines

Use this command to view the IP routes configured for an AP.

Example

The following output shows the ip address of routers and the VLANs to which they are connected.

Kernel IP routing table

Destination	Gateway	Genmask	Flags	MSS	Window	irrt	Iface
172.16.10.1	0.0.0.0	255.255.255.255	UH	0	0	0	tun0
10.17.88.128	0.0.0.0	255.255.255.192	U	0	0	0	br0
2.2.2.0	0.0.0.0	255.255.255.0	U	0	0	0	br0
192.168.10.0	0.0.0.0	255.255.254.0	U	0	0	0	br0
0.0.0.0	10.17.88.129	0.0.0.0	UG	0	0	0	br0

The output of this command provides the following information:

Column	Description
Destination	Displays the destination IP address for the IP routes.
Gateway	Displays the gateway IP address for the IP routes.
Genmask	Displays the subnet mask details for the IP routes.
Flags	Indicates if the route is up (U), targeted to the host (UH), or if it uses Gateway (UG).
MSS	Indicates the default MSS for TCP connections over this route.
Window	Indicates the default window size for TCP connections over this route.
irrt	Indicates the initial RTT. The kernel uses this to determine the best TCP protocol parameters instead of relying on slow responses.
Iface	Indicates the Interface to which packets are routed.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.145 show ipv6 interface

Description

Shows IPv6-related information for all interfaces on the AP.

Syntax

```
show ipv6 interface {brief|details}
```

Parameter	Description
brief	Displays a brief summary of the IPv6-related information on all interfaces of an AP.
details	Displays detailed information on the interfaces that support IPv6.

Usage Guidelines

Use this command to view IPv6 related information on an AP.

Example

The following example shows the output of the **show ipv6 interface brief** command:

```
IPv6 is enable, link-local address is fe80::aea3:1eff:fe8d:471a/64
br0 is up, line protocol is up
Global unicast address(es):
2001:470:36:5c3:aea3:1eff:fe8d:471a/64, subnet is 2001:470:36:5c3::/64
2001:470:36:5c3:ffff:ffff:ffff:1001/128, subnet is
2001:470:36:5c3:ffff:ffff:ffff:1001/128
2001:470:36:5c3:ffff:ffff:ffff:5b/64, subnet is 2001:470:36:5c3::/64
```

The following example shows the output of the **show ipv6 interface details** command:

```
1: lo: <LOOPBACK,UP,10000> mtu 16436
inet6 ::1/128 scope host
valid_lft forever preferred_lft forever
15: br0: <BROADCAST,MULTICAST,UP,10200> mtu 1300 qlen 1000
inet6 2001:470:36:5c3:ffff:ffff:ffff:5b/64 scope global
valid_lft forever preferred_lft foreve
inet6 2001:470:36:5c3:aea3:1eff:fe8d:471a/64 scope global dynamic
valid_lft 2963sec preferred_lft 1963sec
inet6 2001:470:36:5c3:ffff:ffff:ffff:1001/128 scope global
valid_lft forever preferred_lft forever
inet6 fe80::aea3:1eff:fe8d:471a/64 scope link
```

```
valid_lft forever preferred_lft forever
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.146 show ipv6 route

Description

This command displays the IPv6 routing table.

Syntax

```
show ipv6 route
```

Usage Guidelines

Use this command to view the static IPv6 routes configured on the AP.

Examples

The following example shows the output of the **show ipv6 route** command:
Kernel IPv6 routing table

Destination	Next Hop	Flags	Metric
-----	-----	-----	-----
2001:470:36:5c3:ffff:ffff:ffff:1001/128	::		256
2001:470:36:5c3::/64	::	UA	256
fe80::/64	::	U	256
::/0	fe80::6273:5cff:fe65:ee19	UGDA	1024
::1/128	::	U	0
2001:470:36:5c3:aea3:1eff:fe6d:471a/128	::	U	0
2001:470:36:5c3:ffff:ffff:ffff:5b/128	::	U	0
2001:470:36:5c3:ffff:ffff:ffff:1001/128	::	U	0
fe80::aea3:1eff:fe6d:471a/128	::	U	0
ff02::d/128	ff02::d	UC	0
ff02::1:2/128	ff02::1:2	UC	0
ff00::/8	::	U	256

Ref	Use Iface
---	-----
0	0 br0
0	0 br0
0	0 br0
0	0 br0
0	1 lo
0	1 lo
2800	1 lo
6	1 lo


```

6602      1 lo
12194     0 br0
2         0 br0
0         0 br0

```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.147 show lacp status

Description

This command displays the LACP configuration status on an AP.

Syntax

```
show lacp status
```

Usage Guidelines

LACP provides a standardized means for exchanging information with partner systems to form a dynamic LAG. The LACP feature is automatically enabled during AP boots and it dynamically detects the AP if connected to a partner system with LACP capability, by checking if there is any LACP PDU received on either ethernet 0 or ethernet 1 port.

Example

The following example shows the output of the **show lacp status** command:

```

AP LACP Status
-----

Link Status   LACP Rate   Num Ports   Actor Key   Partner Key   Partner MAC
-----
Up            slow        2           17          1             70:81:05:11:3e:80

Slave Interface Status
-----

Slave I/f Name Permanent MAC Addr Link Status Member of LAG Link Fail Count
-----
eth0           6c:f3:7f:c6:76:6e Up          Yes          0
eth1           6c:f3:7f:c6:76:6f Up          Yes          0

Traffic Sent on Enet Ports

```

```

-----
Radio Num  Enet 0 Tx Count  Enet 1 Tx Count
-----
0          0              0
1          0              0
non-wifi   2              17

```

The output of this command displays details such as the link status, number of ports, AP partner MAC address, and the interface status.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.148 show l3-mobility

Description

This command displays details about the Layer-3 (L3) events, mobility configuration, and roaming status of the AP clients.

Syntax

```
show l3-mobility {config| datapath| events [<count> <mac>]| status}
```

Parameter	Description
config	Displays the L3 mobility configuration details for an AP.
datapath	Displays the datapath statistics associated with L3 mobility.
events [<count> <mac>]	Displays L3 mobility events for all AP clients or individual clients filtered based on MAC address.
status	Displays the L3 mobility status for an AP.

Usage Guidelines

Use this command to view the L3 mobility information for an AP.

Example

show l3-mobility config

The following example shows the output of the **show l3-mobility config** command:

```

Flags
-----
Type Value

```

```

-----
Home Agent Load Balancing enable

Virtual Controller Table
-----

VirtualRoaming Client Table
-----

Client MAC Home Vlan VAP Vlan Tunnel ID Status Virtual Controller IP Peer IP Old AP
IP Device Name
-----
- -----
-----

Tunnel Table
-----

Peer IP Local Tunnel ID Remote Tunnel ID Use Count Type
-----

Virtual Controller Table
-----

Virtual Controller IP Type HAP IP Local Tunnel ID Remote Tunnel ID
-----

192.0.1.0 C - - - Controller IP
-----

192.0.1.0

Subnet Table
-----

Subnet Netmask VLAN Virtual Controller
-----

192.0.2.0 255.255.255.255 2 192.0.1.0

```

The output of this command provides the following information:

Column	Description
Flags	Indicates if any L3 mobility features are enabled.
Type	Indicates the type of the flag.
Value	Indicates if a flag is enabled.
Virtual Controller IP	Displays the Virtual Controller IP address. The Virtual Controller IP configuration for each AP allows the clients to roam seamlessly among all the APs.
Subnet	Indicates the IP address for the mobility domain.
Netmask	Displays the subnet mask configuration details.

Column	Description
VLAN	Displays the VLAN ID configured for the mobility domain.
Virtual Controller	Displays the Virtual Controller configuration associated with the mobility domain.

show l3-mobility datapath

The following example shows the output of **show l3-mobility datapath** command:

```
L3 Mobility Datapath Home Table
-----

Client Index Client MAC Home Vlan Destinaton Device Index
-----

L3 Mobility Datapath Foreign Table
-----

Client Index Client MAC Home Vlan VAP Vlan Destinaton Device Index HAP IP Virtual
Controller
IP Packets Forwarded
-----

L3 Mobility Datapath Tunnel Table
-----

Tunnel Device Remote Protocol Dest IP Clients Idle Time Rx Packets Tx Packets Rx
Mcasts Tx
Mcasts ARP Proxy Pkts Tx Jumbo MTU Rx HB Tx HB MTU Reqs MTU Resps HB Mismatch IP
Mismatch Type
Vlan Translations
-----
--
-----
-----
-----
```

The output of this command provides the following information:

Parameter	Description
L3 Mobility Datapath Home Table	Displays details such as client index, client MAC address, VLAN, destination device associated with the L3 mobility home subnet.
L3 Mobility Datapath Foreign Table	Displays details such as client index, client MAC address, VLAN, Destination device, home AP IP address, Virtual Controller IP address and packet details associated with the L3 mobility foreign subnet.

Parameter	Description
L3 Mobility Datapath Tunnel table	Displays the following details about L3 mobility tunnel: • Tunnel - Indicates the tunnel interface. • Device - Displays the device ID. • Remote Protocol - Indicates the remote protocol used by the roaming clients. • Dest IP - Indicates the destination IP address to which the packets are routed. • Clients - Displays the list of clients • Idle Time - Displays the idle time • Rx Packets - Displays information about packets received. • Tx Packets - Displays information about packets transmitted. • Rx Mcasts - Displays information about multicast packets received. • Tx Mcasts - Displays information about multicast packets transmitted. • ARP Proxy Pkts - Displays information packets resolved to destination IP address by the proxy Address Resolution Protocol (ARP) • Tx Jumbo MTU - Displays information about the Maximum Transmission Unit (MTU) in jumbo frames. • Rx HB • Tx HB • MTU Reqs - Indicates the number of MTU requests sent. • MTU Resps - Indicates the number of MTU responses received. • HB Mismatch • IP Mismatch - Indicates IP address mismatch if any • Type • Vlan Translations - Displays details about VLAN translation

show l3-mobility events

The following example shows the output of the **show l3-mobility events** command:

```
L3 Mobility Events
-----

Time Client MAC Event IP Dir

----
-----

May 9 23:26:29 08:ed:b9:e1:51:87 Station Offline
10.17.88.59 <-

May 9 23:26:29 08:ed:b9:e1:51:87 Potential Foreign Client10.17.88.59 <-

May 9 23:09:05 08:ed:b9:e1:51:87 This Client is Normal 10.17.88.59 ->

Peer IP Home Vlan VAP Vlan Tunnel ID Old AP IP FAP IP HAP IP VC IP Additional Info
-----
-----

self - 1 - - - - -
self - - - - -
```

```
self - 1 - - 10.17.88.59 - 12-timed-out,test
```

The output of this command provides the following information

Parameter	Description
Time	Indicates the timestamp of the L3 mobility event.
Client MAC	Indicates the MAC address of the roaming clients.
Event	Provides a description of the mobility event.
IP	Indicates the IP address of the roaming client.
Dir	Indicates if the client has roamed in or out of the mobility subnet.
Peer IP	Displays the peer IP address, if any peer clients are configured.
Home Vlan	Displays the VLAN ID associated with the home subnet.
VAP Vlan	Displays the VLAN ID associated with the Virtual AP.
Tunnel ID	Indicates the tunnel interface used for routing packets.
Old AP IP	Indicates the IP address of the AP from which the client has roamed.
FAP IP	Indicates the IP address of the AP in the foreign subnet.
HAP IP	Indicates the IP address of the AP in the home subnet, to which the client is currently connected.
VC IP	Indicates the IP address of the Virtual Controller.
Additional Info	Displays additional information if any.

show l3-mobility status

The following example shows the output of the **show l3-mobility status** command:

The output of this command provides the following information:

Parameter	Description
Roaming Client Table	Displays details such as client MAC address, Home AP and Virtual AP VLAN, Tunnel ID, roaming status, Virtual Controller IP address, peer IP address, old IP address, and the name of the device.
Tunnel Table	Displays details such as peer IP address, local tunnel ID, remote tunnel ID, tunnel count, and the type of tunnel used for routing packets.
Virtual Controller Table	Displays details such as Virtual Controller IP address, type, Home AP IP address, local tunnel ID, and remote tunnel ID.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.149 show ldap-servers

Description

This command displays the LDAP servers configured for user authentication on the Virtual Controller.

Syntax

```
show radius-servers
```

Usage Guidelines

Use this command to view the LDAP server configuration information available on an AP.

Example

The following example shows the output of **show ldap-servers** command:

```
LDAP Servers
-----
Name IP Address Port Timeout Retry Count Admin-DN Admin Password
-----
Server1 192.0.2.5 389 5 3 admin-dn cn=admin password123

Base-DN Filter Key-Attribute In Use
-----
dc=example, dc=com (objectclass=*) sAMAccountName No
```

The output of this command provides the following information:

Command/Parameter	Description
Name	Displays the name of the LDAP authentication server.
IP Address	Displays the IP address of the LDAP server.
Port	Displays the authorization port number of the LDAP server.
Timeout	Displays a timeout value for the LDAP requests from the clients.
Retry Count	Displays number of times that the clients can attempt to connect to the server.
Admin-DN	Displays distinguished name for the administrator.
Admin Password	Displays the password for LDAP administrator.
Base-DN	Displays a distinguished name for the node which contains the entire user database.
Filter	Shows the filter to apply when searching for a user in the LDAP database.
Key-Attribute	Displays the attribute to use as a key when searching for the LDAP server. For Active Directory, the value is sAMAccountName
In Use	Indicates if the server is in use.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.150 show lhm

Description

This command displays the periodic and on-demand WAN link health monitoring policies (tests) that are configured on an AP; it also shows the number of times each policy has run on an AP.

Syntax

```
show lhm
    policy
    status
```

Parameter	Description
policy	Displays the lists of periodic and on-demand policies that are configured in an AP.
status	Displays the number of times each configured policy has run on an AP.

Usage Guidelines

Use this command to view the list of policies (containing a combination of reachability, connectivity, and performance tests) configured on an AP. The policies are configured from the **Clarity > Health Check** page.

Example

The **show lhm status** command displays the number of times the policies configured on an AP have run. As there are no policies configured on the AP, the status shows up as **Empty** in this command output.

```
Periodic Policy Statistics
-----

Last Policy Table Flush Time :00:00:00

Pending Periodic Policy Status
-----

Available Tokens :950
```



```

Executing :No
Queued Periodic Policies
Queue-0 :Empty
Queue-1 :Empty
Queue-2 :Empty
Queue-3 :Empty
On-demand policy :No on-demand Policy in progress

```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.151 show log ap-debug

Description

This command shows the AP debug .

Syntax

```
show log ap-debug <count>
```

Parameter	Description
<count>	Starts displaying the log output from the specified number of lines of the log.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.152 show log apifmgr

Description

This command shows the log information for AP interface manager.

Syntax

```
show log apifmgr <count>
```

Parameter	Description
count	Starts displaying the log output from the specified number of lines from the end of the log.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.153 show log convert**Description**

This command shows image conversion details for the AP.

Syntax

```
show log convert
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.154 show log debug

Description

This command shows the AP full log.

Syntax

```
show log debug{count}
```

Parameter	Description
<count>	Starts displaying the log output from the specified number of lines from the end of the log.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.155 show log openflow

Description

This command displays the OpenFlow logs of an AP.

Syntax

```
show log openflow
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.156 show log papi-handler

Description

This command shows the cluster security debugging logs.

Syntax

```
show log papi-handler {count}
```

Parameter	Description
{count}	Starts displaying the log output from the specified number of lines from the end of the log.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.157 show log drive

Description

This command displays the status of drivers configured on the AP.

Syntax

```
show log driver <count>
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.158 show log kernel

Description

This command shows AP's kernel logs.

Syntax

```
show log kernel
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.159 show log l3-mobility

Description

This command displays the logs for Layer-3 mobility domains configured on an AP.

Syntax

```
show log l3-mobility [<count>]
```

Parameter	Description
<count>	Filters the log output based on the number specified.

Usage Guidelines

Use this command to view the L3-mobility logs for an AP.

Example

The following output is displayed for the **show log l3-mobility** command:

```
May 9 21:23:07: Potential Foreign Client Information: mac c4:85:08:de:06:d4 rcvd from
self

vlan 0, 1 tid 255 oldapip 0.0.0.0 fapip 10.17.88.59 hapip 0.0.0.0 vcip 0.0.0.0 info
l2-timed-

out,test

May 9 01:43:22: Station Offline: mac 08:ed:b9:e1:51:87 rcvd from self vlan 0, 0 tid
255
```

```

oldapip 0.0.0.0 fapip 0.0.0.0 hapip 0.0.0.0 vcip 0.0.0.0 info
May 9 01:25:53: This Client is Normal: mac 08:ed:b9:e1:51:87 sent to self vlan 0, 1
tid 255

oldapip 0.0.0.0 fapip 10.17.88.59 hapip 0.0.0.0 vcip 0.0.0.0 info
May 9 01:25:53: Too many retries: mac 08:ed:b9:e1:51:87 rcvd from self vlan 0, 1 tid
255

oldapip 0.0.0.0 fapip 10.17.88.59 hapip 0.0.0.0 vcip 0.0.0.0 info
May 9 01:25:52: Potential Foreign Client Information: mac 08:ed:b9:e1:51:87 rcvd from
self

vlan 0, 1 tid 255 oldapip 0.0.0.0 fapip 10.17.88.59 hapip 0.0.0.0 vcip 0.0.0.0 info
12-timed-

out,test

```

The output of this command provides the following information:

Content	Description
Timestamp	Indicates the timestamp of the L3 mobility event.
Client MAC	Indicates the MAC address of the roaming clients.
Event	Provides a description of the mobility event.
Home Vlan	Displays the VLAN ID associated with the home subnet.
VAP Vlan	Displays the VLAN ID associated with the Virtua AP.
tid	Indicates the tunnel interface used for routing packets.
Old AP IP	Indicates the IP address of the AP from which the client has roamed.
FAP IP	Indicates the IP address of the AP in the foreign subnet.
HAP IP	Indicates the IP address of the AP in the home subnet, to which the client is currently connected.
VC IP	Indicates the IP address of the Virtual Controller.
Additional Info	Displays additional information if any.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.160 show log network

Description

This command shows network logs for the AP.

Syntax

```
show log network <count>
```

Parameter	Description
<count>	Starts displaying the log output from the specified number of lines from the end of the log.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.161 show log pppd

Description

Shows the Point-to-Point Protocol daemon (PPPd) network connection details.

Syntax

```
show log pppd <count>
```

Parameter	Description
<count>	PPPd network count.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.162 show log rapper

Description

This command show details the VPN connection logs in detail.

Syntax

```
show log rapper
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.163 show log rapper-brief

Description

This command provides brief information about IKE message transactions with the exact message and timestamp details.

Syntax

```
show log rapper-brief
```

Example

The following example shows the output of **show log rapper-brief** command.

```
2017-05-0303:00:16 SEND: 70947477257fa7e3 : eaca9e0d1af43efb , np=46, EXHG:
                        CREATE CHILD SA
2017-05-0303:00:16 RECV: 70947477257fa7e3 : eaca9e0d1af43efb , np=46, EXHG:
                        CREATE CHILD SA
2017-05-0303:00:16 ESP: spi[868dd900] 10:17:140:252 << 10:17:140:226 udp-encap
2017-05-0303:00:16 ESP: spi[497d2f00] 10:17:140:226 << 10:17:140:252 udp-encap
2017-05-0304:41:09 SEND: 70947477257fa7e3 : eaca9e0d1af43efb , np=46, EXHG:
                        CREATE CHILD SA
2017-05-0304:41:09 RECV: 70947477257fa7e3 : eaca9e0d1af43efb , np=46, EXHG:
                        CREATE CHILD SA
2017-05-0304:41:09 ESP: spi[7dead700] 10:17:140:252 << 10:17:140:226 udp-encap
2017-05-0304:41:09 ESP: spi[84fee200] 10:17:140:226 << 10:17:140:252 udp-encap
2017-05-0306:22:02 SEND: 70947477257fa7e3 : eaca9e0d1af43efb , np=46, EXHG:
                        CREATE CHILD SA
2017-05-0306:22:02 RECV: 70947477257fa7e3 : eaca9e0d1af43efb , np=46, EXHG:
                        CREATE CHILD SA
2017-05-0306:22:02 ESP: spi[56b60c00] 10:17:140:252 << 10:17:140:226 udp-encap
2017-05-0306:22:02 ESP: spi[e2920a00] 10:17:140:226 << 10:17:140:252 udp-encap
2017-05-0308:02:55 SEND: 70947477257fa7e3 : eaca9e0d1af43efb , np=46, EXHG:
                        CREATE CHILD SA
2017-05-0308:02:55 RECV: 70947477257fa7e3 : eaca9e0d1af43efb , np=46, EXHG:
                        CREATE CHILD SA
```


Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.164 show log rapper-counter

Description

This command displays information about the IKE message exchange, cookie, SPI, and error status for the IPsec SA creation, with timestamp details.

Syntax

```
show log rapper-counter
```

Example

The following example shows the output of **show log rapper-counter** command.

```
AP Mac: 18:64:72:c8:20:00

TIME PEER IP COOKIES SPI EXCH ERR
----
2017-05-02 06:49:38 | 10.17.140.252 | {6904164c4f81ce9d : e37903823fa5ca58} |
{0x7a379000 :
0x4c966100} | IKE_AUTH |
SUCCESS
2017-05-02 08:30:31 | 10.17.140.252 | {6904164c4f81ce9d : e37903823fa5ca58} |
{0xbbb7bb00 :
0xeeb51a00} | CREATE_CHILD_SA |
SUCCESS
2017-05-02 10:11:25 | 10.17.140.252 | {6904164c4f81ce9d : e37903823fa5ca58} |
{0xcfeb3300 :
0xfb1f1400} | CREATE_CHILD_SA |
SUCCESS
2017-05-02 11:52:18 | 10.17.140.252 | {6904164c4f81ce9d : e37903823fa5ca58} |
{0xb2dd5100 :
0x1dad7500} | CREATE_CHILD_SA |
SUCCESS
2017-05-02 13:33:11 | 10.17.140.252 | {8048813ca5b1eef9 : af50609e79ce0102} |
{0x2e3d9b00 :
```

4.16 S

```

0x76928b00} | CREATE_CHILD_SA |
SUCCESS

2017-05-02 15:14:04 | 10.17.140.252 | {8048813ca5b1eef9 : af50609e79ce0102} |
{0x6b0f4400 :
0x61f8bf00} | CREATE_CHILD_SA |
SUCCESS

```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.165 show log sapd

Description

This command shows the SAPd details.

Syntax

```
show log sapd <count>
```

Parameter	Description
<count>	Starts displaying the log output from the specified number of lines from the end of the log.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.166 show log security

Description

This command shows security logs of the AP.

Syntax

```
show log security <count>
```

Parameter	Description
<count>	Starts displaying the log output from the specified number of lines from the end of the log.

Example

The following example configures the 5 GHz radio channel:

```
(AP) # a-channel 44 18
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.167 show log system

Description

This command shows system logs of AP.

Syntax

```
show log system <count>
```

Parameter	Description
<count>	Starts displaying the log output from the specified number of lines from the end of the log.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.168 show log upgrade

Description

This command shows image download from URL and upgrade details for both local image file and URL for the AP.

Syntax

```
show log upgrade
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.169 show log user

Description

This command shows the AP user logs.

Syntax

```
show log user [count]
```

Parameter	Description
count	Starts displaying the log output from the specified number of lines from the end of the log.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.170 show log user-debug

Description

This command shows the AP user debug logs.

Syntax

```
show log user-debug [count]
```

Parameter	Description
count	Starts displaying the log output from the specified number of lines from the end of the log.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.171 show log vpn-tunnel

Description

This command shows VPN tunnel status for the AP.

Syntax

```
show log vpn-tunnel [count]
```

Parameter	Description
count	Starts displaying the log output from the specified number of lines from the end of the log.

Usage Guidelines

Use this command without the optional <count> parameter to view a complete table of VPN tunnel status. Include the <count> parameter to display status for the specified count of VPN tunnels.

Example

The following example shows the output of **show log vpn-tunnel** command:

```
2017-05-0206:49:16 tunnel_profile_init(2644): init tunnel profile <default>.
2017-05-0206:49:18 tunnel_uplink_change(3552): uplink changed, the new uplink
device=br0
2017-05-0206:49:18 tunnel_stop_check_primary_timer(995): current using
tunnel=unselected
2017-05-0206:49:36 addroute(529):Dst 0 mask 0 gw a118cee
2017-05-0206:49:36 addroute(529):Dst a118cfc mask 0 gw a118cee
2017-05-0206:49:36 tunnel_start_status_monitor_timer(1101): start tunnel status
timer.
2017-05-0206:49:36 tunnel_sysctl_set_hbt_booster: enable heartbeat tunnel
2017-05-0206:49:53 tunnel_preempt_config(2985): send message to config preemption to
option
none-preempt
2017-05-02 06:49:53 tunnel_preempt_config(3006): config preemption option to none-
preempt 2017-05-02 06:49:53 tunnel_preempt_config(3031): Warning!!! preempt have same
configure, return.
2017-05-02 06:49:53 cli_vpn_factory(2303): monitor frequency configure here.
2017-05-02 06:49:53 tunnel_send_pkt_freq_config(3255): config send icmp packet freq 5
for
monitor tunnel device.
2017-05-02 06:49:53 tunnel_psk_config(3124): config cert
2017-05-02 06:49:53 Manual GRE primary endpoint 0.0.0.0
2017-05-02 06:49:55 tunnel_sysctl_set_lmsip: Set LMSIP=172.16.0.254
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.172 show log vpn-tunnel-primary

Description

This command shows the primary VPN tunnel status for the AP

Syntax

```
show log vpn-tunnel-primary
```

Parameter	Description
primary tunnel	Displays the log output from the primary VPN tunnel.

Usage Guidelines

Use this command to view a table of a primary VPN tunnel status.

Example

The following example shows the output of **show log vpn-tunnel-primary** command:

```
2017-04-19 10:07:49 [primary tunnel] cli_proc_rapper_msg(852): Receive rapper msg
from 8423 port.

2017-04-19 10:07:49 [primary tunnel] Error!!!: Received RC_OPCODE_ERROR lms
10.17.132.51

tunnel 0.0.0.0 RC_ERROR_IKEP2_PKT1 debug-error:-8949

2017-04-19 10:07:49 [primary tunnel] tunnel_err_msg_rcv(1588): Error!!! Received
RC_OPCODE_

ERROR peer public ip 10.17.132.51 tunnel ip 0.0.0.0, controller ip 0.0.0.0,
RC_ERROR_IKEP2_

PKT1 debug-error:-8949 (ERR_IKE_TIMEOUT)
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.173 show log vpn-tunnel-backup

Description

This command shows the backup VPN tunnel status for the AP.

Syntax

```
show log vpn-tunnel-backup
```

Parameter	Description
backup tunnel	Displays the log output from the backup VPN tunnel.

Usage Guidelines

Use this command to view a table of a backup VPN tunnel status.

Example

The following example shows the output of **show log vpn-tunnel-backup** command:

```
2017-05-02 06:49:53 [backup tunnel] tunnel_config_remove(2896): configure remove,
tunnel backup

tunnel, type ipsec tunnel

2017-05-02 06:49:53 [backup tunnel] SM Handler not needed for state TUNNEL_STATE_INIT
event TUNNEL_EVENT_TUNNEL_DISCONNECT

2017-05-02 06:49:53 [backup tunnel] tunnel_unregister_action(2372): unregister ipsec
action. 2017-05-02 06:49:53 [backup tunnel] tunnel_unregister_action(2388): ipsec
client space already free.

E_TIMEOUT)
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.174 show log wireless

Description

This command shows wireless logs of the AP.

Syntax

```
show log wireless [<count>]
```

Parameter	Description
<count>	Starts displaying the log output from the specified number of lines from the end of the log.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.175 show memory

Description

Displays the information about memory utilization for an AP.

Syntax

```
show memory
```

Usage Guidelines

Use this command to view information about memory utilization on an AP.

Example

The following example shows the output of the **show memory** command:

```
MemTotal:      248048  kB
MemFree:       169204  kB
Buffers:       0       kB
Cached:        18164   kB
SwapCached:    0       kB
Active:        21472   kB
Inactive:      12640   kB
Active(anon):  15948   kB
Inactive(anon): 0       kB
Active(file):  5524    kB
```

4.16 S

```
Inactive(file):      12640    kB
Unevictable:        0         kB
Mlocked:            0         kB
SwapTotal:          0         kB
SwapFree:           0         kB
Dirty:              0         kB
Writeback:          0         kB
AnonPages:          15972    kB
Mapped:             7728     kB
Shmem:              0         kB
Slab:               32252    kB
SReclaimable:       884      kB
SUnreclaim:         31368    kB
KernelStack:        816      kB
PageTables:         512      kB
NFS Unstable:       0         kB
Bounce:             0         kB
WritebackTmp:       0         kB
CommitLimit:        124024   kB
Committed AS:       33616    kB
VmallocTotal:       516096   kB
VmallocUsed:        39452    kB
VmallocChunk:       449532   kB
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.176 show mgmt-user

Description

This command displays the credentials for management users for the AP management interface.

Syntax

```
show mgmt-user
```

Usage Guidelines

Use this command to view the admin user credentials required for accessing the AP and external server configuration details for the management users.

Example

The following output is displayed for the **show mgmt-user** command:

```
Server Load Balancing: Disabled
Local User DB Backup: Disabled
Hash Management Password: Enabled
RADIUS Servers
-----
Name IP Address Port Key Timeout Retry Count
-----
Server1 192.0.2.2 1616 23567aea01cb66d354d2b1f5d13df7f85d4a d1d1f181fb4827 5
NAS IP Address NAS Identifier In Use RFC3576
-----
Yes
Management User Table
-----
Name Password Type
-----
admin admin Admin
```

The output of this command provides the following information:

Column	Description
Server Load Balancing	Indicates if load balancing is enabled when two authentication servers are used.
Local User DB Backup	Indicates if the backing up of the local user database is enabled.

Column	Description
Hash Management Password	Indicates if hashing of management user password is enabled or disabled.
Name	Indicates the name of the RADIUS server.
IP address	Indicates the IP address of the RADIUS server.
Port	Indicates the authorization port number of the RADIUS server.
Key	Indicates the key for communicating with the RADIUS server.
Timeout	Indicates timeout value in seconds for one RADIUS request.
Retry count	Indicates the maximum number of authentication requests sent to the RADIUS server.
NAS IP address	Displays the IP address of the NAS if NAS is configured.
NAS Identifier	Indicates the NAS identifier to be sent with the RADIUS requests if NAS is configured.
In Use	Indicates if the server is in use.
RFC3576	Indicates if the APs are configured to process RFC 3576-compliant CoA.
NAS IP address	Displays the IP address of the NAS if NAS is configured.
Name (Management User Table)	Indicates the username of the admin user
Password	Indicates the password of the admin user.
Type	Indicates if the type of the user (admin, read-only, or guest management user).

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.177 show network

Description

This command shows network configuration details for an AP.

Syntax

```
show network <name>
```

Parameter	Description
<name>	Displays the name of a network profile.

Usage Guidelines

Use this command without the optional <name> parameter to view a complete configuration details of a network profile on the AP. Include the <name> parameter to display settings for a single network SSID only.

Example

The following example shows the partial output of **show network <name>** command:

```

Name                               :test
ESSID                             :test
Status                             :Enabled
Mode                               :wpa2-aes
Band                               :all
Type                               :employee
Termination                        :Disabled
Passphrase                         :
WEP Key                            :
WEP Key Index                      1
VLAN                               :
Server Load Balancing             :Disabled
MAC Authentication                 :Disabled
L2 Auth Failthrough               :Disabled
Captive Portal                    :Disabled
Exclude Uplink                    :none
Hide SSID                         :Disabled
Content Filtering                  :Disabled
Auth Survivability                :Disabled
Auth Survivability time-out       24
RADIUS Accounting                 :Disabled
Interim Accounting Interval       0
Radius Reauth Interval            0
DTIM Interval                     1
Inactivity Timeout                1000
Legacy Mode Bands                 :all
G Minimum Transmit Rate           1
G Maximum Transmit Rate           54
A Minimum Transmit Rate           6
A Maximum Transmit Rate           54
Multicast Rate Optimization       :Disabled
LEAP Use Session Key              :Disabled
Broadcast-filter                  :none
Max Authentication Failures       0
Blacklisting                     :Disabled
WISPr                            :Disabled

Accounting mode                   :Authentication
Work without usable uplink        :Disabled
Percentage of Airtime:           :Unlimited
Overall Limit:                   :Unlimited
Per-user Limit:                  :Unlimited

```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.178 show network-summary

Description

This command displays the status of the available network configurations on the AP.

Syntax

```
show network-summary
```

Usage Guidelines

Use this command to view the status of the network configurations.

Example

The following output is displayed for the **show network-summary** command:

```
Internet reachable :Detection disabled
Active uplink :eth0
Primary VPN :Not configured
Secondary VPN :Not configured
AirWave :Not configured
```

The output of this command provides the following information:

Column	Description
Internet Reachable	Indicates the status of the WLA network.
Active uplink	Indicates the uplink that is currently active on the AP.
Primary VPN	Indicates the status of the Primary VPN configuration.
Secondary VPN	Indicates the status of the Secondary VPN connection.
Airwave	Indicates the status of the AirWave configuration.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.179 show opendns

Description

This command displays the open DNS configuration details for an AP.

Syntax

```
show opendns [support]
```

Parameter	Description
support	Displays if the OpenDNS credentials if the OpenDNS service is configured on the AP.

Usage Guidelines

Use this command to view open DNS configuration details. The OpenDNS credentials are used by SCALANCE W to access OpenDNS to provide enterprise-level content filtering.

Example

The following example shows the output of **show opendns** command:

```
OpenDNS Account :admin
OpenDNS Password :admin123
OpenDNS Status :Not connected
OpenDNS Error Message:N/A
```

The output of this command includes the following parameters:

Column	Description
OpenDNS Account	Indicates the username for the OpenDNS account.
OpenDNS Password	Indicates the password for the OpenDNS account
OpenDNS Status	Indicates if the AP is connected to the OpenDNS server
OpenDNS Error Message	Displays OpenDNS error message.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.180 show out-of-service

Description

This command displays the details of the out of service operations triggered on the AP.

Syntax

```
show out-of-service
```

Usage Guidelines

Use this command to view the out-of-service operations and the SSID availability based on the out-of-service states detected on the AP.

Example

The following example shows the output of the **show out-of-service** command:

```
Out of service trigger Status
```

```
-----
```

uplink-down -----	primary-uplink-down -----	internet-down -----	vpn-down -----
No	No	-	Yes

```
The following out-of-service events got triggered in last out-of-service-hold-on-  
time(45) sec
```

```
: None
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.181 show port status

Description

Displays the activity statistics on each of the port on the controller.

Syntax

```
show port status
```


Example

The following example shows the output of the **show port status** command:

```
(AP)# show port status
Port Type Admin-State Oper-State
----
bond0 GE down up
```

Parameter	Description
Port	Displays the port number on the controller.
Type	Displays the port type.
Admin-State	Displays if the port is enabled or disabled.
Oper-State	Displays if the port is currently up and running.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.182 show pppoe

Description

This command shows PPPoE debug logs and uplink status.

Syntax

```
show pppoe {config|debug logs|debug status}
```

Parameter	Description
config	Displays PPPoE configuration details.
debug logs	Displays PPPoE debug logs.
debug status	Displays the uplink status.

Example

show pppoe config

The following example shows the configuration of the PPPoE **show pppoe config** command.

```
PPPoE Configuration
-----
Type Value
```

```
-----
```

```
User user
```

```
Password d226ccefac5a95cd6bb04ca74f20473eae9085fb16892b66
```

```
Service name ServiceA
```

```
CHAP secret 8acc867926ad85681fd0b0c1a15bb818
```

```
Unnumbered dhcp profile dhcpProfile1
```

show pppoe debug logs

The following example shows the configuration of the PPPoE **show pppoe debug logs** command.

```
pppd log not available
```

show pppoe debug status

The following example shows the configuration of the PPPoE **show pppoe debug status** command.

```
pppoe uplink state :Suppressed.
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.183 show process

Description

This command displays a list of processes running on an AP.

Syntax

```
show process
```

Usage Guidelines

Use this command to view the processes running on the AP for debugging purpose.

Example

The following example shows the partial output for the **show process** command:

```
PID Uid VmSize Stat Command
```

```
1 root 332 S init
```

```

2 root SWN [ksoftirqd/0]
3 root SW< [events/0]
4 root SW< [khelper]
5 root SW< [kthread]
6 root SW< [kblockd/0]
7 root SW [pdflush]
8 root SW [pdflush]
10 root SW< [aio/0]
9 root SW [kswapd0]

992 root 348 S /sbin/udhcpc -i br0 -b 1343 root 744 S /aruba/bin/tinyproxy
1344 root 476 S /aruba/bin/tinyproxy
1345 root 476 S /aruba/bin/tinyproxy
1348 root 476 S /aruba/bin/tinyproxy
1349 root 476 S /aruba/bin/tinyproxy
1350 root 476 S /aruba/bin/tinyproxy
1351 root 476 S /aruba/bin/tinyproxy
1362 root 716 S /usr/sbin/mini_httpd -c *.cgi -d /etc/httpd -u root
1365 root 732 S /usr/sbin/mini_httpd -c *.cgi -d /etc/httpd -u root -
1368 root 732 S /usr/sbin/mini_httpd -c *.cgi -d /etc/httpd -u root -

```

The output of this command provides information on the process ID, user ID of the user running the process, virtual memory consumed by the process, statistics and the command associated with the processes running on the AP.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.184 show proxy config

Description

This command displays the HTTP proxy configuration settings on an AP.

Syntax

```
show proxy config
```

Example

The following example shows the output of **show proxy config** command:

```
Proxy server :10.15.107.210
```

```
Proxy port 1337
```

```
Proxy username :user1
```

```
Proxy password :*****
```

```
Exceptions
```

```
-----
```

```
No Exception
```

```
-- -----
```

```
1 10.15.107.214
```

The output of this command provides the following information:

Parameter	Description
Proxy server	Displays the IP address of the HTTP proxy.
Proxy port	Displays the port number configured for the HTTP proxy.
Exceptions	Displays the IP address of the hosts for which HTTP proxy configuration is not applied.
Proxy username	Displays the user name set to authenticate the proxy server.
Proxy password	Displays the password set to authenticate the proxy server in the encrypted format.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.185 show radio config

Description

This command displays the 2.4 GHz and 5 GHz radio configuration details for an AP.

Syntax

```
show radio config
```

Usage Guidelines

Use this command to view the 2.4 GHz and 5 GHz radio configuration details for an AP.

Example

The following example shows the output of **show radio config** command:

```
(AP)# show radio config

Legacy Mode:enable
Beacon Interval:100
802.11d/802.11h:enable
Interference Immunity Level:2
Channel Switch Announcement Count:0
MAX Distance:600
Channel Reuse Type:disable
Channel Reuse Threshold:0
Background Spectrum Monitor:disable
Cell Size Reduction:0

5.0 GHz:
Legacy Mode:enable
Beacon Interval:100
802.11d/802.11h:enable
Interference Immunity Level:2
Channel Switch Announcement Count:2
MAX Distance:600
Channel Reuse Type:disable
Channel Reuse Threshold:0
```

Background Spectrum Monitor:disable

Standalone Spectrum Band:5ghz-upper

Cell Size Reduction:0

The output of this command provides the following information:

Parameter	Description
Legacy Mode	Indicates if the legacy mode is enabled on the APs to run the radio in the non-802.11n mode.
Beacon Interval	Displays beacon interval for the AP in milliseconds. When beacon interval is configured, the 802.11 beacon management frames are transmitted by the access point at the specified interval.
802.11d/802.11h	Displays if the AP is allowed advertise its 802.11d (country information) and 802.11h capabilities.
Interference Immunity Level	Displays the immunity level configured for anAP radio profile to improve performance in high-interference environments. For more information on configuring immunity levels, see rf dot11a-radio-profile and rf dot11g-radio- profile.
Channel Switch Announcement Count	Displays the number of channel switching announcements that are sent before switching to a new channel.
MAX distance	Indicates the maximum distance in meters between a client and an AP or between a mesh point and a mesh portal.
Channel Reuse Type	Indicates if channel reuse type is enabled.
Channel Reuse Threshold	Displays the channel reuse threshold configured for channel reuse type.
Background Spectrum Monitor	Indicates background spectrum monitoring is enabled. When enabled, the APs in access mode continue with normal access service to clients, while performing additional function of monitoring RF interference (from both neighboring APs and non Wi-Fi sources such as, microwaves and cordless phones) on the channel they are currently serving clients.
Standalone Spectrum	Indicates the portion of the channel (upper, middle, or lower) that is being monitored on the 5 GHz band.
Cell Size Reduction	Indicates the Rx sensitivity values configured on the 2.4 GHz and 5.0 GHz radio profiles.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.186 show radio profile

Description

This command displays the 2.4 GHz and 5 GHz radio profile details for an AP.

Syntax

```
show radio profile [<profile_name>]
```

Usage Guidelines

Use this command to view the 2.4 GHz and 5 GHz radio profile details for an AP. Details of the configured radio profile can be viewed. However, details of the default radio profile cannot be viewed.

Example

The following example shows the output of **show radio profile** command:

```
(AP)# show radio profile
```

```
2.4G Radio profile
```

```
-----
```

```
Name Legacy Mode Single Chain Legacy Beacon Interval 802.11d/802.11h Interference
```

```
Immunity Level CSA Count MAX Distance Channel Reuse Type Channel Reuse Threshold  
Spectrum
```

```
Monitor Max Tx Power Min Tx Power Cell Size Reduction Smart Antenna zone WIDS  
Override
```

```
Active 40M intolerance Honor 40 intolerance
```

```
-----
```

```
-
```

```
-----
```

```
----
```

```
-----
```

```
-
```

```
-----
```

```
default disable disable 100 disable 2
```

```
0 600 disable 0 disable
```

```
0 0 0 disable dynamic Yes
```

```
disable enable
```

```
test1 disable disable 100 disable 2
```

```
0 600 disable 0 disable
```

4.16 S

```
0 0 0 disable test1 dynamic No
```

```
disable enable
```

```
5.0G Radio profile
```

```
-----
```

```
Name Legacy Mode Single Chain Legacy Beacon Interval 802.11d/802.11h Interference
```

```
Immunity Level CSA Count MAX Distance Channel Reuse Type Channel Reuse Threshold  
Spectrum
```

```
Monitor Standalone Spectrum Band Max Tx Power Min Tx Power Cell Size Reduction Smart
```

```
Antenna VHT zone WIDS Override Active 40M intolerance Honor 40 intolerance
```

```
-----
```

```
-
```

```
-----
```

```
----
```

```
-----
```

```
----
```

```
--- -----
```

default disable disable	100	disable	2
0 600	disable	0	
			disable
5ghz-upper	0 0	0	disable
enable dynamic	Yes disable	enable	
aaa disable disable 0 600	100	disable	2
	disable	0	
			disable
5ghz-upper	0 0	0	disable
enable dynamic	No disable	enable	
test1 disable disable	100	disable	2
0 600	disable	0	
			disable
5ghz-upper	0 0	0	disable
enable test1 dynamic	No disable	enable	

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.187 show radius-redirect-url

Description

This command displays the RADIUS redirection url received from a CPPM or any authentication server.

Syntax

```
show radius-redirect-url
```

Usage Guidelines

Use this command to view the RADIUS redirection url received from any authentication server.

Example

The following example shows the output of **show radius-redirect-url** command:

```
c8:b5:ad:c3:af:16# sh radius-redirect-url
Radius VSA Redirect URL
-----
MAC URL
--- ---
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.188 show radius-servers support

Description

This command displays the RADIUS server configuration details for an AP.

Syntax

```
show radius-servers support
```

Usage Guidelines

Use this command to view the RADIUS server information for an AP.

Example

The following example shows the output of **show radius-servers support** command:

```

RADIUS Servers
-----

Name          IP Address    Port    Acctport    Key
----          -
InternalServer 127.0.0.1     1616    1813        596ff8d50a0662b542e96567bb87db331
208cc412bfb4aade8033ca9b46e5f09f933f89bb374bdd80b9acadcc981fdf5ea5ea13e33e43378f
56913cd3e76dc7a

test          test@abc.com   1812     1813
testServer    test@test.com  1812     1813

Timeout      Retry Count    NAS IP Address    NAS Identifier    In Use    RFC3576
-----
5            3              -----
5 3 No

Airgroup RFC3576-ONLY Airgroup RFC3576 port Deadtme  DRP IP  DRP IP Mask
-----
Y              5999          5
5

DRP VLAN  DRP Gateway Radsec  Radsec port
-----
Disabled Disabled
Enabled  2083

```

The output of this command provides the following information:

Parameter	Description
Name	Indicates the name of the RADIUS server.
IP address	Indicates the IP address of the RADIUS server.
Port	Indicates the authorization port number of the RADIUS server.
AcctPort	Indicates the authorization port number of the RADIUS server.
Key	Indicates the key for communicating with the RADIUS server.

Parameter	Description
Timeout	Indicates timeout value in seconds for one RADIUS request.
Retry count	Indicates the maximum number of authentication requests sent to the RADIUS server.
NAS IP address	Displays the IP address of the NAS if NAS is configured.
NAS Identifier	Indicates the NAS identifier to be sent with the RADIUS requests.
In Use	Indicates if the server is in use.
RFC3576	Indicates if the APs are configured to process RFC 3576-compliant Change of Authorization (CoA).
Airgroup RFC3576-ONLY	Indicates if APs are configured to be RFC 3576 compliant only.
Airgroup RFC3576 port	Indicates the port number used for sending AirGroup CoA.
Deadtime	Indicates the RADIUS server dead-time.
DRP IP DRP Mask DRP VLAN	Indicates the IP address, net mask, and DRP VLAN configured for Dynamic Proxy Radius (DRP).
RadSec RadSec Port	Indicates if RadSec protocol for the RADIUS communication over TLS is enabled. If RadSec is enabled, the RadSec port number is displayed.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.189 show radius status

Description

This command displays the status of TLS tunnel between the AP and RadSec proxy.

Syntax

```
show radius status
```

Usage Guidelines

Use this command to view the status of TLS tunnel when RADIUS communication over TLS is enabled on an AP.

Example

The following example shows the output of **show radius status** command:

```
Radius server status
-----
Name                Server IP   Source IP   Server Name   Protocol
-----
InternalServer 127.0.0.1  10.17.129.253 Not configured 1616 -
RADIUS/UDP
test 10.0.0.1  10.17.129.253 Not configured 1812 Not Applicable
RADIUS/UDP
t test 127.0.0.1  10.17.129.253 Not configured 2630 Not Applicable
RADIUS/UDP
Radius1 10.0.0.2  10.17.129.253 Not configured 1812 Not Applicable
RADIUS/UDP
t Radius1 127.0.0.1  10.17.129.253 Not configured 2632 Not Applicable
RADIUS/UDP

Status          Last connection tried at Next connection at
-----
Not Applicable Not Applicable Not Applicable
Not Applicable 2015-07-07 00:00:00.00000 2015-07-07 00:00:05.5000000
0
Not Applicable 2015-07-07 00:00:00.00000 2015-07-07 00:00:05.5000000
0
Not Applicable 2015-07-07 00:00:00.00000 2015-07-07 00:00:05.5000000
0
Not Applicable 2015-07-07 00:00:00.00000 2015-07-07 00:00:05.5000000
0
```

The output of this command provides the following information:

Parameter	Description
Name	Indicates the name of the RADIUS server.
Server IP	Indicates the IP address of the RADIUS server.
Source IP	Indicates the source IP address.
Server Name	Indicates the name of the server.
Protocol	Indicates the type of protocol used for RADIUS communication with the AP clients.
Port	Indicates the authorization port number of the RADIUS server.
Connected Sockets	Indicates connected sockets if any.
Status	Indicates status of the server connection.
Last connection tried at	Indicates the time stamp during which the last connection between the server and client was attempt.
Next connection at	Indicates the time at which the next attempt will be made to establish the connection with the RADIUS server.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.190 show radseccert

Description

This command displays details of the RadSec client and CA certificates uploaded on the AP.

Syntax

```
show radseccert
```

Usage Guidelines

Use this command to view the RadSec certificate details on the AP.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.191 show running-config

Description

This command displays the current configuration running on an AP, including the current changes that are yet to be saved.

Syntax

```
show running-config
```

Usage Guidelines

Use this command to view the current configuration information stored in the AP flash memory.

Example

The following example shows the partial output of the **show running-config** command output:

```
version 6.4.0.0-4.1.0
virtual-controller-country IN
virtual-controller-key 0cb5770401cdeb6e4363c25fdfde17d907c4b095a9be5e
name instant-C4:42:98
terminal-access
clock timezone none 00 00
rf-band all
allow-new-aps
allowed-ap d8:c7:c8:c4:42:98
arm
wide-bands 5ghz
80mhz-support min-tx-
power 18
max-tx-power 127
band-steering-mode prefer-5ghz
air-time-fairness-mode fair-access
client-aware
scanning
client-match
syslog-level warn ap-debug syslog-
```

```
level warn network syslog-level
warn security syslog-level warn
system syslog-level warn user
syslog-level warn user-debug syslog-
level warn wireless
mgmt-user admin aba950f14f5764975371fcb66a72d10f
wlan access-rule default_wired_port_profile
index 1
rule any any match any any any permit
wlan access-rule wired-instant
index 2
rule masterip 0.0.0.0 match tcp 80 80 permit
rule masterip 0.0.0.0 match tcp 4343 4343 permit
rule any any match udp 67 68 permit
rule any any match udp 53 53 permit
wlan access-rule test
index 3
rule any any match any any any deny
wlan ssid-profile test
enable
index 1
type employee
ssid instant
opmode opensystem
max-authentication-failures 0
rf-band all
captive-portal disable
dtim-period 1
inactivity-timeout 1000 broadcast-
filter none
dmo-channel-utilization-threshold 90
local-probe-req-thresh 0
max-clients-threshold 64
dot11k
dot11v
```

```
auth-survivability cache-time-out 24
wlan external-captive-portal
server localhost
port 80
url "/"
auth-text "Authenticated"
auto-whitelist-disable
https
blacklist-time 3600
auth-failure-blacklist-time 3600
ids
wireless-containment none
wired-port-profile wired-instant
switchport-mode access
allowed-vlan all
native-vlan guest
no shutdown
access-rule-name wired-instant
speed auto
duplex auto
no poe
type guest
captive-portal disable
no dot1x
wired-port-profile default_wired_port_profile switchport-
mode trunk
allowed-vlan all
native-vlan 1
shutdown
access-rule-name default_wired_port_profile
speed auto
duplex full
no poe
type employee
captive-portal disable
```



```
no dot1x

enet0-port-profile default_wired_port_profile

uplink

preemption

enforce none

failover-internet-pkt-lost-cnt 10

failover-internet-pkt-send-freq 30

failover-vpn-timeout 180

airgroup

disable

airgroupservice airplay

disable

description AirPlay

airgroupservice airprint

disable

description AirPrint
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.192 show snmp-configuration

Description

This command displays the SNMP configuration details for a Virtual Controller.

Syntax

```
show snmp-configuration
```

Usage Guidelines

Use this command to view the SNMP information configured on a Virtual Controller.

Example

The following example shows the output of **show snmp-configuration** command:

```

Engine ID:D8C7C8CBD420

Community Strings
-----
Name
----

Test

SNMPv3 Users
-----

Name      Authentication Type      Encryption Type
-----
hallo     SHA                        NONE
DES       SHA                        DES
SNMP      Trap                      Hosts
-----

IP Address      Version  Name  Port  Inform
-----
192.0.2.1 v3    miro   162   Yes

```

The output of this command includes the following parameters:

Parameter	Description
Engine ID	Displays the SNMP engine ID.
Community Strings	Displays the SNMP community strings.
SNMPv3 Users	Displays details about the SNMPv3 users.

Parameter	Description
Name	Indicates the name of the SNMP user.
Authentication Type	Indicates the authentication protocol configured for the SNMP users.
Encryption Type	Indicates the encryption type, for example, CBC-DES Symmetric Encryption Protocol configured for SNMP users.
SNMP Trap Hosts	Displays the traps generated by the host system.
IP Address	Indicates the host IP address generating the SNMP trap.
Version	Displays the SNMP version for which the trap is generated.
Name	Indicates the name of system generating the SNMP traps.
Port	Indicates the port number to which notification messages are sent.
Inform	Displays the SNMP inform messages to send to the configured host.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.193 show snmp trap-queue

Description

This command displays the list of SNMP traps in queue.

Syntax

```
show snmp trap-queue
```

Usage Guidelines

Use this command to view the SNMP traps in queue.

Example

The following example shows the partial output of **show snmp trap-queue** command:

```
2013-05-12 14:05:27 An AP (NAME d8:c7:c8:cb:d4:20 and MAC d8:c7:c8:cb:d4:20 on RADIO
2)
detected an interfering access point (BSSID 00:24:6c:80:7d:11 and SSID NTT-SPOT on
CHANNEL 1).

2013-05-12 14:09:53 An AP (NAME d8:c7:c8:cb:d4:20 and MAC d8:c7:c8:cb:d4:20 on RADIO
2)
detected an interfering access point (BSSID 6c:f3:7f:45:5d:20 and SSID 7SPOT on
CHANNEL 1).

2013-05-12 14:10:36 An AP (NAME d8:c7:c8:cb:d4:20 and MAC d8:c7:c8:cb:d4:20 RADIO 2)
changed
its channel from channel 1 (secchan offset 1) to channel 7 (secchan offset 1) due to
reason
12.
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.194 show spectrum-alert

Description

This command displays the list of spectrum alerts for an AP.

Syntax

```
show spectrum-alert
```

Parameter	Description
<count>	Filters the alerts based on the specified number.

Usage Guidelines

Use this command to view the spectrum alerts for an AP. When a new non Wi-Fi device is found, an alert is reported to the Virtual Controller. The spectrum alert messages provide information about the device ID, device type, IP address of the spectrum monitor or hybrid AP, and the timestamp. The Virtual Controller reports the detailed device information to AirWave Management server.

Example

The following example shows the output for the **show spectrum-alert** command when no alerts are generated.

```
Spectrum Alerts
-----
Timestamp Type ID Access Point
-----
```

The output of this command provides the following information:

Parameter	Description
Timestamp	Displays the time at which alert was recorded.
Type	Displays the type of the device that generated the alert.
ID	Displays the device ID for which the alert is generated.
Access Point	Displays the IP address of the AP.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.195 show speed-test

Description

This command displays the details obtained from the Virtual Controller speed-test client.

Syntax

```
show speed-test
```

Usage Guidelines

Use this command to view the traffic details obtained from the last speed test run from the Virtual Controller client.

Example

The following output is displayed for the **show speed-test** command:

Speed Test Data for traffic : From Client to Server

```
Time of Execution :Mon, 02 Nov 2015 09:18:07 GMT
Server IP :10.17.138.2
Local IP :10.17.138.188
Local Port :51308
Remote Port :5201
Protocol :UDP
Duration :20
Bytes Txferred :249271000
Bandwidth(bps) :99706100
Jitter(millisecond) :0
Datagrams sent :249270
```

Speed Test Data for traffic : From Server to Client

```
Time of Execution :Mon, 02 Nov 2015 09:18:28 GMT
Server IP :10.17.138.2
Local IP :10.17.138.188
Local Port :56423
Remote Port :5201
Protocol :UDP
Duration :20
Bytes Txferred :234013000
```

Bandwidth(bps) :93603500

Jitter(millisecond) :0

Datagrams sent :234009

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.196 show stats

Description

This command displays the aggregate statistics for APs, AP clients, AP cluster, and network profiles configured on an AP.

Syntax

```
show stats {ap <IP-address>| client <MAC-address> | global | network <network-name>}
[count]
```

Parameter	Description
ap <IP-address>	Displays information on AP utilization, RF trends, and client details for a specific AP.
client <MAC-address>	Displays information on a client and its mobility records, the cluster to which the client has joined, and the details of the AP to which it is currently connected.
global	Displays global statistics for the AP cluster, and the APs and clients connected to the AP cluster.
network <network-name>	Displays aggregate information about a network profile configured on an AP. Allows you to filter the command output for the AP, client, global, and network profile statistics based on the specified number
[count]	Allows you to filter the command output for the AP, client, global, and network profile statistics based on the specified number.

Usage Guidelines

Use this command to view the following information about APs, the clients connected to the APs, and the corresponding AP cluster:

- Utilization trend—Displays information about the AP utilization, the number of clients associated with an AP, Virtual Controller, or the AP network over the last 15 minutes.
- RF trends—Displays information the utilization, noise, or error threshold for an AP. It also shows the current speed or signal strength for the clients in the network and the RF information for the APs to which the clients are connected.
- Mobility Trail—Shows duration of the client is association with an AP and the name of the AP to which it is currently connected.

Example

show stats ap

The following example shows the output for the **show stats ap <IP-address>** command:

```
Util Level:good
Noise Level:good
Error Level:good
2.4 GHz Channel:7
5.0 GHz Channel:149+
Usage
-----
Timestamp CPU Utilization (%) Memory Free (MB) Neighboring APs [Valid] Neighboring
APs
[Interfering] Neighboring APs [Rogue] Neighboring Clients [Valid] Neighboring Clients
[Interfering] Clients Throughput [Out] (bps) Throughput [In] (bps)
-----
-----
-----
-----
-----
-----
-----
-----
00:34:46 8 164 4 239 0 1 8 1 93 99
00:34:17 8 164 4 239 0 1 8 1 186 199
0 1 9
RF Trends
-----
Timestamp Utilization [2.4 GHz] (%) Utilization [5.0 GHz] (%) Noise Floor [2.4 GHz]
(dBm) Noise Floor [5.0 GHz] (dBm) 2.4 GHz Frames [Errors] (fps) 5.0 GHz Frames
[Errors] (fps)
```



```
2.4 GHz Frames [Out] (fps) 5.0 GHz Frames [Out] (fps) 2.4 GHz Frames [In] (fps) 5.0
GHz Frames
```

```
[In] (fps) 2.4 GHz Frames [Drops] (fps) 5.0 GHz Frames [Drops] (fps) 2.4 GHz Mgmt
Frames [In]
```

```
(fps) 5.0 GHz Mgmt Frames [In] (fps) 2.4 GHz Mgmt Frames [Out] (fps) 5.0 GHz Mgmt
Frames [Out]
```

```
(fps)
```

```
-----
-----
```

```
-----
-----
```

```
-----
-----
```

```
-----
-----
```

```
-----
```

```
00:34:46 59 4 -91 -93 41 0 0 0 68 18 1 1 403 265 1 0
```

```
00:34:17 61 5 -92 -93 45 0 0 1 78 21 1 1 408 287 1 1
```

```
Client Heatmap
```

```
-----
```

```
Clients Signal Speed IP Address
```

```
-----
```

```
AP List
```

```
-----
```

```
Name IP Address Mode Spectrum Clients Type CPU Utilization %: Memory Free (MB):
```

```
Serial Number:
```

```
Need Antenna Config From Port
```

```
-----
-----
```

```
-----
```

```
d8:c7:c8:cb:d4:20 10.17.88.188 access disable 1 135 8 164 AX0059921 No none
```

show stats client

The following example shows the output for the **show stats client <mac>** command:

```
Name::
```

```
IP Address::169.254.90.154
```

```
MAC Address::08:ed:b9:e1:51:7d
```

```
Access Point::d8:c7:c8:cb:d4:20
```

```

Channel::149+

Network::Network1

Connection Time::4h:50m:48s

Type::AN

OS::

Swarm Client Stats

-----

Timestamp Signal (dB) Frames [In] (fps) Frames [Out] (fps) Throughput [In] (bps)
Throughput
[Out] (bps) Frames [Retries In] (fps) Frames [Retries Out] (fps) Speed (mbps)
-----
-----

00:32:46 47 0 0 0 170 0 0 6
00:32:16 47 0 0 0 170 0 0 6
00:31:46 47 0 1 0 5946 0 0 6
00:31:16 49 0 0 0 316 0 0 6

Mobility Trail

-----

Association Time Access Point

-----

11:04:56 d8:c7:c8:cb:d4:20

Client Heatmap

-----

Client Signal Speed IP Address
----- 169.254.90.154 good good 169.254.90.154

Access Point Heatmap

-----

Access Point Utilization Noise Errors
-----

d8:c7:c8:cb:d4:20 good good good

Client List

-----

Name IP Address MAC Address OS Network Access Point Channel Type Role
-----
169.254.90.154 08:ed:b9:e1:51:7d Network1 d8:c7:c8:cb:d4:20 149+ A network1

Info timestamp :48662

```

show stats global

The following example shows the output for the **show stats global** command:

```
Swarm Global Stats
```

```
-----
```

```
Timestamp Clients Frames [Out] (fps) Frames [In] (fps) Throughput [Out] (bps)
Throughput [In] (bps)
```

```
-----
```

```
00:38:05 1 0 0 294 380
00:37:35 1 0 0 98 101
00:37:04 1 0 0 0 0
00:36:33 1 0 0 0 0
00:36:03 1 0 0 0 0
00:35:32 1 0 0 46 49
00:35:01 1 0 0 93 99
00:34:31 1 0 0 186 199
00:34:00 1 0 0 0 0
00:33:29 1 0 0 0 0
00:32:59 1 0 0 0 170
00:32:28 1 0 0 0 170
00:31:58 1 0 1 2961 5946
00:31:27 1 0 0 196 316
00:30:56 1 0 0 196 202
```

```
Access Point Heatmap
```

```
-----
```

```
Access Points Utilization Noise Errors
```

```
-----
```

```
Client Heatmap
```

```
-----
```

```
Clients Signal Speed IP Address
```

```
-----
```

show stats network

The following example shows the output for the **show stats network <network-name>** command:

```
Swarm Network Stats
```

```
-----
```

```
Timestamp Clients Frames [Out] (fps) Frames [In] (fps) Throughput [Out] (bps)
Throughput [In]
```

```
(bps)
```

```
-----
```

```

-----
16:39:25 0 0 0 0 0
16:38:55
0 0 0 0 0

16:38:25 0 0 0 0 0
16:37:54 0 0 0 0 0
16:37:24 0 0 0 0 0
16:36:54 0 0 0 0 0
16:36:24 0 0 0 0 0
16:35:54 0 0 0 0 0
16:35:23 0 0 0 0 0
16:34:53 0 0 0 0 0
16:34:23 0 0 0 0 0

Access Point Heatmap
-----

Access Points Utilization Noise Errors
-----

d8:c7:c8:c4:42:98 poor good good Client Heatmap
-----

Clients Signal Speed IP Address
-----

Name :test123
ESSID :test123
Status :Enabled
Mode :wpa2-aes
Band :all
Type :employee
Termination :Disabled
Passphrase :
WEP Key :
WEP Key Index :1
VLAN :

Server Load Balancing :Disabled
MAC Authentication :Disabled
L2 Auth Failthrough :Disabled
Captive Portal :disable
Exclude Uplink :none
Hide SSID :Disabled
Content Filtering :Disabled

```

Auth Survivability :Disabled
Auth Survivability time-out :24
RADIUS Accounting :Disabled
Interim Accounting Interval :0
Radius Reauth Interval :0
DTIM Interval :1
Inactivity Timeout :1000
Legacy Mode Bands :all
G Minimum Transmit Rate :1
G Maximum Transmit Rate :54
A Minimum Transmit Rate :6
A Maximum Transmit Rate :54
Multicast Rate Optimization :Disabled
LEAP Use Session Key :Disabled
Broadcast-filter :none
Max Authentication Failures :0
Blacklisting :Disabled
WISPr :Disabled
Accounting mode :Authentication
Work without usable uplink :Disabled
Percentage of Airtime: :Unlimited
Overall Limit: :Unlimited
Per-user Limit: :Unlimited
Access Control Type: :Role
Machine-only Role: :test1
User-only Role: :test1
Dynamic Multicast Optimization :Disabled
DMO Channel Utilization Threshold :90
Local Probe Request Threshold :0
Max Clients Threshold :64
Background WMM Share :0
Best Effort WMM Share :0
Video WMM Share :0
Voice WMM Share :0
Certificate Installed: :No

```

Internal Radius Users: :0

Internal Guest Users: :0

Role Derivation Rules
-----

Attribute Operation Operand Role Name Index
-----

Vlan Derivation Rules
-----

Attribute Operation Operand Vlan Id
-----

RADIUS Servers
-----

Name IP Address Port Key Timeout Retry Count NAS IP Address NAS Identifier RFC3576
----

test 10.0.0.1 1812 test123 5 3
test123 10.0.0.0 1812 test123 5 3

LDAP Servers
-----

Name IP Address Port Timeout Retry Count Admin-DN Admin Password Base-DN
----

0 5 3 test 0.0.0.0

Access Rules
-----

Dest IP Dest Mask Dest Match Protocol (id:sport:eport) Action Log TOS 802.1P
Blacklist Mirror

DisScan ClassifyMedia
-----

-----

any any match any permit

Vlan Id :0

ACL Captive Portal:disable

:Captive Portal Configuration

Background Color:13421772

Banner Color :16750848

Decoded Texts :

```

```
Banner Text :Welcome to Guest Network

Use Policy :Please read terms and conditions before using Guest Network

Terms of Use :This network is not secure, and use is at your own risk

Internal Captive Portal Redirect URL:

Captive Portal Mode:Acknowledged

:External Captive Portal Configuration

Server:localhost

Port :80 URL :/

Authentication Text:Authenticated

External Captive Portal Redirect URL:

Server Fail Through:No
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.197 show subscription-aps

Description

This command displays the subscription status of an AP.

Syntax

```
show subscription-aps
```

Example

```
(AP) (config) # show subscription-aps

AP controlled by Cloud-Server:disable
subscription enabled by manually :disable
Subscription Ap List
-----
MAC Address Status
-----
d8:c7:c8:c4:56:de ACTIVE
d8:c7:c8:c4:57:06 ACTIVE
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.198 show summary

Description

This command shows the current configuration details.

Syntax

```
show summary {<difference> | support}
```

Parameter	Description
<difference>	Shows the difference in configuration.
support	Shows the summary support containing the configuration details used by support.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.199 show swarm

Description

This command displays the various entities associated with the swarm.

Syntax

```
show swarm {state|mode}
```

Parameter	Description
state	Displays the current status of the AP cluster.
mode	Displays the functioning mode of the AP cluster.
image-sync	Displays the image-sync AP list.

Usage Guidelines

Use this command to view the current status of the AP cluster and to view information about the functioning mode of the AP cluster.

Example

The following example shows the output of **show swarm state** command:

```
AP Swarm State :swarm_config_sync_complete mesh auto eth0 bridging :no
Config in flash :yes factory SSID in flash :no extended-ssid configured :yes
extended-ssid active :yes Factory default stat :no
Source of system time :Image file Config load cnt 1
VC Channel index 1
IDS Client Gateway Detect :yes
Config Init success cnt for heartbeat 0
Config Init success cnt for register 0
Config Init skipping cnt for heartbeat 0
Config Init skipping cnt for register 0
Config Init last success reason :N/A Config Init last success time :N/A
```

The output of this command describes synchronization status of the AP cluster.

The following text shows an example output for the **show swarm mode** command:

```
Swarm Mode :Cluster
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.200 show supported-cert-formats

Description

This command displays the supported server and CA certificate formats.

Syntax

```
show supported-cert-formats
```

Usage Guidelines

Use this command to view the list certificate formats supported by the AP.

Example

```
Server Certificate Formats
-----
Name
```

```

----- PEM

CA Certificate Formats

-----

Name

-----

PEM

DER

```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.201 show syslog-level

Description

This command displays the Syslog logging levels configured for an AP.

Syntax

```
show syslog-level
```

Usage Guidelines

Use this command to view the Syslog logging facilities and the associated logging level.

Example

The following example shows the output of the **show syslog-level** command:

```

Logging Level
-----

Facility Level
-----

ap-debug debug
network debug
security debug
system debug
user debug

```

```
user-debug debug
```

```
wireless debug
```

The output of this command provides the following information:

Parameter	Description
Facility	Displays the list of logging facilities configured on the AP.
ap-debug	Generates a log for the AP device for debugging purposes.
network	Generates a log when there is a change in the network, for example, when a new AP is added to a network.
security	Generates a log for network security, for example, when a client connects using wrong password.
system	Generates a log about the system configuration and status.
user	Generates a log for the AP clients.
user-debug	Generates a detailed log about the clients for debugging purposes.
wireless	Generates a log about radio configuration.
syslog-level<level>	Displays any of the following Syslog logging level configured for the Syslog facility. - Emergency—Panic conditions that occur when the system becomes unusable. - Alert—Any condition requiring immediate attention and correction. - Critical—Any critical conditions, for example, hard drive error. - Errors—Error conditions. - Warning—Warning messages. - Notice—Significant events of a non-critical and normal nature. The default value for all Syslog facilities. - Informational—Messages of general interest to system users. - Debug—Messages containing information useful for debugging.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.202 show tacacs-servers

Description

This command displays all the tacacs servers configured on an AP.

Syntax

```
show tacacs-servers
```

Usage Guidelines

Use this command to view the list of tacacs servers available on an AP.

Example

The following example shows the output of the **show tacacs-servers** command:

```
TACACS Servers
-----

Name IP Address Port Key Timeout Retry Count In Use
-----
tacacs1 10.64.16.240 49 pass123 20 1 Yes
tacacs2 192.168.0.100 49 pass456 10 2 No
```

The output of this command provides the following information:

Parameter	Description
Name	Indicates the list of tacacs server available on an AP.
IP Address	Displays the IP address for each tacacs server.
Port	Indicates the TCP Port in use for the tacacs server.
key	Indicates the shared secret key used to authenticate and access tacacs server.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.203 **show tech-support**

Description

This command displays the complete AP information and the associated configuration details, which can be used by the technical support representatives for debugging.

Syntax

```
show tech-support
```

Usage Guidelines

Use this command to view and analyze AP configuration details for debugging any AP related issues.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.204 **show time-profile**

Description

This command displays all the time range profiles, the respective SSIDs on which they are applied, and the status (enabled/disabled).

Syntax

```
show time-profile
```

Usage Guidelines

Use this command to view the list of time profiles created on the AP.

Example

The following example shows the output of the **show time-profile** command:

```
Time Range SSID Profile
```

```

-----
Time Profile Name          SSID profile Name          Enable/Disable
-----
Lunch Break               Test123                    Enable

```

The output of this command provides the following information:

Parameter	Description
Time Profile Name	Name of the time profile.
SSID Profile	The WLAN SSID profiles for which the time profile is applied.
Enable/Disable	Status of the time range profile on the SSID.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.205 show time-range

Description

This command displays a list of the time range profiles configured on the AP.

Syntax

```
show time-range
```

Usage Guidelines

Use this command to view the time range profiles configured on an AP.

Example

The following example shows the output of the **show time-range** command:

```

Time Range Summary
-----

```

Profile Name	Type	Start Day Start Time End Day End Time Valid
-----	----	-----
Lunch Break		absolute 10/28/2014 12:40 10/28/2014 13:00 No

The output of this command provides the following information:

Parameter	Description
Profile Name	Indicates the name of Time Profiles created on the AP.
Type	Indicates the type of time profile created.
Start Day	Indicates the date on which the time profile is enabled on the SSID.
Start Time	Indicates the time at which the time profile is made active on the SSID.
End Day	Indicates the date on which the time profile is disabled on the SSID.
End Time	Indicates the time at which the time profile is disabled on the SSID.
Valid	Indicates if the profile is valid for current time. For example, if a profile is run only during a specific time of the day and is not active when the command is run, the Valid column displays the status as No .

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.206 show tspec-calls

Description

This command displays the TSPEC statistics when voice traffic is prioritized and TSPEC function is enabled on an SSID.

Syntax

```
show tspec-calls
```

Usage Guidelines

Use this command to view the TSPEC statistics.

Example

The following example shows the output of the **show tspec-calls** command:

TSPEC Stats

SSID	Total ADDTS	Accepted calls	Refused calls	DELTS Received	DELTS Sent
----	-----	-----	-----	-----	-----
Scalance-0	0	0	0	0	0
ap					
Scalance -0	0	0	0	0	0
ap					

TSPEC SSIDs


```

-----
SSID          Radio Max Bandwidth Available Bandwidth
-----
Scalance-ap   1      0.00      0.00
TSPEC Calls
-----

Client Client MAC Allocated Bandwidth Active flows
-----

TSPEC SSIDs
-----

SSID Radio Max Bandwidth Available Bandwidth
-----
Scalance-ap   0      0.00      0.00
TSPEC Calls
-----

Client Client MAC Allocated Bandwidth Active flows
-----

```

The output of this command displays information about the voice calls, the SSIDs on which TSPEC is enabled, and the AP clients connected to the SSIDs with TSPEC enabled.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.207 show uncommitted-config

Description

This command displays the current configuration details that are yet to be committed and saved on the AP.

Syntax

```
show uncommitted-config
```

Usage Guidelines

Use this command to view the uncommitted configuration details. Use the **commit apply** command to commit the configuration changes.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.208 show upgrade info

Description

This command displays the image upgrade details for an AP.

Syntax

```
show upgrade info
```

Usage Guidelines

This command displays the image upgrade details for an AP.

Example

The following example shows the output of **show upgrade info** command:

```
Image Upgrade Progress
-----
Mac IP Address AP Class Status Image Info Error Detail
---
d8:c7:c8:cb:d4:20 10.17.88.188 Hercules image-ok image file none
Auto reboot :enable
Use external URL :disable
```

The output of this command provides the following information:

Parameter	Description
Mac	Shows the MAC address of the AP.
IP Address	Shows the IP address of the AP.
AP Image Class	Indicates the AP class. For SCALANCE W —Siemens_Hercules_8.3.0.1._xxxx

Parameter	Description
Status	Indicate the current status of the image upgrade.
Image Info	Indicates the source of image.
Error Detail	Displays errors generated when an upgrade fails.
Auto Reboot	Indicates if automatic rebooting of AP is enabled on a successful upgrade.
Use External URL	Indicates if an external URL can be used for loading an image file.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.209 show uplink

Description

This command displays uplink configuration details and status of for an AP.

Syntax

```
show uplink {config|stats}
```

Parameter	Description
show uplink config	Displays the uplink interface configuration details for an AP.
show uplink stats	Displays the aggregate uplink statistics for an AP.

Usage Guidelines

Use this command to view the information about uplink status and configuration for an AP.

Example

The following output is displayed for the **show uplink config** command:

```
Uplink preemption :enable
Uplink enforce :none
Ethernet uplink eth0 :DHCP
Internet failover :disable
Max allowed test packet loss:10
Secs between test packets :30
VPN failover timeout (secs) :180
```

The output of this command provides the following information:

Column	Description
Uplink preemption	Indicates if the uplink preemption is enabled.
Uplink enforce	Indicates if any uplinks are enforced.
Ethernet uplink eth0	Indicates if Ethernet uplink is configured.
Max allowed test packet loss	Indicates an allowed number of test packets that can be lost verifying the Internet availability.
Secs between test packets	Indicates the frequency at which the test packets are sent to verify the Internet availability.
VPN failover timeout (secs)	Indicates the number of seconds to wait, before trying a different uplink when a VPN tunnel is down.

The following output is displayed for the **show uplink status** command:

```

Uplink preemption :enable

Uplink enforce :none

Ethernet uplink eth0 :DHCP

Uplink Table
-----

Type State Priority In Use
---- ---- -
eth0 UP 0 Yes
Wifi-sta INIT 6 No
3G/4G INIT 7 No

Internet failover :disable

Max allowed test packet loss:10

Secs between test packets :30

VPN failover timeout (secs) :180

ICMP pkt sent :0

ICMP pkt lost :0

Continuous pkt lost :0

VPN down time :0

```

The output of this command provides the following information:

Column	Description
Uplink preemption	Indicates if the uplink preemption is enabled.
Uplink enforce	Indicates if any uplinks are enforced.
Ethernet uplink eth0	Indicates if Ethernet uplink is configured.
Type	Indicates the type of the uplink.
State	Indicates the uplink status.

Column	Description
Priority	Indicates if any priority levels are assigned to the uplink.
In Use	Indicates if the uplink is in use.
Max allowed test packet loss	Indicates an allowed number of test packets that can be lost verifying the Internet availability.
Secs between test packets	Indicates the frequency at which the test packets are sent to verify the Internet availability.
VPN failover timeout (secs)	Indicates the number of seconds to wait, before trying a different uplink when a VPN tunnel is down.
ICMP pkt sent	Indicates the number of ICMP packets sent to verify the Internet availability for uplink switchover.
ICMP pkt lost	Indicates the number of ICMP packets lost.
Continuous pkt lost	Indicates if the packets are lost continuously.
VPN down time	Indicates the time since the VPN connection is unavailable.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.210 show uplink-vlan

Description

This command displays the uplink VLAN configuration details for the management traffic.

Syntax

```
show uplink-vlan
```

Usage Guidelines

Use this command to view the uplink VLAN configuration details for management traffic. The uplink management VLAN configuration allows you to tag management traffic and connect multiple AP clusters to the same port on an upstream switch (for example, AirWave server).

Example

The following output is displayed for the **show uplink-vlan** command:

```
Uplink Vlan Current :0
```

Uplink Vlan Provisioned :

The output of this command provides the following information:

Column	Description
Uplink Vlan Current	Indicates if the VLAN ID.
Uplink Vlan Provisioned	Indicates if the uplink VLAN is provisioned.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.211 show url-visibility

Description

This command displays the url visibility status of the outstanding user sessions.

Syntax

```
show url-visibility [verbose]
```

Usage Guidelines

Use this command to view the list of client URLs that are yet to be forwarded to the ALE server.

Example

The following output is displayed for the **show url-visibility** command:

Client URL List

SrcIP	DstIP	URL	URL Length	HitCount
-----	-----	---	-----	-----
172.16.40.254	98.139.183.24	yahoo.com	9	1
172.16.40.254	173.194.203.94	google.co.in/?gfe rd..	49	1
172.16.40.254	74.125.224.34	youtube.com	11	1
172.16.40.254	74.125.224.39	google.com	10	1
172.16.40.254	173.252.120.68	facebook.com	12	2
172.16.40.254	198.35.26.96	wikipedia.org	13	1
172.16.40.254	74.125.224.41	youtube.com	11	2
172.16.40.254	198.35.26.96	wikipedia.org	13	1
172.16.40.254	206.190.36.105	in.yahoo.com	12	1
172.16.40.254	173.252.90.132	facebook.com	12	1
172.16.40.254	198.35.26.96	wikipedia.org	13	1
172.16.40.254	206.190.36.45	yahoo.com	9	1

Num of Entries:12

Last URL flash timestamp: 00:00:00

Last flash URL session count: 0

Max URL table size: 2097152 bytes

Current URL count: 12

Current URL size: 426 bytes

The output of this command provides the following information:

Column	Description
SrcIP	Indicates the source IP.
DstIP	Indicates the destination IP.
MAC	Indicates the client MAC address.
URL	Lists the URL of the session.
URL Length	Indicates the length of the URL.
HTTP Method	Indicates one of the following methods: • Get • POST • HEAD • PUT • Non-HTTP
Last hit timestamp	Indicates the last hit timestamp of the URL.
HitCount	Indicates the number of hits on the URL.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.212 show usb status

Description

This command displays the status of the cellular modem link on the AP.

Syntax

```
show usb status
```

Usage Guidelines

The USB devices connected to anAP can be enabled or disabled according to uplink configuration settings. The **show usb status** command displays the status of the USB connected to the AP.

Example

The following example shows the output of the **show usb status** command:

```
(AP) (config)# show usb status
Cellular Status
-----
card          detect          link          SIM PIN
----          -
Present       detect-ok          Linkup        N/A

USB Modem Information
-----
Parameter      Value
-----
Manufacturer    Linux
Product         OHCI Host Controller
Serial Number    0000:00:04.0
Driver          hub
Vendor ID       1d6b
Product ID      1
Manufacturer
Product         USB2.0 Hub
Serial Number
Driver          hub
Vendor ID       05e3
Product ID      608
Manufacturer    ZTE, Incorporated
Product         ZTE Wireless Ethernet Adapter
```



```

Serial Number      MF8310ZTED000000
Driver             option
Vendor ID          19d2
Product ID         1405
Model              MF831
Supported Network  LTE WCDMA GSM Firmware BD_MF831HDV1.0.0B02
Services           Version
ESN Number         8,62828E+14

```

Cellular Link Status

```

-----
Parameter          Value
-----
USB Modem State     Active
USB Uplink RSSI (in -69
dBm)
Current Network Service4G-LTE
plugin counter      :0
plugout counter :    0

```

The output of this command includes the following parameters:

Parameter	Description
card	Indicates if the cellular cards are currently configured on the AP.
detect	Indicates if cellular modems are detected on the AP.
link	Indicates the current status of cellular link.
SIM PIN	Displays the SIM PIN of the model.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.213 show user

Description

This command displays users configured for an AP.

Syntax

```
show user [portal| Radius]
```

Parameter	Description
portal	Displays the AP user credentials.
radius	Displays the user credentials for the RADIUS server authentication

Usage Guidelines

Use this command to view the AP user credentials.

Example

The following output is displayed for the **show user** command:

```
show user
User Table
-----
Name Password Attribute
-----
d8:c7:c8:cb:d4:20# show user portal Portal User Table
-----
Name Password
-----
d8:c7:c8:cb:d4:20# show user radius Radius User Table
-----
Name Password
-----
```

The output of this command provides the following information:

Column	Description
Name	Indicates the username of the AP, portal, and the RADIUS users.
Password	Indicates the password details of the users.
Attribute	Indicates the attributes

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.214 show valid-channels

Description

This command displays the list of channels that are valid for an AP serving a specific regulatory domain.

Syntax

```
show valid-channels
```

Usage Guidelines

Use this command to view the list of valid channels that can be configured on your AP.

Example

The following example shows the output of **show valid-channels** command:

```
2.4 GHz
```

```
1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
1+  
2+  
3+  
4+  
5+  
6+  
7+
```

5.0 GHz

36

40

44

48

52

56

60

64

149

153

157

161

165

36+

44+

52+

60+

149+

157+

The output of this command provides the following information:

Parameter	Description
2.4 GHz	Displays the list of channels valid for an AP in the 2.4 GHz band.
5.0 GHz	Displays the list of channels valid for an AP in the 5 GHz band.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.215 show version

Description

This command displays the SCALANCE W software version running on an AP.

Syntax

```
show version
```

Example

The following example shows the output of the **show version** command:

```
Siemens.  
SIEOS (MODEL: SCALANCE-W1750D-2IA-RJ45), Version 8.3.0.1  
Website: http://www.siemens.com/iwöam  
All Rights Reserved (c) 1996-2018, Siemens AG  
Compiled on 2015-12-18 at 23:46:04 PST (build 53034) by p4build  
FIPS Mode :disabled  
AP uptime is 2 days 3 hours 44 minutes 55 seconds  
Reboot Time and Cause: unknown
```

The output of this command provides the following information:

Parameter	Description
Version	Indicates the version of AP software.
Reboot Time and Cause	Indicates the reason for which the AP was last rebooted and the reboot time.
Model	Indicates the AP model.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.216 show vpn

Description

This command displays the status and configuration details for VPN-enabled APs.

Syntax

```
show vpn {config|status|tunnels}
```

Parameter	Description
config	Displays configuration details for the VPN-enabled APs.
status	Displays the status of the VPN connections enabled on an AP.
tunnels	Displays the AP-VPN retry counter statistics.

Example

The following example shows the output displayed for **show vpn config** command:

```
Concentrator
-----

Type Value
---- ----

VPN Primary Server
VPN Backup Server
VPN Preemption disable
VPN Fast Failover disable
VPN Hold Time 600
VPN Monitor Pkt Send Freq 5
VPN Monitor Pkt Lost Cnt 2
VPN Ikepsk
VPN Username
VPN Password 95a5624fbf08dfb3e794ac2c6686e330
GRE outside vpn disable
GRE Server
GRE IP Address 0.0.0.0
GRE Type 1
GRE Per AP Tunnel disable
Reconnect User On Failover disable
Reconnect Time On Failover 60
Routing Table
-----

Destination Netmask Gateway Type
-----
```

The output displayed for this command provides information on the parameters configured for the VPN concentrator.

For more information on the VPN configuration parameters, see the following commands:

- vpn primary
- vpn backup
- vpn preemption
- vpn fast-failover
- vpn gre-outside
- vpn hold-time
- vpn monitor-pkt-lost-cnt
- vpn monitor-pkt-send-freq
- vpn ikepsk
- gre type
- gre primary
- gre per-ap-tunnel

The following example shows the output displayed for **show vpn status** command:

```
profile name:default
-----
current using tunnel                :unselected tunnel
ipsec is preempt status             :disable
ipsec is fast failover status       :disable
ipsec hold on period                600
ipsec tunnel monitor frequency (seconds/packet) 5
ipsec tunnel monitor timeout by lost packet cnt 2
ipsec primary tunnel crypto type    :Cert
ipsec primary tunnel peer address   :N/A
ipsec primary tunnel peer tunnel ip :N/A
ipsec primary tunnel ap tunnel ip   :N/A
ipsec primary tunnel current sm status :Init
ipsec primary tunnel tunnel status  :Down
ipsec primary tunnel tunnel retry times 0
ipsec primary tunnel tunnel uptime   0
ipsec backup tunnel crypto type     :Cert
ipsec backup tunnel peer address    :N/A
ipsec backup tunnel peer tunnel ip  :N/A
```

```

ipsec backup tunnel ap tunnel ip           :N/A
ipsec backup tunnel current sm status      :Init
ipsec backup tunnel tunnel status          :Down
ipsec backup tunnel tunnel retry times     0
ipsec backup tunnel tunnel uptime         0

```

The **show vpn status** command displays the current status of VPN connection, IP address configured for VPN/IPSec connections, and the tunnel details.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.217 show vpn tunnels

Description

This command shows VPN tunnel information for the AP

Syntax

show vpn tunnels

Parameter	Description
Source IP	Displays the source IP address of the VPN tunnel.
Destination	Displays the destination IP address of the VPN tunnel.
End IP	Displays the end IP address of the VPN tunnel.
Default GW	Displays the default gateway address of the VPN tunnel.
Use count	Displays the use count value.
Ifindex	Displays the VPN index value
Ifname	Displays the VPN tunnel name
Flags	Displays the VPN flag type
Retry count for Register Request	Displays the retry count for the registration request.
GRE Encap/Decap	Displays the encapsulation or decapsulation counters of GRE tunnel.
Old Subnet Status	Displays the VLAN addition request count.
Existing Subnet Status	Displays the previous subnet status

Usage Guidelines

Use this command to view a complete table of VPN tunnel status.

Example

The following example shows the output of **show vpn-tunnels** command:

Tunnel Flags: M = Master AP; S = Slave AP; Primary = Primary Tunnel

B = Backup Tunnel; R = Registered; H = Heartbeat Enable

Tunnel Info for peer address 172.16.0.254

Type	Value
----	-----
Source IP	3.6.9.2
Destination	172.16.0.254
End IP	10.17.140.252
Default GW	10.17.140.238
Use count	0
Ifindex	15
Ifname	tun0
Flags	MPR
Retry count for Register Request	0
GRE Encap/Decap	0/0
For DHCP Profile	aaa-dhcp
Retry count for Vlan Add Request	0
Old Subnet Status	Normal
Existing Subnet Status	Normal

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.218 show walled-garden

Description

This command displays the domain names and websites that are blacklisted or whitelisted by an AP.

Syntax

```
show walled-garden
```

Usage Guidelines

Use this command to view the walled garden configuration details for an AP. A walled garden typically controls access to web content and services. The Walled garden access is required when an external captive portal is used. For example, a hotel environment where the unauthenticated users are allowed to navigate to a designated login page (for example, a hotel website) and all its contents.

The users who do not sign up for the Internet service can view the “allowed” websites (typically hotel property websites). The website names must be DNS-based and support the option to define wildcards. This works for client devices with or without HTTP proxy settings.

When a user attempts to navigate to other websites, which are not in the whitelist of the walled garden profile, the user is redirected to the login page. In addition, a blacklisted walled garden profile can also be configured to explicitly block the unauthenticated users from accessing some websites.

Example

The following example shows the output of **show walled-garden** command:

```
White List
-----
Domain Name
-----
example.com
Black List
-----
Domain Name
-----
example2.com
```

The output of this command provides the following information:

Parameter	Description
Domain Name	Displays the blacklisted or whitelisted domain names and URLs.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.219 show wifi-uplink

Description

This command displays the configuration details, the status, and authentication log for the Wi-Fi uplinks configured on an AP.

Syntax

```
show wifi-uplink {auth log | config | status}
```

Parameter	Description
auth log	Displays the authentication configuration details and an authentication log.
config	Displays the Wi-Fi configuration parameters enabled on an AP.
status	Displays the status of the Wi-Fi uplink.

Usage Guidelines

Use this command to view the information about status and configuration details for the Wi-Fi uplink enabled on an AP.

Example

show wifi-uplink auth log

The following output is displayed for the **show wifi-uplink auth log** command:

```
-----
wifi uplink auth configuration:
-----
-----

wifi uplink auth log:
-----
[1536]2013-05-08 23:42:06.647: Global control interface '/tmp/supp_gbl'
```

show wifi-uplink config

The following output is displayed for the **show wifi-uplink config** command:

```
ESSID :Wifi
Cipher Suite :wpa-tkip-psk
Passphrase :test1234
Band :dot11a
```

The output for this command displays the following information:

Parameter	Description
ESSID	Displays the name of the network for which the Wi-Fi uplink is configured.
Cipher Suite	Displays the encryption settings configured for the Wi-Fi uplink. For example, wpa-tkip-psk or wpa2-ccmp-psk.
Passphrase	Displays the WPA passphrase configured for the Wi-Fi uplink.
uplink-band <band>	Displays the band configured for the Wi-Fi uplink connection. For example, dot11a and dot11g.

show wifi-uplink status

The following output is displayed for the **show wifi-uplink status** command:

```
configured :YES
```

```
enabled :YES
```

The output of this command indicates if the Wi-Fi uplink is configured and enabled on the AP.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.220 show wired-port**Description**

This command displays the configuration details associated with a wired profile configured on an AP.

Syntax

```
show wired-port <profile-name>
```

Parameter	Description
<profile-name>	Displays the current configuration details for a specific wired profile.

Usage Guidelines

This command displays the configuration details associated with a wired profile configured on an AP.

Example

The following example shows the output of the **show wired-port <profile-name>** command:

```
Name :default_wired_port_profile
```

```
VLAN Mode :Trunk
```

```
Allowed VLANs :all
```

```
Native VLAN :1
```

```
Admin Status :Down
```

```

Role :default_wired_port_profile

Speed :auto

Duplex :full

POE :No

Type :employee

Content Filtering :Disabled

Server Load Balancing :Disabled

MAC Authentication :Disabled

8021.x :Disabled

L2 Auth Fallthrough :Disabled

Captive Portal :disable

Exclude Uplink :none

Access Control Type :Network

Uplink enable :Disabled

Certificate Installed: :No

Internal Radius Users: :0

Internal Guest Users: :0

Role Derivation Rules
-----

Attribute Operation Operand Role Name Index
-----
-----

Vlan Derivation Rules
-----

Attribute Operation Operand Vlan Id
-----
-----

RADIUS Servers
-----

Name IP Address Port Key Timeout Retry Count NAS IP Address NAS Identifier RFC3576
-----
-----

LDAP Servers
-----

Name IP Address Port Timeout Retry Count Admin-DN Admin Password Base-DN
-----
-----

Access Rules
-----

```

```

Dest IP Dest Mask Dest Match Protocol (id:sport:eport) Action Log TOS 802.1P
Blacklist Mirror DisScan ClassifyMedia

```

```

-----
- -----

```

```
any any match any permit
```

```
Vlan Id :0
```

```
ACL Captive Portal:disable
```

```
:Captive Portal Configuration
```

```
Background Color:13421772
```

```
Banner Color :16750848
```

```
Decoded Texts :
```

```
Banner Text :Welcome to Guest Network
```

```
Use Policy :Please read terms and conditions before using Guest Network
```

```
Terms of Use :This network is not secure, and use is at your own risk
```

```
Internal Captive Portal Redirect URL:
```

```
Captive Portal Mode:Acknowledged
```

```
Custom Logo
```

```
:External Captive Portal Configuration
```

```
Server:localhost
```

```
Port :80
```

```
URL :/
```

```
Authentication Text:Authenticated
```

```
External Captive Portal Redirect URL:
```

```
Server Fail Through:No
```

The output of this command shows the configuration parameters associated with the selected wired profile and the value assigned for each of these parameters:

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.221 show wired-port-settings

Description

This command displays the list of wired profiles configured on an AP.

Syntax

```
show wired-port-settings
```

Usage Guidelines

Use this command to view the wired profiles configured on an AP.

Example

The following example shows the output of **show wired-port-settings** command:

```
Wired Port Profiles
-----

Name VLAN Mode Allowed VLANs Native VLAN Admin Status Role Speed
-----
wiredProf1 Access all guest Up wired-instant auto
WiredProf2 Trunk all 1 Down WiredProf2 auto

Duplex POE In Use Authentication Method Trusted
-----

auto Yes Yes None
full No Yes None

Port Profile Assignments
-----

Port Profile Name
-----
0 default_wired_port_profile
1 example1-crash
2 wired-instant
3 wired-instant
4 wired-instant
```

The output of this command provides the following information:

Column	Description
Name	Indicates the name of the wired port profile.
VLAN Mode	Indicates the name of switchport mode for the wired profiles. The VLAN modes can be Access or Trunk .
Allowed VLAN	Indicates the list of allowed VLANs. The Allowed VLAN refers to the VLANs carried by the port in Access mode.

Column	Description
Native VLAN	Indicates the values assigned for Native VLAN. A VLAN that does not have a VLAN ID tag in the frames is referred to as Native VLAN.
Admin Status	Indicates the status of admin port.
Role	Indicates the role assigned to the wired profile users.
Speed	Indicates the speed of wired client traffic.
duplex	Indicates if the client traffic duplexing full, half, or automatically assigned based on the capabilities of the client, the AP, and the cable.
poe	Indicates if PoE is enabled.
In Use	Indicates if the wired profile is in use.
Authentication Method	Indicates the authentication method configured for the wired profile.
Trusted	Indicates if a trusted port is supported in an AP.
Port	Indicates the port number to which a wired profile is assigned.
Profile	Indicates the name of wired profile assigned to a wired port.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.222 show wispr config

Description

This command displays the WISPr authentication parameters configured on an AP.

Syntax

```
show wispr config
```

Usage Guidelines

Use this command to view the WISPr configuration details for an AP.

Example

The following example shows the output of **show wispr config** command:

```
WISPr ISO Country Code :91
WISPr E.164 Country Code :IN
WISPr E.164 Area Code :80
WISPr SSID :Network1
```



```
WISPr Operator Name :XYZ
```

```
WISPr Location Name :airport
```

The output of this command provides the following information:

Parameter	Description
WISPr ISO Country Code	Indicates the ISO country code configured for WISPr authentication.
WISPr E.164 Country Code	Indicates the E.164 Country Code for the WISPr Location ID.
WISPr E.164 Area Code	Indicates the E.164 Area Code for the WISPr Location ID.
WISPr SSID	Indicates the SSID for which the WISPr authentication profile is configured.
WISPr Operator Name	Indicates the hotspot operator profile associated with the WISPr authentication profile.
WISPr Location Name	Indicates Hotspot location associated with the WISPr profile.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.223 show xml-api-server

Description

This command displays the XML API server configuration details.

Syntax

```
show xml-api-server config
```

Usage Guidelines

Use this command to view the XML API server configuration details.

Example

The following example shows the output of the **show xml-api-server** command:

```
ip :192.0.2.5
```

```
key :user1234
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.224 snmp-server

Description

This command configures SNMP parameters.

Syntax

```
snmp-server
    community <address>
    engine-id <engineID>
    host <ipaddr> version {1 <name> udp-port <port>}|{2c|3 <name> [inform] [udp-port <port>]}
    user <name> <auth-prot> <password> <priv-prot> <password>
```

Parameter	Description	Range	Default
community	Sets the read-only community string.	—	—
engine-id	Sets the SNMP server engine ID as a hexadecimal number.	24 characters maximum	—
host <ipaddr>	Configures the IP address of the host to which SNMP traps are sent. This host needs to be running a trap receiver to receive and interpret the traps sent by the controller.	—	—
version	Configures the SNMP version and security string for notification messages.	1,2c,3	—
inform	Sends SNMP inform messages to the configured host.	—	—
udp-port	Indicates the port number to which notification messages are sent.	—	162
user	Configures an SNMPv3 user profile for the specified username.	—	—
auth-prot	Indicates the authentication protocol for the user, either HMAC-MD5-98 Digest Authentication Protocol or HMAC-SHA-98 Digest Authentication Protocol, and the password to use with the designated protocol.	MD5/SHA	SHA
priv-prot	Indicates the privacy protocol for the user and the password to use with the designated protocol. CBC-DES Symmetric Encryption Protocol is the default option.	DES	DES

Usage Guidelines

This command configures SNMP on the APs only.

Example

The following example configures an SNMP host and community string:

```
(AP) (config)# snmp-server community user123
(AP) (config)# snmp-server host 10.0.0.1 version 2c udp-port 162 inform
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.16.225 speed test

Description

This command enables the user to configure a speed test to run each time the AP boots up and additionally configure time intervals at which it is executed periodically.

Syntax

```
speed-test
    bandwidth <bandwidth>
    include-reverse
    omit
    on-boot
    parallel
    protocol [<tcp>|<udp>]
    sec-to-measure <secs>
    server-ip <server>
    server-port <port>
    time-interval <interval>
    window
    no..
```

Parameter	Description	Range	Default
speed test	Enables speed-test configuration sub-mode for speed-test profile configuration.	—	—
bandwidth <bandwidth>	Configures the bandwidth length in Mbps.	—	—

Parameter	Description	Range	Default
include-reverse	The direction of traffic is reversed and sent from the server to the client. This option enables lperf to run the speed test for an extended duration.	—	—
omit	Enter the number of initial seconds to omit.	1-5	—
on-boot	Configures the AP to run the speed test during boot up.	—	—
parallel	Enter the number of parallel client streams.	1-30	—
protocol [<tcp> <udp>]	Configures the speed test profile to be executed using the UDP or TCP protocol.	—	tcp
sec-to-measure <secs>	Configures the duration of the speed test.	0-20 secs	10 secs
server-ip <server>	Denotes the IP address of the lperf server which is used to run the speed test.	—	—
server-port <port>	Denotes the server port that the client needs to connect to execute the speed test.	—	5201
time-interval <interval>	Configures a time interval (secs) to run the speed test on a regular basis. The minimum time interval is 60 secs.	—	—
window	Indicates the TCP window size or socket buffer size sent to the server while running speed test.	64000–16384000	—
no	Removes the speed-test profile configuration.	—	—

Usage Guidelines

Use this command to run a speed test on the Master AP.

Example

The following example configures the speed test profile:

```
(AP) (config) # speed-test
(AP) (speed-test) # server-ip 10.17.138.2
(AP) (speed-test) # server-port 5201
(AP) (speed-test) # sec-to-measure 20
(AP) (speed-test) # include-reverse
(AP) (speed-test) # omit 5
(AP) (speed-test) # parallel 10
(AP) (speed-test) # protocol udp
(AP) (speed-test) # bandwidth 100
(AP) (speed-test) # time-interval 600
(AP) (speed-test) # window 1
```

```
(AP) (speed-test) # end
(AP) (speed-test) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and speed test configuration sub-mode.

4.16.226 speed test <server>

Description

This command enables the user to run a speed test on the lperf server at any point in time. The speed test configuration is not saved and can be executed only once.

Syntax

```
speed-test {<server> <protocol> [<bandwidth> | <include-reverse> | <omit> |
<parallel> | <sec- to-measure> | <server-port> | <window>]}
```

Parameter	Description	Range	Default
server	Enter the IP address of the lperf server on which the speed test needs to be run.	—	—
protocol [<tcp> <udp>]	Enter the protocol type used for executing the speed test.	—	tcp
bandwidth <bandwidth>	Enter the bandwidth length in Mbps.	—	—
include-reverse	The direction of traffic is reversed and sent from the server to the client. This option enables lperf to run the speed test for an extended duration.	—	—
omit	Enter the number of initial seconds to omit.	1-5	—
parallel	Enter the number of parallel client streams.	1-30	—
sec-to-measure <secs>	Specify a duration (in secs) for the speed test.	0-20 secs	10 secs
server-port <port>	Enter the server port that the client needs to connect to execute the speed test.	—	5201
window	Indicates the TCP window size or socket buffer size sent to the server while running speed test.	64000–16384000	—

Usage Guidelines

Use this command to run a speed test on the lperf server at any instant.

Example

The following example runs a speed test on the lperf server:

```
(AP)# speed-test 10.17.138.2 udp bandwidth 100 sec-to-measure 20 server-port 5201  
parallel 12 omit 2 window 1
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.227 subscription-ap

Description

This command configures the subscription status for an AP.

Syntax

```
subscription-ap <MAC-address> status <status>  
no...
```

Command/Parameter	Description
<MAC-address>	Enter the MAC address of the AP.
<status>	Enter the subscription status for the AP.
no...	Removes the configuration.

Usage Guidelines

Use this command to subscribe the AP based on its MAC address.

Example

```
(AP) (config) # subscription-ap a1:b2:c3:d4:42:98 status
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.228 subscription-ap-enable

Description

This command enables the subscription of an AP.

Syntax

```
subscription-ap-enable
```

```
no...
```

Command/Parameter	Description
subscription-ap-enable	Enables the subscription for an AP.
no	Removes the configuration.

Usage Guidelines

Use this command to enable the subscription of the AP.

Example

```
(AP) # a-channel 44 18
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.229 swarm-mode

Description

This command allows you to provision an AP in the standalone or cluster mode.

Syntax

```
swarm-mode <mode>
```

Parameter	Description	Range
<mode>	Provisions the AP in the standalone or cluster mode. The swarm-mode standalone command converts the AP to the standalone mode, whereas the swarm-mode cluster command converts it to the cluster mode.	standalone or cluster

Usage Guidelines

When an AP is converted to the standalone mode, it cannot join a cluster of APs even if the AP is in the same VLAN. If the AP is in the cluster mode, it can form a cluster with other Virtual Controller APs in the same VLAN.

Example

The following command allows you to convert an AP to a standalone AP:

```
(AP) # swarm-mode standalone
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.230 syslocation

Description

This command allows you to define the physical location for the AP.

Syntax

```
syslocation <syslocation>
```

```
no...
```

Command/Parameter	Description
<syslocation>	Allows you to specify a physical location.
no	Removes the configuration.

Usage Guidelines

Use this command to define the physical location of the AP.

Example

The following example sets the physical location of the AP to Sunnyvale:

```
(AP) (config) # syslocation <Sunnyvale>
```


Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.16.231 syslog-level

Description

This command configures syslog facility levels. Syslog Facility is an information field associated with a syslog message.

Syntax

```
syslog-level <level> {ap-debug|network|security|system|user|user-debug|wireless}
no..
```

Parameter	Description	Range	Default
<code>syslog-level <level></code>	- Configures the Syslog facility level. - You can configure any of the following logging levels: - Emergency—Panic conditions that occur when the system becomes unusable. - Alert—Any condition requiring immediate attention and correction. - Critical—Any critical conditions such as a hard drive error. - Errors—Error conditions. - Warning—Warning messages. - Notice—Significant events of a non-critical and normal nature. The default value for all Syslog facilities. - Informational—Messages of general interest to system users. - Debug—Messages containing information useful for debugging.	Emergency, Alert, Critical, Errors, Warning, Notice, Informational, Debug	Notice
<code>ap-debug</code>	Generates a log for the AP device for debugging purposes.	—	—
<code>network</code>	Generates a log when there is a change in the network, for example, when a new AP is added to a network.	—	—
<code>security</code>	Generates a log for network security, for example, when a client connects using wrong password.	—	—

Parameter	Description	Range	Default
system	Generates a log about the system configuration and status.	—	—
user	Generates a log for the AP clients.	—	—
user-debug	Generates a detailed log about the clients for debugging purposes.	—	—
wireless	Generates a log about radio configuration.	—	—
no...	Removes the configuration.	—	—

Usage Guidelines

Use this command to configure syslog facility levels and to generate logs based on various user and AP parameters.

Example

The following example configures syslog facility levels for ap-debug and user-debug:

```
(AP) (config) # syslog-level error ap-debug
(AP) (config) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.16.232 syslog-server

Description

This command configures Syslog server for an AP.

Syntax

```
syslog-server <IP-address>
```

```
no...
```

Parameter	Description
syslog-server <IP-address>	Specifies the IP address to configure the syslog server.
no...	Removes the configuration.

Usage Guidelines

Use this command to configure syslog server for an AP.

Example

The following command configures the IP address of the syslog server for an AP.

```
(AP) (config) # syslog-server 192.0.2.9
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.17 T

4.17.1 telnet

Description

This command initiates a telnet session with external servers from the SCALANCE W CLI.

Syntax

```
telnet <host> telnet-port <port>
```

Command/Parameter	Description
host	The IP address of the destination server.
<telnet-port>	The physical port number of the server to which a connection needs to be established through Telnet.

Usage Guidelines

Use this command to Telnet an external server using the SCALANCE W CLI.

Example

The following example initiates a telnet session with external servers:

```
(AP) telnet 10.0.0.1 23
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.17.2 telnet-server

Description

This command enables Telnet access to SCALANCE W CLI.

Syntax

```
telnet-server
```

```
no...
```

Command/Parameter	Description
telnet-server	Enables Telnet access to the SCALANCE W CLI.
no...	Removes the configuration

Usage Guidelines

Use this command to enable Telnet access to the SCALANCE W CLI.

Example

The following example enables Telnet access to the AP:

```
(AP) (config) # telnet-server
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.17.3 terminal-access

Description

This command enables SSH access to SCALANCE W CLI.

Syntax

```
terminal-access
```

```
no...
```

Command/Parameter	Description
terminal-access	Enables terminal access to the SCALANCE W CLI.
no...	Removes the configuration.

Usage Guidelines

Use this command to enable SSH access to the SCALANCE W CLI.

Example

The following example enables terminal access to the AP:

```
(AP) (config) # terminal-access
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.17.4 tftp-dump-server

Description

This command configures TFTP dump server for an AP.

Syntax

```
tftp-dump-server <IP-address>
```

```
no...
```

Parameter	Description
tftp-dump-server <IP-address>	Configures TFTP dump server IP address.
no...	Removes the configuration

Usage Guidelines

Use this command to configure TFTP dump server for storing core dump files.

Example

The following example configures a TFTP dump server:

```
(AP) (config) # tftp-dump-server <IP-address>
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.17.5 time-range

Description

This command allows you to create time range profiles on an AP to enable or disable access to an SSID during a specific period of time-

Syntax

```
time-range <name> {absolute start <startday> <starttime> end <endday> <endtime>|  
periodic
```

```

{{daily | weekday | weekend} <starttime> to <endtime> | <startday <starttime> to
<endday>

<endtime>}

no time-range <name>

```

Command/Parameter	Description
name	Enter the profile name for the time range profile.
absolute start {<startdate> <starttime>} end {<enddate> <endtime>}	The SSID is made available only during the specified date and time range. Configure the following time range parameters: • startday—Enter the start date in the mm/dd/yyyy format. • tarttime—Enter the start time in the hh:mm format. • endday—Enter the end date in the mm/dd/yyyy format. • endtime—Enter the end time in the hh:mm format.
periodic {<startday> <starttime>} to {<endday> <endtime>}	The availability of the SSID will be periodically changed based on the time range set in the profile. Configure the following time range parameters: • startday—Specify any day of the week from Monday to Sunday • starttime—Enter the start time in the hh:mm format. • endday—Enter the end day for the time range profile. • endtime—Enter the end time in the hh:mm format.
periodic <daily> [<starttime> to <endtime>]	• daily—The time range profile is applied on the SSID on a daily basis. • starttime—Enter the start time in the hh:mm format. • endtime—Enter the end time in the hh:mm format.
periodic <weekday> [<starttime> to <endtime>]	• weekday—The time range profile is applied only during the weekday • starttime—Enter the start time in the hh:mm format. • endtime—Enter the end time in the hh:mm format.
periodic <weekend> [<starttime> to <endtime>]	• weekend—The time range profile is applied only during the weekend. • starttime—Enter the start time in the hh:mm format. • endtime—Enter the end time in the hh:mm format.
no time-range <name>	Removes the time range configuration.

Usage Guidelines

Use this command to create a time range profile using the SCALANCE W CLI. You can create an absolute time profile to execute once during a specific date and time configured in the profile or create a periodic profile to execute at regular intervals based on the periodicity specified in the configuration. These time based profiles can be applied to existing SSIDs in the AP.

Example

The following example creates an absolute time range profile :

```
(AP) (config) # time-range test1234 absolute start 10/20/2013 10:40 end 10/20/2015 10:50
```

The following example creates a periodic time range profile that executes on the specified day of the week:

```
(AP) (config) # time-range test1234 periodic monday 10:40 to tuesday 10:50
```

The following example creates a periodic time range profile that executes daily:

```
(AP) (config) # time-range testshs12 periodic daily 10:20 to 10:35
```

The following example creates a periodic time range profile that executes during the weekday:

```
(AP) (config) # time-range test123 periodic weekday 10:20 to 10:35
```

The following example creates a periodic time range profile that executes during the weekend:

```
(AP) (config) # time-range test12 periodic weekend 10:20 to 10:30
```

The following example removes the time range configuration:

```
(AP) (config) # no time-range testshs12
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode.

4.17.6 traceroute

Description

This command traces the route to the specified IP address.

Syntax

```
traceroute <ipaddr>
```

Parameter	Description
<ipaddr>	Displays the destination IP address.

Usage Guidelines

Use this command to identify points of failure in your network.

Example

The following example shows the output of **traceroute** command:

```
<Access Point> #traceroute 10.1.2.3
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.18 U

4.18.1 upgrade-drt

Description

This command enables users to upgrade an AP cluster with the new DRT version.

Syntax

```
upgrade-drt <url>
```

Parameter	Description
upgrade-drt	Upgrades the AP to use a new DRT version.
<url>	Allows you to specify the FTP, TFTP, or HTTP URL.

Usage Guidelines

Use this command to upgrade an AP by using a DRT file uploaded from the FTP or the TFTP server, or by using an HTTP URL. Before uploading the DRT file, ensure that you have the latest DRT file for your AP.

Example

The following example shows how to upgrade an AP by using a DRT file from the FTP server:

```
(AP)# upgrade-drt ftp://192.0.2.7/reg-data-1.0_62178.dat
```

The following example shows how to upgrade an AP by using a DRT file from the TFTP server:

```
(AP)# upgrade-drt tftp://192.168.0.1/reg-data-1.0_62178.dat
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.18.2 upgrade-image

Description

These commands allow you to upgrade an AP to use a new image file.

Syntax

```
upgrade-image
upgrade-image2
upgrade-image2-no-reboot
upgrade-image2-no-switch-partition-reboot
{<url>[/ftp | /tftp | /http]}
```

Parameter	Description
upgrade-image	Upgrades the AP to use a new image.
upgrade-image2	Uploads an additional image file and upgrades the AP to use this image file when required. You can also use this command to upgrade images for multi-class AP cluster.
upgrade-image2-no-reboot	Uploads an image file and upgrades the AP to use the new image without rebooting the APs.
upgrade-image2-no-switch-partition-reboot	
<url>	Allows you to specify the FTP, TFTP, or HTTP URL.

Usage Guidelines

Use these commands to upgrade an AP to use an image file uploaded from the FTP or TFTP server, or by using an HTTP URL. Before uploading an image file, ensure that you have the appropriate image file for your AP.

- For SCALANCE W— Siemens_Hercules_8.3.0.1_xxxx

Example

The following examples upgrade an AP by using an image file from the FTP server:

```
(AP)# upgrade-image ftp://192.0.2.7/Siemens_Hercules_8.3.0.1_xxxx
```

```
(AP)# upgrade-image2-no-reboot ftp://192.0.2.7/ Siemens_Hercules_8.3.0.1_xxxx
```

To upgrade images for a multi-class AP cluster:

```
(AP) # upgrade-image2
```

```
Orion@tftp://192.168.0.1/mips32.ari;Cassiopeia@tftp://192.168.0.1/armv5te.ari
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.18.3 uplink

Description

This command configures uplink connections.

Syntax

```
uplink
  enforce {ethernet| cellular |wifi | none}
  failover-internet
  failover-internet-ip <ip>
  failover-internet-check-timeout
  failover-internet-pkt-lost-cnt <count>
  failover-internet-pkt-send-freq <frequency>
  failover-vpn-timeout <seconds>
  preemption [interval <interval>]
  uplink-priority {cellular <priority> | {ethernet <priority>| [port <Interface-
number>
  <priority>}}|wifi <priority>}
  no...
```

no uplink

Parameter	Description	Range	Default
uplink	Enables the uplink configuration sub-mode.	—	—
enforce {ethernet cellular wifi none}	Enforces the specified uplink connection. You can specify the following types of uplink: - ethernet - cellular - wifi - none	ethernet, cellular, wifi, none	None
failover-internet	Enables uplink switchover based on the availability of the Internet. When enabled, the AP continuously sends ICMP packets to some well-known Internet servers. If the request is timed out due to a bad uplink connection or uplink interface failure, and the public Internet is not reachable from the current uplink, the AP switches to a different connection.	—	Disabled
failover-internet-ip	Allows you to configure the IP address to which the ICMP packets are sent in the event of Internet failure. If the out-of-service feature is enabled for the Internet down event in the SSID and the Internet is down, the ICMP packets are sent to the configured IP address to verify if the Internet is reachable from current uplink. By default, the master APs send the ICMP packets to 8.8.8.8 IP address to verify if the Internet is reachable.	Any IP address	8.8.8.8
failover-internet-check-timeout	Configures the number of seconds after which the Internet based uplink verification times out.	0-3600	10
failover-internet-pkt-lost-cnt <count>	Configures the number of packets that are to be lost when verifying the uplink availability using the Internet.	1—1000	10
failover-internet-pkt-send-freq <frequency>	Configures the frequency in seconds, at which the ICMP packets are sent to verify the uplink availability using the Internet.	1—3600	30
failover-vpn-timeout <seconds>	Configures a duration to wait for an uplink switch based on VPN status.	—	180 seconds

Parameter	Description	Range	Default
preemption	Enables pre-emption when no uplinks are enforced. When enabled, if the current uplink is active, the AP periodically tries to use a higher priority uplink, and switches to a higher priority uplink even if the current uplink is active.	—	Disabled
uplink-priority {cellular <priority> {ethernet <priority> port <Interface-number> <priority>} wifi <priority>}	Sets an uplink priority. You can specify the type of uplink to configure and assign a priority. If Ethernet uplink needs to be prioritized, specify the interface port number.	Integer	Eth0
no...	Disables the parameters configured under the uplink command.	—	—
no uplink	Removes the uplink configuration.	—	—

Usage Guidelines

Enforcing uplinks

The following configuration conditions apply to the uplink enforcement:

- When an uplink is enforced, the AP uses the specified uplink as the primary uplink regardless of uplink preemption configuration and the current uplink status.
- When an uplink is enforced and multiple Ethernet ports are configured and uplink is enabled on the wired profiles, the AP tries to find an alternate Ethernet link based on the priority configured.
- When no uplink is enforced and preemption is not enabled, and if the current uplink fails, the AP tries to find an available uplink based on the priority configured. The uplink with the highest priority is used as the primary uplink. For example, if WiFi-sta has the highest priority, it is used as the primary uplink.
- When no uplink is enforced and preemption is enabled, and if the current uplink fails, the AP tries to find an available uplink based on the priority configured. If current uplink is active, the AP periodically tries to use a higher priority uplink and switches to the higher priority uplink even if the current uplink is active

Uplink Preemption

When no uplink is enforced and preemption is enabled, and if the current uplink fails, the AP tries to find an available uplink based on in the priority configured. If current uplink is active, the AP periodically tries to use a higher priority uplink and switches to the higher priority uplink even if the current uplink is active.

Uplink Priority

When uplink priority is configured, the AP tries to get a higher priority link every ten minutes even if the current uplink is up. This does not affect the current uplink connection. If the higher uplink is usable, the AP switches over to that uplink. Preemption is enabled by default.

Uplink Switchover

The default priority for uplink switchover is Ethernet and then 3G or 4G. The AP has the ability to switch to the lower priority uplink if the current uplink is down.

Uplink Switching based on VPN Status

SCALANCE W supports switching uplinks based on the VPN status when deploying mixed uplinks (Ethernet 0, 3G or 4G,Wi-Fi). When VPN is used with multiple backhaul options, the AP switches to an uplink connection based on the VPN connection status instead of only using Ethernet 0, the physical backhaul link.

The following configuration conditions apply to uplink switching:

- If the current uplink is Ethernet 0 and the VPN connection is down, the AP will retry to connect to VPN. This retry time depends on the configuration of primary/backup and fast-failover for VPN. If all the possibilities fail, then the AP waits for a vpn-failover-timeout and then a different uplink (3G,Wi-Fi) is selected.
- If the current uplink is 3G or Wi-Fi, and Ethernet 0 has a physical link, the AP periodically suspends user traffic to try and connect to the VPN on the Ethernet 0. If the AP succeeds, then the AP switches to Ethernet 0. If the AP does not succeed, then the AP restores the VPN connection to the current uplink.

Switching Uplinks Based on Internet Availability

When the uplink switchover based on Internet availability is enabled, the AP continuously sends ICMP packets to some well-known Internet servers. If the request is timed out due to a bad uplink connection or uplink interface failure, and the public Internet is not reachable from the current uplink, the AP switches to a different connection.

Example

The following example configures uplink priority:

```
(AP) (uplink) # uplink-priority ethernet port 0 1
(AP) (uplink) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and uplink configuration sub-mode.

4.18.4 uplink-vlan

Description

This command configures uplink VLAN for management traffic on an AP.

Syntax

```
uplink-vlan <vlan-ID>
```

Parameter	Description	Range	Default
<vlan-ID>	Assigns a VLAN ID for the uplink management traffic	0-4093	0

Usage Guidelines

Use this command to configure the uplink VLAN configuration details for management traffic. When configured, the uplink management VLAN allows you to tag management traffic and connect multiple AP clusters to the same port on an upstream switch (for example, AirWave server).

Example

The following example configures uplink management VLAN:

```
(AP)# uplink-vlan 0
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.18.5 url-visibility

Description

This command enables url visibility on the AP and extracts the full URL information of the http and https sessions along with the session-ip and periodically logs them on the ALE server.

Syntax

```
url-visibility
```

```
no...
```

Parameter	Description
url-visibility	Enables URL visibility on the AP.
no	Disables URL visibility.

Usage Guidelines

Use this command to determine the frequency of hits on a specific URL. To verify if the configuration has been applied correctly, use the **show dpi debug status** command.

Example

The following example enables url visibility:

```
(AP) (config) # url-visibility
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

The following example shows the output of the show dpi debug status command:

```
Dpimgr Running :TRUE
```

```
Dpimgr Hello count :1
```

```
Dpimgr Agent :App
```

```
Dpimgr Status value :0x17d
```

```
Dpimgr Visibility Status :URL + App
```

```
Dpimgr Enforcement Status :App
```

```
Dpimgr External Visibility Status :AMP
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode.

4.18.6 usb-port-disable

Description

This command disables the USB port on the AP.

Syntax

```
usb-port-disable
```

```
no...
```

Usage Guidelines

Use this command to disable the USB port. To re-enable the port, run the **no usb-port-disable** command. Reboot the AP after changing the USB port status.

Example

The following example shows how to disable the USB port on the AP:

```
(AP)# usb-port-disable
```

Remind: Command takes effect after AP reboot.

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.18.7 user

Description

This command creates users for an AP.

Syntax

```
user <username> [<password>] [portal| radius]
```

```
no...
```

Parameter	Description
user <username>	Creates a username for the AP user.
<password>	Assigns a password for the AP user
portal	Configures a guest user.
radius	Configures an employee user
no...	Removes the configuration

Usage Guidelines

The SCALANCE W user database consists of a list of guest and employee users. Addition of a user involves specifying a login credentials for a user. The login credentials for these users are provided outside the SCALANCE W system.

A guest user can be a visitor who is temporarily using the enterprise network to access the Internet. However, if you do not want to allow access to the internal network and the Intranet, you can segregate the guest traffic from the enterprise traffic by creating a guest WLAN and specifying the required authentication, encryption, and access rules.

An employee user is the employee who is using the enterprise network for official tasks. You can create Employee WLANs, specify the required authentication, encryption and access rules and allow the employees to use the enterprise network.

The user database is also used when an AP is configured as an internal RADIUS server.

The local user database of APs can support up to 512 user entries except AP-9x supports only 256 user entries. If there are already 512 users, AP-9x will not be able to join the cluster.

Example

The following example configures an employee user for an AP:

```
(AP) (config)# user user1 password123 radius
(AP) (config)# end
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.19 V

4.19.1 version

Description

This command configures a version number for the AP.

Syntax

```
version <version-number>
```

Parameter	Description
version <version-number>	Assigns a version number for the AP.

Usage Guidelines

Use this command to configure a version number for the AP.

Example

The following example configures a version number for the AP

```
(AP) (config)# version 2
```

```
(AP) (config)# end
```

```
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.19.2 virtual-controller

Description

This command configures the virtual controller settings such as country code and VC key, and network parameters such as IPv4 or IPv6 addresses, VLAN, and DNS IP address.

Syntax

```
virtual-controller
    country <country-code>
    dnsip <addr>
    ip <IP-address>
    ipv6 <IPv6 address>
    key <name>
    vlan <virtual-controller-vlan> <virtual-controller-mask> <virtual-controller-
gateway>
    no...
```

Parameter	Description
country <country-code>	Defines the country of operation of an AP. Slave APs obtain country code configuration settings from the master AP.
dnsip <addr>	Configures the DNS IP address for the virtual controller.
ip <IP-address>	Assigns an IP address for the virtual controller.
ipv6 <IPv6 address>	Assigns an IPv6 address for the virtual controller.
key <name>	Defines a unique name for the virtual controller.
vlan <virtual-controller-vlan>	Associates a VLAN ID with the virtual controller.
<virtual-controller-mask>	Configures a subnet mask for the virtual controller.
<virtual-controller-gateway>	Configures a gateway for the virtual controller.
no...	Removes the configuration.

Example

The following example configures a country code for an AP:

```
(AP) (config) # virtual-controller-country US
(AP) (config) # end
(AP) # commit apply
```

The following example configures a DNS IP address for the virtual controller:

```
(AP) (config) # virtual-controller-dnsip 192.0.2.2
(AP) (config) # virtual-controller-ip 192.0.2.2
(AP) (config) # virtual-controller-ipv6 10.17.154.132
```

4.19 V

```
(AP) (config)# virtual-controller-key
541a271a01f722ac28c1f8cfcbc4529021bcfb130d4e59ac93

(AP) (config)# virtual-controller-vlan 1961 255.255.255.240 10.17.196.17

(AP) (config)# end

(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.19.3 vpn backup

Description

This command configures a secondary or backup VPN server for VPN connections.

Syntax

```
vpn backup <name>
no...
```

Parameter	Description
vpn backup <name>	Configures an FQDN for the secondary VPN or IPsec endpoint.
no...	Removes the configuration.

Usage Guidelines

Use this command to configure a backup VPN server. When both primary and secondary VPN servers are configured, the AP can switch to the available VPN connection when a the primary VPN server is not available.

Example

The following example configures a backup server for VPN connections:

```
(AP) (config)# vpn backup <name>

(AP) (config)# end

(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.19.4 vpn fast-failover

Description

This command configures fast failover feature for VPN connections.

Syntax

```
vpn fast-failover
```

```
no...
```

Parameter	Description
vpn fast-failover	Enables fast failover feature for VPN connections.
no...	Removes the configuration.

Usage Guidelines

Use this command to configure the fast failover feature for VPN connections. Enabling the fast failover feature allows the AP to create a backup VPN tunnel to the controller along with the primary tunnel, and maintain both the primary and backup tunnels separately. If the primary tunnel fails, the AP can switch the data stream to the backup tunnel. This reduces the total failover time to less than one minute.

Example

The following example configures the VPN fast failover feature:

```
(AP) (config) # fast-failover
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.19.5 **vpn gre-outside**

Description

This command enables automatic configuration of the GRE tunnel between the AP and the controller.

Syntax

```
vpn gre-outside  
no...
```

Usage Guidelines

Use this command to enable automatic configuration of the GRE tunnel between the controller to provide L2 connectivity.

Example

The following example configures an automatic GRE tunnel:

```
(AP) (config) # vpn gre-outside  
(AP) (config) # end  
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.19.6 **vpn hold-time**

Description

This command configures the time interval after which the AP can switch over to the primary host when preemption is enabled.

Syntax

```
vpn hold-time <seconds>
```


no..

Parameter	Description
vpn hold-time <seconds>	Configures a time period in seconds after which the APs can switch to primary VPN server.
no...	Removes the configuration.

Usage Guidelines

Use this command to configure a period to hold on switching to the primary server when pre-emption is enabled.

Example

The following example configures a hold-time to switch to the primary host server:

```
(AP) (config) # hold-time <seconds>
(AP) (config) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.19.7 vpn ikepsk

Description

This command configures user credentials for the VPN connection.

Syntax

```
vpn ikepsk <ikepsk> username <username> password <password>
```

```
no...
```

Parameter	Description
vpn ikepsk <ikepsk>	Specifies an IKE authentication for VPN connection using PSKs.
username <username>	Defines a username that enables access to VPN.
password <password>	Defines a password that enables access to VPN.
no...	Removes the configuration.

Usage Guidelines

Use this command to configure user credentials to establish VPN connection.

Example

The following commands enable user access to VPN connection.

```
(AP) (config)# vpn ikepsk secretKey username User1 password password123
```

```
(AP) (config)# end
```

```
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.19.8 vpn monitor-pkt-lost-cnt

Description

This command configures the number of lost packets after which the AP can determine that the VPN connection is not available.

Syntax

```
vpn monitor-pkt-lost-cnt <count>
```

```
no..
```

Parameter	Description	Default
vpn monitor-pkt-lost-cnt <count>	Defines the number of lost packets for VPN connection test or monitoring by the AP.	2
no...	Removes the configuration.	—

Usage Guidelines

Use this command to configure a count for the lost packets, so that the APs can determine if the VPN connection is unavailable.

Example

The following example configures a count for the lost packets:

```
(AP) (config) # vpn monitor-pkt-lost-cnt <count>
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.19.9 vpn monitor-pkt-send-freq

Description

This command configures the frequency at which the AP can verify if the active VPN connection is available.

Syntax

```
vpn monitor-pkt-send-freq <frequency>
```

```
no..
```

Parameter	Description	Default
vpn monitor-pkt- send-freq <frequency>	Configures a frequency interval in seconds at which the test packets are sent.	5
no...	Removes the VPN monitoring frequency configuration.	—

Usage Guidelines

Use this command to monitor VPN connections and verify its availability at regular intervals.

Example

The following example configures the VPN monitoring frequency:

```
(AP) (config) # vpn monitor-pkt-send-freq 10
(AP) (config) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.19.10 vpn preemption

Description

This command enables pre-emption to allow the VPN tunnel to switch back to the primary host after a failover.

Syntax

```
vpn preemption
no...
```

Parameter	Description
vpn preemption	Enables pre-emption to allow the VPN tunnel to switch to the primary VPN server when it becomes available after a failover.
no...	Removes the VPN pre-emption configuration.

Usage Guidelines

Use this command to enable pre-emption when both primary and secondary servers are configured and fast failover feature is enabled.

Example

The following example enables VPN pre-emption.

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.19.11 vpn primary

Description

This command configures a primary VPN server for VPN connections.

Syntax

```
vpn primary <name>
```

```
no...
```

Parameter	Description
vpn primary <name>	Configures a FQDN for the main VPN or IPsec endpoint.
no...	Removes the VPN server configuration.

Usage Guidelines

Use this command to configure a primary VPN server for AP-VPN connections. When a secondary VPN server is configured along with the primary server, you can enable the fast failover feature that allows the AP to create a backup VPN tunnel to the controller along with the primary tunnel, and maintain both the primary and backup tunnels separately.

Example

The following example configures a primary VPN server:

```
(AP) (config) # vpn primary <name>
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.19.12 vpn reconnect-time-on-failure

Description

This command defines a period after which the VPN connection can be reestablished when the primary VPN tunnel fails.

Syntax

```
vpn reconnect-time-on-failover <down-time>
```

```
no...
```

Parameter	Description
vpn reconnect-time-on-failover <down-time>	Configures a time period in minutes after which the VPN is reconnected when the primary VPN tunnel fails.
no...	Removes the configuration.

Usage Guidelines

Use this command to configure a time period for reestablishing VPN connections. When configured, the AP reconnects the user session when the interval specified for this command expires.

Example

The following example configures a VPN reconnection duration:

```
(AP) (config) # vpn reconnect-time-on-failover 20
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.19.13 vpn reconnect-user-on-failover

Description

This command enables the users to reconnect to the VPN when the primary VPN tunnel fails.

Syntax

```
vpn reconnect-user-on-failover
```

```
no...
```

Parameter	Description
vpn reconnect-user-on-failover	Enables users to reconnect to the VPN during a VPN failover.
no...	Removes the configuration.

Usage Guidelines

Use this command to allow the users to reconnect to the VPN after a VPN failover. When enabled , the AP reconnects the user during a VPN failover.

Example

The following example enables users to reconnect to VPN after a failover:

```
(AP) (config) # vpn reconnect-user-on-failover
```

```
(AP) (config) # end
```

```
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.20 W

4.20.1 web-server

Description

This command allows you to configure web server and enable or disable the TLS protocol.

Syntax

```
web-server  
  
    ssl-protocol {all|tlsv1|tlsv1.1|tlsv1.2}  
  
    no...
```

Parameter	Description
ssl-protocol	Enables SSL protocol for secure communication with the web server.
all	Enables all versions of TLS protocol for secure communication with the web server.
tlsv1	Enables TLS v1 protocol.
tlsv1.1	Enables TLS v1.1 protocol.
tlsv1.2	Enables TLS v1.2 protocol.
no...	Removes the configuration.

Usage Guidelines

Use the **web-server** command to enable secure communication with the web server through the TLS protocol.

Example

The following example shows how to enable TLS v1.0:

```
(AP) (config) # web-server  
  
(AP) (web-server) # ssl-protocol tlsv1  
  
(AP) (web-server) # end  
  
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.20.2 wifi0-mode

Description

This command configures an AP to function in the Access, Monitor, or Spectrum Monitor mode.

Syntax

```
wifi0-mode <mode>
```

Parameter	Description	Range	Default
<mode>	Configures the AP to function in any of the following modes: • Access— In Access mode, the AP serves clients, while also monitoring for rogue APs in the background. • Monitor—In Monitor mode, the AP acts as a dedicated monitor, scanning all channels for rogue APs and clients. • Spectrum Monitor— In Spectrum Monitor mode, the AP functions as a dedicated full-spectrum RF monitor, scanning all channels to detect interference, whether from neighboring APs or from non-WiFi devices such as microwaves and cordless phones. NOTE: In Monitor and Spectrum Monitor modes, the AP does not provide access services to clients.	access, monitor, spectrum-monitor	access

Usage Guidelines

Use this command to configure a Wi-Fi interface of an AP to function in the access, monitor, or spectrum monitor mode.

Example

The following example configures the wifi0 interface to use the access mode:

```
(AP) # wifi0-mode access
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.20.3 wifi1-mode

Description

This command configures an AP to function in the Access, Monitor, or Spectrum Monitor mode.

Syntax

```
wifi1-mode <mode>
```

Parameter	Description	Range	Default
<mode>	Configures the AP to function in any of the following modes: • Access— In Access mode, the AP serves clients, while also monitoring for rogue APs in the background. • Monitor—In Monitor mode, the AP acts as a dedicated monitor, scanning all channels for rogue APs and clients. • Spectrum Monitor— In Spectrum Monitor mode, the AP functions as a dedicated full-spectrum RF monitor, scanning all channels to detect interference, whether from neighboring APs or from non-WiFi devices such as microwaves and cordless phones. NOTE: In Monitor and Spectrum Monitor modes, the AP does not provide access services to clients.	access, monitor, spectrum-monitor	access

Usage Guidelines

Use this command to configure a Wi-Fi interface of an AP to function in the access, monitor, or spectrum monitor mode.

Example

The following example configures the wifi1 interface to use the access mode:

```
(AP)# wifi-mode access
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode.

4.20.4 wired-port-profile

Description

This command configures a wired port profile for wired AP clients.

Syntax

```
wired-port-profile <port>
    access-rule-name <name>
    allowed-vlan <vlan>
    auth-server <name>
    called-station-id
    captive-portal {<type> [exclude-uplink <types>] | external [Profile <name>]
[exclude-uplink<types>]}
    content-filtering
    dot1x
    dot3bz
    duplex <duplex>
    inactivity-timeout <interval>
    l2-auth-failthrough
    mac-authentication
    native-vlan <vlan>
    no..
    poe
    radius-accounting
    radius-accounting-mode {user-association|user-authentication}
    radius-interim-accounting-interval <minutes>
    radius-reauth-interval <minutes>
    server-load-balancing
    set-role <attribute>{{equals|not-equal|starts-with|ends-with|contains}<operator>
<role>|value-of}
    set-role-mac-auth <mac-only>
    set-role-machine-auth <machine-only> <user-only>
    set-role-pre-auth <role>
    set-role-unrestricted
```

```

set-vlan <attribute>{equals|not-equals|starts-with|ends-with|contains} <operator>
<VLAN- ID>|value-of}

shutdown

spanning-tree

speed <speed>

switchport-mode <mode>

trusted

type <type>

uplink-enable

use-ip-for-calling-station

no wired-port-profile <port>

```

Parameter	Description	Range	Default
wired-port-profile <port>	Creates a wired profile.	—	—
access-rule-name <name>	Maps the already configured access rules with the wired profile.	—	—
allowed-vlan <vlan>	Configures a list of allowed VLANs. The Allowed VLAN refers to the VLANs carried by the port in Access mode. You can configure the list of comma separated digits or ranges 1,2,5 or 1-4, or all.	—	—
auth-server <name>	Configures the authentication server for the wired profile.	—	—
called-station-id {type{ap-group apname ipaddr macaddr vlan-id	Configures the following called- station-id types: - ap-group— The Virtual Controller name is used as thecalled- station-id. - ap-name— The AP hostname is used as thecalled- station-id. - vlan-id— The VLAN ID of the client is used as the called-station-id. - ipaddr — TheIP address s of the AP is used as thecalled- station-id. - macaddr— The MAC address of the AP is used as the calling- station-id. - vlan-id— The VLAN ID of the client is used as the called-station-id		
captive-portal{<type>[exclude-uplink <types>] external [exclude-uplink <types>] profile <name>[exclude-uplink <types>]]}	Enables internal or external captive portal authentication for the wired profile users.You can also disable redirection to the captive portal based on the type of current uplink.If the external captive profiles are created, you can specify the profile name by using the external and profile keywords and associated parameters.	—	—
content-filtering	Enables content filtering.	—	—
dot1x	Enables 802.11X authentication for the Wired profile users.	—	Disabled

Parameter	Description	Range	Default
dot3bz	Enables 802.3bz authentication for the wired profile users.	—	Disabled
duplex <duplex>	Assigns a value for duplexing client traffic based on the capabilities of the client, the AP, and the cable. You can specify full , half , or auto .	full, half, auto	auto
inactivity-timeout <interval>	Configures a timeout value for the inactive client sessions. When a client session is inactive for the specified duration, the session expires and the clients are required to log in again.	60-86400 seconds	1000 seconds
l2-auth-failthrough	Allows the clients to use 802.1X authentication when MAC authentication fails.	—	Disabled
mac-authentication	Enables MAC authentication.	—	Disabled
native-vlan <vlan>	Configures a value for Native VLAN. A VLAN that does not have a VLAN ID tag in the frames is referred to as Native VLAN.	1-4093	—
poe	Enables power over Ethernet	—	Enabled
radius-accounting	Enables accounting for the RADIUS server authentication. When enabled, the APs post accounting information to the Radius server at the specified accounting interval.	—	—
radius-accounting-mode {user-association user-authentication}	Configures an accounting mode for the captive portal users. You can configure any of the following modes for accounting: user-authentication — when configured, the accounting starts only after client authentication is successful and stops when the client logs out of the network. user-association — When configured, the accounting starts when the client associates to the network successfully and stops when the client is disconnected.	—	user-authentication
radius-interim-accounting-interval <minutes>	Configures an interval for posting accounting information as RADIUS INTERIM accounting records to the RADIUS server. When configured, the AP sends interim- update messages with current user statistics to the RADIUS server at regular intervals.	0-60	—
radius-reauth-interval <minutes>	Configures a reauthentication interval at which all associated and authenticated clients must be reauthenticated.	0-32768	—
server-load-balancing	Enables load balancing across two RADIUS servers if two authentication servers are configured for the SSID.	—	Enabled

Parameter	Description	Range	Default
<pre>set-role <attribute> {{equals not- equal starts-with ends- with contains}operator> <role> value-of}</pre>	Assigns a user role to the clients. The first rule that matches the configured condition is applied. You can specify any of the following conditions: • contains — The rule is applied only if the attribute value contains the specified string. • ends-with — The rule is applied only if the attribute value ends with the specified string. • equals — The rule is applied only if the attribute value is equal to the specified string. • not-equals — The rule is applied only if the attribute value is not equal to the specified string. • starts-with — The rule is applied only if the attribute value begins with the specified string. • value-of — This rule sets the user role to the value of the attribute returned. To set a user role, the value of the attribute must already be configured on the AP.	—	—
<pre>set-role-machine-auth <machine- only><user-only></pre>	Configures a machine authentication rule. You can assign different rights to clients based on whether their hardware device supports machine authentication. Machine authentication is only supported on Windows devices, so this can be used to distinguish between Windows devices and other devices such as iPads.	—	—
<pre>set-role-mac-auth <mac- only></pre>	Configures a MAC authentication based user role.	—	—
<pre>set-role-pre-auth <role></pre>	Configures a pre-authentication role to allow some access to the guest users before the client authentication.	—	—
<pre>set-vlan <attribute> {equals not-equals starts-with ends-with contains} <operator> <VLAN-ID> value-of}</pre>	Assigns a VLAN to the clients. The first rule that matches the configured condition is applied. You can specify any of the following conditions: • contains — The rule is applied only if the attribute value contains the specified string. • ends-with — The rule is applied only if the attribute value ends with the specified string. • equals — The rule is applied only if the attribute value is equal to the specified string. • not-equals — The rule is applied only if the attribute value is not equal to the specified string. • starts-with — The rule is applied only if the attribute value begins with the specified string. • value-of — This rule sets the VLAN to the value of the attribute returned. To set a user role, the value of the attribute must already be configured on the AP.	—	—
shutdown	Shuts down the admin status port.	up, down	up

Parameter	Description	Range	Default
spanning-tree	Enables Spanning Tree Protocol on the wired profile. STP ensures that there are no loops in any bridged Ethernet network and operates on all downlink ports, regardless of forwarding mode. STP will not operate on the uplink port and is supported only on APs with three or more ports. By default Spanning Tree is disabled on wired profiles.	—	—
speed <speed>	Assigns a value for indicating speed of client traffic based on the capabilities of the client, the AP, and the cable.	10,100,200, auto	auto
switchport-mode <mode>	Defines the switchport mode for the wired profile. You can specify any of the following modes: Access — Use this mode to allow the port to carry a single VLAN specified as the native VLAN. Trunk — Use this mode to allow the port to carry packets for multiple VLANs specified as allowed VLANs.	access, trunk	trunk
trusted	Supports trusted ports to enable wired users in an L3 mode to connect to a switch or a router that is connected to the downlink port of an AP. In this mode, <code>mac-authentication</code> , <code>dot1x</code> , and <code>captive-portal</code> parameters will not take any effect.	—	No
type <type>	Defines the primary usage of the wired profile	employee, guest	employee
uplink-enable	Enables uplink for the wired profile	—	—
use-ip-for-calling-station	The IP address of the client will be used as the calling-station-id	—	—
no wired-port-profile <port>	Removes the wired portprofile configuration.	—	—
no...	Removes any existing configuration	—	—

Usage Guidelines

Use this command to create a wired profile for employee and guest users. The Ethernet ports allow third-party devices such as VoIP phones or printers (which support only wired connections) to connect to the wireless network. You can also configure an ACL for additional security on the Ethernet downlink.

Example

The following example configures a wired profile for an employee network:

```
(AP) (config) # wired-port-profile employeeWired1
(AP) (wired ap profile"employeeWired1") # type employee
(AP) (wired ap profile"employeeWired1") # speed auto
(AP) (wired ap profile"guestWired1") # dot3bz
(AP) (wired ap profile"employeeWired1") # duplex auto
```

```
(AP) (wired ap profile"employeeWired1")# no shutdown
(AP) (wired ap profile"employeeWired1")# poe
(AP) (wired ap profile"employeeWired1")# uplink-enable
(AP) (wired ap profile"employeeWired1")# called-station-id type 10.64.1.23
(AP) (wired ap profile"employeeWired1")# content-filtering
(AP) (wired ap profile"employeeWired1")# switchport-mode trunk
(AP) (wired ap profile"employeeWired1")# allowed-vlan 2,3,5
(AP) (wired ap profile"employeeWired1")# native-vlan 1
(AP) (wired ap profile"employeeWired1")# mac-authentication
(AP) (wired ap profile"employeeWired1")# dot1x
(AP) (wired ap profile"employeeWired1")# use-ip-for-calling-station
(AP) (wired ap profile"employeeWired1")# l2-auth-failthrough
(AP) (wired ap profile"employeeWired1")# auth-server server1
(AP) (wired ap profile"employeeWired1")# server-load-balancing
(AP) (wired ap profile"employeeWired1")# radius-reauth-interval 20
(AP) (wired ap profile"employeeWired1")# access-rule-name wiredACL
(AP) (wired ap profile"employeeWired1")# set-role Group-Name contains wired wired-
instant
(AP) (wired ap profile"employeeWired1")# set-vlan ap-name equals test 400
(AP) (wired ap profile"employeeWired1")# trusted
(AP) (wired ap profile"employeeWired1")# end
(AP)# commit apply
```

The following example configures a guest wired profile:

```
(AP) (config)# wired-port-profile guestWired1
(AP) (wired ap profile"guestWired1")# type guest
(AP) (wired ap profile"guestWired1")# speed auto
(AP) (wired ap profile"guestWired1")# dot3bz
(AP) (wired ap profile"guestWired1")# duplex auto
(AP) (wired ap profile"guestWired1")# no shutdown
(AP) (wired ap profile"guestWired1")# poe
(AP) (wired ap profile"guestWired1")# uplink-enable
(AP) (wired ap profile"guestWired1")# content-filtering
(AP) (wired ap profile"guestWired1")# switchport-mode trunk
(AP) (wired ap profile"guestWired1")# allowed-vlan 200,201,400
(AP) (wired ap profile"guestWired1")# native-vlan 1
```



```
(AP) (wired ap profile "guestWired1") # captive-portal external exclude-uplink Ethernet
(AP) (wired ap profile "guestWired1") # mac-authentication
(AP) (wired ap profile "guestWired1") # auth-server server1
(AP) (wired ap profile "guestWired1") # server-load-balancing
(AP) (wired ap profile "guestWired1") # access-rule-name wiredACL
(AP) (wired ap profile "guestWired1") # set-role Group-Name contains wired wired-instant
(AP) (wired ap profile "guestWired1") # set-vlan ap-name equals test 200
(AP) (wired ap profile "guestWired1") # trusted
(AP) (wired ap profile "guestWired1") # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and Wired port profile configuration sub- mode.

4.20.5 wlan access-rule

Description

This command configures access rules for WLAN SSID or wired profile.

Syntax

```
wlan access-rule <name>

    bandwidth-limit {downstream <kbps>| upstream <kbps>| peruser { downstream <kbps>|
upstream<kbps>}}

    calea

    captive-portal {external [profile <name>]|internal}

    dpi-error-page-url <idx>

    index <index>

    no

    rule <dest> <mask> <match> {<protocol> <start-port> <end-port> {permit|deny|src-
nat [vlan<vlan id>|tunnel <tunnel ip>]|dst-nat{<IP-address> <port>| <port>}}| app
<app> {permit| deny}}| appcategory <appgrp>| webcategory <webgrp> {permit| deny}}|
webreputation <webrep>}

    [<opt1..opt11>]
```

```

redirect-blocked-https-traffic

vlan <vlan-id>

no...

no wlan access-rule <name>

```

Parameter	Description	Range	Default
wlan access-rule-name <name>	Specifies the profile name for which the access rule is configured.	—	—
bandwidth-limit {down- stream <kbps> upstream <kbps> peruser {down- stream <kbps> upstream <kbps>}}	Assign bandwidth contracts to user roles. The administrator can assign a bandwidth contract configured in Kbps to upstream (client to the AP) or downstream (AP to clients) traffic for a user role. If you want to assign a bandwidth contract specific for each user, you can run the command with peruser parameter. The bandwidth contract will not be applicable to the user traffic on the bridged out (same subnet) destinations. NOTE: In the earlier releases, bandwidth contract could be assigned per SSID. In the current release, the bandwidth contract can also be assigned per SSID user. If the bandwidth contract is assigned for an SSID in SCALANCE W 6.2.1.0-3.4.0.0 image and when the AP is upgraded to 6.3.1.1-4.0.0.0 release version, the bandwidth configuration per SSID will be treated as per- user downstream bandwidth contract for that SSID.	1–65535 Kbps	—
calea	Creates an access rule for CALEA integration.	—	—
captive-portal {exter- nal [profile <name>] internal}	Configures a captive-portal role, to assign to the users role after a successful authentication.	—	—
dpi-error-page-url <idx>	Creates an access rule to display a specific error page when clients access the HTTP websites blocked by AppRF policies.	—	—
<index>	Creates an index entry for access rules.	—	—
rule	Creates an access rule. You can create up to 128 ACEs in an ACL for a user role. However, it is recommended to delete any existing configuration and apply changes at regular intervals.	—	—
<dest>	Allows you to specify the destination IP address.	—	—
<mask>	Specifies the subnet mask for the destination IP address.	—	—
<match>	match — Indicates if the rule specific to the destination IP address and subnet mask matches the value specified for protocol. invert — Indicates if the rule allows or denies traffic with an exception to the specified destination IP address and subnet mask.	match invert	—

Parameter	Description	Range	Default
<protocol>	Configures any of the following: Protocol number between 0-255 - any: any protocol - tcp: Transmission Control Protocol - udp: User Datagram Protocol	1–255	—
<sport>	Specifies the starting port number from which the rule applies.	1–65534	—
<eport>	Specifies the ending port number until which the rule applies	1–65534	—
dst-nat	Allows the AP to perform destination NAT on packets.	—	—
src-nat [vlan <vlan id> tunnel]	Allows the AP to perform source-NAT on packets. When configured, the source IP changes to the outgoing interface IP address (implied NAT pool) or from the pool configured (manual NAT pool). vlan - All client based traffic will be directed to the specified uplink VLAN using the IP address of the interface that AP has on that VLAN; if the interface is not found, this option has no effect. tunnel - The traffic from the Network Assigned clients is directed to the VPN tunnel.	—	—
<dst-nat-IP-address>	Specifies the destination- NAT IP address for the specified packets when dst-nat action is configured.	—	—
<dst-nat-port>	Specifies the destination- NAT port for the specified packets when dst-nat action is configured.	—	—
app <app>	Specifies a rule to allow or deny access to a specific type of application.	To view the list of applications, run the show dpi app all command.	—
appcategory <appgrp>	Specifies a rule to allow or deny access to a specific category of application.	To view the list of application categories, run the show dpi appcategory all command.	—
webcategory <webgrp>	Specifies a rule to allow or deny access to websites based on website category.	To view the list of website categories, run the show dpi webcategory all command.	—
webreputation <webrep>	Specifies a rule to allow or deny access to websites based on security rating.	trustworthy-sites low-risk- sites moderate- risk-sites suspicious- sites high-risk- sites	—
permit	Creates a rule to allow the specified packets.	—	—
deny	Creates a rule to reject the specified packets.	—	—

Parameter	Description	Range	Default
<opt0...opt11>	Allows you to specify up to 10 options for network ACLs and up to 12 options for DPI ACLs. You can configure any of the following options: - Log— Creates a log entry when this rule is triggered. - Blacklist— Blacklists the client when this rule is triggered. - Classify- media— Performs a packet inspection on all non- NAT traffic and marks the critical traffic. - Disable- scanning— Disables ARM scanning when this rule is triggered. - DSCP tag— Specifies a DSCP value to prioritize traffic when this rule is triggered. 802.1p priority— Sets an 802.1p priority. - Application throttling: To set a bandwidth limit based on application, application category, web category or website reputation, you can configure application throttling by using the throttle- downstream and throttle-up options. For example, you can limit the bandwidth rate for video streaming applications such as Youtube or Netflix, or set a low bandwidth for suspicious websites.	—	—
redirect-blocked-https-traffic	Configures an access rule to redirect users to a custom error page URL when accessing blocked HTTPS websites for the WLAN SSID or Wired profile.	—	—
vlan <vlan-id>	Configures an access rule for VLAN assignment.	1–4093	—
no...	Removes the definition of parameters under wlan access-rule command.	—	—
no wlan access-rule	Removes the WLAN access rule configuration	—	—

Usage Guidelines

Use this command to configure access rules for user roles, to create a captive-portal role, and to assign VLANs for the clients.

Note

If TCP and UDP uses the same port, ensure that you configure separate access rules to permit or deny access.

Example

The following example configures access rules for the wireless network:

```
(AP) (config) # wlan access-rule WirelessRule

(AP) (Access Rule "WirelessRule") # rule 192.0.2.2 255.255.255.0 match 6 4343 4343 log
classify-media
```

```
(AP) (Access Rule "WirelessRule")# rule 192.0.2.2 255.255.255.0 192.0.2.7
255.255.255.0 match tcp 21 21 deny

(AP) (Access Rule "WirelessRule")# rule 192.0.2.2 255.255.255.0 192.0.2.7
255.255.255.0 match udp 21 21 deny

(AP) (Access Rule "WirelessRule")# rule any any match app youtube permit throttle-
downstream 256 throttle-up 256

(AP) (Access Rule "WirelessRule")# rule any any match appcategory webmail permit
throttle-downstream 256 throttle-up 256

(AP) (Access Rule "WirelessRule")# rule any any match webcategory gambling deny

(AP) (Access Rule "WirelessRule")# rule any any match webcategory training-and-tools
permit

(AP) (Access Rule "WirelessRule")# rule any any match webreputation high-risk-sites
deny

(AP) (Access Rule "WirelessRule")# end

(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and access rule configuration sub-mode.

4.20.6 wlan auth-server

Description

This command configures an external RADIUS and CPPM server for user authentication.

Syntax

```
wlan auth-server <auth_profile_name>

    acctport <accounting-port>

    cppm-rfc3576-only

    cppm-rfc3576-port <rfc3576-port>

    deadtime <time>

    drp-ip <IP> <mask> vlan <vlan> gateway <gateway>

    ip <host>

    key <key>

    nas-id <ID>

    nas-ip <IP-address>

    port <port>

    radsec [port <port>]

    retry-count <count>

    rfc3576

    rfc5997 {auth-only|acct-only}

    service-type-framed-user {lx|cp|mac}

    timeout <value>

    no...
```

Command/Parameter	Description	Range	Default
wlan auth-server <server- profile>	Configures the external RADIUS server authentication profile.	—	—
acctport <accounting- port>	Configures the accounting port number used for sending accounting records to the RADIUS server.	—	1813
cppm-rfc3576-only	Configures a ClearPass Policy Manager server used for AirGroup CoA with RFC3576 only. The ClearPass Policy Manager server acts as a RADIUS server and asynchronously provides the Air Group parameters for the client device, including shared user, shared role and shared location.	—	—
cppm-rfc3576-port <rfc3576- port>	Configures the port number for sending AirGroup CoA, instead of the standard CoA port.	—	5999

Command/Parameter	Description	Range	Default
deadtime <time>	Configures a dead time interval for the authentication server. When two or more authentication servers are configured on the AP and a server is unavailable, the dead time configuration determines the duration for which the authentication server would be available if the server is marked as unavailable.	1—1440 minutes	5
drp-ip <IP-address> <mask> vlan <vlan> gateway <gateway-IP- address>	Configures the IP address, net mask and VLAN, which will be used as source address and VLAN for RADIUS packets. Before configuring DRP IP address, ensure that dynamic-radius-proxy is enabled, and a static virtual controller IP is configured.	—	—
ip <host>	Configures the IP address or the host name of the RADIUS server.	—	—
key <key>	Configures a shared key communicating with the external RADIUS server.	—	—
nas-id <ID>	Configures NAS identifier strings for RADIUS attribute 32, which is sent with RADIUS requests to the RADIUS server.	—	—
nas-ip <IP>	Configures the Virtual Controller IP address as the NAS address which is sent in data packets.	—	—
port <port>	Configures the authorization port number of the external RADIUS server.	—	1812
radsec [port <port>]	The RadSec command enables secure communication between the RADIUS server and AP clients by creating a TLS tunnel between the AP and the server. When RadSec is enabled, the port command can be used for specifying the communication port number for RadSec TLS connection. By default, the port number is set to 2083.	1-65534	2083
retry-count <count>	Configures the maximum number of authentication requests that can be sent to the server group.	1-5	3
rfc3576	Allows the APs to process RFC 3576- compliant CoA and disconnect messages from the RADIUS server. Disconnect messages cause a user session to be terminated immediately, whereas the CoA messages modify session authorization attributes such as data filters.	—	Disabled
rfc5997 {auth-only acct-only}	When enabled, this parameter allows the AP to send a status-server request to determine the actual status of the authentication or accounting server. This proves useful when there is a authentication or request time rfc5997 —RFC5997support enabled for both authentication and accounting on the authentication server. auth-only —RFC5997 support enabled for authentication only. acct-only —RFC5997 support enabled for accounting only rfc5997 —Disables RFC5997 support for the authentication server.	—	Disabled
service-type-framed-user{1x cp mac}	Changes the service type to frame for the following RADIUS authentication methods: 1x—Changes Service-Type to Framed for 802.1X authentication. - cp—Changes Service-Type to Framed for Captive Portal authentication. - mac—Changes Service-Type to Framed for MAC authentication.	1x,cp,mac	—

Command/Parameter	Description	Range	Default
<code>timeout <value></code>	Configures a timeout value in second to determine when a RADIUS request must expire. The AP retries to send the request several times (as configured in the Retry count), before the user gets disconnected. For example, if the Timeout is 5 seconds, Retry counter is 3, user is disconnected after 20 seconds.	1 to 30 seconds	5
<code>no...</code>	Removes the configuration.	—	—

Usage Guidelines

Use this command to configure an external RADIUS server and a ClearPass Policy Manager server as a RADIUS server for AirGroup CoA requests.

Example

The following example configures the external RADIUS server parameters:

```
(AP) (config)# wlan auth-server RADIUS1
(AP) (Auth Server <RADIUS1>)# ip 192.0.0.5
(AP) (Auth Server <RADIUS1>)# key SecretKey
(AP) (Auth Server <RADIUS1>)# port 1812
(AP) (Auth Server <RADIUS1>)# acctport 1813
(AP) (Auth Server <RADIUS1>)# rfc3576
(AP) (Auth Server <RADIUS1>)# rfc5997 auth-only
(AP) (Auth Server <RADIUS1>)# no nas-id
(AP) (Auth Server <RADIUS1>)# no nas-ip
(AP) (Auth Server <RADIUS1>)# drp-ip 192.0.2.11 255.255.255.255 vlan 200 gateway
192.0.2.15
(AP) (Auth Server <RADIUS1>)# timeout 10
(AP) (Auth Server <RADIUS1>)# retry-count 3
(AP) (Auth Server <RADIUS1>)# service-type-framed-user cp
(AP) (Auth Server <RADIUS1>)# end
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and authentication server profile sub- mode.

4.20.7 wlan captive-portal

Description

This command customizes the appearance of the internal captive portal splash page of the guest users.

Syntax

```
wlan captive-portal
    authenticated
    background-color <background-color>
    banner-color <banner-color>
    banner-text <banner-text> custom-logo <name>
    decoded-texts <decoded-text>
    redirect-url <url>
    terms-of-use <terms-of-use-text>
    use-policy <policy-text>
    no...
no wlan captive-portal
```

Command/Parameter	Description	Range	Default
wlan captive-portal	Displays the sub-mode for configuring internal captive portal splash page.	—	—
authenticated	Configures the authentication text. The authenticated text is used for indicating that the authentication mode is enabled for the internal captive portal users. When the authentication mode is enabled, the AP displays a splash page that requires the guest users to enter their credentials. The users allowed to access the Internet only if they complete the authentication successfully.	—	—
background-color <background-color>	Configures the color code for the internal captive portal splash page.	Web color codes	134217772
banner-color <banner-color>	Configures the color code for the banner on the splash page.	Web color codes	16750848
banner-text <banner-text>	Configures the text displayed on splash page banner	Text string not exceeding 127 characters	Welcome to Guest Network
custom-logo	Allows you to save the customized logo to the internal captive portal server.	—	—
decoded-texts <decoded-text>	Displays decoded texts.	—	—

Command/Parameter	Description	Range	Default
<code>redirect-url <url></code>	Configures a URL to redirect the users after a successful authentication. NOTE: By default, after entering the requested info at the splash page, the users are redirected to the URL that was originally requested. When a URL is configured for redirection, it overrides the user's original request and redirects them to URL configured for redirection.	—	—
<code>terms-of-use <terms-of-use-text></code>	Defines the terms and conditions that the user must be aware of.	Text string	This network is not secure, and use is at your own risk
<code>use-policy <policy-text></code>	Configures usage policy text for splash page.	Text string	Please read terms and conditions before using Guest Network
<code>no...</code>	Removes the definition of the authenticated , decoded text , and redirect-url parameters configured under the wlan captive -portal command.	—	—
<code>no wlan captive-portal</code>	Removes the captive portal configuration.	—	—

Usage Guidelines

Use this command to customize the appearance of internal captive portal splash page for the guest users.

Example

The following example configures the contents of the internal captive portal splash page:

```
(AP) (config)# wlan captive-portal
(AP) (Captive Portal)# authenticated
(AP) (Captive Portal)# background-color 13421772
(AP) (Captive Portal)# banner-color 16750848
(AP) (Captive Portal)# banner-text "Welcome to Guest Network"
(AP) (Captive Portal)# no decoded-texts
```

```
(AP) (Captive Portal) # redirect-url example1.com

(AP) (Captive Portal) # terms-of-use "This network is not secure, and use is at your
own risk"

(AP) (Captive Portal) # use-policy "Please read terms and conditions before using Guest
Network"

(AP) (Captive Portal) # end

(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and captive portal sub-mode.

4.20.8 wlan-external-captive-portal

Description

This command configures profiles for external captive portal.

Syntax

```
wlan external-captive-portal [profile-name]

    auth-text <text>
    auto-whitelist-disable
    https
    port <port>
    prevent-frame-overlay
    redirect-url <redirection-url>
    out-of-service-page <url>
    server <server-name>
    server-fail-through
    switch-ip
    server-offload
    url <url>
    no...
```

```
no wlan external-captive-portal
```

Command/Parameter	Description	Range	Default
wlan external-captive-portal [profile-name]	Creates an external captive portal profile. You can create multiple external captive portal profiles and apply to an SSID or a wired profile.	—	—
auth-text <text>	Configures the authentication text to be returned by the external server. The authentication text command configuration is required only for the External - Authentication Text splash mode.	—	—
auto-whitelist-disable	Disables automatic whitelisting of URLs.	—	—
https	Enables HTTPS for client connections.	—	—
Port <port>	Configures the port to use for communication with the external captive portal server.	—	80
prevent-frame-overlay	Prevents overlay of frames. when configured, a frame displays a page only if it is in the same domain as the main page.	—	—
redirect-url <redirection-url>	Configures a URL to redirect the users after a successful authentication. NOTE: By default, after entering the requested info at the splash page, the users are redirected to the URL that was originally requested. When a URL is configured for redirection, it overrides the user's original request and redirects them to URL configured for redirection.	—	—
out-of-service-page <url>	Configures a URL to redirect the users when the internet uplink is down.	—	—
server <server-name>	Configures the external captive portal server.	—	—
server-fail-through	Allows the guest clients to access the Internet when the external captive portal server is not available.	—	Disabled
switch-ip	Sends the Virtual Controller's IP address in the redirection URL when external captive portal servers are used.	—	Disabled
server-offload	Enables the server-offload feature to reduce the load on the external captive portal server by allowing the AP to use a Meta tag to redirect HTTP and HTTPS requests from the client. When enabled, this feature prevents the non-browser client applications from following unnecessary 302- redirects generated by their background HTTP or HTTPS requests.	—	—
url <url>	Configures the URL of the external captive portal server.	—	—
no...	Removes the definition of the following parameters configured under the wlan external- captive-portal command. • auto-whitelist- disable • https • out-of-service-page • prevent-frame-overlay • server-fail-through • server-offload • switch-ip	—	—
no wlan external-captive-portal	Removes the external captive portal configuration.	—	—

Usage Guidelines

Use this command to configure external captive portal profiles for guest users. When the captive portal profile is applied to an SSID or a wired profile, the users connecting to the SSID or wired network are assigned a role with the captive portal rule. You can create up to 8 external captive portal profiles.

Example

The following example configures external captive portal splash page:

```
(AP) (config) # wlan external-captive-portal AuthText1
(AP) (External Captive Portal "AuthText1") # auth-text authenticated
(AP) (External Captive Portal "AuthText1") # port 80
(AP) (External Captive Portal "AuthText1") # redirect-url http://www.example1.com
(AP) (External Captive Portal "AuthText1") # out-of-service-page
http://www.example2.com
(AP) (External Captive Portal "AuthText1") # server CPServer1
(AP) (External Captive Portal "AuthText1") # url "/aruba.php"
(AP) (External Captive Portal "AuthText1") # server-fail-through
(AP) (External Captive Portal "AuthText1") # switch-ip
(AP) (External Captive Portal "AuthText1") # no auto-whitelist-disable
(AP) (External Captive Portal "AuthText1") # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and external captive portal sub-mode.

4.20.9 wlan ldap-server

Description

This command configures a LDAP server for user authentication on the virtual controller.

Syntax

```
wlan ldap-server <server-name>
    admin-dn <domain-name>
```

```

admin-password <password>

base-dn <base_domain-name>

deadtime <time>

filter <filter>

key-attribute <key-attribute>

ip <IP-address>

port <port-name>

timeout <seconds>

retry-count <count>

no..

no wlan ldap-server <server-name>

```

Command/Parameter	Description	Range	Default
wlan ldap-server <server-name>	Configures an LDAP authentication server.	—	—
admin-dn <domain-name>	Configures a DN for the administrator with read and search privileges across all the entries in the LDAP database. The user need not have write privileges, but the user must be able to search the database, and read attributes of other users in the database.	—	—
admin-password <password>	Configures a password for administrator.	—	—
base-dn <base-domain-name>	Configures a DN for the node which contains the entire user database.	—	—
deadtime <time>	Configures a dead time interval for the authentication server. When two or more authentication servers are configured on the AP and a server is unavailable, the dead time configuration determines the duration for which the authentication server would be available if the server is marked as unavailable.	1—1440 minutes	5
filter <filter>	Configures the filter to apply when searching for a user in the LDAP database.	strings	(objectclass=*)
key-attribute <key-attribute>	Configures the attribute to use as a key when searching for the LDAP server. For Active Directory, the value is sAMAccountName	—	—
ip <IP-address>	Configures the IP address of the LDAP server.	—	—
port <port>	Configures the authorization port number of the LDAP server.	—	389
timeout <seconds>	Configures a timeout value for LDAP requests from the clients	1-30 seconds	5
retry-count <count>	Defines the number of times that the clients can attempt to connect to the server.	1-5	3

Command/Parameter	Description	Range	Default
no...	Removes the definition of the following parameters configured under the wlan ldap-server command. • deadtime • retry-count • timeout	—	—
no wlan ldap-server <server-name>	Removes the LDAP authenticationserver configuration.	—	—

Usage Guidelines

Use this command to configure an LDAP server as an external authentication server. The LDAP service is based on a client-server model. The AP client requests for an LDAP session after connecting to the LDAP server and server sends its responses.

Example

The following example configures an LDAP server:

```
(AP) (config)# wlan ldap-server Server1
(AP) (LDAP Server <name>)# ip 192.0.1.5
(AP) (LDAP Server <name>)# port 389
(AP) (LDAP Server <name>)# admin-dn cn=admin
(AP) (LDAP Server <name>)# admin-password password123
(AP) (LDAP Server <name>)# base-dn dc=example, dc=com
(AP) (LDAP Server <name>)# filter (objectclass=*)
(AP) (LDAP Server <name>)# key-attribute sAMAccountName
(AP) (LDAP Server <name>)# timeout 5
(AP) (LDAP Server <name>)# retry-count 3
(AP) (LDAP Server <name>)# end
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and LDAP server sub-mode.

4.20.10 wlan ssid-profile

Description

This command configures a WLAN SSID profile.

Syntax

```
wlan ssid-profile <ssid_profile>

    a-basic-rates <rate>
    a-max-tx-rate <rate>
    a-min-tx-rate <rate>
    b-a-tx-rates <rate>
    accounting-server <name>
    air-time-limit <limit>
    auth-pkt-mac-format {delimiter|upper-case}
    auth-req-thresh <threshold>
    auth-server <name>
    auth-survivability
    bandwidth-limit <limit>
    blacklist
    broadcast-filter {All|ARP|Unicast-ARP-Only|Disabled}
    called-station-id {type{ap-group|ap-name|ipaddr|macaddr|clan-id} |include-ssid
[delimiter]]}
    captive-portal {<type> [exclude-uplink <types>] | external [Profile <name>]
[exclude-uplink<types>]]}
    captive-portal-proxy-server <ip> <port>
    content-filtering
    deny-inter-user-bridging
    deny-local-routing
    disable
    dmo-channel-utilization-threshold <threshold>
    dot11k
    dot11r
    dot11v
    dtim-period <value>
    dynamic-multicast-optimization
```



```
enable
enforce-dhcp
essid <ssid>
explicit-ageout-client
external-server
g-basic-rates
g-min-tx-rate <rate>
g-max-tx-rate <rate>
g-tx-rates
hide-ssid
hotspot-profile <name>
inactivity-timeout <interval>
index <idx>
l2-auth-failthrough
leap-use-session-key
local-probe-req-thresh <threshold>
mac-authentication
mac-authentication-delimiter <delim>
mac-authentication-upper-case
max-authentication-failures <limit>
max-clients-threshold <Max_clients>
max-retries
mdid <Mobility domain ID>
mfp-capable
mfp-required
multicast-rate <rate>
multicast-rate-optimization
mpdu-agg-disable
no
okc
openflow-enable
opmode <opmode>
out-of-service <def> <name>
per-user-bandwidth-limit <limit>
radius-accounting
```

```
radius-accounting-mode {user-association|user-authentication}
radius-interim-accounting-interval <minutes>
radius-reauth-interval <minutes>
rf-band <band>
rts-threshold
rx-ampdu-agg-disable
server-load-balancing
set-role <attribute> {{contains|ends-with|equals|matches-regular-expression|not-
equals|starts-with} <operand> <role>|value-of}
set-role-by-ssid
set-role-mac-auth <mac_only>
set-role-machine-auth {<machine_only>|<user_only>}
set-role-pre-auth <role>
set-role-unrestricted
set-vlan <attribute> {{contains|ends-with|equals|matches-regular-expression|not-
equals|starts-with} <operand> <vlan>|value-of}
short-preamble-disable
strict-svp
supported-mcs-set
temporal-diversity
termination
time-range <name> {enable| disable}
tspec
tspec-bandwidth
type {employee|voice|guest}
use-ip-for-calling-station
utf8
very-high-throughput-disable
vht-supported-mcs-map
vht-mu-txbf-disable
vht-txbf-explicit-enable
vlan <vlan>
wep-key <wep-key>
wispr
wmm-background-dscp <dscp>
wmm-background-share <share>
```

```

wmm-best-effort-dscp <dscp>

wmm-best-effort-share <share>

wmm-uapsd-disable

wmm-video-dscp <dscp>

wmm-video-share <share>

wmm-voice-dscp <dscp>

wmm-voice-share <share>

work-without-uplink

wpa-passphrase <wpa-passphrase>

zone <zone>

no wlan ssid-profile <ssid_profile>

```

Command/Parameter	Description	Range	Default
wlan ssid-profile <ssid_profile>	Creates a WLAN SSID profile.	—	—
a-basic-rates	Allows you to define a set of modulation rates to use for the clients on the 5 GHz radio band.	6,9,12,18,24,36,48,54 in Mbps	6, 12, 24
a-max-tx-rate <rate>	Configures the specify the maximum transmission rate for the 5 GHz band.	6,9,12,18,24,36,48,54 in Mbps	54
a-min-tx-rate <rate>	Configures the specify the minimum transmission rate for the 5 GHz band.	6,9,12,18,24,36,48,54 in Mbps	6
a-tx-rate <rate>	Allows you to configure specific transmission rate at which AP can transmit data to the clients connected on 5 GHz band.	6,9,12,18,24,36,48,54 in Mbps	All
accounting-server <name>	This command configures a server for accounting purpose.	—	—
air-time-limit <limit>	Configures an aggregate amount of airtime that all clients using this SSID can use for sending and receiving data.	—	—
auth-pkt-mac-format {delimiter upper-case}	Configures a delimiter and upper- case characters in a MAC Address string of authentication packet or the username and password of the client. The delimiter and upper-case parameters in this command are available for all authentication methods. And without the mac- authentication-delimiter and mac-authentication-upper-case configuration, it works on the username and password for MAC Authentication.	—	—
auth-req-thresh	Allows you to set a threshold for authentication requests for the SSID profile.	—	—
auth-server <name>	Configures an authentication server for the SSID users.	—	—

Command/Parameter	Description	Range	Default
auth-survivability	Enables the authentication survivability feature. NOTE: The authentication survivability feature requires ClearPass Policy Manager 6.0.2 or later, and is applicable only when external servers such as RADIUS are configured for the SSID. When enabled, SCALANCE W authenticates the previously connected clients using EAP-PEAP authentication even when connectivity to ClearPass Policy Manager is temporarily lost. The Authentication survivability feature is not applicable when a RADIUS server is configured as an internal server.	—	—
bandwidth-limit <limit>	Configures an aggregate amount of bandwidth that each radio is allowed to provide for the connected clients.	1—65535	—
blacklist	Enables dynamic blacklisting of clients.	—	—
broadcast-filter <type>	Configures broadcast filtering parameters: You can configure any of the following filtering parameters: • All—When set to All, the AP drops all broadcast and multicast frames except DHCP, ARP, igmp-group queries, and IPv6 neighbor discovery protocol. • ARP—When set to ARP, the AP drops all broadcast and multicast frames except ARP, DHCP, igmp-group queries, IPv6 neighbor discovery protocol, and additionally converts ARP frames to unicast. • Unicast-ARP-Only — When set to Unicast-ARP-Only, the AP allows all broadcast and multicast frames as it is, however the ARP requests are converted to unicast frames and sends them to the associated clients. • Disabled— When set to Disabled, the AP routes all the broadcast and multicast frames to the wireless interfaces.	All, ARP, Disabled	Disabled

Command/Parameter	Description	Range	Default
called-station-id {type {ap-group ap-name ipaddr macaddr vlan-id} include-ssid [delimiter]}	Configures the following called-station- id types: • ap-group — The VC name is used as the called-station-id. • ap-name — The AP hostname is used as the called-station-id. • vlan-id — The VLAN ID of the client is used as the called-station-id. • ipaddr — The IP address of the AP is used as the called-station-id. • macaddr — The MAC address of the AP is used as the calling- station-id. • include-ssid {delimiter<delimiter>} — The SSID is appended to the original called- station-id. You can optionally set a delimiter at the end.	—	called-station-id {type <macaddr>}
captive-portal {<type> [exclude-uplink <types>] external [exclude-uplink <types>] profile <name> [exclude-uplink <types>]]}	Configures captive portal authentication for the SSID. If the external captive profiles are created, you can specify the profile name by using the external and profile keywords and associated parameters.	—	—
	You can also exclude an uplink type for the captive portal based SSID profiles. When an uplink type is selected for the exclude-uplink option, redirection to the captive portal based on the type of specified uplink is disabled.	3G,4G, wifi, ethernet	—
captive-portal-proxy-server <ip> <port>	Allows you to specify an IP address and port number that match the proxy configuration of your browser.	—	—
content-filtering	Routes all DNS requests for the non-corporate domains to OpenDNS on this network.	—	Disabled
deny-inter-user-bridging	Disables the bridging traffic between two clients connected to the same SSID on the same VLAN. When inter-user bridging is disabled, the clients can connect to the Internet, but cannot communicate with each other, and the bridging traffic between the clients is sent to the upstream device to make the forwarding decision.	—	—

Command/Parameter	Description	Range	Default
deny-local-routing	Disables the routing traffic between two clients connected to the same SSID on different VLANs. When local routing is disabled, the clients can connect to the Internet, but cannot communicate with each other, and the routing traffic between the clients is sent to the upstream device to make the forwarding decision.	—	—
disable	Disables the SSID. By default all SSIDs are enabled.	—	—
dmo-channel-utilization-threshold <threshold>	Sets a threshold for DMO channel utilization. AP sends multicast traffic over the wireless link.	1–100 percentage value	90
dot11k	Enables 802.11k roaming on the SSID profile. The 802.11k protocol enables APs and clients to dynamically measure the available radio resources. When 802.11k is enabled, APs and clients send neighbor reports, beacon reports, and link measurement reports to each other.	—	—
dot11r	Enables 802.11r on the SSID profile. 802.11r or fast BSS FT is an IEEE standard that permits continuous connectivity across wireless devices during client mobility. Fast BSS Transition mechanism minimizes the delay in roaming when a client transitions from one BSS to another within the same cluster. Fast BSS Transition is operational only if the wireless client supports 802.11r standard. If the client does support 802.11r standard, it falls back to normal WPA2 authentication method.	—	—
dot11v	Enables 802.11v based BSS transition.	—	—
dtim-period <value>	Configures the Delivery Traffic Indication Message (DTIM) interval for the SSID profile. The DTIM interval determines how often the AP should deliver the buffered broadcast and multicast frames to associated clients in the powersaving mode. When configured, the client checks for buffered data on the AP at the specified number of beacons. You can also configure a higher value for DTIM interval for power saving.	1–10 beacons	1

Command/Parameter	Description	Range	Default
dynamic-multicast-optimization	Allows the AP to convert multicast streams into unicast streams over the wireless link. Enabling Dynamic Multicast Optimization (DMO) enhances the quality and reliability of streaming video, while preserving the bandwidth available to the non-video clients. NOTE: When you enable DMO on multicast SSID profiles, ensure that the DMO feature is enabled on all SSIDs configured in the same VLAN.	—	Disabled
enable	Re-enables the deactivated SSIDs.	—	Enabled
enforce-dhcp	Blocks AP traffic to the clients that do obtain IP address from DHCP.	—	Disabled
ssid <ssid>	Defines a name that uniquely identifies a wireless network.	—	—
external-server	Configures an external RADIUS server for authentication.	—	—
explicit-ageout-client	Allows the AP to send a deauthentication frame to the client and clear client entry.	—	Disabled
g-basic-rates	Allows you to define a set of modulation rates to use for the clients on the 2.4 GHz radio band.	1,2,5,6,9,11,12,18,24,36,48,54 in Mbps	1, 2
g-min-tx-rate <rate>	Configures the specify the minimum transmission rate for the 2.4 GHz band.	1,2,5,6,9,11,12,18,24,36,48,54 in Mbps	1
g-max-tx-rate <rate>	Configures the specify the maximum transmission rate for the 2.4 GHz band.	1,2,5,6,9,11,12,18,24,36,48,54 in Mbps	54
g-tx-rates	Allows you to configure specific transmission rate at which AP can transmit data to the clients connected on 2.4 GHz band.	1,2,5,6,9,11,12,18,24,36,48,54	All
hide-ssid	Hides the SSID. When enabled, the SSID will not be visible for the users.	—	Disabled
hotspot-profile <name>	Associates a hotspot profile with the WLAN SSID profile.	—	—
inactivity-timeout <interval>	Configures a timeout value for the inactive client sessions. When a client session is inactive for the specified duration, the session expires and the clients are required to log in again.	60-86400 seconds	1000
index <idx>	Assigns an index value for the SSID.	—	—
l2-auth-failthrough	Allows the clients to use 802.1X authentication when MAC authentication fails.	—	Disabled

Command/Parameter	Description	Range	Default
leap-use-session-key	Allows the users to derive session keys for LEAP authentication. Configure this command for old printers that use dynamic WEP and if you do not want use a session key from the RADIUS Server to derive pair wise unicast keys.	—	Disabled
local-probe-req-thresh <threshold>	Configures a RSSI threshold value to limit the number of incoming probe requests. When enabled, this command controls the system response to the broadcast probe requests sent by clients to search for the available SSIDs and ignores the probe request if required,	0-100 dB	—
mac-authentication	Enables MAC authentication for clients that use this SSID profile.	—	Disabled
mac-authentication-delimiter <delim>	Allows you to set a delimiter that can be used in the MAC address string for MAC authentication. You can specify colon or dash for delimiter. If the delimiter is not specified, the MAC address in the xxxxxxxxxxxx format is used. If you specify colon for the delimiter, the MAC addresses in the xx:xx:xx:xx:xx:xx format are used.	colon or dash	—
mac-authentication-upper-case	Enables the AP to use uppercase letters in MAC address string for MAC authentication.	—	—
max-authentication-failures <limit>	Configures the maximum number of authentication failures to dynamically blacklist the users. The users who exceed the number of authentication failures configured through this command are dynamically blacklisted.	—	—
max-retries	Denotes the maximum number of retries the AP attempts when the client is not responding to the 802.11 frames.	1-128	8
mdid	Denotes the mobility domain identifier. An AP uses this parameter to announce that it is a part of the AP group that constitutes a mobility domain.	1-65535	Disabled
mfp-capable	When enabled, the SSID supports management frame protection capable clients and non-MFP clients.	—	Disabled
mfp-required	When enabled, the SSID supports only the clients that exhibit the MFP functionality	—	Disabled

Command/Parameter	Description	Range	Default																																																																								
multicast-rate <rate>	Increases the video transmission rate of the AP. The APs can select the rate for video multicast frames. Ensure that you tag the multicast traffic with video priority. You can configure MCS rates as well. MCS is an important setting because it provides a greater throughput. The following information displays the MCS rate of the AP: <table> <thead> <tr> <th>MCS</th><th>Streams</th><th>20 MHz</th><th>20 MHz SGI</th></tr> </thead> <tbody> <tr><td>---</td><td>-----</td><td>-----</td><td>-----</td></tr> <tr><td>0</td><td>1</td><td>6.5</td><td>7.2</td></tr> <tr><td>1</td><td>1</td><td>13.0</td><td>14.4</td></tr> <tr><td>2</td><td>1</td><td>19.5</td><td>21.7</td></tr> <tr><td>3</td><td>1</td><td>26.0</td><td>28.9</td></tr> <tr><td>4</td><td>1</td><td>39.0</td><td>43.3</td></tr> <tr><td>5</td><td>1</td><td>52.0</td><td>57.8</td></tr> <tr><td>6</td><td>1</td><td>58.5</td><td>65.0</td></tr> <tr><td>7</td><td>1</td><td>65.0</td><td>72.2</td></tr> <tr><td>8</td><td>2</td><td>13.0</td><td>14.4</td></tr> <tr><td>9</td><td>2</td><td>26.0</td><td>28.9</td></tr> <tr><td>10</td><td>2</td><td>39.0</td><td>43.3</td></tr> <tr><td>11</td><td>2</td><td>52.0</td><td>57.8</td></tr> <tr><td>12</td><td>2</td><td>78.0</td><td>86.7</td></tr> <tr><td>13</td><td>2</td><td>104.0</td><td>115.6</td></tr> <tr><td>14</td><td>2</td><td>117.0</td><td>130.0</td></tr> <tr><td>15</td><td>2</td><td>130.0</td><td>144.4</td></tr> </tbody> </table> The MCS rates for video multicast are supported in all the 802.11n-capable APs	MCS	Streams	20 MHz	20 MHz SGI	---	-----	-----	-----	0	1	6.5	7.2	1	1	13.0	14.4	2	1	19.5	21.7	3	1	26.0	28.9	4	1	39.0	43.3	5	1	52.0	57.8	6	1	58.5	65.0	7	1	65.0	72.2	8	2	13.0	14.4	9	2	26.0	28.9	10	2	39.0	43.3	11	2	52.0	57.8	12	2	78.0	86.7	13	2	104.0	115.6	14	2	117.0	130.0	15	2	130.0	144.4	Default, 6, 9, 12, 18, 24, 36, 48, 54 Mbps mcs0-mcs15	Default
MCS	Streams	20 MHz	20 MHz SGI																																																																								
---	-----	-----	-----																																																																								
0	1	6.5	7.2																																																																								
1	1	13.0	14.4																																																																								
2	1	19.5	21.7																																																																								
3	1	26.0	28.9																																																																								
4	1	39.0	43.3																																																																								
5	1	52.0	57.8																																																																								
6	1	58.5	65.0																																																																								
7	1	65.0	72.2																																																																								
8	2	13.0	14.4																																																																								
9	2	26.0	28.9																																																																								
10	2	39.0	43.3																																																																								
11	2	52.0	57.8																																																																								
12	2	78.0	86.7																																																																								
13	2	104.0	115.6																																																																								
14	2	117.0	130.0																																																																								
15	2	130.0	144.4																																																																								
multicast-rate-optimization	Allows the AP to select the optimal rate for sending broadcast and multicast frames based on the lowest of unicast rates across all associated clients. When enabled, the multicast traffic can be sent at the rate of 1- 24 Mbps. The default rate for sending frames for 2.4 GHz is 1 Mbps and 5.0 GHz is 6 Mbps.	—	Disabled																																																																								
mpdu-agg-disable	Disables MPDU aggregation	—	—																																																																								
no...	Removes the parameters configure under the wlan ssid-profile command.	—	—																																																																								
okc	Enables OKC. In the OKC based roaming, the AP stores PMK per client, which is derived from last 802.1X authentication completed by the client in the network. The cached PMK is used when a client roams to a new AP to allow faster roaming of clients. NOTE: If the wireless client (the 802.1X supplicant) does not support this feature, a complete 802.1X authentication is required whenever it roams to a new AP. OKC is supported on WPA2-AES Enterprise network only.	—	—																																																																								
openflow-enable	Configures OpenFlow to an AP.	—	—																																																																								

Command/Parameter	Description	Range	Default
<code>opmode <opmode></code>	Configures the layer-2 authentication and encryption for this SSID to protect access and ensure the privacy of the data transmitted to and from the network. - You can configure any of the following types of encryption: <code>opensystem</code>—No authentication and encryption. <code>wpa2-aes</code>—WPA2 with AES encryption and dynamic keys using 802.1X. <code>wpa2-psk-aes</code>—WPA2 with AES encryption using a preshared key. <code>wpa-tkip</code>—WPA with TKIP encryption and dynamic keys using 802.1X. <code>wpa-psk-tkip</code>—WPA with TKIP encryption using a pre-shared key. <code>wpa-tkip, wpa2-aes</code>—WPA with TKIP and WPA2 with AES encryption. <code>wpa-psk-tkip, wpa2-psk-aes -WPS</code> with TKIP and WPA2 with AES encryption using a pre- shared key. <code>static-wep</code>—WEP with static keys. <code>dynamic-wep</code>—WEP with dynamic keys.	<code>opensystem, wpa2-aes, wpa2-psk-aes, wpa-tkip, wpa-psk-tkip, wpa-tkip wpa2-aes, wpa-psk-tkip wpa2-psk-aes, static-wep, dynamic-wep</code>	<code>opensystem</code>
<code>out-of-service <def> <name></code>	Enables or disables the SSID based on any of the out of service states of the AP: - VPN down - Uplink down - Internet down - Primary uplink down The network will be out of service when selected event occurs and the SSID is enabled or disabled as per the configuration settings applied. For example, if you select the VPN down option from the dropdown and set the status to enabled, the SSID is enabled when the VPN connection is down and is disabled when the VPN connection is restored.	For out-of-service states, any of the following values is allowed: <code>vpn-down uplink-down internet-down primary-uplink-down</code> For SSID status, select enable or disable.	—
<code>per-user-bandwidth-limit <limit></code>	Configures a bandwidth limit in Kbps for the SSID users. NOTE: The bandwidth contracts can also be applied per SSID user.	1—65535 Kbps	—

Command/Parameter	Description	Range	Default
<code>radius-accounting</code>	Enables accounting for the RADIUS server authentication. When enabled, the APs post accounting information to the Radius server at the specified accounting interval.	—	—
<code>radius-accounting-mode</code> { <code>user-association</code> <code>user-authentication</code> }	Configures an accounting mode for the captive portal users. You can configure any of the following modes for accounting: • user-authentication—when configured, the accounting starts only after client authentication is successful and stops when the client logs out of the network. • user- association—When configured, the accounting starts when the client associates to the network successfully and stops when the client is disconnected.	—	user-authentication
<code>radius-interim-accounting-interval</code> <minutes>	Configures an interval for posting accounting information as RADIUS INTERIM accounting records to the RADIUS server. When configured, the AP sends interim-update messages with current user statistics to the RADIUS server at regular intervals.	0-60	—
<code>radius-reauth-interval</code> <minutes>	Allows you to configure an interval after which the APs can redo the RADIUS transaction to reauthenticate clients. If the reauthentication interval is configured: • On an SSID performing L2 authentication (MAC or 802.1X authentication): When reauthentication fails, the clients are disconnected. If the SSID is performing only MAC authentication and has a pre-authentication role assigned to the client, the client will get a post-authentication role only after a successful reauthentication. If reauthentication fails, the client retains the pre- authentication role. • On an SSID performing both L2 and L3 authentication (MAC with captive portal authentication): When reauthentication succeeds, the client retains the role that is	Any integer value in minutes	—

Command/Parameter	Description	Range	Default
<code>radius-interim-accounting-interval <minutes></code>	Configures an interval for posting accounting information as RADIUS INTERIM accounting records to the RADIUS server. When configured, the AP sends interim-update messages with current user statistics to the RADIUS server at regular intervals.	0–60	—
<code>radius-reauth-interval <minutes></code>	Allows you to configure an interval after which the APs can redo the RADIUS transaction to reauthenticate clients. If the reauthentication interval is configured: - On an SSID performing L2 authentication (MAC or 802.1X authentication): When reauthentication fails, the clients are disconnected. If the SSID is performing only MAC authentication and has a pre-authentication role assigned to the client, the client will get a post-authentication role only after a successful reauthentication. If reauthentication fails, the client retains the pre-authentication role. - On an SSID performing both L2 and L3 authentication (MAC with captive portal authentication): When reauthentication succeeds, the client retains the role that is already assigned. If reauthentication fails, a pre-authentication role is assigned to the client. - On an SSID performing only L3 authentication (captive portal authentication): When reauthentication succeeds, a pre-authentication role is assigned to the client that is in a post-authentication role. Due to this, the clients are required to go through captive portal to regain access.	Any integer value in minutes	—
<code>rf-band <band></code>	Configures the radio frequency band on which this SSID will be broadcast. You can select either 2.4GHz, 5 GHz, or all to specify both bands.	2.4 GHz, 5 GHz, all	

Command/Parameter	Description	Range	Default
<code>rts-threshold</code> <code><threshold></code>	Configures a threshold to trigger the RTS/CTS handshake. The RTS (Request to Send)/CTS (Clear to Send) mechanism allows devices to reserve the RF medium and minimizes frame collisions introduced by the hidden stations. When RTS is enabled, a higher number of retransmissions occurring on the WLAN trigger the RTS/CTS handshake and the transmitter station sends an RTS frame to the receiver station. The receiver station responds with a CTS frame. Typically, the RTS/CTS frames are not sent, unless the packet size exceeds the RTS threshold. By default, the RTS threshold is set to 2333 octets. When the size of the packets sent by the transmitter exceeds the configured threshold, RTS frames are sent.	0-2347	2333
<code>rx-ampdu-agg-disable</code>	When this parameter is disabled, APs reject AMPDU based aggregations in the Add Block Acknowledgement response frames.	—	Enabled
<code>server-load-balancing</code>	Enables load balancing across two RADIUS servers if two authentication servers are configured for the SSID.	—	Enabled

Command/Parameter	Description	Range	Default
<pre>set-role {{contains ends-with equals matches- regular-expression not-equals starts- with}} <operand> <role> value-of}</pre>	Assigns a user role to the clients. The first rule that matches the configured condition is applied. - You can set any of the following conditions: - contains—The rule is applied only if the attribute value contains the specified string. - ends-with—The rule is applied only if the attribute value ends with the specified string. - equals—The rule is applied only if the attribute value is equal to the specified string. - not-equals—The rule is applied only if the attribute value is not equal to the specified string. - starts-with—The rule is applied only if the attribute value begins with the specified - string. - value-of - This rule sets the user role to the value of the attribute returned. To set a user role, the value of the attribute must already be configured on the AP. - matches-regular-expression— The rule is applied only if the attribute value matches the regular expression pattern specified in <i>Operand</i>. This operator is available only if the mac-address-and-dhcp- options attribute is selected in the Attribute drop-down.	—	—
set-role-by-ssid	Configures a user role based on the type of SSID configured.	—	—
set-role-mac-auth <mac-only>	Configures a MAC authentication based user role.	—	—
set-role-machine-auth	Configures a machine	—	—
<pre><machine_only> <user_only></pre>	authentication rule. You can assign different rights to clients based on whether their hardware device supports machine authentication. Machine authentication is only supported on Windows devices, so this can be used to distinguish between Windows devices and other devices such as iPads.		

Command/Parameter	Description	Range	Default
set-role-pre-auth <role>	Configures a pre-authentication role to allow some access to the guest users before the client authentication.	—	—
set-role-unrestricted	Configures unrestricted access control.	—	—
set-vlan <attribute> {contains ends-with equals matches- regular-expression not-equals starts- with} <operand> <vlan> value-of}	Assigns a VLAN to the clients. The first rule that matches the configured condition is applied. You can specify any of the following conditions: - contains—The rule is applied only if the attribute value contains the specified string. - ends-with—The rule is applied only if the attribute value ends with the specified string. - equals—The rule is applied only if the attribute value is equal to the specified string. - not-equals—The rule is applied only if the attribute value is not equal to the specified string. - starts-with—The rule is applied only if the attribute value begins with the specified string. - value-of - This rule sets the VLAN to the value of the attribute returned. To set a user role, the value of the attribute must already be configured on the AP. - matches-regular-expression— The rule is applied only if the attribute value matches the regular expression pattern specified in <i>Operand</i>. This operator is available only if the mac-address-and-dhcp- options attribute is selected in the Attribute drop-down.	—	—
short-preamble-disable	Disables the transmission and reception of short preamble frames for the clients connected to an SSID. By default, short preamble is enabled.	—	—
strict-svp	Enables Strict SVP and prioritizes voice traffic for SVP handsets.	—	—
supported-mcs-set	Allows you to define a set of MCS rates for HT channels.	0-23	0-23
tspec	Allows the APs to prioritize time- sensitive traffic such as voice traffic initiated by the client.	—	—

Command/Parameter	Description	Range	Default
<code>tspec-bandwidth</code>	Reserves the configured bandwidth for prioritizing voice traffic when traffic specification is enabled.	200–600000 Kbps	2000 Kbps
<code>temporal-diversity</code>	Shows if the temporal diversity feature has been enabled or disabled. When this feature is enabled and the client is not responding to 802.11 packets, the AP attempts two hardware retries. If the hardware retries are not successful, it attempts software retries. When this feature is disabled, the AP attempts only hardware retries.	enable, disable	disable
<code>termination</code>	Configures the EAP portion of 802.1X authentication on the AP, instead of the RADIUS server. When enabled, this command reduces network traffic to the external RADIUS server by terminating the authorization protocol on the AP. By default, for 802.1X authorization, the client conducts an EAP exchange with the RADIUS server, and the AP acts as a relay for this exchange. The AP by itself acts as an authentication server and terminates the outer layers of the EAP protocol, only relaying the innermost layer to the external RADIUS server.	—	Disabled
<code>time-range <name> {enable disable}</code>	Specify the time range profile name to apply. - When a time range profile is enabled on SSID, the SSID is made available to the users for the configured time range. For example, if the specified time range is 12:00 to 13:00, the SSID becomes available only between 12 PM to 1 PM on a given day. - If a time range is disabled, the SSID becomes unavailable for the configured time range. For example, if configured time-range is 14:00 to 17:00, the SSID is made unavailable from 2 PM to 5 PM on a given day.	—	—
<code>type {employee voice guest}</code>	Configures the type of network such as employee, voice, guest network.	—	—
<code>use-ip-for-calling-station</code>	The IP address of the client will be used as the calling-station-id.	—	—
<code>utf8</code>	Encodes the SSID. When enabled, the SSID name is displayed in the UTF-8 format. SSIDs are not encoded by default.	—	—

Command/Parameter	Description	Range	Default
very-high-throughput-disable	Disables VHT for clients connecting the WLAN SSID profile.	—	—
vht-mu-txbf-disable	Disables MU-MIMO. The MUMIMO feature allows the 802.11ac Wave 2 APs to send multiple frames to multiple clients simultaneously over the same frequency spectrum. With MUMIMO, APs can support simultaneous directional RF links and up to four simultaneous full-rate Wi-Fi connections (For example, smart phone, tablet, laptop, multimedia player or other client device). The MU-MIMO feature is enabled by default on WLAN SSIDs.	—	—
vht-supported-mcs-map	Allows you to define a combination of VHT MCS and spatial streams as a VHT MCS rate set.	-, 7, 8, 9	9 for each spatial stream
vlan <vlan>	Allows you to assign a unique VLAN to a specified SSID user. The AP takes this parameter from its per AP vlan specific configuration.	1–4095	—
wep-key <wep-key>	Static WEP key associated with the key index. The WEP key values can be 10 or 26 hexadecimal characters in length.	—	—
wispr	Enables WISPr authentication for the SSID profile.	—	—
wmm-background-dscp <dscp>	Allows you to specify the DSCP mapping value for the background traffic.	0–63	—
wmm-background-share <share>	Allocates bandwidth for background traffic such as file downloads or print jobs.	—	—
wmm-best-effort-share <share>	Allocates bandwidth or best effort traffic such as traffic from legacy devices or traffic from applications or devices that do not support QoS.	—	—
wmm-uapsd-disable	Disables UAPSD on all WMM ACs. By default, UAPSD or WMM power save is enabled.	—	—
wmm-video-dscp <dscp>	Allows you to specify the DSCP mapping value for the video traffic.	0–63	—
wmm-video-share <share>	Allocates bandwidth for video traffic generated from video streaming.	—	—
wmm-voice-dscp <dscp>	Allows you to specify the DSCP mapping value for the voice traffic.	0–63	—
wmm-voice-share <share>	Allocates bandwidth for voice traffic generated from the incoming and outgoing voice communication.	—	—

Command/Parameter	Description	Range	Default
work-without-uplink	Allows the SSID to be used without an uplink connection. NOTE: In SCALANCE W 6.4.4.4-4.2.3 release, the work-without-uplink is not operational. To configure SSID availability based on the uplink connection status, use the out-of- service parameter.	—	—
wpa-passphrase <passphrase>	Defines a WPA passphrase with which you can generate a pre- shared key (PSK).	—	—
zone <zone>	Allows you to specify a zone for SSID. If an SSID belongs to a zone, it is not broadcast on any AP which does not belong to the zone.	—	—
no wlan ssid-profile <ssid_profile>	Removes the WLAN SSID profile configuration.	—	—

Usage Guidelines

Use this command to configure a WLAN SSID profile to set up an employee, voice, or guest network.

Example

The following example configures an employee WLAN SSID profile:

```
(AP) (config)# wlan ssid-profile employee1
(AP) (SSID Profile "employee1")# type employee
(AP) (SSID Profile "employee1")# essid employee1
(AP) (SSID Profile "employee1")# enable
(AP) (SSID Profile "employee1")# vlan 1
(AP) (SSID Profile "employee1")# wpa-passphrase user@123
(AP) (SSID Profile "employee1")# opmode wpa2-psk-aes
(AP) (SSID Profile "employee1")# max-authentication-failures 0
(AP) (SSID Profile "employee1")# mac-authentication
(AP) (SSID Profile "employee1")# l2-auth-failthrough
(AP) (SSID Profile "employee1")# termination
(AP) (SSID Profile "employee1")# blacklist
(AP) (SSID Profile "employee1")# mac-authentication
(AP) (SSID Profile "employee1")# auth-server InternalServer
(AP) (SSID Profile "employee1")# rf-band all
(AP) (SSID Profile "employee1")# dtim-period 1
```

```
(AP) (SSID Profile "employee1")# inactivity-timeout 1000
(AP) (SSID Profile "employee1")# broadcast-filter none
(AP) (SSID Profile "employee1")# dmo-channel-utilization-threshold 90
(AP) (SSID Profile "employee1")# local-probe-req-thresh 0
(AP) (SSID Profile "employee1")# max-clients-threshold 64
(AP) (SSID Profile "employee1")# set-role Group-Name contains wireless employee
(AP) (SSID Profile "employee1")# set-vlan mac-address-and-dhcp-options matches-
regular-
expression .link 200
(AP) (SSID Profile "employee1")# no wmm-background-dscp
(AP) (SSID Profile "employee1")# wmm-best-effort-dscp 21
(AP) (SSID Profile "employee1")# no wmm-video-dscp
(AP) (SSID Profile "employee1")# wmm-voice-dscp 46,44,42,41
(AP) (SSID Profile "employee1")# zone Zone1
(AP) (SSID Profile "employee1")# end
(AP)# commit apply
```

The following example configures a guest WLAN SSID profile:

```
(AP) (config)# wlan ssid-profile guestNetwork
(AP) (SSID Profile "guestNetwork")# type guest
(AP) (SSID Profile "guestNetwork")# essid guestNetwork
(AP) (SSID Profile "guestNetwork")# enable
(AP) (SSID Profile "guestNetwork")# opmode opensystem
(AP) (SSID Profile "guestNetwork")# rf-band all
(AP) (SSID Profile "guestNetwork")# dtim-period 1
(AP) (SSID Profile "guestNetwork")# g-min-tx-rate 1
(AP) (SSID Profile "guestNetwork")# g-max-tx-rate 54
(AP) (SSID Profile "guestNetwork")# a-min-tx-rate 6
(AP) (SSID Profile "guestNetwork")# a-max-tx-rate 54
(AP) (SSID Profile "guestNetwork")# inactivity-timeout 1000
(AP) (SSID Profile "guestNetwork")# vlan 1
(AP) (SSID Profile "guestNetwork")# dmo-channel-utilization-threshold 90
(AP) (SSID Profile "guestNetwork")# max-clients-threshold 64
(AP) (SSID Profile "guestNetwork")# local-probe-req-thresh 0
(AP) (SSID Profile "guestNetwork")# blacklist
(AP) (SSID Profile "guestNetwork")# max-authentication-failures 3
```

```
(AP) (SSID Profile "guestNetwork") # radius-interim-accounting-interval 10
(AP) (SSID Profile "guestNetwork") # radius-reauth-interval 30
(AP) (SSID Profile "guestNetwork") # captive-portal external
(AP) (SSID Profile "guestNetwork") # mac-authentication
(AP) (SSID Profile "guestNetwork") # auth-server server1
(AP) (SSID Profile "guestNetwork") # set-role-by-ssid
(AP) (SSID Profile "guestNetwork") # set-role-pre-auth test1
(AP) (SSID Profile "guestNetwork") # end
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and WLAN SSID profile configuration sub- mode.

4.20.11 wlan sta-profile

Description

This command enables Wi-Fi uplink on an AP.

Syntax

```
wlan sta-profile
    essid <ESSID>
    cipher-suite <cipher-suite-string>
    wpa-passphrase <WPA-key>
    uplink-band <band>
    no...
no wlan sta-profile
```

Command/Parameter	Description
wlan sta-profile	Configures a Wi-Fi uplink profile for an AP.
essid<ESSID>	Defines a unique name for the network on which the Wi-Fi uplink will be enabled.
cipher-suite {clear wpa-tkip-psk wpa2-ccmp-psk}	Configures encryption settings. You can specify the following types of encryption: - clear —To clear a cipher suite wpa-tkip-psk —To use WPA with TKIP encryption along with PSK - wpa2-ccmp-psk—To use WPA2 with Counter Cipher Mode with Block CCMP, an AES-based encryption mode with strong security.
wpa-passphrase <WPA-key>	Defines a WPA passphrase with which a PSK can be generated. The passphrase must be between 8 and 64 characters.
uplink-band <band>	Configures the band for uplink connection. The valid options are 802.11a and 802.11g.
no...	Removes the configuration of the wpa-passphrase parameter.
no wlan sta-profile	Removes the WLAN sta-profile configuration.

Usage Guidelines

Use this command to configure Wi-Fi uplink for a client station connected to an AP

Example

The following commands configure the Wi-Fi uplink profile:

```
(AP) (config) # wlan sta-profile
```

```
(AP) (sta uplink) # uplink-band dot11a
(AP) (sta uplink) # uplink-band dot11a
(AP) (sta uplink) # cipher-suite wpa-tkip-psk
(AP) (sta uplink) # wpa-passphrase user@123
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and Wi-Fi uplink (sta) sub-mode.

4.20.12 wlan tacacs-server

Description

This command is used to configure a TACACS server for management users.

Syntax

```
wlan tacacs-server <profile-name>
    deadtime <minutes>
    ip <IP-address>
    key <key>
    no
    port <port>
    retry-count <number>
    session-authorization
    timeout <seconds>
    no...
no tacacs-server <profile-name>
```

Command/Parameter	Description	Default
wlan tacacs-server	Configures the TACACS server profile.	-
deadtime <minutes>	Configures an interval	
ip <IP-address>	Configures the IP address of the TACACS server.	-
port <port>	Configures the TCP port for the server	49
key	Configures a shared secret key to authenticate communication between the TACACS+ client and server.	-

Command/Parameter	Description	Default
<code>timeout <seconds></code>	Configures a timeout value for TACACS+ requests from the management users	20
<code>retry-count <number></code>	Configures the maximum number of authentication requests that are sent to the server	3
<code>session- authorization</code>	Enables session authorization for the admin users. By default, session authorization is disabled.	—
<code>#no...</code>	Removes the specified configuration parameter.	—

Usage Guidelines

Use this command to configure a TACACS server as an external authentication server. This configuration applies only for management users in SCALANCE W and not for the other SSID or wired profiles.

Example

The following example configures the TACACS protocols:

```
(AP) (config) # wlan tacacs-server Server1
(AP) (TACACS Server <Server1>) # ip <10.17.121.54>
(AP) (TACACS Server <Server1>) # port <49>
(AP) (TACACS Server <Server1>) # key <pass123>
(AP) (TACACS Server <Server1>) # timeout <30>
(AP) (TACACS Server <Server1>) # retry-count <4>
(AP) (TACACS Server <Server1>) # deadtime <30>
(AP) (TACACS Server <Server1>) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and TACACS server profile sub-mode.

4.20.13 wlan walled-garden

Description

This command configures a walled garden to control user access to the web content and services. The walled garden access is required when an external captive portal is used.

Syntax

```
wlan walled-garden

    white-list <domain>

    black-list <domain>

    no...

no wlan walled-garden
```

Command/Parameter	Description	Range	Default
wlan walled-garden	Creates a Walled Garden profile for the AP.	—	—
white-list <domain>	Configures a whitelist of URLs to allow the authenticated users to access to a specific domain. You can specify the URLs which the users can access. To allow access to various sites in the same domain, you can specify a POSIX regular expression (regex(7)). For example, yahoo.com/* to provide access to various domains such as news.yahoo.com , travel.yahoo.com and finance.yahoo.com . Similarly, the www.apple.com/library/test is only allow a subset of www.apple.com site corresponding to path /library/test/* .	URLs, URLs with POSIX regular expression (regex(7))	—
black-list <domain>	Configures a blacklist to prevent the users from accessing the websites in a specific domain. You can specify the URLs for which the user access is denied. When a URL specified in blacklist is accessed by an unauthenticated user, AP sends an HTTP 403 response to the client with a simple error message.	URLs	—
no...	Removes the configuration settings of the white-list and black-list parameters .	—	—
no wlan walled-garden	Deletes the walled garden configuration.	—	—

Usage Guidelines

Use this command to configure a walled garden profile. A walled garden access is required when an external captive portal is used. For example, a hotel environment where the unauthenticated users are allowed to navigate to a designated login page (for example, a hotel website) and all its contents.

The users who do not sign up for the Internet service can view the “allowed” websites (typically hotel property websites). The website names must be DNS-based and support the option to define wildcards. This works for client devices with or without HTTP proxy settings.

When a user attempts to navigate to other websites not in the whitelist of the walled garden profile, the user is redirected to the login page. Similarly, a blacklisted walled garden profile blocks the users from accessing some websites.

Example

The following example configures a walled garden profile:

```
(AP) (config)# wlan walled-garden
(AP) (Walled Garden)# white-list <domain>
(AP) (Walled Garden)# black-list <domain>
(AP) (Walled Garden)# end
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.20.14 wlan wispr-profile

Description

This command configures a WISPr authentication profile for an AP. WISPr authentication allows a smart client to authenticate on the network when they roam between WISPrs, even if the wireless hotspot uses an ISP with whom the client may not have an account.

Syntax

```
wlan wispr-profile
    wispr-location-id-ac <ac> wispr-
    location-id-cc <cc>
    wispr-location-id-isocc <issoc> wispr-location-id-
    network <network>
    wispr-location-name-location <location-name>
    wispr-location-name-operator-name <operator-name>
    no..
no wlan wispr-profile
```

Command/Parameter	Description
wlan wispr-profile	Creates a WISPr authentication profile
wispr-location-id-ac <ac>	Configures an E.164 Area Code for the WISPr Location ID.
wispr-location-id-cc <cc>	Configures an E.164 Country Code for the WISPr Location ID.
wispr-location-id-isocc <issoc>	Configures an ISO Country Code for the WISPr Location ID.

Command/Parameter	Description
wispr-location-id-network <network>	Configures an SSID associated with the WISPr Location ID.
wispr-location-name-location <location-name>	Associates the Hotspot location to the WISPr profile.
wispr-location-name-operator-name <operator-name>	Associates the hotspot operator profile to the WISPr authentication profile.
no..	Removes the parameters configured under the wlan wispr-profile command.
no wlan wispr-profile	Removes the wlan wispr-profile command.

Usage Guidelines

Use this command to configure a WISPr authentication profile for the captive portal users. SCALANCE W supports the following smart clients:

- iPass
- Boingo

These smart clients enable client authentication and roaming between hotspots by embedding iPass Generic Interface Specification (GIS) redirect, authentication, and logoff messages within HTML messages that are sent to the AP.

The WISPr RADIUS attributes and configuration parameters are specific to the RADIUS server used by your ISP for the WISPr authentication. Contact your ISP to determine the parameter values for WISPr profile configuration. You can find a list of ISO and ITU country and area codes at the ISO and ITU websites (www.iso.org and <http://www.itu.int>).

Example

The following commands configure a WISPr authentication profile:

```
(AP) (config) # wlan wispr-profile
(AP) (WISPr) # wispr-location-id-ac 408
(AP) (WISPr) # wispr-location-id-cc 1
(AP) (WISPr) # wispr-location-id-isocc US
(AP) (WISPr) # wispr-location-id-network wispr
(AP) (WISPr) # wispr-location-name-location airport
(AP) (WISPr) # wispr-location-name-operator-name KNP
(AP) (WISPr) # end
(AP) # commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode and WISPr profile sub-mode.

4.20.15 write

Description

This command saves the running configuration to memory or displays the running configuration on the screen. This command can also be used to erase the running configuration and return to factory default setting.

Syntax

```
write {erase <all> <reboot>|memory}
```

Usage Guidelines

Configuration changes made using the CLI affect only the current session. You must save your changes for them to be retained across system reboots. Changes are lost if the system reboots before saving the changes.

The following command assumes you have already saved your configuration. Reboot the AP: The AP returns the following messages:

```
Do you really want to reset the system(y/n): y
System will now restart!
..
Restarting system.
```

Example

The following command saves your changes so they are retained after a reboot:

```
write memory
Save configuration.
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

4.21 X

4.21.1 xml-api-server

Description

This command integrates an XML API interface to the AP.

Syntax

```
xml-api-server [<xml_api_server_profile>]
    ip <addr> [mask <mask>]
    key <key>
    no...
no xml-api-server [<xml_api_server_profile>]
```

Command/Parameter	Description
xml-api-server	Displays the sub-mode for configuring the XML API interface parameters.
<xml_api_server_profile>	Creates an XML API server profile.
ip <subnet> mask [<mask>]	Configures the subnet of the XML API server. You can optionally configure the subnet mask for the XML API server.
key <shared-key>	Configures the key required for accessing the XML API interface.
no...	Removes the parameter definition configured under the xml-api-server command.
no xml-api-server [<xml_api_server_profile>]	Removes the XML API configuration.

Usage Guidelines

Use this command to integrate an AP with an external XML API interface.

Example

The following command configures the XML API Server details on an AP:

```
(AP) (config)# xml-api-server test-xml
(AP) (xml-api-server "test-xml")# ip 12.0.132.61
(AP) (xml-api-server "test-xml")# key123
(AP) (xml-api-server "test-xml")# end
(AP)# commit apply
```

Command Information

Access Point Platform	Command Mode
All platforms	Configuration mode

4.22 Z

4.22.1 zonename

Description

This command configures a zone name for the AP. You can configure zone settings on an AP and the SSID profile, to assign an SSID to a specific AP.

Syntax

```
zonename <name>
```

```
no...
```

Parameter	Description
zonename <name>	Configures zone on an AP. You can configure up to six SSID zones per AP, and up to 32 SSID zones per ssid-profile. Use comma separators when listing multiple zones.
no...	Removes the configuration.

Usage Guidelines

Use this command to configure an AP zone. To assign an SSID to a specific AP, the AP zone name must be configured on the WLAN SSID profile.

The following constraints apply to the AP zone configuration:

- An AP can belong to six zones and only six zones can be configured on an SSID.
- If an SSID belongs to a zone, all APs in this zone can broadcast this SSID. If no AP belongs to the zone configured on the SSID, the SSID is not broadcast.
- If an SSID does not belong to any zone, all APs can broadcast this SSID.

Example

The following example configures a zone name on an AP:

```
(AP)# zonename zoneA
```

Command Information

Access Point Platform	Command Mode
All platforms	Privileged EXEC mode

Appendix

A.1 Glossary of Terms

Description

The following table lists the terms and their definitions used in this document.

3DES	Triple Data Encryption Standard. 3DES is a symmetric-key block cipher that applies the DES cipher algorithm three times to each data block.
3G	Third Generation of Wireless Mobile Telecommunications Technology. See W-CDMA.
3GPP	Third Generation Partnership Project. 3GPP is a collaborative project aimed at developing globally acceptable specifications for third generation mobile systems.
4G	Fourth Generation of Wireless Mobile Telecommunications Technology. See LTE.
802.11	802.11 is an evolving family of specifications for wireless LANs developed by a working group of the Institute of Electrical and Electronics Engineers (IEEE). 802.11 standards use the Ethernet protocol and Carrier Sense Multiple Access with collision avoidance (CSMA/CA) for path sharing.
802.11 bSec	802.11 bSec is an alternative to 802.11i. The difference between bSec and standard 802.11i is that bSec implements Suite B algorithms wherever possible. Notably, Advanced Encryption Standard-Counter with CBC- MAC is replaced by Advanced Encryption Standard - Galois/Counter Mode, and the Key Derivation Function (KDF) of 802.11i is upgraded to support SHA-256 and SHA-384.
802.11a	802.11a provides specifications for wireless systems. Networks using 802.11a operate at radio frequencies in the 5 GHz band. The specification uses a modulation scheme known as orthogonal frequency-division multiplexing (OFDM) that is especially well suited to use in office settings. The maximum data transfer rate is 54 Mbps.
802.11ac	802.11ac is a wireless networking standard in the 802.11 family that provides high-throughput WLANs on the 5 GHz band.
802.11b	802.11b is a WLAN standard often called Wi-Fi and is backward compatible with 802.11. Instead of the Phase- Shift Keying (PSK) modulation method used in 802.11 standards, 802.11b uses Complementary Code Keying (CCK) that allows higher data speeds and makes it less susceptible to multipath-propagation interference. 802.11b operates in the 2.4 GHz band and the maximum data transfer rate is 11 Mbps.

802.11d	802.11d is a wireless network communications specification for use in countries where systems using other standards in the 802.11 family are not allowed to operate. Configuration can be fine-tuned at the Media Access Control (MAC) layer level to comply with the rules of the country or district in which the network is to be used. Rules are subject to variation and include allowed frequencies, allowed power levels, and allowed signal bandwidth. 802.11d facilitates global roaming.
802.11e	802.11e is an enhancement to the 802.11a and 802.11b specifications that enhances the 802.11 Media Access Control layer with a coordinated Time Division Multiple Access (TDMA) construct. It adds error- correcting mechanisms for delay-sensitive applications such as voice and video. The 802.11e specification provides seamless interoperability between business, home, and public environments such as airports and hotels, and offers all subscribers high-speed Internet access with full-motion video, high-fidelity audio, and VoIP.
802.11g	802.11g offers transmission over relatively short distances at up to 54 Mbps, compared with the 11 Mbps theoretical maximum of 802.11b standard. 802.11g employs Orthogonal Frequency Division Multiplexing (OFDM), the modulation scheme used in 802.11a, to obtain higher data speed. Computers or terminals set up for 802.11g can fall back to speed of 11 Mbps, so that 802.11b and 802.11g devices can be compatible within a single network.
802.11h	802.11h is intended to resolve interference issues introduced by the use of 802.11a in some locations, particularly with military Radar systems and medical devices. Dynamic Frequency Selection (DFS) detects the presence of other devices on a channel and automatically switches the network to another channel if and when such signals are detected. Transmit Power Control (TPC) reduces the radio frequency (RF) output power of each network transmitter to a level that minimizes the risk of interference.
802.11i	802.11i provides improved encryption for networks that use 802.11a, 802.11b, and 802.11g standards. It requires new encryption key protocols, known as Temporal Key Integrity Protocol (TKIP) and Advanced Encryption Standard (AES).
802.11j	802.11j is a proposed addition to the 802.11 family of standards that incorporates Japanese regulatory extensions to 802.11a; the main intent is to add channels in the radio frequency (RF) band of 4.9 GHz to 5.0 GHz.
802.11k	802.11k is an IEEE standard that enables APs and client devices to discover the best available radio resources for seamless BSS transition in a WLAN.
802.11m	802.11m is an Initiative to perform editorial maintenance, corrections, improvements, clarifications, and interpretations relevant to documentation for 802.11 family specifications.
802.11n	802.11n is a wireless networking standard to improve network throughput over the two previous standards, 802.11a and 802.11g. With 802.11n, there will be a significant increase in the maximum raw data rate from 54 Mbps to 600 Mbps with the use of four spatial streams at a channel width of 40 MHz.
802.11r	802.11r is an IEEE standard for enabling seamless BSS transitions in a WLAN. 802.11r standard is also referred to as Fast BSS transition.

802.11u	802.11u is an amendment to the IEEE 802.11 WLAN standards for connection to external networks using common wireless devices such as smartphones and tablet PCs. The 802.11u protocol provides wireless clients with a streamlined mechanism to discover and authenticate to suitable networks, and allows mobile users to roam between partner networks without additional authentication. An 802.11u-capable device supports the Passpoint technology from the Wi-Fi Alliance Hotspot 2.0 R2 Specification that simplifies and automates access to public Wi-Fi.
802.11v	802.11v is an IEEE standard that allows client devices to exchange information about the network topology and RF environment. This information is used for assigning best available radio resources for the client devices to provide seamless connectivity.
802.1Q	802.1Q is an IEEE standard that enables the use of VLANs on an Ethernet network. 802.1Q supports VLAN tagging.
802.1X	802.1X is an IEEE standard for port-based network access control designed to enhance 802.11 WLAN security. 802.1X provides an authentication framework that allows a user to be authenticated by a central authority.
802.3af	802.3af is an IEEE standard for Power over Ethernet (PoE) version that supplies up to 15.4W of DC power. See PoE.
802.3at	802.3at is an IEEE standard for PoE version that supplies up to 25.5W of DC power. See PoE+.
AAA	Authentication, Authorization, and Accounting. AAA is a security framework to authenticate users, authorize the type of access based on user credentials, and record authentication events and information about the network access and network resource consumption.
ABR	Area Border Router. ABR is used for establishing connection between the backbone networks and the Open Shortest Path First (OSPF) areas. ABR is located near the border of one or more OSPF areas.
AC	Access Category. As per the IEEE 802.11e standards, AC refers to various levels of traffic prioritization in Enhanced Distributed Channel Access (EDCA) operation mode. The WLAN applications prioritize traffic based on the Background, Best Effort, Video, and Voice access categories. AC can also refer to Alternating Current, a form of electric energy that flows when the appliances are plugged to a wall socket.
ACC	Advanced Cellular Coexistence. The ACC feature in APs enable WLANs to perform at peak efficiency by minimizing interference from 3G/4G/LTE networks, distributed antenna systems, and commercial small cell/femtocell equipment.
Access-Accept	Response from the RADIUS server indicating successful authentication and containing authorization information.
Access-Reject	Response from RADIUS server indicating that a user is not authorized.
Access-Request	RADIUS packet sent to a RADIUS server requesting authorization.
Accounting-Request	RADIUS packet type sent to a RADIUS server containing accounting summary information.
Accounting-Response	RADIUS packet sent by the RADIUS server to acknowledge receipt of an Accounting-Request.

ACE	Access Control Entry. ACE is an element in an ACL that includes access control information.
ACI	Adjacent Channel Interference. ACI refers to interference or interruptions detected on a broadcasting channel, caused by too much power on an adjacent channel in the spectrum.
ACL	Access Control List. ACL is a common way of restricting certain types of traffic on a physical port.
Active Directory	Microsoft Active Directory. The directory server that stores information about a variety of things, such as organizations, sites, systems, users, shares, and other network objects or components. It also provides authentication and authorization mechanisms, and a framework within which related services can be deployed.
ActiveSync	Mobile data synchronization app developed by Microsoft that allows a mobile device to be synchronized with either a desktop or a server running compatible software products.
ad hoc network	An ad hoc network is a network composed of individual devices communicating with each other directly. Many ad hoc networks are Local Area Networks (LANs) where computers or other devices are enabled to send data directly to one another rather than going through a centralized access point.
ADO	Active X Data Objects is a part of Microsoft Data Access Components (MDACs) that enables client applications to access data sources through an (Object Linking and Embedding Database) OLE DB provider. ADO supports key features for building client-server and Web-based applications.
ADP	Aruba Discovery Protocol. ADP is an Aruba proprietary Layer 2 protocol. It is used by the APs to obtain the IP address of the TFTP server from which it downloads the AP boot image.
AES	Advanced Encryption Standard. AES is an encryption standard used for encrypting and protecting electronic data. The AES encrypts and decrypts data in blocks of 128 bits (16 bytes), and can use keys of 128 bits, 192 bits, and 256 bits.
AIFSN	Arbitrary Inter-frame Space Number. AIFSN is set by the AP in beacon frames and probe responses. AIFS is a method of prioritizing a particular category of traffic over the other, for example prioritizing voice or video messages over email.
AirGroup	The application that allows the end users to register their personal mobile devices on a local network and define a group of friends or associates who are allowed to share them. AirGroup is primarily designed for colleges and other institutions. AirGroup uses zero configuration networking to allow Apple mobile devices, such as the AirPrint wireless printer service and the AirPlay mirroring service, to communicate over a complex access network topology.
AirWave Management Client	AirWave Management Client is a Windows software utility that enables client devices (such as a laptop) to act as passive RF sensors and augments the AirWave RAPIDS module.

ALE	Analytics and Location Engine. ALE gives visibility into everything the wireless network knows. This enables customers and partners to gain a wealth of information about the people on their premises. This can be very important for many different verticals and use cases. ALE includes a location engine that calculates associated and unassociated device location periodically using context streams, including RSSI readings, from WLAN controllers or SCALANCE W clusters.
ALG	Application Layer Gateway. ALG is a security component that manages application layer protocols such as SIP, FTP and so on.
AM	Air Monitor. AM is a mode of operation supported on wireless APs. When an AP operates in the Air Monitor mode, it enhances the wireless networks by collecting statistics, monitoring traffic, detecting intrusions, enforcing security policies, balancing wireless traffic load, self-healing coverage gaps, and more. However, clients cannot connect to APs operating in the AM mode.
AMON	Advanced Monitoring. AMON is used in Aruba WLAN deployments for improved network management, monitoring and diagnostic capabilities.
AMP	AirWave Management Platform. AMP is a network management system for configuring, monitoring, and upgrading wired and wireless devices on your network.
A-MPDU	Aggregate MAC Protocol Data Unit. A-MPDU is a method of frame aggregation, where several MPDUs are combined into a single frame for transmission.
A-MSDU	Aggregate MAC Service Data Unit. A-MSDU is a structure containing multiple MSDUs, transported within a single (unfragmented) data MAC MPDU.
ANQP	Access Network Query Protocol. ANQP is a query and a response protocol for Wi-Fi hotspot services. ANQP includes information Elements (IEs) that can be sent from the AP to the client to identify the AP network and service provider. The IEs typically include information about the domain name of the AP operator, the IP addresses available at the AP, and information about potential roaming partners accessible through the AP. If the client responds with a request for a specific IE, the AP will send a Generic Advertisement Service (GAS) response frame with the configured ANQP IE information.
ANSI	American National Standards Institute. It refers to the ANSI compliance standards for products, systems, services, and processes.
API	Application Programming Interface. Refers to a set of functions, procedures, protocols, and tools that enable users to build application software.
app	Short form for application. It generally refers to the application that is downloaded and used on mobile devices.
ARM	Adaptive Radio Management. ARM dynamically monitors and adjusts the network to ensure that all users are allowed ready access. It enables full utilization of the available spectrum to support maximum number of users by intelligently choosing the best RF channel and transmit power for APs in their current RF environment.
ARP	Address Resolution Protocol. ARP is used for mapping IP network address to the hardware MAC address of a device.
ASCII	American Standard Code for Information Interchange. An ASCII code is a numerical representation of a character or an action.
band	Band refers to a specified range of frequencies of electromagnetic radiation.

BGP	Border Gateway Protocol. BGP is a routing protocol for exchanging data and information between different host gateways or autonomous systems on the Internet.
BLE	Bluetooth Low Energy. The BLE functionality is offered by Bluetooth® to enable devices to run for long durations with low power consumption.
BMC	Beacon Management Console. BMC manages and monitors beacons from the BLE devices. The BLE devices are used for location tracking and proximity detection.
BPDU	Bridge Protocol Data Unit. A BPDU is a data message transmitted across a local area network to detect loops in network topologies.
B-RAS	Broadband Remote Access Server. A B-RAS is a server that facilitates and converges traffic from multiple Internet traffic resources such as cable, DSL, Ethernet, or Broadband wireless.
BRE	Basic Regular Expression. The BRE syntax standards designed by the IEEE provides extension to the traditional Simple Regular Expressions syntax and allows consistency between utility programs such as grep, sed, and awk.
BSS	Basic Service Set. A BSS is a set of interconnected stations that can communicate with each other. BSS can be an independent BSS or infrastructure BSS. An independent BSS is an ad hoc network that does not include APs, whereas the infrastructure BSS consists of an AP and all its associated clients.
BSSID	Basic Service Set Identifier. The BSSID identifies a particular BSS within an area. In infrastructure BSS networks, the BSSID is the MAC address of the AP. In independent BSS or ad hoc networks, the BSSID is generated randomly.
BYOD	Bring Your Own Device. BYOD refers to the use of personal mobile devices within an enterprise network infrastructure.
CA	Certificate Authority or Certification Authority. Entity in a public key infrastructure system that issues certificates to clients. A certificate signing request received by the CA is converted into a certificate when the CA adds a signature generated with a private key. See digital certificate.
CAC	Call Admission Control. CAC regulates traffic volume in voice communications. CAC can also be used to ensure or maintain a certain level of audio quality in voice communications networks.
CALEA	Communications Assistance for Law Enforcement Act. To comply with the CALEA specifications and to allow lawful interception of Internet traffic by the law enforcement and intelligence agencies, the telecommunications carriers and manufacturers of telecommunications equipment are required to modify and design their equipment, facilities, and services to ensure that they have built-in surveillance capabilities.
Campus AP	Campus APs are used in private networks where APs connect over private links (LAN, WLAN, WAN or MPLS) and terminate directly on controllers. Campus APs are deployed as part of the indoor campus solution in enterprise office buildings, warehouses, hospitals, universities, and so on.
captive portal	A captive portal is a web page that allows the users to authenticate and sign in before connecting to a public- access network. Captive portals are typically used by business centers, airports, hotel lobbies, coffee shops, and other venues that offer free Wi-Fi hotspots for the guest users.

CCA	Clear Channel Assessment. In wireless networks, the CCA method detects if a channel is occupied or clear, and determines if the channel is available for data transmission.
CDP	Cisco Discovery Protocol. CDP is a proprietary Data Link Layer protocol developed by Cisco Systems. CDP runs on Cisco devices and enables networking applications to learn about the neighboring devices directly connected to the network.
CDR	Call Detail Record. A CDR contains the details of a telephone or VoIP call, such as the origin and destination addresses of the call, the start time and end time of the call, any toll charges that were added through the network or charges for operator services, and so on.
CEF	Common Event Format. The CEF is a standard for the interoperability of event or log-generating devices and applications. The standard syntax for CEF includes a prefix and a variable extension formatted as key-value pairs.
CGI	Common Gateway Interface. CGI is a standard protocol for exchanging data between the web servers and executable programs running on a server to dynamically process web pages.
CHAP	Challenge Handshake Authentication Protocol. CHAP is an authentication scheme used by PPP servers to validate the identity of remote clients.
CIDR	Classless Inter-Domain Routing. CIDR is an IP standard for creating and allocating unique identifiers for networks and devices. The CIDR IP addressing scheme is used as a replacement for the older IP addressing scheme based on classes A, B, and C. With CIDR, a single IP address can be used to designate many unique IP addresses. A CIDR IP address ends with a slash followed by the IP network prefix, for example, 192.0.2.0/24.
ClearPass	ClearPass is an access management system for creating and enforcing policies across a network to all devices and applications. The ClearPass integrated platform includes applications such as Policy Manager, Guest, Onboard, OnGuard, Insight, Profile, QuickConnect, and so on.
ClearPass Guest	ClearPass Guest is a configurable ClearPass application for secure visitor network access management.
ClearPass Policy Manager	ClearPass Policy Manager is a baseline platform for policy management, AAA, profiling, network access control, and reporting. With ClearPass Policy Manager, the network administrators can configure and manage secure network access that accommodates requirements across multiple locations and multivendor networks, regardless of device ownership and connection method.
CLI	Command-Line Interface. A console interface with a command line shell that allows users to execute text input as commands and convert these commands to appropriate functions.
CN	Common Name. CN is the primary name used to identify a certificate.
CNA	Captive Network Assistant. CNA is a popup page shown when joining a network that has a captive portal.
CoA	Change of Authorization. The RADIUS CoA is used in the AAA service framework to allow dynamic modification of the authenticated, authorized, and active subscriber sessions.

CoS	Class of Service. CoS is used in data and voice protocols for classifying packets into different types of traffic (voice, video, or data) and setting a service priority. For example, voice traffic can be assigned a higher priority over email or HTTP traffic.
CPE	Customer Premises Equipment. It refers to any terminal or equipment located at the customer premises.
CPsec	Control Plane Security. CPsec is a secure form of communication between a controller and APs to protect the control plane communications. This is performed by means of using public-key self-signed certificates created by each master controller.
CPU	Central Processing Unit. A CPU is an electronic circuitry in a computer for processing instructions.
CRC	Cyclic Redundancy Check. CRC is a data verification method for detecting errors in digital data during transmission, storage, or retrieval.
CRL	Certificate Revocation List. CRL is a list of revoked certificates maintained by a certification authority.
cryptobinding	Short for cryptographic binding. A procedure in a tunneled EAP method that binds together the tunnel protocol and the tunneled authentication methods, ensuring the relationship between a collection of data assets. Cryptographic binding focuses on protecting the server; mutual cryptographic binding protects both peer and server.
CSA	Channel Switch Announcement. The CSA element enables an AP to advertise that it is switching to a new channel before it begins transmitting on that channel. This allows the clients, which support CSA, to transition to the new channel with minimal downtime.
CSMA/CA	Carrier Sense Multiple Access / Collision Avoidance. CSMA/CA is a protocol for carrier transmission in networks using the 802.11 standard. CSMA/CA aims to prevent collisions by listening to the broadcasting nodes, and informing devices not to transmit any data until the broadcasting channel is free.
CSR	Certificate Signing Request. In PKI systems, a CSR is a message sent from an applicant to a CA to apply for a digital identity certificate.
CSV	Comma-Separated Values. A file format that stores tabular data in the plain text format separated by commas.
CTS	Clear to Send. The CTS refers to the data transmission and protection mechanism used by the 802.11 wireless networking protocol to prevent frame collision occurrences. See RTS.
CW	Contention Window. In QoS, CW refers to a window set for access categories based on the type of traffic. Based on the type and volume of the traffic, the minimum and maximum values can be calculated to provide a wider window when necessary.
DAI	Dynamic ARP inspection. A security feature that validates ARP packets in a network.
DAS	Distributed Antenna System. DAS is a network of antenna nodes strategically placed around a geographical area or structure for additional cellular coverage.

dB	Decibel. Unit of measure for sound or noise and is the difference or ratio between two signal levels.
dBm	Decibel-Milliwatts. dBm is a logarithmic measurement (integer) that is typically used in place of mW to represent receive-power level. AMP normalizes all signals to dBm, so that it is easy to evaluate performance between various vendors.
DCB	Data Center Bridging. DCB is a collection of standards developed by IEEE for creating a converged data center network using Ethernet.
DCE	Data Communication Equipment. DCE refers to the devices that establish, maintain, and terminate communication network sessions between a data source and its destination.
DCF	Distributed Coordination Function. DCF is a protocol that uses carrier sensing along with a four-way handshake to maximize the throughput while preventing packet collisions.
DDMO	Distributed Dynamic Multicast Optimization. DDMO is similar to Dynamic Multicast Optimization (DMO) where the multicast streams are converted into unicast streams on the AP instead of the controller, to enhance the quality and reliability of streaming videos, while preserving the bandwidth available to non-video clients.
DES	Data Encryption Standard. DES is a common standard for data encryption and a form of secret key cryptography, which uses only one key for encryption and decryption.
designated router	Designated router refers to a router interface that is elected to originate network link advertisements for networks using the OSPF protocol.
destination NAT	Destination Network Address Translation. Destination NAT is a process of translating the destination IP address of an end route packet in a network. Destination NAT is used for redirecting the traffic destined to a virtual host to the real host, where the virtual host is identified by the destination IP address and the real host is identified by the translated IP address.
DFS	Dynamic Frequency Selection. DFS is a mandate for radio systems operating in the 5 GHz band to be equipped with means to identify and avoid interference with Radar systems.
DFT	Discrete Fourier Transform. DFT converts discrete-time data sets into a discrete-frequency representation. See FFT.
DHCP	Dynamic Host Configuration Protocol. A network protocol that enables a server to automatically assign an IP address to an IP-enabled device from a defined range of numbers configured for a given network.
DHCP snooping	DHCP snooping enables the switch to monitor and control DHCP messages received from untrusted devices that are connected to the switch.
digital certificate	A digital certificate is an electronic document that uses a digital signature to bind a public key with an identity—information such as the name of a person or an organization, address, and so forth.
Digital wireless pulse	A wireless technology for transmitting large amounts of digital data over a wide spectrum of frequency bands with very low power for a short distance. Ultra Wideband radio can carry a huge amount of data over a distance up to 230 ft at very low power (less than 0.5 mW), and has the ability to carry signals through doors and other obstacles that tend to reflect signals at more limited bandwidths and a higher power.

Disconnect-Ack	Disconnect-Ack is a NAS response packet to a Disconnect-Request, which indicates that the session was disconnected.
Disconnect-Nak	Disconnect-Nak is NAS response packet to a Disconnect-Request, which indicates that the session was not disconnected.
Disconnect-Request	Disconnect-Request is a RADIUS packet type sent to a NAS requesting that a user or session be disconnected.
distribution certificate	Distribution certificate is used for digitally signing iOS mobile apps to enable enterprise app distribution. It verifies the identity of the app publisher.
DLNA	Digital Living Network Alliance. DLNA is a set of interoperability guidelines for sharing digital media among multimedia devices.
DMO	Dynamic Multicast Optimization. DMO is a process of converting multicast streams into unicast streams over a wireless link to enhance the quality and reliability of streaming videos, while preserving the bandwidth available to non-video clients.
DN	Distinguished Name. A series of fields in a digital certificate that, taken together, constitute the unique identity of the person or device that owns the digital certificate. Common fields in a DN include country, state, locality, organization, organizational unit, and the "common name", which is the primary name used to identify the certificate.
DNS	Domain Name System. A DNS server functions as a phone book for the intranet and Internet users. It converts human-readable computer host names into IP addresses and IP addresses into host names. It stores several records for a domain name such as an address 'A' record, name server (NS), and mail exchanger (MX) records. The Address 'A' record is the most important record that is stored in a DNS server, because it provides the required IP address for a network peripheral or element.
DOCSIS	Data over Cable Service Interface Specification. A telecommunication standard for Internet access through cable modem.
DoS	Denial of Service. DoS is any type of attack where the attackers send excessive messages to flood traffic and thereby preventing the legitimate users from accessing the service.
DPD	Dead Peer Detection. A method used by the network devices to detect the availability of the peer devices.
DPI	Deep Packet Inspection. DPI is an advanced method of network packet filtering that is used for inspecting data packets exchanged between the devices and systems over a network. DPI functions at the Application layer of the Open Systems Interconnection (OSI) reference model and enables users to identify, categorize, track, reroute, or stop packets passing through a network.
DRT	Downloadable Regulatory Table. The DRT feature allows new regulatory approvals to be distributed for APs without a software upgrade or patch.
DS	Differentiated Services. The DS specification aims to provide uninterrupted quality of service by managing and controlling the network traffic, so that certain types of traffic get precedence.
DSCP	Differentiated Services Code Point. DSCP is a 6-bit packet header value used for traffic classification and priority assignment.

DSL	Digital Subscriber Line. The DSL technology allows the transmission of digital data over telephone lines. A DSL modem is a device used for connecting a computer or router to a telephone line that offers connectivity to the Internet.
DSSS	Direct-Sequence Spread Spectrum. DSSS is a modulation technique used for reducing overall signal interference. This technique multiplies the original data signal with a pseudo random noise spreading code. Spreading of this signal makes the resulting wideband channel more noisy, thereby increasing the resistance to interference. See FHSS.
DST	Daylight Saving Time. DST is also known as summer time that refers to the practice of advancing clocks, so that evenings have more daylight and mornings have less. Typically clocks are adjusted forward one hour near the start of spring and are adjusted backward in autumn.
DTE	Data Terminal Equipment. DTE refers to a device that converts user information into signals or re-converts the received signals.
DTIM	Delivery Traffic Indication Message. DTIM is a kind of traffic indication map. A DTIM interval determines when the APs must deliver broadcast and multicast frames to their associated clients in power save mode.
DTLS	Datagram Transport Layer Security. DTLS communications protocol provides communications security for datagram protocols.
dynamic authorization	Dynamic authorization refers to the ability to make changes to a visitor account's session while it is in progress. This might include disconnecting a session or updating some aspect of the authorization for the session.
dynamic NAT	Dynamic Network Address Translation. Dynamic NAT maps multiple public IP addresses and uses these addresses with an internal or private IP address. Dynamic NAT helps to secure a network by masking the internal configuration of a private network.
EAP	Extensible Authentication Protocol. An authentication protocol for wireless networks that extends the methods used by the PPP, a protocol often used when connecting a computer to the Internet. EAP can support multiple authentication mechanisms, such as token cards, smart cards, certificates, one-time passwords, and public key encryption authentication.
EAP-FAST	EAP – Flexible Authentication Secure Tunnel (tunneled).
EAP-GTC	EAP – Generic Token Card. (non-tunneled).
EAP-MD5	EAP – Method Digest 5. (non-tunneled).
EAP-MSCHAP	EAP Microsoft Challenge Handshake Authentication Protocol.
EAP-MSCHAPv2	EAP Microsoft Challenge Handshake Authentication Protocol Version 2.
EAPoL	Extensible Authentication Protocol over LAN. A network port authentication protocol used in IEEE 802.1X standards to provide a generic network sign-on to access network resources.
EAP-PEAP	EAP-Protected EAP. A widely used protocol for securely transporting authentication data across a network (tunneled).
EAP-PWD	EAP-Password. EAP-PWD is an EAP method that uses a shared password for authentication.
EAP-TLS	EAP-Transport Layer Security. EAP-TLS is a certificate-based authentication method supporting mutual authentication, integrity-protected ciphersuite negotiation and key exchange between two endpoints. See RFC 5216.

EAP-TTLS	EAP-Tunneled Transport Layer Security. EAP-TTLS is an EAP method that encapsulates a TLS session, consisting of a handshake phase and a data phase. See RFC 5281.
ECC	Elliptical Curve Cryptography or Error correcting Code memory. Elliptical Curve Cryptography is a public-key encryption technique that is based on elliptic curve theory used for creating faster, smaller, and more efficient cryptographic keys. Error Correcting Code memory is a type of computer data storage that can detect and correct the most common kinds of internal data corruption. ECC memory is used in most computers where data corruption cannot be tolerated under any circumstances, such as for scientific or financial computing.
ECDSA	Elliptic Curve Digital Signature Algorithm. ECDSA is a cryptographic algorithm that supports the use of public or private key pairs for encrypting and decrypting information.
EDCA	Enhanced Distributed Channel Access. The EDCA function in the IEEE 802.11e Quality of Service standard supports differentiated and distributed access to wireless medium based on traffic priority and Access Category types. See WMM and WME.
EIGRP	Enhanced Interior Gateway Routing Protocol. EIGRP is a routing protocol used for automating routing decisions and configuration in a network.
EIRP	Effective Isotropic Radiated Power or Equivalent Isotropic Radiated Power. EIRP refers to the output power generated when a signal is concentrated into a smaller area by the Antenna.
ESI	External Services Interface. ESI provides an open interface for integrating security solutions that solve interior network problems such as viruses, worms, spyware, and corporate compliance.
ESS	Extended Service Set. An ESS is a set of one or more interconnected BSSs that form a single sub network.
ESSID	Extended Service Set Identifier. ESSID refers to the ID used for identifying an extended service set.
Ethernet	Ethernet is a network protocol for data transmission over LAN.
EULA	End User License Agreement. EULA is a legal contract between a software application publisher or author and the users of the application.
FCC	Federal Communications Commission. FCC is a regulatory body that defines standards for the interstate and international communications by radio, television, wire, satellite, and cable.
FFT	Fast Fourier Transform. FFT is a frequency analysis mechanism that aims at faster conversion of a discrete signal in time domain into a discrete frequency domain representation. See also DFT.
FHSS	Frequency Hopping Spread Spectrum. FHSS is transmission technique that allows modulation and transmission of a data signal by rapidly switching a carrier among many frequency channels in a random but predictable sequence. See also DSSS.
FIB	Forwarding Information Base. FIB is a forwarding table that maps MAC addresses to ports. FIB is used in network bridging, routing, and similar functions to identify the appropriate interface for forwarding packets.

FIPS	Federal Information Processing Standards. FIPS refers to a set of standards that describe document processing, encryption algorithms, and other information technology standards for use within non-military government agencies, and by government contractors and vendors who work with these agencies.
firewall	Firewall is a network security system used for preventing unauthorized access to or from a private network.
FQDN	Fully Qualified Domain Name. FQDN is a complete domain name that identifies a computer or host on the Internet.
FQLN	Fully Qualified Location Name. FQLN is a device location identifier in the format: APname.Floor.Building.Campus.
frequency allocation	Use of radio frequency spectrum as regulated by governments.
FSPL	Free Space Path Loss. FSPL refers to the loss in signal strength of an electromagnetic wave that would result from a line-of-sight path through free space (usually air), with no obstacles nearby to cause reflection or diffraction.
FTP	File Transfer Protocol. A standard network protocol used for transferring files between a client and server on a computer network.
GARP	Generic Attribute Registration Protocol. GVRP is a LAN protocol that allows the network nodes to register and de-register attributes, such as network addresses, with each other.
GAS	Generic Advertisement Service. GAS is a request-response protocol, which provides Layer 2 transport mechanism between a wireless client and a server in the network prior to authentication. It helps in determining a wireless network infrastructure before associating clients, and allows clients to send queries to multiple 802.11 networks in parallel.
gateway	Gateway is a network node that allows traffic to flow in and out of the network.
Gbps	Gigabits per second.
GBps	Gigabytes per second.
GET	GET refers HTTP request method or an SNMP operation method. The GET HTTP request method submits data to be processed to a specified resource. The GET SNMP operation method obtains information from the Management Information Base (MIB).
GHz	Gigahertz.
GMT	Greenwich Mean Time. GMT refers to the mean solar time at the Royal Observatory in Greenwich, London. GMT is the same as Coordinated Universal Time (UTC) standard, written as an offset of UTC +/- 00:00.
goodput	Goodput is the application level throughput that refers to the ratio of the total bytes transmitted or received in the network to the total air time required for transmitting or receiving the bytes.
GPS	Global Positioning System. A satellite-based global navigation system.
GRE	Generic Routing Encapsulation. GRE is an IP encapsulation protocol that is used to transport packets over a network.

GTC	Generic Token Card. GTC is a protocol that can be used as an alternative to MSCHAPv2 protocol. GTC allows authentication to various authentication databases even in cases where MSCHAPv2 is not supported by the database.
GVRP	GARP VLAN Registration Protocol or Generic VLAN Registration Protocol. GARP is an IEEE 802.1Q-compliant protocol that facilitates VLAN registration and controls VLANs within a larger network.
H2QP	Hotspot 2.0 Query Protocol.
hot zone	Wireless access area created by multiple hotspots that are located in close proximity to one another. Hot zones usually combine public safety APs with public hotspots.
hotspot	Hotspot refers to a WLAN node that provides Internet connection and virtual private network (VPN) access from a given location. A business traveler, for example, with a laptop equipped for Wi-Fi can look up a local hotspot, contact it, and get connected through its network to reach the Internet.
HSPA	High-Speed Packet Access.
HT	High Throughput. IEEE 802.11n is an HT WLAN standard that aims to achieve physical data rates of close to 600 Mbps on the 2.4 GHz and 5 GHz bands.
HTTP	Hypertext Transfer Protocol. The HTTP is an application protocol to transfer data over the web. The HTTP protocol defines how messages are formatted and transmitted, and the actions that the w servers and browsers should take in response to various commands.
HTTPS	Hypertext Transfer Protocol Secure. HTTPS is a variant of the HTTP that adds a layer of security on the data in transit through a secure socket layer or transport layer security protocol connection.
IAS	Internet Authentication Service. IAS is a component of Windows Server operating systems that provides centralized user authentication, authorization, and accounting.
ICMP	Internet Control Message Protocol. ICMP is an error reporting protocol. It is used by network devices such as routers, to send error messages and operational information to the source IP address when network problems prevent delivery of IP packets.
IDS	Intrusion Detection System. IDS monitors a network or systems for malicious activity or policy violations and reports its findings to the management system deployed in the network.
IEEE	Institute of Electrical and Electronics Engineers.
IGMP	Internet Group Management Protocol. Communications protocol used by hosts and adjacent routers on IP networks to establish multicast group memberships.
IGMP snooping	IGMP snooping prevents multicast flooding on Layer 2 network by treating multicast traffic as broadcast traffic. Without IGMP snooping, all streams could be flooded to all ports on that VLAN. When multicast flooding occurs, end-hosts that happen to be in the same VLAN would receive all the streams only to be discarded without snooping.

IGP	Interior Gateway Protocol. IGP is used for exchanging routing information between gateways within an autonomous system (for example, a system of corporate local area networks).
IGRP	Interior Gateway Routing Protocol. IGRP is a distance vector interior routing protocol used by routers to exchange routing data within an autonomous system.
IKE	Internet Key Exchange. IKE is a key management protocol used with IPsec protocol to establish a secure communication channel. IKE provides additional feature, flexibility, and ease of configuration for IPsec standard.
IKEv1	Internet Key Exchange version 1. IKEv1 establishes a secure authenticated communication channel by using either the pre-shared key (shared secret), digital signatures, or public key encryption. IKEv1 operates in Main and Aggressive modes. See RFC 2409.
IKEv2	Internet Key Exchange version 2. IKEv2 uses the secure channel established in Phase 1 to negotiate Security Associations on behalf of services such as IPsec. IKEv2 uses pre-shared key and Digital Signature for authentication. See RFC 4306.
IoT	Internet of Things. IoT refers to the internetworking of devices that are embedded with electronics, software, sensors, and network connectivity features allowing data exchange over the Internet.
IPM	Intelligent Power Monitoring. IPM is a feature supported on certain APs that actively measures the power utilization of an AP and dynamically adapts to the power resources.
IPS	Intrusion Prevention System. The IPS monitors a network for malicious activities such as security threats or policy violations. The main function of an IPS is to identify suspicious activity, log the information, attempt to block the activity, and report it.
IPsec	Internet Protocol security. IPsec is a protocol suite for secure IP communications that authenticates and encrypts each IP packet in a communication session.
IPSG	Internet Protocol Source Guard. IPSG restricts IP address from untrusted interface by filtering traffic based on list of addresses in the DHCP binding database or manually configured IP source bindings. It prevents IP spoofing attacks.
IrDA	An industry-sponsored organization set up in 1993 to create international standards for the hardware and software used in infrared communication links. In this special form of radio transmission, a focused ray of light in the infrared frequency spectrum, measured in terahertz (THz), or trillions of hertz (cycles per second), is modulated with information and sent from a transmitter to a receiver over a relatively short distance.
ISAKMP	Internet Security Association and Key Management Protocol. ISAKMP is used for establishing Security Associations and cryptographic keys in an Internet environment.
ISP	Internet Service Provider. An ISP is an organization that provides services for accessing and using the Internet.

JSON	JavaScript Object Notation. JSON is an open-standard, language-independent, lightweight data-interchange format used to transmit data objects consisting of attribute–value pairs. JSON uses a "self-describing" text format that is easy for humans to read and write, and that can be used as a data format by any programming language.
Kbps	Kilobits per second.
KBps	Kilobytes per second.
keepalive	Signal sent at periodic intervals from one device to another to verify that the link between the two devices is working. If no reply is received, data will be sent by a different path until the link is restored. A keepalive can also be used to indicate that the connection should be preserved so that the receiving device does not consider it timed out and drop it.
L2TP	Layer-2 Tunneling Protocol. L2TP is a networking protocol used by the ISPs to enable VPN operations.
LACP	Link Aggregation Control Protocol. LACP is used for the collective handling of multiple physical ports that can be seen as a single channel for network traffic purposes.
LAG	Link Aggregation Group . A LAG combines a number of physical ports together to make a single high- bandwidth data path. LAGs can connect two switches to provide a higher-bandwidth connection to a public network.
LAN	Local Area Network. A LAN is a network of connected devices within a distinct geographic area such as an office or a commercial establishment and share a common communications line or wireless link to a server.
LCD	Liquid Crystal Display. LCD is the technology used for displays in notebook and other smaller computers. Like LED and gas-plasma technologies, LCDs allow displays to be much thinner than the cathode ray tube technology.
LDAP	Lightweight Directory Access Protocol. LDAP is a communication protocol that provides the ability to access and maintain distributed directory information services over a network.
LDPC	Low-Density Parity-Check. LDPC is a method of transmitting a message over a noisy transmission channel using a linear error correcting code. An LDPC is constructed using a sparse bipartite graph.
LEAP	Lightweight Extensible Authentication Protocol. LEAP is a Cisco proprietary version of EAP used in wireless networks and Point-to-Point connections.
LED	Light Emitting Diode. LED is a semiconductor light source that emits light when an electric current passes through it.
LEEF	Log Event Extended Format. LEEF is a type of customizable syslog event format. An extended log file contains a sequence of lines containing ASCII characters terminated by either the sequence LF or CRLF.
LI	Lawful Interception. LI refers to the procedure of obtaining communications network data by the Law Enforcement Agencies for the purpose of analysis or evidence.
LLDP	Link Layer Discovery Protocol. LLDP is a vendor-neutral link layer protocol in the Internet Protocol suite used by network devices for advertising their identity, capabilities, and neighbors on an IEEE 802 local area network, which is principally a wired Ethernet.

LLDP-MED	LLDP–Media Endpoint Discovery. LLDP-MED facilitates information sharing between endpoints and network infrastructure devices.
LMS	Local Management Switch. In multi-controller networks, each controller acts as an LMS and terminates user traffic from the APs, processes, and forwards the traffic to the wired network.
LNS	L2TP Network Server. LNS is an equipment that connects to a carrier and handles the sessions from broadband lines. It is also used for dial-up and mobile links. LNS handles authentication and routing of the IP addresses. It also handles the negotiation of the link with the equipment and establishes a session.
LTE	Long Term Evolution. LTE is a 4G wireless communication standard that provides high-speed wireless communication for mobile phones and data terminals. See 4G.
MAB	MAC Authentication Bypass. Endpoints such as network printers, Ethernet-based sensors, cameras, and wireless phones do not support 802.1X authentication. For such endpoints, MAC Authentication Bypass mechanism is used. In this method, the MAC address of the endpoint is used to authenticate the endpoint.
MAC	Media Access Control. A MAC address is a unique identifier assigned to network interfaces for communications on a network.
MAM	Mobile Application Management. MAM refers to software and services used to secure, manage, and distribute mobile applications used in enterprise settings on mobile devices like smartphones and tablet computers. Mobile Application Management can apply to company-owned mobile devices as well as BYOD.
Mbps	Megabits per second
MBps	Megabytes per second
MCS	Modulation and Coding Scheme. MCS is used as a parameter to determine the data rate of a wireless connection for high throughput.
MD4	Message Digest 4. MD4 is an earlier version of MD5 and is an algorithm used to verify data integrity through the creation of a 128-bit message digest from data input.
MD5	Message Digest 5. The MD5 algorithm is a widely used hash function producing a 128-bit hash value from the data input.
MDAC	Microsoft Data Access Components. MDAC is a framework of interrelated Microsoft technologies that provides a standard database for Windows OS.
MDM	Mobile Device Management. MDM is an administrative software to manage, monitor, and secure mobile devices of the employees in a network.
mDNS	Multicast Domain Name System. mDNS provides the ability to perform DNS-like operations on the local link in the absence of any conventional unicast DNS server. The mDNS protocol uses IP multicast User Datagram Protocol (UDP) packets, and is implemented by the Apple Bonjour and Linux NSS-mDNS services. mDNS works in conjunction with DNS Service Discovery (DNS-SD), a companion zero-configuration technique specified. See RFC 6763.

MFA	Multi-factor Authentication. MFA lets you require multiple factors, or proofs of identity, when authenticating a user. Policy configurations define how often multi-factor authentication will be required, or conditions that will trigger it.
MHz	Megahertz
MIB	Management Information Base. A hierarchical database used by SNMP to manage the devices being monitored.
microwave	Electromagnetic energy with a frequency higher than 1 GHz, corresponding to wavelength shorter than 30 centimeters.
MIMO	Multiple Input Multiple Output. An antenna technology for wireless communications in which multiple antennas are used at both source (transmitter) and destination (receiver). The antennas at each end of the communications circuit are combined to minimize errors and optimize data speed.
MISO	Multiple Input Single Output. An antenna technology for wireless communications in which multiple antennas are used at the source (transmitter). The antennas are combined to minimize errors and optimize data speed. The destination (receiver) has only one antenna.
MLD	Multicast Listener Discovery. A component of the IPv6 suite. It is used by IPv6 routers for discovering multicast listeners on a directly attached link.
MPDU	MAC Protocol Data Unit. MPDU is a message exchanged between MAC entities in a communication system based on the layered OSI model.
MPLS	Multiprotocol Label Switching. The MPLS protocol speeds up and shapes network traffic flows.
MPPE	Microsoft Point-to-Point Encryption. A method of encrypting data transferred across PPP-based dial-up connections or PPTP-based VPN connections.
MS-CHAP	Microsoft Challenge Handshake Authentication Protocol. MS-CHAP is Password-based, challenge-response, mutual authentication protocol that uses MD4 and DES encryption.
MS-CHAPv1	Microsoft Challenge Handshake Authentication Protocol version 1. MS-CHAPv1 extends the user authentication functionality provided on Windows networks to remote workstations. MS-CHAPv1 supports only one-way authentication.
MS-CHAPv2	Microsoft Challenge Handshake Authentication Protocol version 2. MS-CHAPv2 is an enhanced version of the MS-CHAP protocol that supports mutual authentication.
MSS	Maximum Segment Size. MSS is a parameter of the options field in the TCP header that specifies the largest amount of data, specified in bytes, that a computer or communications device can receive in a single TCP segment.
MSSID	Mesh Service Set Identifier. MSSID is the SSID used by the client to access a wireless mesh network.
MSTP	Multiple Spanning Tree Protocol. MSTP configures a separate Spanning Tree for each VLAN group and blocks all but one of the possible alternate paths within each spanning tree.
MTU	Maximum Transmission Unit. MTU is the largest size packet or frame specified in octets (eight-bit bytes) that can be sent in networks such as the Internet.

MU-MIMO	Multi-User Multiple-Input Multiple-Output. MU-MIMO is a set of multiple-input and multiple-output technologies for wireless communication, in which users or wireless terminals with one or more antennas communicate with each other.
MVRP	Multiple VLAN Registration Protocol. MVRP is a Layer 2 network protocol used for automatic configuration of VLAN information on switches.
mW	milliWatts. mW is 1/1000 of a Watt. It is a linear measurement (always positive) that is generally used to represent transmission.
NAC	Network Access Control. NAC is a computer networking solution that uses a set of protocols to define and implement a policy that describes how devices can secure access to network nodes when they initially attempt to connect to a network.
NAD	Network Access Device. NAD is a device that automatically connects the user to the preferred network, for example, an AP or an Ethernet switch.
NAK	Negative Acknowledgement. NAK is a response indicating that a transmitted message was received with errors or it was corrupted, or that the receiving end is not ready to accept transmissions.
NAP	Network Access Protection. The NAP feature in the Windows Server allows network administrators to define specific levels of network access based on identity, groups, and policy compliance. The NAP Agent is a service that collects and manages health information for NAP client computers. If a client is not compliant, NAP provides a mechanism to automatically bring the client back into compliance and then dynamically increase its level of network access.
NAS	Network Access Server. NAS provides network access to users, such as a wireless AP, network switch, or dial-in terminal server.
NAT	Network Address Translation. NAT is a method of remapping one IP address space into another by modifying network address information in Internet Protocol (IP) datagram packet headers while they are in transit across a traffic routing device.
NetBIOS	Network Basic Input/Output System. A program that lets applications on different computers communicate within a LAN.
netmask	Netmask is a 32-bit mask used for segregating IP address into subnets. Netmask defines the class and range of IP addresses.
NFC	Near-Field Communication. NFC is a short-range wireless connectivity standard (ECMA-340, ISO/IEC 18092) that uses magnetic field induction to enable communication between devices when they touch or are brought closer (within a few centimeters of distance). The standard specifies a way for the devices to establish a peer-to-peer (P2P) network to exchange data.
NIC	Network Interface Card. NIC is a hardware component that allows a device to connect to the network.
Nmap	Network Mapper. Nmap is an open-source utility for network discovery and security auditing. Nmap uses IP packets to determine such things as the hosts available on a network and their services, operating systems and versions, types of packet filters/firewalls, and so on.
NMI	Non-Maskable Interrupt. NMI is a hardware interrupt that standard interrupt-masking techniques in the system cannot ignore. It typically occurs to signal attention for non-recoverable hardware errors.

NMS	Network Management System. NMS is a set of hardware and/or software tools that allow an IT professional to supervise the individual components of a network within a larger network management framework.
NOE	New Office Environment. NOE is a proprietary VoIP protocol designed by Alcatel-Lucent Enterprise.
NTP	Network Time Protocol. NTP is a protocol for synchronizing the clocks of computers over a network.
OAuth	Open Standard for Authorization. OAuth is a token-based authorization standard that allows websites or third- party applications to access user information, without exposing the user credentials.
OCSP	Online Certificate Status Protocol. OCSP is used for determining the current status of a digital certificate without requiring a CRL.
OFDM	Orthogonal Frequency Division Multiplexing. OFDM is a scheme for encoding digital data on multiple carrier frequencies.
OID	Object Identifier. An OID is an identifier used to name an object. The OIDs represent nodes or managed objects in a MIB hierarchy. The OIDs are designated by text strings and integer sequences and are formally defined as per the ASN.1 standard.
OKC	Opportunistic Key Caching. OKC is a technique available for authentication between multiple APs in a network where those APs are under common administrative control. Using OKC, a station roaming to any AP in the network will not have to complete a full authentication exchange, but will instead just perform the 4-way handshake to establish transient encryption keys.
onboarding	The process of preparing a device for use on an enterprise network, by creating the appropriate access credentials and setting up the network connection parameters.
OpenFlow	OpenFlow is an open communications interface between control plane and the forwarding layers of a network.
OpenFlow agent	OpenFlow agent. OpenFlow is a software module in Software-Defined Networking (SDN) that allows the abstraction of any legacy network element, so that it can be integrated and managed by the SDN controller. OpenFlow runs on network devices such as switches, routers, wireless controllers, and APs.
Optical wireless	Optical wireless is combined use of conventional radio frequency wireless and optical fiber for telecommunication. Long-range links are provided by using optical fibers; the links from the long-range endpoints to end users are accomplished by RF wireless or laser systems. RF wireless at Ultra High Frequencies and microwave frequencies can carry broadband signals to individual computers at substantial data speeds.
OSI	Open Systems Interconnection. OSI is a reference model that defines a framework for communication between the applications in a network.
OSPF	Open Shortest Path First. OSPF is a link-state routing protocol for IP networks. It uses a link-state routing algorithm and falls into the group of interior routing protocols that operates within a single Autonomous System (AS).
OSPFv2	Open Shortest Path First version 2. OSPFv2 is the version 2 of the link-state routing protocol, OSPF. See RFC 2328.

OUI	Organizationally Unique Identifier. Synonymous with company ID or vendor ID, an OUI is a 24-bit, globally unique assigned number, referenced by various standards. The first half of a MAC address is OUI.
OVA	Open Virtualization Archive. OVA contains a compressed installable version of a virtual machine.
OVF	Open Virtualization Format. OVF is a specification that describes an open-standard, secure, efficient, portable and extensible format for packaging and distributing software for virtual machines.
PAC	Protected Access Credential. PAC is distributed to clients for optimized network authentication. These credentials are used for establishing an authentication tunnel between the client and the authentication server.
PAP	Password Authentication Protocol. PAP validates users by password. PAP does not encrypt passwords for transmission and is thus considered insecure.
PAPI	Process Application Programming Interface. PAPI controls channels for ARM and Wireless Intrusion Detection System (WIDS) communication to the master controller. A separate PAPI control channel connects to the local controller where the SSID tunnels terminate.
PBR	Policy-based Routing. PBR provides a flexible mechanism for forwarding data packets based on policies configured by a network administrator.
PDU	Power Distribution Unit or Protocol Data Unit. Power Distribution Unit is a device that distributes electric power to the networking equipment located within a data center. Protocol Data Unit contains protocol control information that is delivered as a unit among peer entities of a network.
PEAP	Protected Extensible Authentication Protocol. PEAP is a type of EAP communication that addresses security issues associated with clear text EAP transmissions by creating a secure channel encrypted and protected by TLS.
PEF	Policy Enforcement Firewall. PEF also known as PEFNG provides context-based controls to enforce application-layer security and prioritization. The customers using Aruba mobility controllers can avail PEF features and services by obtaining a PEF license. PEF for VPN users—Customers with PEF for VPN license can apply firewall policies to the user traffic routed to a controller through a VPN tunnel.
PEFNG	Policy Enforcement Firewall. PEF also known as PEFNG provides context-based controls to enforce application-layer security and prioritization. The customers using Aruba mobility controllers can avail PEF features and services by obtaining a PEF license. PEF for VPN users—Customers with PEF for VPN license can apply firewall policies to the user traffic routed to a controller through a VPN tunnel.
PEFV	Policy Enforcement Firewall. PEF also known as PEFNG provides context-based controls to enforce application-layer security and prioritization. The customers using Aruba mobility controllers can avail PEF features and services by obtaining a PEF license. PEF for VPN users—Customers with PEF for VPN license can apply firewall policies to the user traffic routed to a controller through a VPN tunnel.
PFS	Perfect Forward Secrecy. PFS refers to the condition in which a current session key or long-term private key does not compromise the past or subsequent keys.

PHB	Per-hop behavior. PHB is a term used in DS or MPLS. It defines the policy and priority applied to a packet when traversing a hop (such as a router) in a DiffServ network.
PIM	Protocol-Independent Multicast. PIM refers to a family of multicast routing protocols for IP networks that provide one-to-many and many-to-many distribution of data over a LAN, WAN, or the Internet.
PIN	Personal Identification Number. PIN is a numeric password used to authenticate a user to a system.
PKCS#n	Public-key cryptography standard n. PKCS#n refers to a numbered standard related to topics in cryptography, including private keys (PKCS#1), digital certificates (PKCS#7), certificate signing requests (PKCS#10), and secure storage of keys and certificates (PKCS#12).
PKI	Public Key Infrastructure. PKI is a security technology based on digital certificates and the assurances provided by strong cryptography. See also certificate authority, digital certificate, public key, private key.
PLMN	Public Land Mobile Network. PLMS is a network established and operated by an administration or by a Recognized Operating Agency for the specific purpose of providing land mobile telecommunications services to the public.
PMK	Pairwise Master Key. PMK is a shared secret key that is generated after PSK or 802.1X authentication.
PoE	Power over Ethernet. PoE is a technology for wired Ethernet LANs to carry electric power required for the device in the data cables. The IEEE 802.3af PoE standard provides up to 15.4 W of power on each port.
PoE+	Power over Ethernet+. PoE+ is an IEEE 802.3at standard that provides 25.5W power on each port.
POST	Power On Self Test. An HTTP request method that requests data from a specified resource.
PPP	Point-to-Point Protocol. PPP is a data link (layer 2) protocol used to establish a direct connection between two nodes. It can provide connection authentication, transmission encryption, and compression.
PPPoE	Point-to-Point Protocol over Ethernet. PPPoE is a method of connecting to the Internet, typically used with DSL services, where the client connects to the DSL modem.
PPTP	Point-to-Point Tunneling Protocol. PPTP is a method for implementing virtual private networks. It uses a control channel over TCP and a GRE tunnel operating to encapsulate PPP packets.
private key	The part of a public-private key pair that is always kept private. The private key encrypts the signature of a message to authenticate the sender. The private key also decrypts a message that was encrypted with the public key of the sender.
PRNG	Pseudo-Random Number Generator. PRNG is an algorithm for generating a sequence of numbers whose properties approximate the properties of sequences of random numbers.
PSK	Pre-shared key. A unique shared secret that was previously shared between two parties by using a secure channel. This is used with WPA security, which requires the owner of a network to provide a passphrase to users for network access.

PSU	Power Supply Unit. PSU is a unit that supplies power to an equipment by converting mains AC to low-voltage regulated DC power.
public key	The part of a public-private key pair that is made public. The public key encrypts a message and the message is decrypted with the private key of the recipient.
PVST	Per-VLAN Spanning Tree. PVST provides load balancing of VLANs across multiple ports resulting in optimal usage of network resources.
PVST+	Per-VLAN Spanning Tree+. PVST+ is an extension of the PVST standard that uses the 802.1Q trunking technology.
QoS	Quality of Service. It refers to the capability of a network to provide better service and performance to a specific network traffic over various technologies.
RA	Router Advertisement. The RA messages are sent by the routers in the network when the hosts send multicast router solicitation to the multicast address of all routers.
Radar	Radio Detection and Ranging. Radar is an object-detection system that uses radio waves to determine the range, angle, or velocity of objects.
RADIUS	Remote Authentication Dial-In User Service. An Industry-standard network access protocol for remote authentication. It allows authentication, authorization, and accounting of remote users who want to access network resources.
RAM	Random Access Memory.
RAPIDS	Rogue Access Point identification and Detection System. An AMP module that is designed to identify and locate wireless threats by making use of all of the information available from your existing infrastructure.
RARP	Reverse Address Resolution Protocol. RARP is a protocol used by a physical machine in a local area network for determining the IP address from the ARP table or cache of the gateway server.
Regex	Regular Expression. Regex refers to a sequence of symbols and characters defining a search pattern.
Registration Authority	Type of Certificate Authority that processes certificate requests. The Registration Authority verifies that requests are valid and comply with certificate policy, and authenticates the user's identity. The Registration Authority then forwards the request to the Certificate Authority to sign and issue the certificate.
Remote AP	Remote APs extend corporate network to the users working from home or at temporary work sites. Remote APs are deployed at branch office sites and are connected to the central network on a WAN link.
REST	Representational State Transfer. REST is a simple and stateless architecture that the web services use for providing interoperability between computer systems on the Internet. In a RESTful web service, requests made to the URI of a resource will elicit a response that may be in XML, HTML, JSON or some other defined format.
RF	Radio Frequency. RF refers to the electromagnetic wave frequencies within a range of 3 kHz to 300 GHz, including the frequencies used for communications or Radar signals.

RFC	Request For Comments. RFC is a commonly used format for the Internet standards documents.
RFID	Radio Frequency Identification. RFID uses radio waves to automatically identify and track the information stored on a tag attached to an object.
RIP	Routing Information Protocol. RIP prevents the routing loops by limiting the number of hops allowed in a path from source to destination.
RJ45	Registered Jack 45. RJ45 is a physical connector for network cables.
RMA	Return Merchandise Authorization. RMA is a part of the product returning process that authorizes users to return a product to the manufacturer or distributor for a refund, replacement, or repair. The customers who want to return a product within its Warranty period contact the manufacturer to initiate the product returning process. The manufacturer or the seller generates an authorization number for the RMA, which is used by the customers, when returning a product to the warehouse.
RMON	Remote Monitoring. RMON provides standard information that a network administrator can use to monitor, analyze, and troubleshoot a group of distributed LANs.
RoW	Rest of World. RoW or RW is an operating country code of a device.
RSA	Rivest, Shamir, Adleman. RSA is a cryptosystem for public-key encryption, and is widely used for securing sensitive data, particularly when being sent over an insecure network such as the Internet.
RSSI	Received Signal Strength Indicator. RSSI is a mechanism by which RF energy is measured by the circuitry on a wireless NIC (0-255). The RSSI is not standard across vendors. Each vendor determines its own RSSI scale/values.
RSTP	Rapid Spanning Tree Protocol. RSTP provides significantly faster spanning tree convergence after a topology change, introducing new convergence behaviors and bridge port roles to do this.
RTCP	RTP Control Protocol. RTCP provides out-of-band statistics and control information for an Real-Time Transport Protocol session.
RTLS	Real-Time Location Systems. RTLS automatically identifies and tracks the location of objects or people in real time, usually within a building or other contained area.
RTP	Real-Time Transport Protocol. RTP is a network protocol used for delivering audio and video over IP networks.
RTS	Request to Send. RTS refers to the data transmission and protection mechanism used by the 802.11 wireless networking protocol to prevent frame collision occurrences. See CTS.
RTSP	Real Time Streaming Protocol. RTSP is a network control protocol designed for use in entertainment and communications systems to control streaming media servers.
RVI	Routed VLAN Interface. RVI is a switch interface that forwards packets between VLANs.
RW	Rest of World. RoW or RW is an operating country code of a device.
SA	Security Association. SA is the establishment of shared security attributes between two network entities to support secure communication.

SAML	Security Assertion Markup Language. SAML is an XML-based framework for communicating user authentication, entitlement, and attribute information. SAML enables single sign-on by allowing users to authenticate at an identity provider and then access service providers without additional authentication.
SCEP	Simple Certificate Enrollment Protocol. SCEP is a protocol for requesting and managing digital certificates.
SCP	Secure Copy Protocol. SCP is a network protocol that supports file transfers between hosts on a network.
SCSI	Small Computer System Interface. SCSI refers to a set of interface standards for physical connection and data transfer between a computer and the peripheral devices such as printers, disk drives, CD-ROM, and so on.
SDN	Software-Defined Networking. SDN is an umbrella term encompassing several kinds of network technology aimed at making the network as agile and flexible as the virtualized server and storage infrastructure of the modern data center.
SDR	Server Derivation Rule. An SDR refers to a role assignment model used by the controllers running ArubaOS to assign roles and VLANs to the WLAN users based on the rules defined under a server group. The SDRs override the default authentication roles and VLANs defined in the AAA and Virtual AP profiles.
SDU	Service Data Unit. SDU is a unit of data that has been passed down from an OSI layer to a lower layer and that has not yet been encapsulated into a PDU by the lower layer.
SD-WAN	Software-Defined Wide Area Network. SD-WAN is an application for applying SDN technology to WAN connections that connect enterprise networks across disparate geographical locations.
SFP	The Small Form-factor Pluggable. SFP is a compact, hot-pluggable transceiver that is used for both telecommunication and data communications applications.
SFP+	Small Form-factor Pluggable+. SFP+ supports up to data rates up to 16 Gbps.
SFTP	Secure File Transfer Protocol. SFTP is a network protocol that allows file access, file transfer, and file management functions over a secure connection.
SHA	Secure Hash Algorithm. SHA is a family of cryptographic hash functions. The SHA algorithm includes the SHA, SHA-1, SHA-2 and SHA-3 variants.
SIM	Subscriber Identity Module. SIM is an integrated circuit that is intended to securely store the International Mobile Subscriber Identity (IMSI) number and its related key, which are used for identifying and authenticating subscribers on mobile telephony devices.
SIP	Session Initiation Protocol. SIP is used for signaling and controlling multimedia communication session such as voice and video calls.
SIRT	Security Incident Response Team. SIRT is responsible for reviewing as well as responding to computer security incident reports and activity.
SKU	Stock Keeping Unit. SKU refers to the product and service identification code for the products in the inventory.

SLAAC	Stateless Address Autoconfiguration. SLAAC provides the ability to address a host based on a network prefix that is advertised from a local network router through router advertisements.
SMB	Server Message Block or Small and Medium Business. Server Message Block operates as an application- layer network protocol mainly used for providing shared access to files, printers, serial ports, and for miscellaneous communications between the nodes on a network.
SMS	Short Message Service. SMS refers to short text messages (up to 140 characters) sent and received through mobile phones.
SMTP	Simple Mail Transfer Protocol. SMTP is an Internet standard protocol for electronic mail transmission.
SNIR	Signal-to-Noise-Plus-Interference Ratio. SNIR refers to the power of a central signal of interest divided by the sum of the interference power and the power of the background noise. SINR is defined as the power of a certain signal of interest divided by the sum of the interference power (from all the other interfering signals) and the power of some background noise.
SNMP	Simple Network Management Protocol. SNMP is a TCP/IP standard protocol for managing devices on IP networks. Devices that typically support SNMP include routers, switches, servers, workstations, printers, modem racks, and more. It is used mostly in network management systems to monitor network-attached devices for conditions that warrant administrative attention.
SNMPv1	Simple Network Management Protocol version 1. SNMPv1 is a widely used network management protocol.
SNMPv2	Simple Network Management Protocol version 2. SNMPv2 is an enhanced version of SNMPv1, which includes improvements in the areas of performance, security, confidentiality, and manager-to-manager communications.
SNMPv2c	Community-Based Simple Network Management Protocol version 2. SNMPv2C uses the community-based security scheme of SNMPv1 and does not include the SNMPv2 security model.
SNMPv3	Simple Network Management Protocol version 3. SNMPv3 is an enhanced version of SNMP that includes security and remote configuration features.
SNR	Signal-to-Noise Ratio. SNR is used for comparing the level of a desired signal with the level of background noise.
SNTP	Simple Network Time Protocol. SNTP is a less complex implementation of NTP. It uses the same , but does not require the storage of state over extended periods of time.
SOAP	Simple Object Access Protocol. SOAP enables communication between the applications running on different operating systems, with different technologies and programming languages. SOAP is an XML-based messaging protocol for exchanging structured information between the systems that support web services.
SoC	System on a Chip. SoC is an Integrated Circuit that integrates all components of a computer or other electronic system into a single chip.
source NAT	Source NAT changes the source address of the packets passing through the router. Source NAT is typically used when an internal (private) host initiates a session to an external (public) host.

SSH	Secure Shell. SSH is a network protocol that provides secure access to a remote device.
SSID	Service Set Identifier. SSID is a name given to a WLAN and is used by the client to access a WLA network.
SSL	Secure Sockets Layer. SSL is a computer networking protocol for securing connections between network application clients and servers over the Internet.
SSO	Single Sign-On. SSO is an access-control property that allows the users to log in once to access multiple related, but independent applications or systems to which they have privileges. The process authenticates the user across all allowed resources during their session, eliminating additional login prompts.
STBC	Space-Time Block Coding. STBC is a technique used in wireless communications to transmit multiple copies of a data stream across a number of antennas and to exploit the various received versions of the data to improve the reliability of data transfer.
STM	Station Management. STM is a process that handles AP management and user association.
STP	Spanning Tree Protocol. STP is a network protocol that builds a logical loop-free topology for Ethernet networks.
subnet	Subnet is the logical division of an IP network.
subscription	A business model where a customer pays a certain amount as subscription price to obtain access to a product or service.
SU-MIMO	Single-User Multiple-Input Multiple-Output. SU-MIMO allocates the full bandwidth of the AP to a single high- speed device during the allotted time slice.
SVP	SpectraLink Voice Priority. SVP is an open, straightforward QoS approach that has been adopted by most leading vendors of WLAN APs. SVP favors isochronous voice packets over asynchronous data packets when contending for the wireless medium and when transmitting packets onto the wired LAN.
SWAN	Structured Wireless-Aware Network. A technology that incorporates a Wireless Local Area Network (WLAN) into a wired Wide Area Network (WAN). SWAN technology can enable an existing wired network to serve hundreds of users, organizations, corporations, or agencies over a large geographic area. SWAN is said to be scalable, secure, and reliable.
TAC	Technical Assistance Center.
TACACS	Terminal Access Controller Access Control System. TACACS is a family of protocols that handles remote authentication and related services for network access control through a centralized server.
TACACS+	Terminal Access Controller Access Control System+. TACACS+ provides separate authentication, authorization, and accounting services. It is derived from, but not backward compatible with, TACACS.
TCP	Transmission Control Protocol. TCP is a communication protocol that defines the standards for establishing and maintaining network connection for applications to exchange data.
TCP/IP	Transmission Control Protocol/ Internet Protocol. TCP/IP is the basic communication language or protocol of the Internet.

TFTP	Trivial File Transfer Protocol. The TFTP is a software utility for transferring files from or to a remote host.
TIM	Traffic Indication Map. TIM is an information element that advertises if any associated stations have buffered unicast frames. APs periodically send the TIM within a beacon to identify the stations that are using power saving mode and the stations that have undelivered data buffered on the AP.
TKIP	Temporal Key Integrity Protocol. A part of the WPA encryption standard for wireless networks. TKIP is the next- generation Wired Equivalent Privacy (WEP) that provides per-packet key mixing to address the flaws encountered in the WEP standard.
TLS	Transport Layer Security. TLS is a cryptographic protocol that provides communication security over the Internet. TLS encrypts the segments of network connections above the Transport Layer by using asymmetric cryptography for key exchange, symmetric encryption for privacy, and message authentication codes for message integrity.
TLV	Type-length-value or Tag-Length-Value. TLV is an encoding format. It refers to the type of data being processed, the length of the value, and the value for the type of data being processed.
ToS	Type of Service. The ToS field is part of the IPv4 header, which specifies datagrams priority and requests a route for low-delay, high-throughput, or a highly reliable service.
TPC	Transmit Power Control. TPC is a part of the 802.11h amendment. It is used to regulate the power levels used by 802.11a radio cards.
TPM	Trusted Platform Module. TPM is an international standard for a secure cryptoprocessor, which is a dedicated microcontroller designed to secure hardware by integrating cryptographic keys into devices.
TSF	Timing Synchronization Function. TSF is a WLAN function that is used for synchronizing the timers for all the stations in a BSS.
TSPEC	Traffic Specification. TSPEC allows an 802.11e client or a QoS-capable wireless client to signal its traffic requirements to the AP.
TSV	Tab-Separated Values. TSV is a file format that allows the exchange of tabular data between applications that use different internal data formats.
TTL	Time to Live. TTL or hop limit is a mechanism that sets limits for data expiry in a computer or network.
TTY	TeleTypeWriter. TTY-enabled devices allow telephones to transmit text communications for people who are deaf or hard of hearing as well as transmit voice communication.
TXOP	Transmission Opportunity. TXOP is used in wireless networks supporting the IEEE 802.11e Quality of Service (QoS) standard. Used in both EDCA and HCF Controlled Channel Access modes of operation, TXOP is a bounded time interval in which stations supporting QoS are permitted to transfer a series of frames. TXOP is defined by a start time and a maximum duration.
UAM	Universal Access Method. UAM allows subscribers to access a wireless network after they successfully log in from a web browser.
U-APSD	Unscheduled Automatic Power Save Delivery. U-APSD is a part of 802.11e and helps considerably in increasing the battery life of VoWLAN terminals.

UCC	Unified Communications and Collaboration. UCC is a term used to describe the integration of various communications methods with collaboration tools such as virtual whiteboards, real-time audio and video conferencing, and enhanced call control capabilities.
UDID	Unique Device Identifier. UDID is used to identify an iOS device.
UDP	User Datagram Protocol. UDP is a part of the TCP/IP family of protocols used for data transfer. UDP is typically used for streaming media. UDP is a stateless protocol, which means it does not acknowledge that the packets being sent have been received.
UDR	User Derivation Rule. UDR is a role assignment model used by the controllers running ArubaOS to assign roles and VLANs to the WLAN users based on MAC address, BSSID, DHCP-Option, encryption type, SSID, and the location of a user. For example, for an SSID with captive portal in the initial role, a UDR can be configured for scanners to provide a role based on their MAC OUI.
UHF	Ultra high frequency. UHF refers to radio frequencies between the range of 300 MHz and 3 GHz. UHF is also known as the decimeter band as the wavelengths range from one meter to one decimeter.
UI	User Interface.
UMTS	Universal Mobile Telecommunication System. UMTS is a third generation mobile cellular system for networks. See 3G.
UPnP	Universal Plug and Play. UPnP is a set of networking protocols that permits networked devices, such as personal computers, printers, Internet gateways, Wi-Fi APs, and mobile devices to seamlessly discover each other's presence on the network and establish functional network services for data sharing, communications, and entertainment.
URI	Uniform Resource Identifier. URI identifies the name and the location of a resource in a uniform format.
URL	Uniform Resource Locator. URL is a global address used for locating web resources on the Internet.
USB	Universal Serial Bus. USB is a connection standard that offers a common interface for communication between the external devices and a computer. USB is the most common port used in the client devices.
UTC	Coordinated Universal Time. UTC is the primary time standard by which the world regulates clocks and time.
UWB	Ultra-Wideband. UWB is a wireless technology for transmitting large amounts of digital data over a wide spectrum of frequency bands with very low power for a short distance.
VA	Virtual Appliance. VA is a pre-configured virtual machine image, ready to run on a hypervisor.
VBR	Virtual Beacon Report. VBR displays a report with the MAC address details and RSSI information of an AP.
VHT	Very High Throughput. IEEE 802.11ac is an emerging VHT WLAN standard that could achieve physical data rates of close to 7 Gbps for the 5 GHz band.

VIA	Virtual Intranet Access. VIA provides secure remote network connectivity for Android, Apple iOS, Mac OS X, and Windows mobile devices and laptops. It automatically scans and selects the best secure connection to the corporate network.
VLAN	Virtual Local Area Network. In computer networking, a single Layer 2 network may be partitioned to create multiple distinct broadcast domains, which are mutually isolated so that packets can only pass between them through one or more routers; such a domain is referred to as a Virtual Local Area Network, Virtual LAN, or VLAN.
VM	Virtual Machine. A VM is an emulation of a computer system. VMs are based on computer architectures and provide functionality of a physical computer.
VoIP	Voice over IP. VoIP allows transmission of voice and multimedia content over an IP network.
VoWLAN	Voice over WLAN. VoWLAN is a method of routing telephone calls for mobile users over the Internet using the technology specified in IEEE 802.11b. Routing mobile calls over the Internet makes them free, or at least much less expensive than they would be otherwise.
VPN	Virtual Private Network. VPN enables secure access to a corporate network when located remotely. It enables a computer to send and receive data across shared or public networks as if it were directly connected to the private network, while benefiting from the functionality, security, and management policies of the private network. This is done by establishing a virtual point-to-point connection through the use of dedicated connections, encryption, or a combination of the two.
VRD	Validated Reference Design. VRDs are guides that capture the best practices for a particular technology in field.
VRF	VisualRF. VRF is an AirWave Management Platform (AMP) module that provides a real-time, network-wide views of your entire Radio Frequency environment along with floor plan editing capabilities. VRF also includes overlays on client health to help diagnose issues related to clients, floor plan, or a specific location.
VRF Plan	VisualRF Plan. A stand-alone Windows client used for basic planning procedures such as adding a floor plan, provisioning APs, and generating a Bill of Materials report.
VRRP	Virtual Router Redundancy Protocol. VRRP is an election protocol that dynamically assigns responsibility for a virtual router to one of the VRRP routers on a LAN.
VSA	Vendor-Specific Attribute. VSA is a method for communicating vendor-specific information between NASs and RADIUS servers.
VTP	VLAN Trunking Protocol. VTP is a Cisco proprietary protocol for propagating VLANs on a LAN.
walled garden	Walled garden is a feature that allows blocking of unauthorized users from accessing network resources.
WAN	Wide Area Network. WAN is a telecommunications network or computer network that extends over a large geographical distance.

WASP	Wireless Application Service Provider. WASP provides a web-based access to applications and services that would otherwise have to be stored locally and makes it possible for customers to access the service from a variety of wireless devices, such as a smartphone or Personal Digital Assistant (PDA).
WAX	Wireless abstract XML. WAX is an abstract markup language and a set of tools that is designed to help wireless application development as well as portability. Its tags perform at a higher level of abstraction than that of other wireless markup languages such as HTML, HDML, WML, XSL, and more.
W-CDMA	Wideband Code-Division Multiple Access. W-CDMA is a third-generation (3G) mobile wireless technology that promises much higher data speeds to mobile and portable wireless devices.
web service	Web services allow businesses to share and process data programmatically. Developers who want to provide integrated applications can use the API to programmatically perform actions that would otherwise require manual operation of the user interface.
WEP	Wired Equivalent Privacy. WEP is a security protocol that is specified in 802.11b and is designed to provide a WLAN with a level of security and privacy comparable to what is usually expected of a wired LAN.
WFA	Wi-Fi Alliance. WFA is a non-profit organization that promotes Wi-Fi technology and certifies Wi-Fi products if they conform to certain standards of interoperability.
WIDS	Wireless Intrusion Detection System. WIDS is an application that detects the attacks on a wireless network or wireless system.
Wi-Fi	Wi-Fi is a technology that allows electronic devices to connect to a WLA network, mainly using the 2.4 GHz and 5 GHz radio bands. Wi-Fi can apply to products that use any 802.11 standard.
WiMAX	Worldwide Interoperability for Microwave Access. WiMAX refers to the implementation of IEEE 802.16 family of wireless networks standards set by the WiMAX forum.
WIP	Wireless Intrusion Protection. The WIP module provides wired and wireless AP detection, classification, and containment. It detects Denial of Service (DoS) and impersonation attacks, and prevents client and network intrusions.
WIPS	Wireless Intrusion Prevention System. WIPS is a dedicated security device or integrated software application that monitors the radio spectrum of WLA network for rogue APs and other wireless threats.
WISP	Wireless Internet Service Provider. WISP allows subscribers to connect to a server at designated hotspots using a wireless connection such as Wi-Fi. This type of ISP offers broadband service and allows subscriber computers called stations, to access the Internet and the web from anywhere within the zone of coverage provided by the server antenna, usually a region with a radius of several kilometers.
WISPr	Wireless Internet Service Provider Roaming. The WISPr framework enables the client devices to roam between the wireless hotspots using different ISPs.
WLAN	Wireless Local Area Network. WLAN is a 802.11 standards-based LAN that the users access through a wireless connection.

WME	Wireless Multimedia Extension. WME is a Wi-Fi Alliance interoperability certification, based on the IEEE 802.11e standard. It provides basic QoS features to IEEE 802.11 networks. WMM prioritizes traffic according to four ACs: voice (AC_VO), video (AC_VI), best effort (AC_BE) and background (AC_BK). See WMM.
WMI	Windows Management Instrumentation. WMI consists of a set of extensions to the Windows Driver Model that provides an operating system interface through which instrumented components provide information and notification.
WMM	Wi-Fi Multimedia. WMM is also known as WME. It refers to a Wi-Fi Alliance interoperability certification, based on the IEEE 802.11e standard. It provides basic QoS features to IEEE 802.11 networks. WMM prioritizes traffic according to four ACs: voice (AC_VO), video (AC_VI), best effort (AC_BE), and background (AC_BK).
WPA	Wi-Fi Protected Access. WPA is an interoperable wireless security specification subset of the IEEE 802.11 standard. This standard provides authentication capabilities and uses TKIP for data encryption.
WPA2	Wi-Fi Protected Access 2. WPA2 is a certification program maintained by IEEE that oversees standards for security over wireless networks. WPA2 supports IEEE 802.1X/EAP authentication or PSK technology, but includes advanced encryption mechanism using CCMP that is referred to as AES.
WSDL	Web Service Description Language. WSDL is an XML-based interface definition language used to describe the functionality provided by a web service.
WSP	Wireless Service Provider. The service provider company that offers transmission services to users of wireless devices through Radio Frequency (RF) signals rather than through end-to-end wire communication.
WWW	World Wide Web.
X.509	X.509 is a standard for a public key infrastructure for managing digital certificates and public-key encryption. It is an essential part of the Transport Layer Security protocol used to secure web and email communication.
XAuth	Extended Authentication. XAuth provides a mechanism for requesting individual authentication information from the user, and a local user database or an external authentication server. It provides a method for storing the authentication information centrally in the local network.
XML	Extensible Markup Language. XML is a markup language that defines a set of rules for encoding documents in a format that is both human-readable and machine-readable.
XML-RPC	XML Remote Procedure Call. XML-RPC is a protocol that uses XML to encode its calls and HTTP as a transport mechanism. Developers who want to provide integrated applications can use the API to programmatically perform actions that would otherwise require manual operation of the user interface.
ZTP	Zero Touch Provisioning. ZTP is a device provisioning mechanism that allows automatic and quick provisioning of devices with a minimal or at times no manual intervention.

Index

A

- aaa dns-query-interval, 31
- aaa radius modifier, 33
- aaa radius-attributes, 32
- aaa test-server, 30
- a-ant-pol, 35
- a-channel, 29
- aeroscout-rtls, 34
- airgroup, 36
- airgroupservice, 38
- airwave-rtls, 40
- ale-report-interval, 41
- ale-server, 42
- alg, 43
- allowed-ap, 45
- allow-new-aps, 44
- a-max-clients, 46
- ams-backup-ip, 47
- ams-identity, 48
- ams-ip, 49
- ams-key, 50
- ap1x, 51
- ap1x-peap-user, 54
- ap-frequent-scan, 52
- ap-installation, 53
- apply, 55
- arm, 56
- attack, 63
- auth-failure-blacklist-time, 64
- auth-survivability cache-time-out, 65

B

- banner, 66
- blacklist-client, 67
- blacklist-time, 68
- ble, 69

C

- calea, 71
- cellular-uplink-profile, 72
- clarity, 75
- clear, 77
- clear airgroup state statistics, 76

- clear-cert, 78
- clock set, 79
- clock summer-time, 82
- clock timezone, 84
- cluster-security, 80
- cluster-security logging, 81
- commit, 85
- configure terminal, 86
- console, 87
- content-filtering, 88
- convert-aos-ap, 89
- copy, 90
- custom_var, 92

D

- deny-inter-user-bridging, 93
- deny-local-routing, 94
- device-id, 95
- disable-prov-ssid, 96
- disconnect-user, 97
- dot-11a-radio-disable, 98
- dot-11g-radio-disable, 99
- download-cert, 100
- dpi, 102
- dpi-error-page-url, 103
- dynamic-cpu-mgmt, 104
- dynamic-dns, 105
- dynamic-dns-ap, 107
- dynamic-dns-interval, 108
- dynamic-radius-proxy, 109
- dynamic-tacacs-proxy, 110

E

- enet0-bridging, 112
- enet0-port-profile, 113
- enet1-port-profile, 114
- enet2-port-profile, 115
- enet3-port-profile, 116
- enet4-port-profile, 117
- enet-vlan, 111
- extended-ssid, 118

F

- facebook, 119

factory-ssid-enable, 120
firewall, 121
firewall-external-enforcement, 122

G

g-ant-pol, 125
g-channel, 124
Glossary, 735
g-max-clients, 126
gre per-ap-tunnel, 127
gre primary, 128
gre type, 129

H

hash-mgmt-password, 130
hash-mgmt-user, 131
help, 132
hostname, 134
hotspot anqp-3gpp-profile, 135
hotspot anqp-domain-name-profile, 136
hotspot anqp-ip-addr-avail-profile, 137
hotspot anqp-nai-realm-profile, 139
hotspot anqp-nwk-auth-profile, 142
hotspot anqp-roam-cons-profile, 144
hotspot anqp-venue-name-profile, 146
hotspot h2qp-conn-cap-profile, 150
hotspot h2qp-oper-class-profile, 153
hotspot h2qp-oper-name-profile, 152, 154
hotspot h2qp-wan-metrics-profile, 158
hotspot hs-profile, 160
hs2-osu-icon-delete, 172
hs2-osu-icon-download, 173

I

iap-master, 174
ids, 175
ignore-image-check, 183
inactivity-ap-timeout, 184
inbound-firewall, 185
internal-domains, 188
iot transportProfile, 189
iot usetransportProfile, 191
ip dhcp, 193
ip dhcp pool, 200
ip radius, 204
ip-address, 192
ipm, 203
ip-mode, 202

L

l3-mobility, 205
lACP-mode, 207
led-off, 208
login-session, 209
logout, 210

M

managed-mode-profile, 213
managed-mode-sync-server, 215
mas-integration, 211
mesh, 215
mgmt-accounting, 217
mgmt-auth-server, 218
mgmt-auth-server-load-balancing, 219
mgmt-auth-server-local-backup, 220
mgmt-user, 221
mtu, 222

N

name, 223
ntp-server, 224

O

opens, 225
openflow-server, 226
organization, 227
out-of-service-hold-on-time, 228

P

pcap, 229
per-ap-ssid, 230
per-ap-vlan, 231
pin-enable, 232
ping, 234
pin-puk, 233
pin-renew, 234
ppoe-uplink-profile, 235
proxy, 236

R

radius-vsa-redirect-url, 238
reload, 239
remove-blacklist-client, 240

reset drt, 241
 restrict-corp-access, 242
 restrict-mgmt-access, 243
 rf dot11a-radio-profile, 244
 rf dot11g-radio-profile, 248
 rf-band, 253
 rf-zone, 254
 routing-profile, 255

S

show 1xcert, 257
 show aaa dns-query-interval, 258
 show aaa fqdn-server-names, 259
 show about, 260
 show access-rule, 261
 show acl, 265
 show airgroup, 266
 show airgroupservice, 277
 show airgroup-service-ids, 280
 show ale, 281
 show ale stats, 282
 show alert global, 283
 show alg, 285
 show all monitor, 287
 show allowed-aps, 286
 show a-max-clients, 288
 show amp-audit, 289
 show ap allowed-channels, 301
 show ap allowed-max-EIRP, 302
 show ap arm, 303
 show ap association, 311
 show ap bss-table, 314
 show ap cacert, 316
 show ap client-match-history, 318
 show ap client-match-live, 319
 show ap client-match-refused, 321
 show ap client-match-ssid-table radio-mac, 324
 show ap client-match-triggers, 325
 show ap client-probe-report, 320
 show ap client-view, 326
 show ap debug airwave, 328
 show ap debug airwave-config-received, 339
 show ap debug airwave-data-sent, 340
 show ap debug airwave-events-pending, 340
 show ap debug airwave-restore-status, 341
 show ap debug airwave-signon-key, 342
 show ap debug airwave-state, 343
 show ap debug airwave-stats, 346
 show ap debug am-config, 347
 show ap debug auth-trace-buf, 350
 show ap debug ble-config, 351
 show ap debug ble-connect, 353
 show ap debug ble-daemon, 353
 show ap debug ble-relay, 354
 show ap debug ble-table, 357
 show ap debug ble-table assettags, 359
 show ap debug client-frame-history, 366
 show ap debug client-match, 360
 show ap debug client-stats, 361
 show ap debug client-table, 364
 show ap debug crash-info, 367
 show ap debug dhcp-packets, 368
 show ap debug dot1x-statistics, 369
 show ap debug driver-config, 370
 show ap debug lldp counters, 375
 show ap debug lldp neighbor, 375
 show ap debug lldp state, 377
 show ap debug mgmt-frames, 377
 show ap debug persistent-clients, 379
 show ap debug power-table, 380
 show ap debug radio-stats, 381
 show ap debug radius-statistics, 384
 show ap debug rfc3576-radius-statistics, 385
 show ap debug shaping-table, 387
 show ap debug spanning-tree, 389
 show ap debug stm-config, 389
 show ap debug stm-role, 391
 show ap debug system-status, 392
 show ap debug tacacs-statistics, 392
 show ap dot11k-beacon-report, 394
 show ap dot11k-nbrs, 395
 show ap flash-config, 396
 show ap mesh counter, 397
 show ap mesh link, 399
 show ap mesh neighbors, 401
 show ap monitor, 403
 show ap pmkcache, 416
 show ap virtual-beacon-report, 417
 show ap1x, 297
 show ap1xcert, 298
 show ap-alert, 295
 show ap-env, 296
 show app-services, 419
 show aps, 298
 show arm config, 424
 show arm-channels, 422
 show arp, 426
 show attack, 428
 show audit-trail, 421
 show auth-survivability, 429
 show backup-config, 431
 show banner, 433
 show blacklist-client, 434

show ble-config, 435
show calea config, 437
show calea statistics, 438
show captive-portal, 439
show captive-portal-domains, 441
show cellular, 442
show cert all, 445
show clarity config, 446
show clarity history, 447
show clients, 450
show clock, 454
show cluster-security, 456
show config-status, 468
show configuration, 462
show console-settings, 470
show country-codes, 471
show cpcert, 475
show cpu, 475
show datapath, 477
show ddns, 499
show delta-config, 500
show derivation-rules, 501
show dhcp subnets, 506
show dhcp-allocation, 502
show dhcpc-opts, 503
show dhcps config, 503
show distributed-dhcp-branch-counts, 507
show domain-names, 508
show dpi, 509
show dpi-error-page-url, 515
show dpi-stats, 516
show drt state, 520
show election, 521
show external-captive-portal, 523
show facebook, 524
show fault, 524
show firewall, 526
show g-max-clients, 526
show ids, 527
show ids-detection config, 530
show ids-protection config, 531
show image, 533
show inbound-firewall-rules, 534
show interface counters, 535
show iot transportProfile, 536
show ip dhcp database, 538
show ip igmp group, 539
show ip interface brief, 540
show ip route, 542
show ipv6 interface, 543
show ipv6 route, 544
show l3-mobility, 546
show lacp status, 545
show lhm, 552
show log ap-debug, 553
show log apifmgr, 553
show log convert, 554
show log debug, 555
show log driver, 556
show log kernel, 557
show log l3-mobility, 557
show log network, 559
show log openflow, 555
show log papi-handler, 556
show log pppd, 559
show log rapper, 560
show log rapper-brief, 560
show log rapper-counter, 561
show log sapd, 562
show log security, 563
show log system, 564
show log upgrade, 564
show log user, 565
show log user-debug, 565
show log vpn-tunnel, 566
show log vpn-tunnel-backup, 568
show log vpn-tunnel-primary, 567
show log wireless, 569
show memory, 569
show mgmt-user, 571
show network, 572
show network-summary, 574
show opendns, 575
show out-of-service, 576
show port status, 576
show pppoe, 577
show process, 578
show proxy config, 580
show radio config, 581
show radio profile, 583
show radius status, 587
show radius-redirect-url, 585
show radius-servers, 551
show radius-servers support, 585
show radseccert, 589
show running-config, 590
show snmp trap-queue, 596
show snmp-configuration, 594
show spectrum-alert, 597
show speed-test, 598
show stats, 599
show subscription-aps, 608
show summary, 609
show supported-cert-formats, 610

show swarm, 609
show syslog-level, 611
show tacacs-servers, 612
show tech-support, 614
show time-profile, 614
show time-range, 615
show tspec-calls, 616
show uncommitted-config, 617
show upgrade info, 618
show uplink, 619
show uplink-vlan, 621
show url-visibility, 622
show usb status, 624
show users, 625
show valid-channels, 627
show version, 629
show vpn, 629
show vpn tunnels, 632
show walled-garden, 633
show wifi-uplink, 634
show wired-port, 636
show wired-port-settings, 638
show wispr config, 640
show xml-api-server config, 641
show-access-rule-all, 263
snmp-server, 642
speed test, 643
spped test <server>, 645
subscription-ap, 646
subscription-ap-enable, 647
swarm-mode, 647
syslocation, 648
syslog-level, 649
syslog-server, 651

T

telnet, 652
telnet-server, 653
terminal-access, 654
tftp-dump-server, 655
time-range, 655
traceroute, 657

U

upgrade-drt, 658
upgrade-image", 659
uplink, 660
uplink-vlan, 664
url-visibility, 665

usb-port-disable, 666
user, 667

V

version, 668
virtual-controller-country, 669
vpn backup, 670
vpn fast-failover, 671
vpn gre-outside, 672
vpn hold-time, 672
vpn ikepsk, 674
vpn monitor-pkt-lost-cnt, 674
vpn monitor-pkt-send-freq, 675
vpn preemption, 676
vpn primary, 677
vpn reconnect-time-on-failover, 678
vpn reconnect-user-on-failover, 679

W

web-server, 680
wifi0-mode, 681
wifi1-mode, 682
wired-port-profile, 683
wlan access-rule, 689
wlan auth-server, 694
wlan captive-portal, 697
wlan external-captive-portal, 699
wlan ldap-server, 701
wlan ssid-profile, 704
wlan sta-profile, 725
wlan tacacs-server, 726
wlan walled-garden, 727
wlan wispr-rprofile, 729
write, 731

X

xml-api-serer, 732

Z

zonename, 734

