


1. Photographs of Conducted Emissions Test Configuration - TX

Mode 1

Front view



Side view

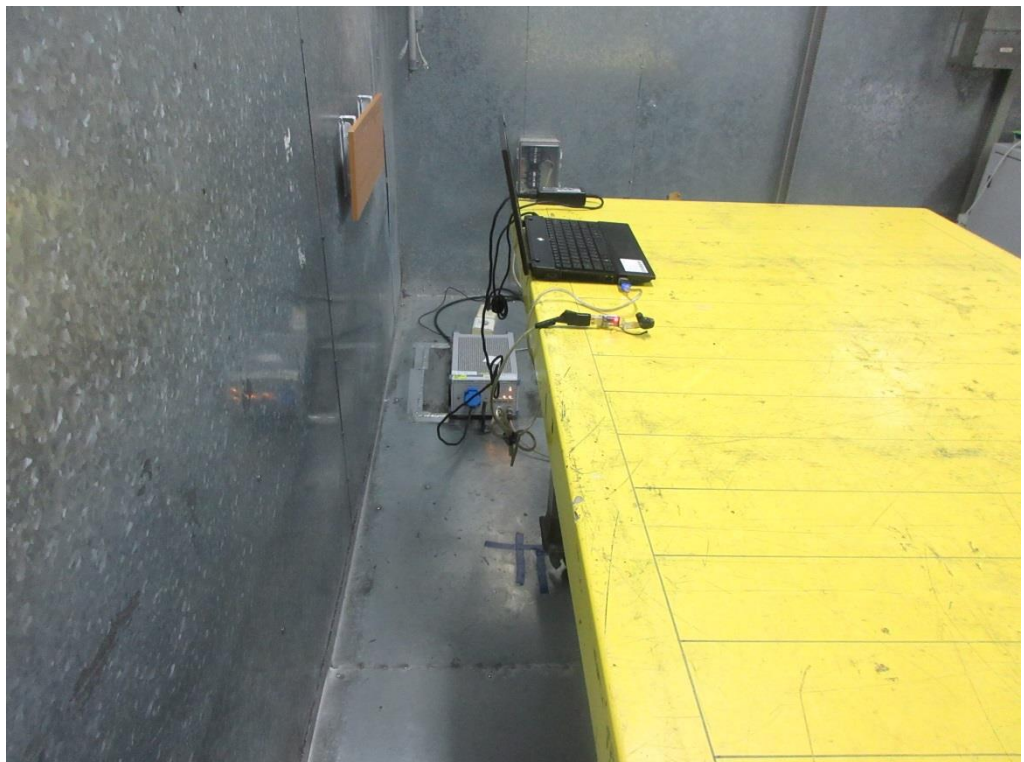

Under table view




2. Photographs of Conducted Emissions Test Configuration - RX

Mode 2

Front view



Side view

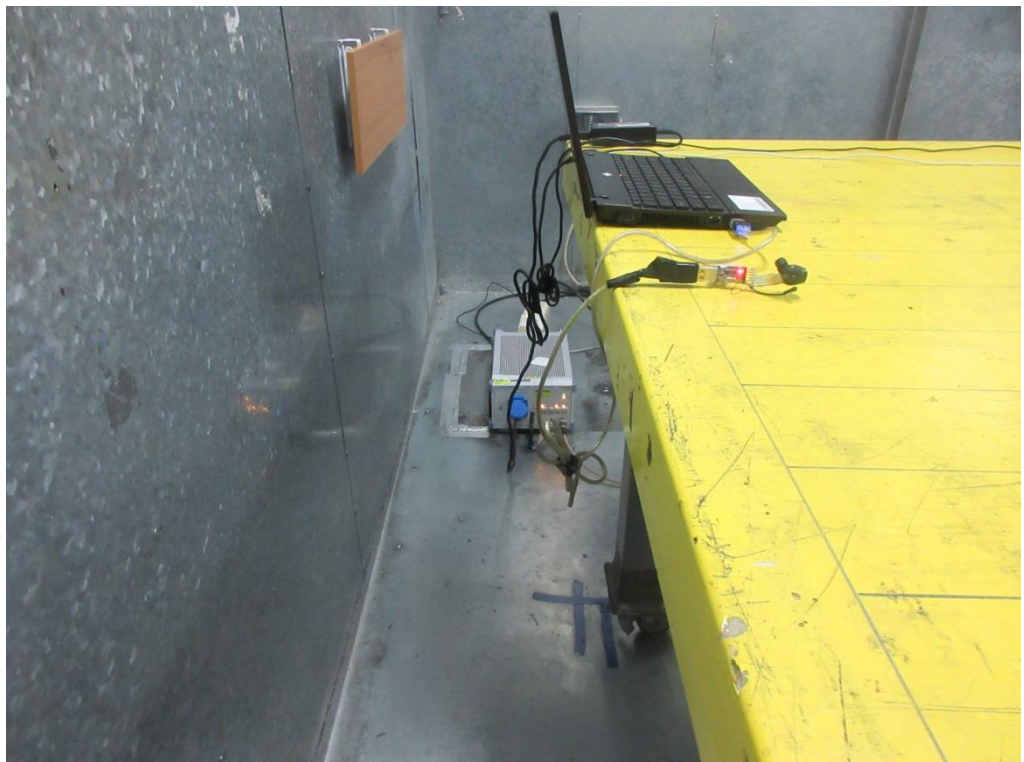

Under table view




3. Photographs of Conducted Emissions Test Configuration -Charging Mode 3

Front view



Side view

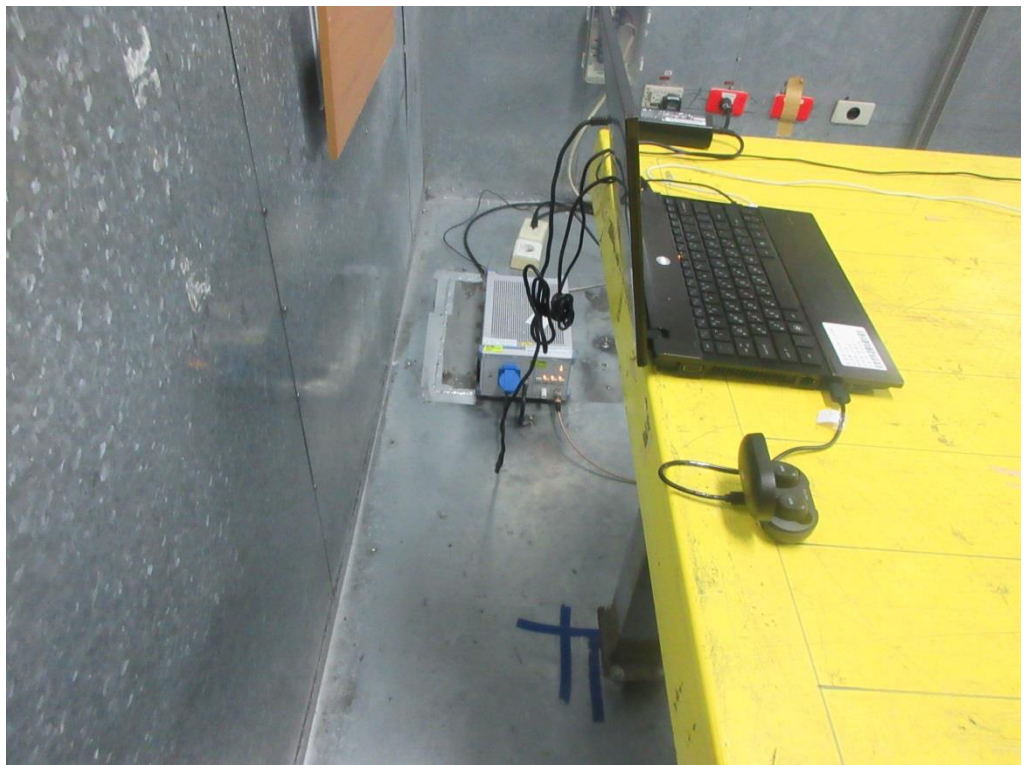

Under table view




Mode 4

Front view



Side view

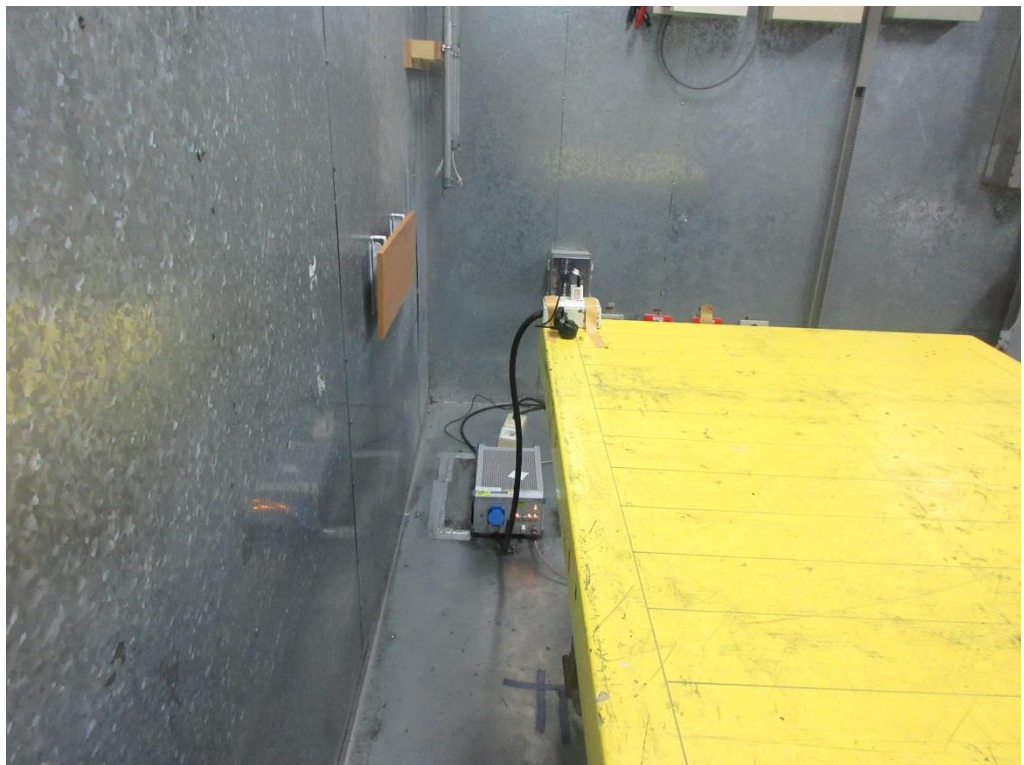

Under table view




4. Photographs of Radiated Emissions Test Configuration - TX


For radiated emissions 30MHz~1GHz

Mode 1

Front view

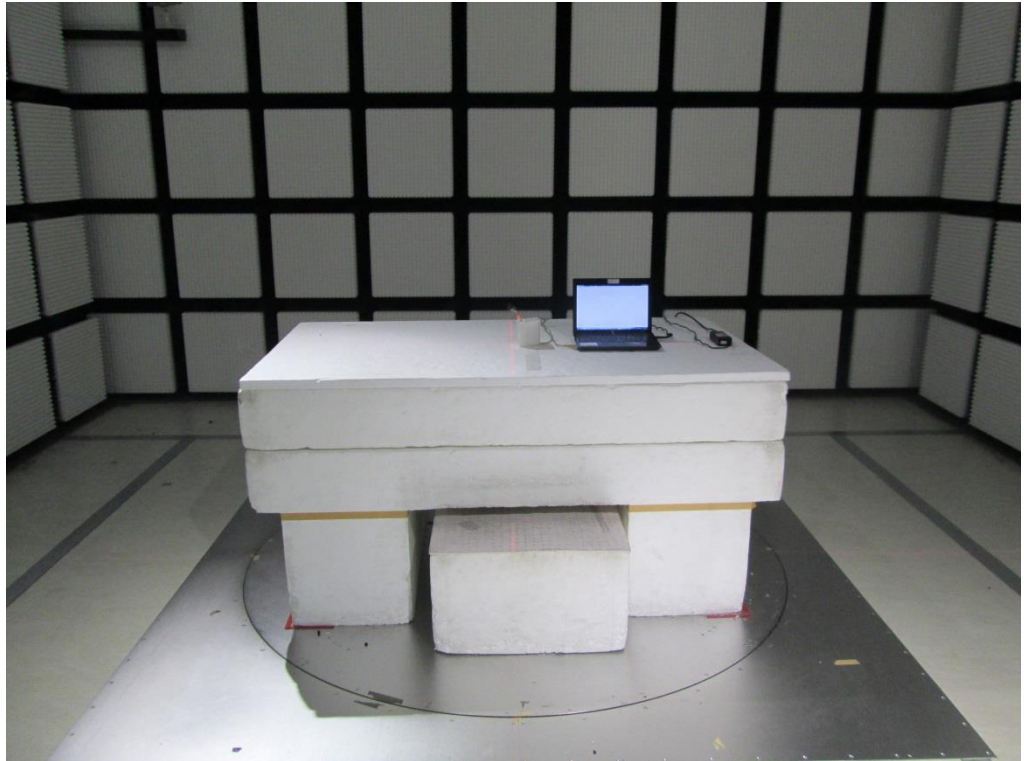


Rear view

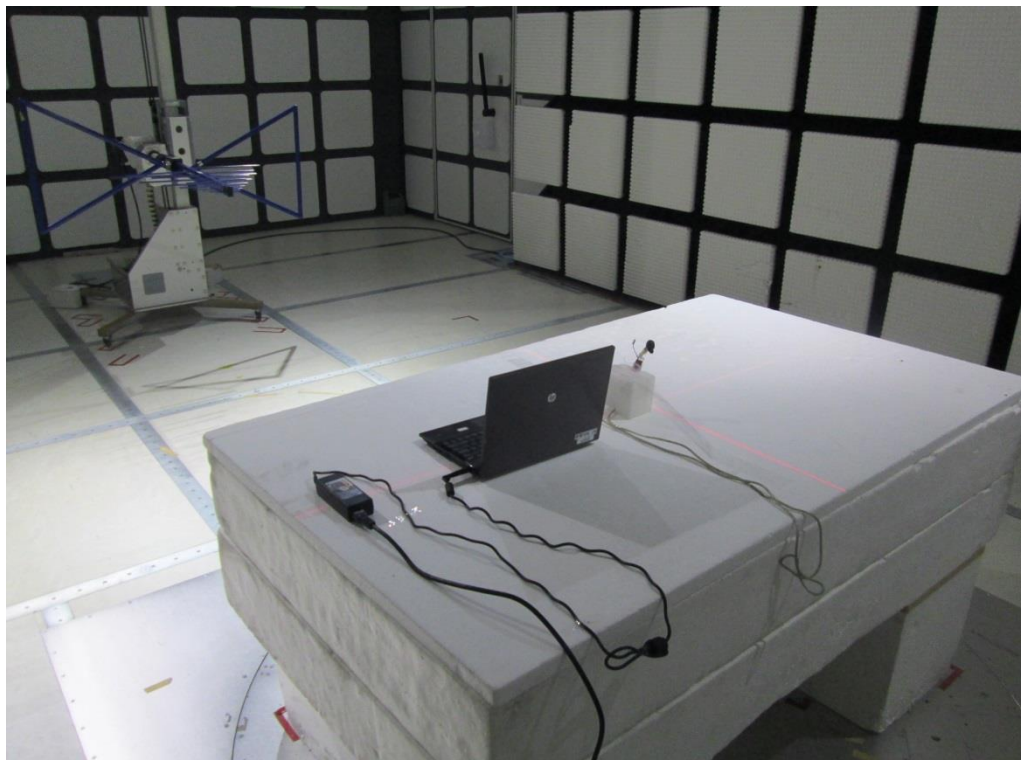


For radiated emissions above 1GHz
Mode 1

Front view

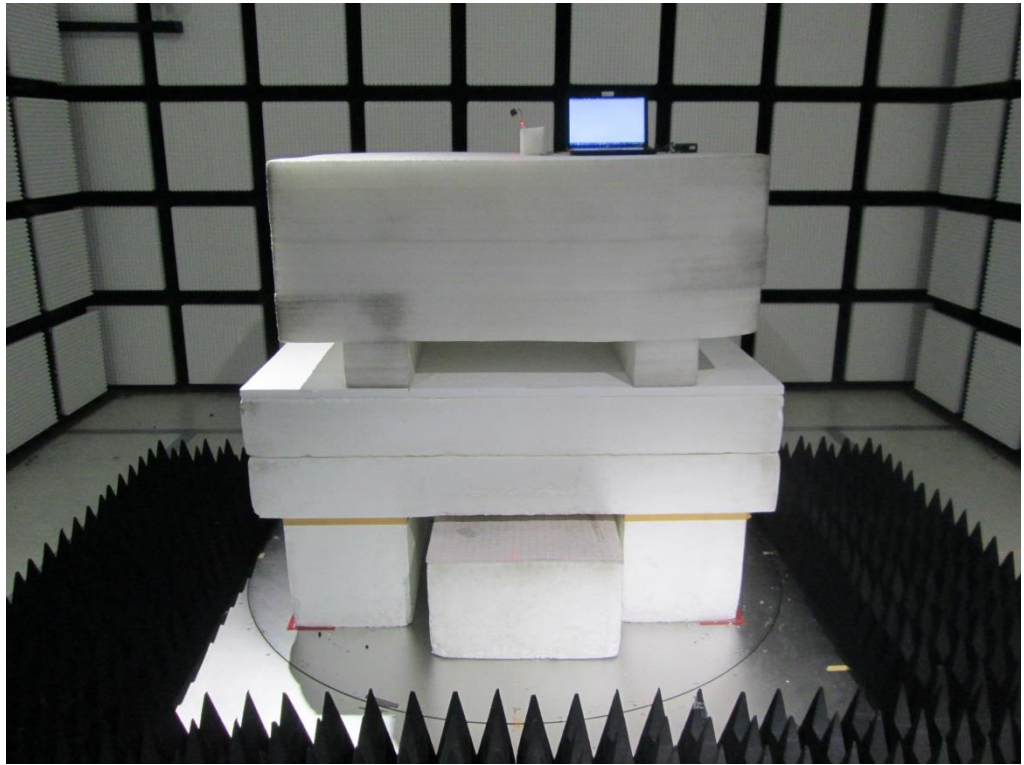

Rear view

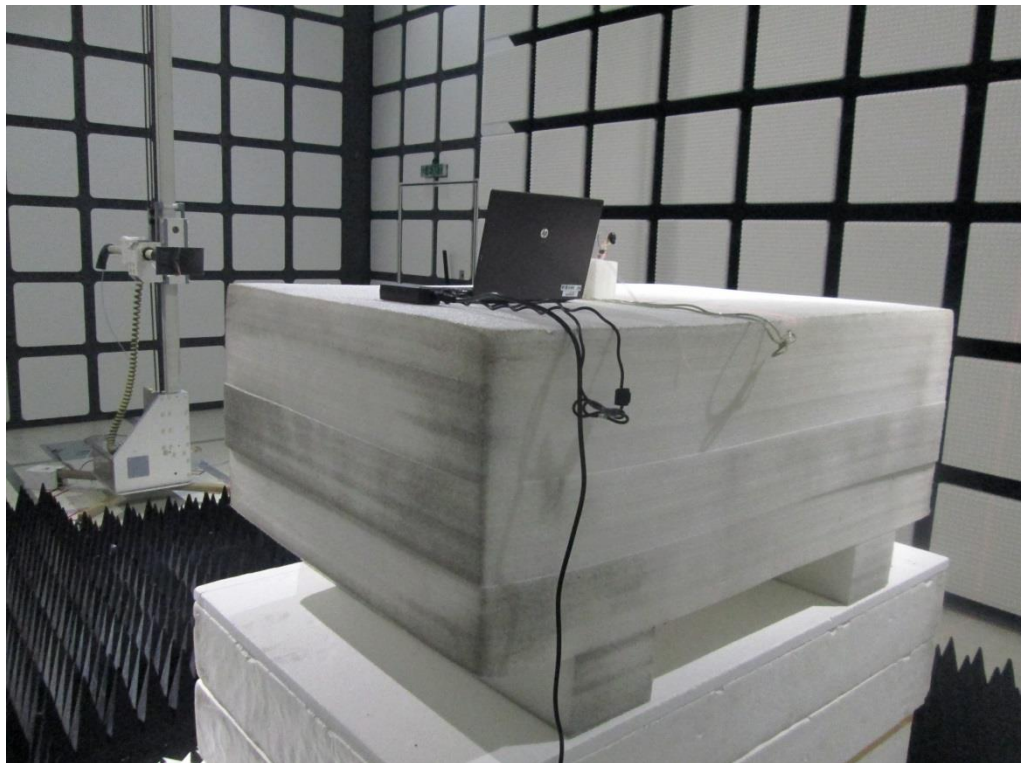


5. Photographs of Radiated Emissions Test Configuration - RX


For radiated emissions 30MHz~1GHz

Mode 1

Front view

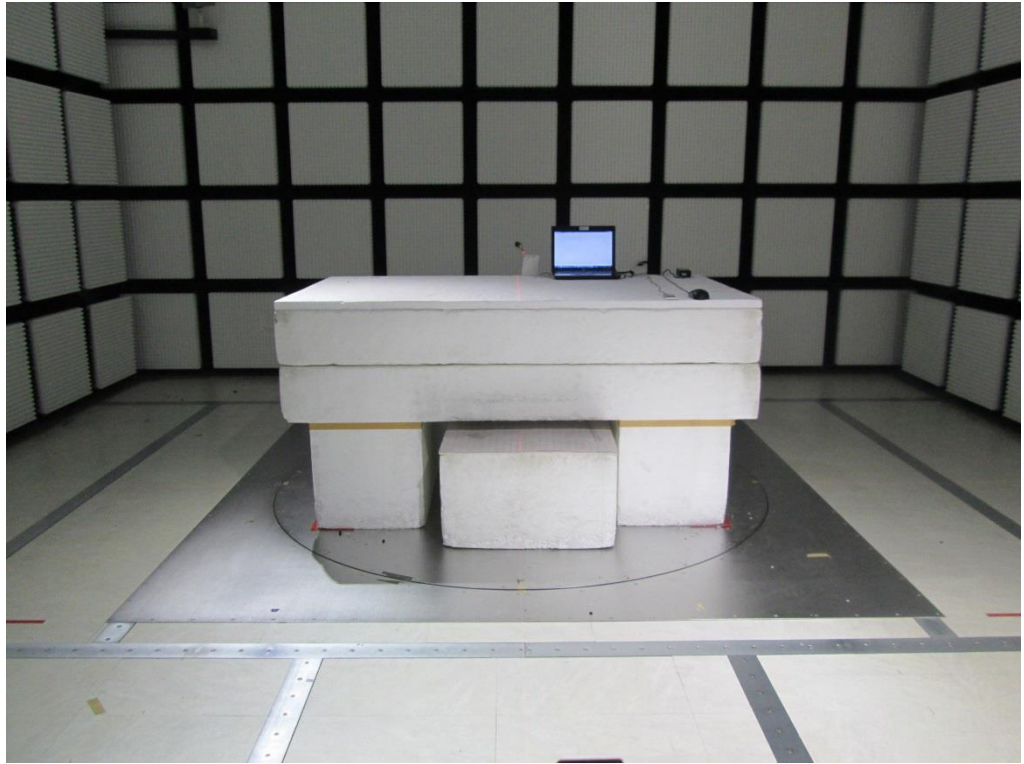


Rear view

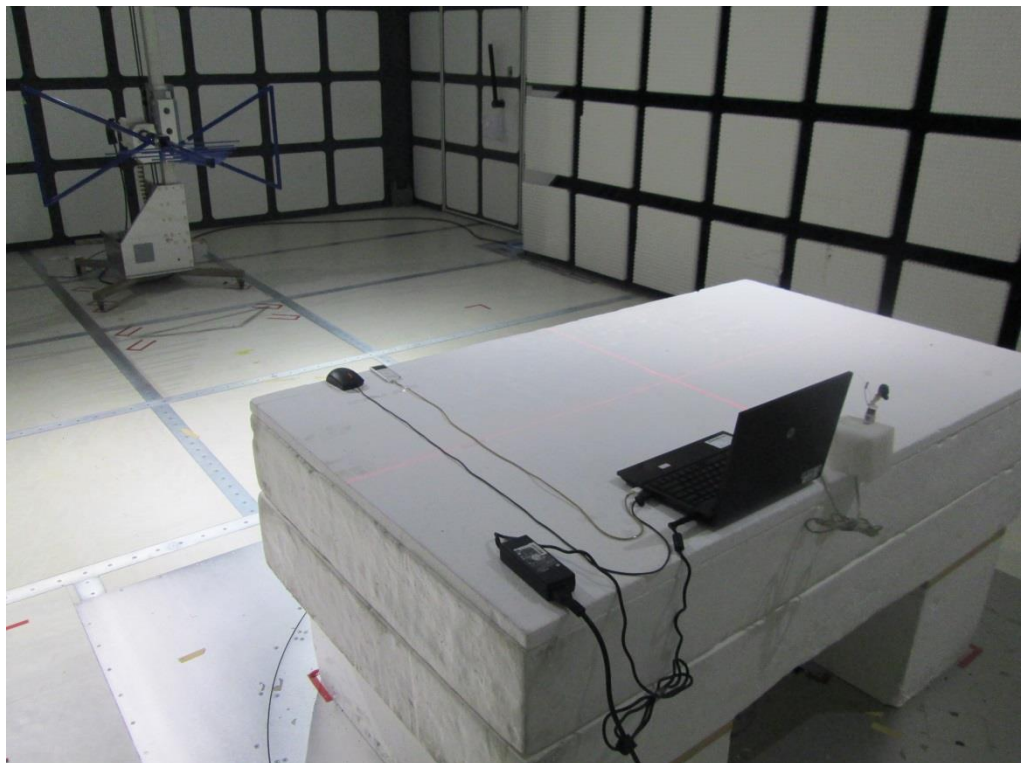


For radiated emissions above 1GHz
Mode 1

Front view

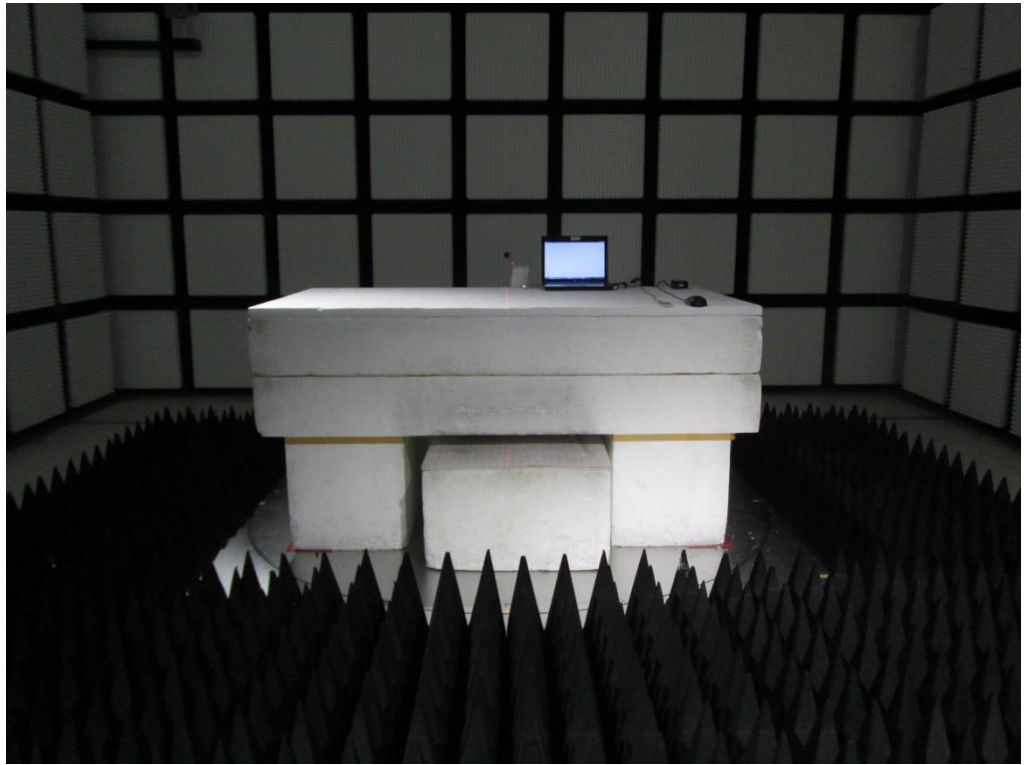

Rear view

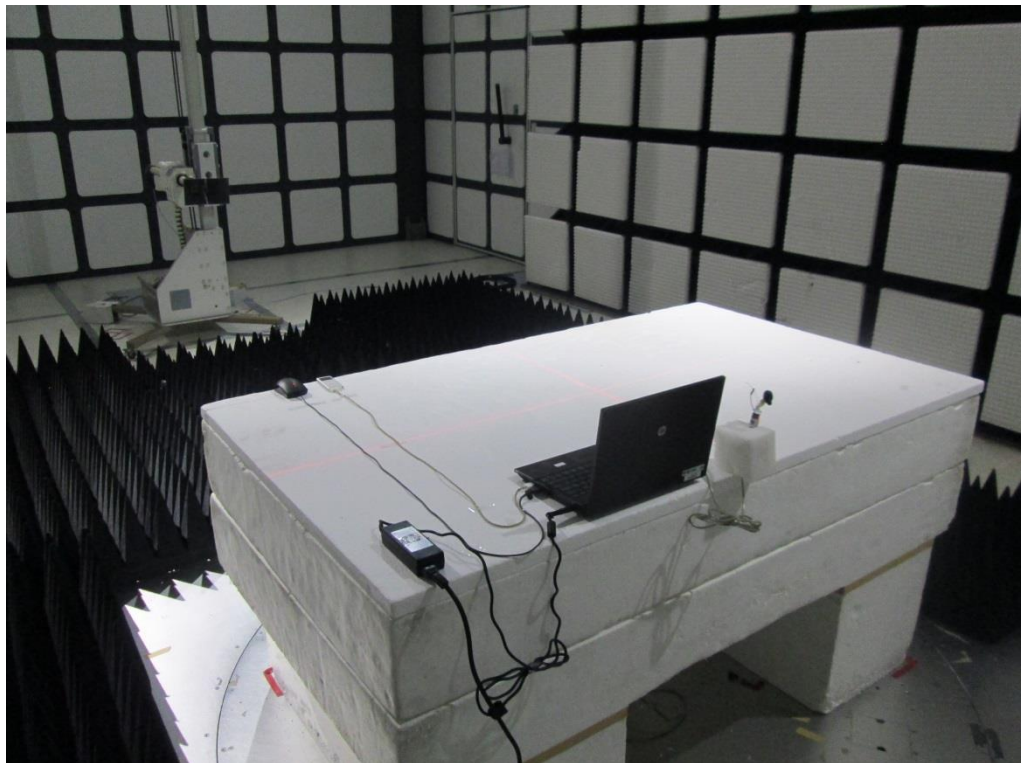


6. Photographs of Radiated Emissions Test Configuration - Charging


For radiated emissions 30MHz~1GHz

Mode 2

Front view

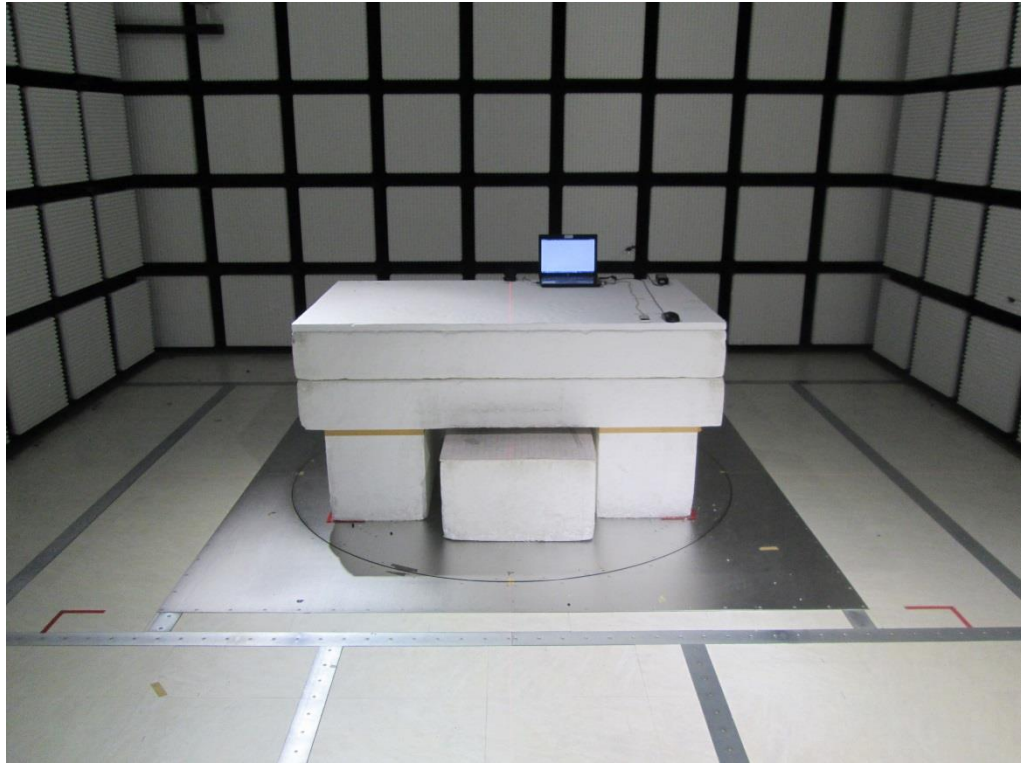


Rear view

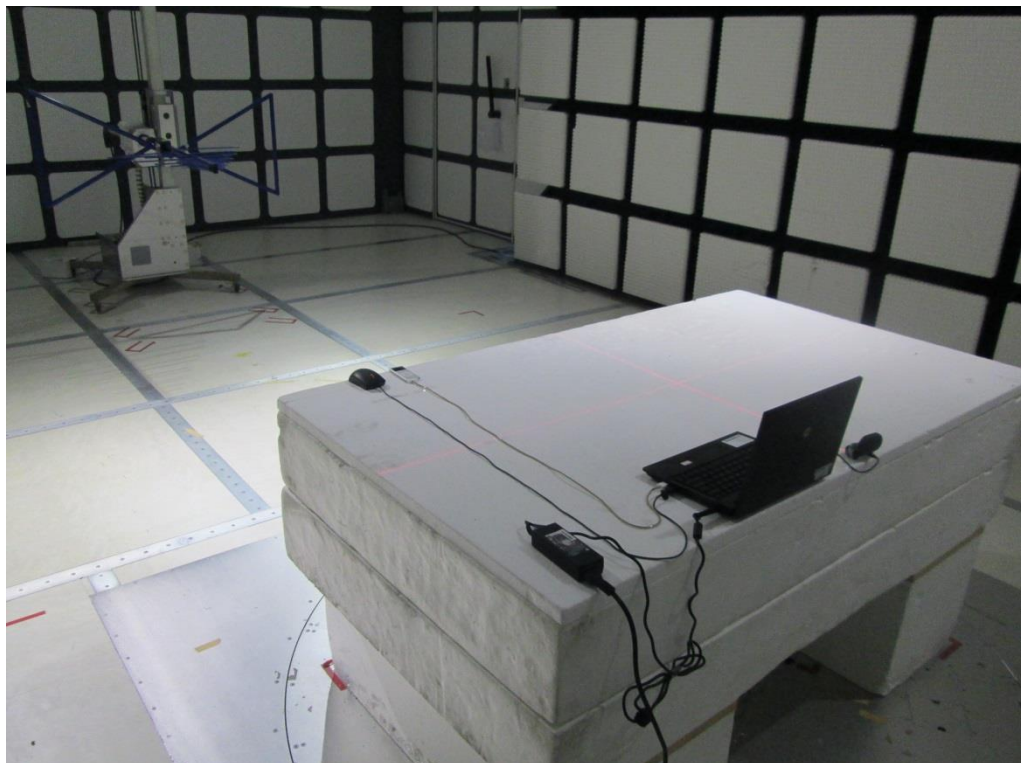


For radiated emissions 30MHz~1GHz
Mode 3

Front view

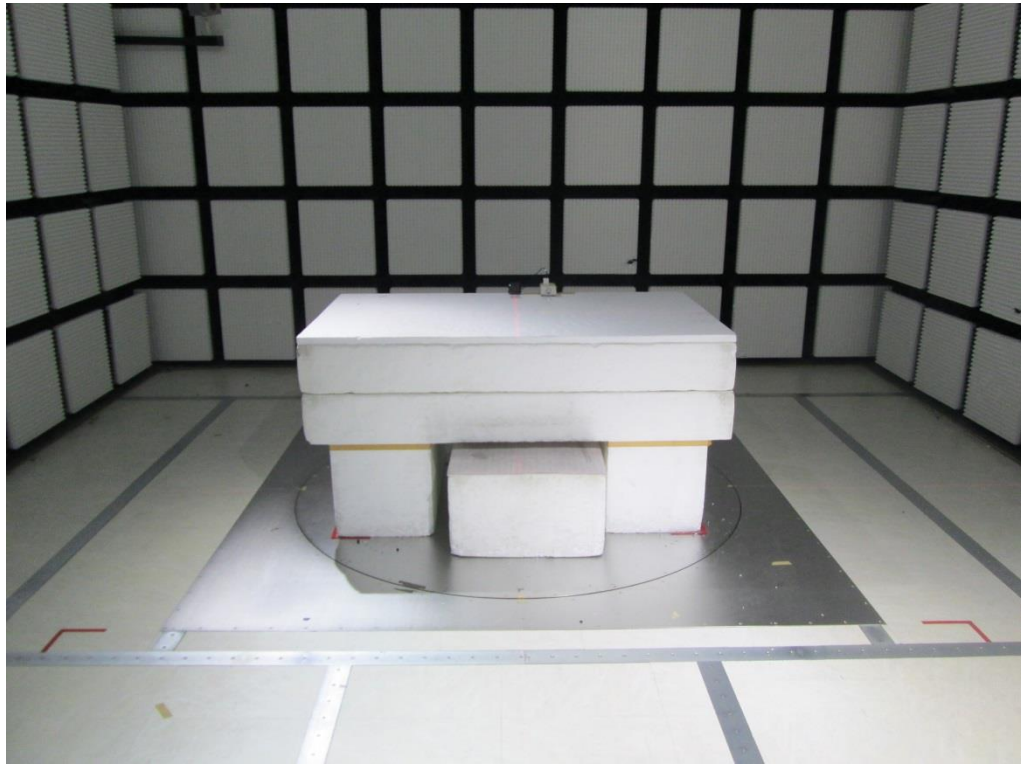



Rear view

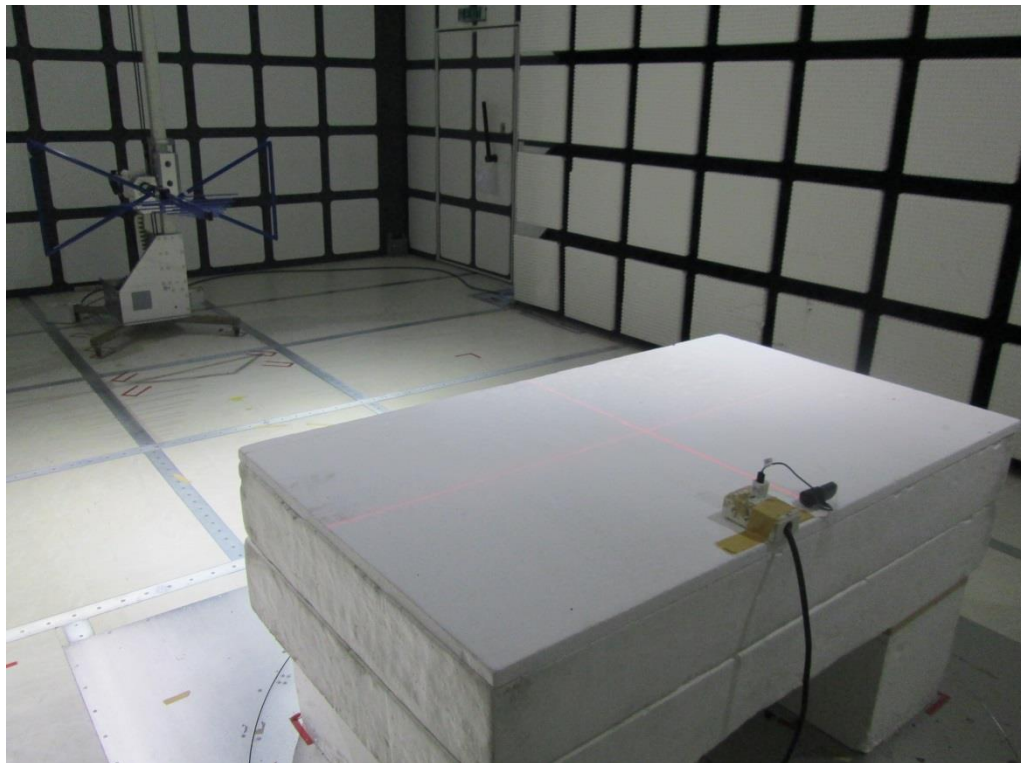

Test Fixture

Brand Name: Feasycom

Model Name: DB006-BT630-USB

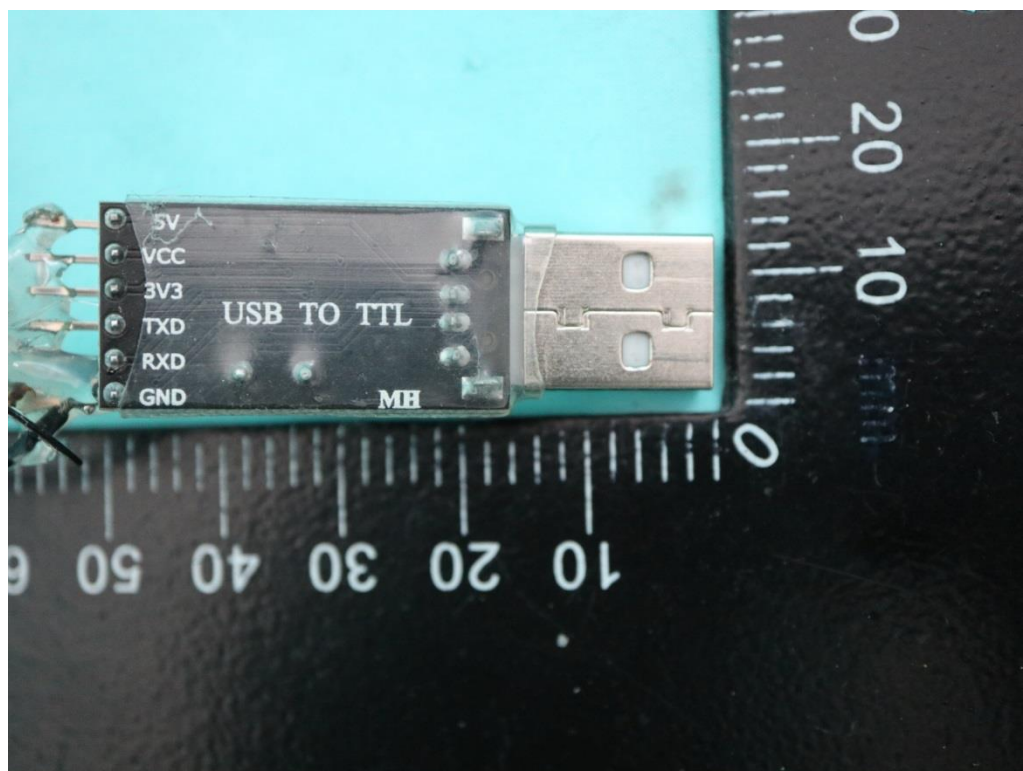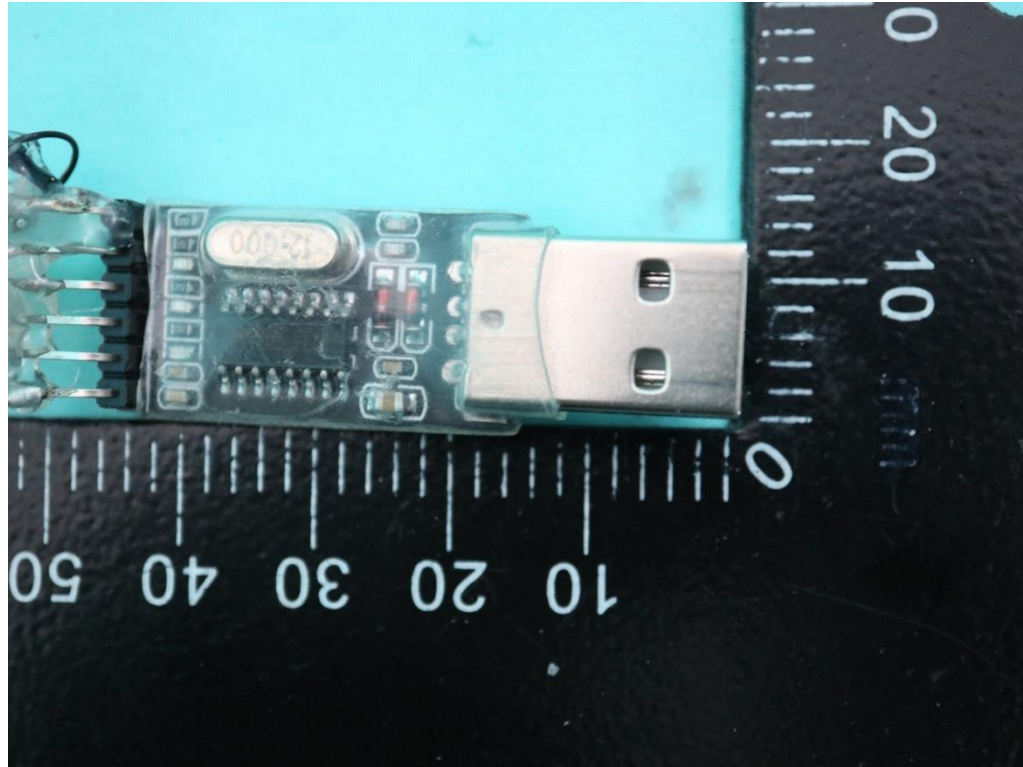

—THE END—