



Show Commands

- [show admin-tech](#), on page 2
- [show cellular 0/x/0 connection](#), on page 3
- [show cellular 1 connections](#), on page 5
- [show cellular 1 hardware](#), on page 6
- [show cellular 1 profile](#), on page 7
- [show cellular 1 radio](#), on page 8
- [show cellular 1 radio-band](#), on page 9
- [show cellular 1 radio-details](#), on page 11
- [show cellular 1 modem-logging](#), on page 12
- [show cellular 1 qos](#), on page 13
- [show cellular 1 details](#), on page 16
- [show cellular 1 firmware](#), on page 17
- [show cellular 1 network](#), on page 18
- [show cellular 1 sim](#), on page 19
- [show control connections](#), on page 20
- [show gw-system:dhcp info](#), on page 21
- [show gw-system:interface brief](#), on page 22
- [show gw-system:ntp status](#), on page 23
- [show gw-system:system partition](#), on page 24
- [show gw-system:system status](#), on page 25
- [show led status](#), on page 26
- [show license udi](#), on page 27
- [show software](#), on page 28
- [show version](#), on page 29

show admin-tech

To show the detailed system info for troubleshooting purposes, use the **showadmin-tech** command in user EXEC mode.

show admin-tech

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	This command has no default settings.
------------------------	---------------------------------------

Command Modes	User EXEC
----------------------	-----------

Command History	
------------------------	--

Command History	Release	Modification
	Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.

Usage Guidelines	Use the show admin-tech command to show the detailed system info for troubleshooting purposes.
-------------------------	---

This example shows how to view the detailed system info for troubleshooting purposes:

```
Router# show admin-tech
/opt/show_admin_tech.sh: No such file or directory
```

show cellular 0/x/0 connection

To display the sessions information, use the **show cellular 0/x/0 connection** command in user EXEC mode.

show cellular 0/x/0 connection

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	No default behavior or values.
------------------------	--------------------------------

Command Modes	User EXEC
----------------------	-----------

Command History	Release	Modification
	Cisco IOS XE 17.16.1a	The output for this command was modified to include APN and Cellular Link Uptime.
	Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.

Usage Guidelines	Use the show cellular 0/x/0 connection command to display the sessions information.
-------------------------	--

This example shows how to view the sessions information for Cisco IOS XE 17.16.1a and higher releases.

```
Router# show cellular 0/2/0 connection
Profile 1, Packet Session Status = ACTIVE
  Cellular0/2/0:
    Data Packets Transmitted = 7, Received = 5
    Data Transmitted = 700 bytes, Received = 520 bytes
    Access Point Name (APN) = broadband
    IP address = 192.0.2.29
    IPV6 address = 2001:DB8:2680:FB4:9D31:EC8B:F4C3:BEA9/64
    Scope = Global
    Primary DNS address = 192.0.2.8
    Secondary DNS address = 192.0.2.4
    Primary DNS IPV6 address = 2001:DB8:4888:0:0:0:0:8899
    Secondary DNS IPV6 address = 2001:DB8:9999:0:0:0:0:7722
    Cellular link uptime = 0 Min
```

```
Profile 2, Packet Session Status = INACTIVE
```

This example shows how to view the sessions information for Cisco IOS XE 17.15.x and lower releases.

```
Router# show cellular 0/2/0 connection
Profile 1, Packet Session Status = ACTIVE
  Cellular0/2/0:
    Data Packets Transmitted = 21641, Received = 23462
    Data Transmitted = 8952451 bytes, Received = 4603455 bytes
    Data Packets Dropped Transmit = 0, Receive = 0
    IP Address = 192.0.2.141
    IPv6 Address = 2001:DB8:ffff:ffff:ffff:ffff:ffff:ffff/ 64 Scope = Global
    Primary DNS Address = 192.0.2.34
    Secondary DNS Address = 192.0.2.210
    Primary DNS IPV6 Address = 2001:DB8:1000::2000
```

 show cellular 0/x/0 connection

Secondary DNS IPv6 Address = 2001:DB8:1111::2222

Profile 2, Packet Session Status = INACTIVE

show cellular 1 connections

To display active control connections from the CLI, use the **show cellular 1 connections** command in user EXEC mode.

show cellular 1 connections

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	No default behavior or values.
------------------------	--------------------------------

Command Modes	User EXEC
----------------------	-----------

Command History	Release	Modification
	Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.

Usage Guidelines	Use the show cellular 1 connections command to display active control connections from the CLI.
-------------------------	--

Example

This example shows how to view active control connections from the CLI.

```
Router# show cellular 1 connections
Profile ID = 1
-----
APN = broadband
Connectivity = Attach and Data
Session Status = Connected
IPv4 Address = 10.20.20.60
IPv4 Gateway Address = 10.19.19.60
IPv4 Primary DNS = 10.0.0.8
IPv4 Secondary DNS = 10.0.0.4
IPv6 Address = 2001:db8:ffff:ffff:ffff:ffff:ffff:ffff, IPv6 Prefix length = 64
IPv6 Gateway Address = 2001:db8:ffff:ffff:ffff:ffff:ffff:ffff, IPv6 Gateway Prefix length
= 64
IPv6 Primary DNS = 2001:db8:1000::2000
IPv6 Secondary DNS = 2001:db8:1111::2222
Tx Packets = 1009655, Rx Packets = 983984
Tx Bytes = 297251993, Rx Bytes = 211848740
Tx Drops = 0, Rx Drops = 0
Tx Overflow Count = 0, Rx Overflow Count = 0
```

show cellular 1 hardware

To display the cellular unit hardware information, use the **show cellular 1 hardware** command in user EXEC mode.

show cellular 1 hardware

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	This command has no default settings.
------------------------	---------------------------------------

Command Modes	User EXEC
----------------------	-----------

Command History	
------------------------	--

Command History	Release	Modification
	Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.

Usage Guidelines	Use the show cellular 1 hardware command to display the cellular unit hardware information.
-------------------------	--

This example shows how to view all the cellular unit hardware information:

```
Router# show cellular 1 hardware
Modem Firmware Version = SWIX55C_01.07.19.00 000000 jenkins
Device Model ID = EM9190
International Mobile Subscriber Identity (IMSI) = 123456700002084
International Mobile Equipment Identity (IMEI) = 351735110112295
Integrated Circuit Card ID (ICCID) = 8952530076180182084
Mobile Subscriber Integrated Services Digital Network Number (MSISDN) =
Factory Serial Number (FSN) = 4H0335005303A1
Current Modem Temperature = 44 deg C
PRI SKU ID = 1104567
PRI Version = 016.010_000
Carrier = GENERIC
OEM PRI Version = 001.020
Modem Status = MODEM_STATE_DNS_ACQUIRED
```

show cellular 1 profile

To display the cellular profile details, use the **show cellular 1 profile** command in user EXEC mode.

show cellular 1 profile

Syntax Description

This command has no arguments or keywords.

Command Default

No default behavior or values.

Command Modes

User EXEC

Command History

Release	Modification
Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.

Usage Guidelines

Use the **show cellular 1 profile** command to display cellular profile details.

This example shows how to view all the cellular unit profile information:

```
Router# show cellular 1 profile
PROFILE ID  APN      PDP TYPE  STATE  AUTHENTICATION  USERNAME  PASSWORD
-----
1           broadband IPv4v6    ACTIVE  none             -         -
```

show cellular 1 radio

To display the cellular modem radio information, use the **show cellular 1 radio** command in user EXEC mode.

show cellular 1 radio

Syntax Description	This command has no arguments or keywords.	
Command Default	This command has no default settings.	
Command Modes	User EXEC	
Command History	Release	Modification
	Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.
Usage Guidelines	Use the show cellular 1 radio command display the cellular modem radio information.	

Example

This example shows how to view the cellular modem radio information

```
Router# show cellular 1 radio
Radio Power Mode = online
Radio Access Technology(RAT) Selected = LTE
LTE Rx Channel Number(PCC) = 0
LTE Tx Channel Number(PCC) = 0
LTE Band = 1
LTE Bandwidth = 20 MHz
Current RSSI = -25 dBm
Current RSRP = -52 dBm
Current RSRQ = -7 dB
Current SNR = 30.0 dB
Physical Cell Id = 1
Network Change Event = activated LTE
CellularGateway#
```

show cellular 1 radio-band

To display the radio band settings, use the **show cellular 1 radio-band** command in user EXEC mode.

show cellular 1 radio-band

Syntax Description	This command has no arguments or keywords.				
Command Default	This command has no default settings.				
Command Modes	User EXEC				
Command History	<table> <tr> <th>Release</th><th>Modification</th></tr> <tr> <td>Cisco IOS XE Amsterdam 17.3.x release</td><td>This command was introduced.</td></tr> </table>	Release	Modification	Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.
Release	Modification				
Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.				
Usage Guidelines	Use the show cellular 1 radio-band command to display the radio band settings.				

Example

This example shows how to display the radio band settings.

```
Router# show cellular 1 radio-band
LTE bands supported by modem:
1 2 3 4 5 7 8 12 13 14 17 18 19 20 25 26 28 29 30 32 34 38 39 40 41 42 46 48 66 71
LTE band Preference settings for the active sim:
1 2 3 4 5 7 8 12 13 14 17 18 19 20 25 26 28 29 30 32 34 38 39 40 41 42 46 48 66 71

NR5G bands supported by modem:
1 2 3 5 28 41 66 71 77 78 79
NR5G band Preference settings for the active sim:
1 2 3 5 28 41 66 71 77 78 79

Non-LTE bands supported by modem:

23 - WCDMA (Europe, Japan, and China) 2100 band
24 - WCDMA US PCS 1900 band
25 - WCDMA (Europe and China) DCS 1800 band
26 - WCDMA US 1700 band
27 - WCDMA US 850 band
28 - WCDMA Japan 800 band
50 - WCDMA Europe and Japan 900 band
51 - WCDMA Japan 1700 band
61 - WCDMA Japan 850 band
Non-LTE band Preference settings for the active sim:

23 - WCDMA (Europe, Japan, and China) 2100 band
24 - WCDMA US PCS 1900 band
25 - WCDMA (Europe and China) DCS 1800 band
26 - WCDMA US 1700 band
27 - WCDMA US 850 band
28 - WCDMA Japan 800 band
50 - WCDMA Europe and Japan 900 band
51 - WCDMA Japan 1700 band
```

61 - WCDMA Japan 850 band

=====
Band index reference list:

For LTE indices 1-128 correspond to bands 1-128 and NR indices 1-320 correspond to bands 1-320.

For 3G, indices 1-64 maps to the 3G bands mentioned against each above.

show cellular 1 radio-details

To display the cellular information when the radio goes to Low Power mode, use the **show cellular 1 radio-details** command in user EXEC mode.

show cellular 1 radio-details

Syntax Description	This command has no arguments or keywords.				
Command Default	This command has no default settings.				
Command Modes	User EXEC				
Command History	<table> <tr> <th>Release</th><th>Modification</th></tr> <tr> <td>Cisco IOS XE Amsterdam 17.3.x release</td><td>This command was introduced.</td></tr> </table>	Release	Modification	Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.
Release	Modification				
Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.				
Usage Guidelines	Use the show cellular 1 radio-details command to display the carrier aggregation and other radio details.				

Example

This example shows how to view the carrier aggregation and additional radio details.

```
Router# show cellular 1 radio-details
Carrier Aggregation Status = Disabled
LTE RX Channel Number(PCC) = 0
LTE TX Channel Number(PCC) = 0
LTE Band = 4
LTE Bandwidth = 20 MHz
PCC CA information:
-----
LTE band class = 4
E-UTRA absolute radio frequency channel number of the serving cell = 0
Bandwidth = 20 MHz
Physical Cell Id = 28
Current RSRP in 1/10 dBm as measured by L1 = -99 dBm
Current RSSI in 1/10 dBm as measured by L1 = -73 dBm
Current RSRQ in 1/10 dBm as measured by L1 = -7 dB
Measured SINR in dB = 25.2 dB
Tracking area code information for LTE = 1

5G CC information:
-----
Current ENDC RSRP in 1/10 dBm as measured by L1 = 0 dBm
Current ENDC RSRQ in 1/10 dBm as measured by L1 = 0 dB
Measured ENDC SINR in dB = 0.0 dB
```

show cellular 1 modem-logging

To display the cellular modem logging information, use the **show cellular 1 modem-logging** command in user EXEC mode.

show cellular 1 modem-logging

Syntax Description

This command has no arguments or keywords.

Command Default

This command has no default settings.

Command Modes

User EXEC

Command History

Command History

Release	Modification
Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.

Usage Guidelines

Use the **show cellular 1 modem-logging** command to obtain information like DMlogs, NAS logs, SDK logs, and driver logs running data.

Examples

This example shows how to view all the cellular unit hardware information:

```
show cellular 1 modem-logging
modem-logging dm-logs-status not-started
```

show cellular 1 qos

To display the cellular QoS related information, use the **show cellular 1 qos** command in user EXEC mode.

show cellular 1 qos

Syntax Description	This command has no arguments or keywords.	
Command Default	This command has no default settings.	
Command Modes	User EXEC	
Command History		
Command History	Release	Modification
	Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.
Usage Guidelines	The show cellular 1 qos command displays information about the QoS parameters for each of the QoS flow set by the network.	

Examples

This example shows how to view all the cellular QoS information:

```
show cellular 1 qos
CG522-E# % qos qosflow-list 0
QoS Id = 1434
QoS State = ENABLED
QoS Flow Type = NETWORK_INITIATED
Bearer Id = 50

Tx flow info:
Lte Qci = 5
Data Rate Max = 0
Minimum Data Rate Guaranteed = 0

Rx flow info:
Lte Qci = 5
Data Rate Max = 0
Minimum Data Rate Guaranteed = 0

Tx filter info:
IP version = IPV4
IPv4 Source Address = 209.165.200.225
IPv4 Source Address subnet mask = 255.255.255.224
IPv4 Dest Address = 209.165.200.230
IPv4 Dest Address subnet mask = 255.255.255.0
Tos value = 128
Tos mask = 192
IPv6 Source Address = ::
Source IPv6 address prefix length = 0
IPv6 Dest Address = ::
Dest IPv6 address prefix length = 0
IPv6 Label = 0
Transport Protocol = 0
Transport Port1 = 0
Transport Range1 = 0
```

```

Transport Port2 = 0
Transport Range2 = 0
Transport Port3 = 0
Transport Range3 = 0
Transport Port4 = 0
Transport Range4 = 0

Rx filter info:
IP version = IPV4
IPv4 Source Address = 209.165.201.1
IPv4 Source Address subnet mask = 255.255.255.224
IPv4 Dest Address = 209.165.201.10
IPv4 Dest Address subnet mask = 255.255.255.224
Tos value = 128
Tos mask = 192
IPv6 Source Address = ::
Source IPv6 address prefix length = 0
IPv6 Dest Address = ::
Dest IPv6 address prefix length = 0
IPv6 Label = 0
Transport Protocol = 0
Transport Port1 = 0
Transport Range1 = 0
Transport Port2 = 0
Transport Range2 = 0
Transport Port3 = 0
Transport Range3 = 0
Transport Port4 = 0
Transport Range4 = 0
qos qosflow-list 1
QoS Id = 1435
QoS State = ENABLED
QoS Flow Type = NETWORK_INITIATED
Bearer Id = 51

Tx flow info:
Lte Qci = 4
Data Rate Max = 7000
Minimum Data Rate Guaranteed = 5000

Rx flow info:
Lte Qci = 4
Data Rate Max = 7000
Minimum Data Rate Guaranteed = 5000

Tx filter info:
IP version = IPV4
IPv4 Source Address = 209.165.202.129
IPv4 Source Address subnet mask = 255.255.255.224
IPv4 Dest Address = 209.165.202.158
IPv4 Dest Address subnet mask = 255.255.225.224
Tos value = 0
Tos mask = 0
IPv6 Source Address = ::
Source IPv6 address prefix length = 0
IPv6 Dest Address = ::
Dest IPv6 address prefix length = 0
IPv6 Label = 0
Transport Protocol = 0
Transport Port1 = 0
Transport Range1 = 0
Transport Port2 = 0
Transport Range2 = 0
Transport Port3 = 0

```

```
Transport Range3 = 0
Transport Port4 = 0
Transport Range4 = 0

Rx filter info:
IP version = IPV4
IPv4 Source Address = 209.165.202.139
IPv4 Source Address subnet mask = 255.255.225.0
IPv4 Dest Address = 209.165.202.149
IPv4 Dest Address subnet mask = 255.255.255.0
Tos value = 0
Tos mask = 0
IPv6 Source Address = ::
Source IPv6 address prefix length = 0
IPv6 Dest Address = ::
Dest IPv6 address prefix length = 0
IPv6 Label = 0
Transport Protocol = 0
Transport Port1 = 0
Transport Range1 = 0
Transport Port2 = 0
Transport Range2 = 0
Transport Port3 = 0
Transport Range3 = 0
Transport Port4 = 0
Transport Range4 = 0
qos qosflow-list 2
QoS Id = 1436
QoS State = ENABLED
QoS Flow Type = NETWORK_INITIATED
Bearer Id = 0

Tx flow info:
Lte Qci = 6
Data Rate Max = 0
Minimum Data Rate Guaranteed = 0

Rx flow info:
Lte Qci = 6
Data Rate Max = 0
Minimum Data Rate Guaranteed = 0
Transport Range4 = 0
```

show cellular 1 details

To display the detailed cellular information, use the **show cellular 1 details** command in user EXEC mode.

show cellular 1 details

Syntax Description	This command has no arguments or keywords.	
Command Default	This command has no default settings.	
Command Modes	User EXEC	
Command History		
Command History	Release	Modification
	Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.
Usage Guidelines	Use the show cellular 1 details command to display the detailed cellular information.	

This example shows how to view the detailed cellular information:

```
Router# show cellular 1 details
Cellular Interface status = Up
Cellular Modem Status = Network-Ready
Cellular IP Address = 10.10.0.1
Cellular Default Gateway = 10.10.0.2
Cellular Subnet Mask = 255.0.0.0
Cellular Primary DNS Address = 10.10.0.3
Cellular Secondary DNS Address = 10.10.0.4
Cellular IPv6 Address = 2001:db8:ffff:ffff:ffff:fffe:ffff:ffff
Cellular IPv6 Default Gateway = 2001:db8:ffff:ffff:ffff:fffe:ffff:ffff
Cellular IPv6 Primary DNS Address = 2001:db8:1000::2000
Cellular IPv6 Secondary DNS Address = 2001:db8:1111::2222
```

show cellular 1 firmware

To display the list of firmwares stored in the modem, use the **show cellular 1 firmware** command in user EXEC mode.

show cellular 1 firmware

Syntax Description

This command has no arguments or keywords.

Command Default

This command has no default settings.

Command Modes

User EXEC

Command History

Command History

Release	Modification
Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.

Usage Guidelines

Use the **show cellular 1 firmware** command to display the list of firmwares stored in the modem.

This example shows how to view the list of firmwares stored in the modem:

```
Router# show cellular 1 firmware
Firmware Activation Mode = AUTO
INDEX  CARRIER  FW VERSION          PRI VERSION  STATUS
-----
1      GENERIC  01.07.19.00_GEN     016.010_000  ACTIVE
2      GENERIC2  01.07.19.00_GEN2    012.012_000  INACTIVE
```

show cellular 1 network

To display the cellular network information, use the **show cellular 1 network** command in user EXEC mode.

show cellular 1 network

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	This command has no default settings.
------------------------	---------------------------------------

Command Modes	User EXEC
----------------------	-----------

Command History	
------------------------	--

Command History	Release	Modification
	Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.

Usage Guidelines	Use the show cellular 1 network command to display the cellular network information.
-------------------------	---

This example shows how to view the cellular network information:

```
CellularGateway# show cellular 1 network
Current System Time = Fri Jan 21 22:54:17 2023
Current Service Status = Normal
Current Service = Packet switched
Current Roaming Status = Home
Network Selection Mode = Automatic
Network = 123 456
Mobile Country Code (MCC) = 123
Mobile Network Code (MNC) = 456
Packet Switch domain(PS) state = Attached
EMM State = Registered
EMM Sub state = Normal-Service
RRC Connection State = RRC Connected
Tracking Area Code (TAC) = 1
Cell ID = 7169
Network MTU = 1500
```

show cellular 1 sim

To display the cellular modem SIM information, use the **show cellular 1 sim** command in user EXEC mode.

show cellular 1 sim

Syntax Description

This command has no arguments or keywords.

Command Default

This command has no default settings.

Command Modes

User EXEC

Command History

Command History

Release	Modification
Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.

Usage Guidelines

Use the **show cellular 1 sim** command to display the cellular modem SIM information.

This example shows how to view the cellular modem SIM information:

```
Router# show cellular 1 sim
Cellular Dual SIM details:
SIM 0 = Present
SIM 1 = Not Present
Active SIM = 0
```

show control connections

To display control connections information, use the **show control connections** command in user EXEC mode.

show control connections

Syntax Description This command has no arguments or keywords.

Command Default This command has no default settings.

Command Modes User EXEC

Command History

Command History	Release	Modification
	Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.

Usage Guidelines Use the **show control connections** command to show the control connections information.

This example shows how to view the control connections information:

```
Router# show control connections
```

				PEER					PEER
CONTROLLER					PEER				
PEER	PEER	PEER	SITE	DOMAIN	PEER				PRIV
PEER				PUB					
GROUP									
TYPE	PROT	SYSTEM	IP	ID	ID	PRIVATE	IP		PORT
PUBLIC	IP				PORT	ORGANIZATION			
PROXY	STATE	UPTIME	ID						
vmanage	dtls	10.160.200.22	200	0	10.0.12.22				12646
10.0.12.22				12646				privatel	No
up	0:20:35:38	0							

show gw-system:dhcp info

To display DHCP related information, use the **show gw-system: dhcp info** command in user EXEC mode.

show gw-system: dhcp info

Syntax Description

This command has no arguments or keywords.

Command Default

This command has no default settings.

Command Modes

User EXEC

Command History

Command History

Release	Modification
Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.

Usage Guidelines

Use the **show gw-system: dhcp info** command to display DHCP related information.

This example shows how to view the DHCP related information:

```
Router# show gw-system:dhcp info
IPv4 DHCP Client IP Address = 10.20.21.81
Client MAC Address          = 2001:db8:1111::2222
Lease Expires In (Sec)      = 90
IPv4 Primary DNS Address    = 10.11.0.8
IPv4 Secondary DNS Address  = 10.8.4.4
IPv6 SLAAC Prefix           = ::
IPv6 Primary DNS Address    = ::
IPv6 Secondary DNS Address  = ::
```

show gw-system:interface brief

To display the interface information, use the **show gw-system: interface brief** command in user EXEC mode.

show gw-system: interface brief

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	This command has no default settings.
------------------------	---------------------------------------

Command Modes	User EXEC
----------------------	-----------

Command History	
------------------------	--

Command History	Release	Modification
	Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.

Usage Guidelines	Use the show gw-system: interface brief command to display the interface information.
-------------------------	--

This example shows how to view the interface information:

```
Router# show gw-system:interface brief
```

		IP		ADMIN	OPER		
MEDIA	PORT	INTERFACE	ADDRESS	SUBNET MASK	STATUS	STATUS	DESCRIPTION
		TYPE					
	0/0	GigabitEthernet	209.165.200.225	255.255.255.224	UP	DOWN	Gigabit Ethernet Interface -

		IP		ADMIN	OPER		MEDIA
PORT	INTERFACE	ADDRESS	SUBNET MASK	STATUS	STATUS	DESCRIPTION	TYPE
1/0	Cellular	10.0.0.1	255.0.0.0	UP	DOWN	Cellular Interface -	

show gw-system:ntp status

To display the Network Time Protocol (NTP) information, use the **show gw-system: ntp status** command in user EXEC mode.

show gw-system: ntp status

Syntax Description

This command has no arguments or keywords.

Command Default

This command has no default settings.

Command Modes

User EXEC

Command History

Command History

Release	Modification
Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.

Usage Guidelines

Use the **show gw-system: ntp status** command to display the NTP information.

This example shows how to view the NTP information:

```
Router# show gw-system:ntp status
Clock is not synchronized, stratum 16, reference is .
frequency is +0.000 Hz, precision is -22
reference time is (no time),
clock offset is +0.000000 msec, root delay is 0.000 msec
root dispersion is 0.000
```

show gw-system:system partition

To display the software version of partitions, use the **show gw-system: system partition** command in user EXEC mode.

show gw-system: system partition

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	This command has no default settings.
------------------------	---------------------------------------

Command Modes	User EXEC
----------------------	-----------

Command History

Command History	Release	Modification
	Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.

Usage Guidelines	Use the show gw-system: system partition command to display the software version of partitions.
-------------------------	--

This example shows how to view the software version of partitions:

```
Router# show gw-system:system partition
Primary Image
Partition      = image2
File name      = cg-ipsservices-17.12.01.2023-05-15_07.57_aut.bin
Version        = 17.12.01.0.230135.1684159528..Bengaluru
Build Date     = Mon May 15 14:05:28 2023
Install Date   = Sun May 14 17:51:14 2023
Boot Status    = Boot Successful.

Backup Image
Partition      = image1
File name      = cg-ipsservices-17.12.01.2023-04-25_07.57_aut.bin
Version        = 17.12.01.0.230115.1682431692..Bengaluru
Build date     = Tue Apr 25 14:08:12 2023
Install Date   = Tue Apr 25 16:16:18 2023
Boot Status    = Boot Successful.
```

show gw-system:system status

To display the system status information, use the **show gw-system: system status** command in user EXEC mode.

show gw-system: system status

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	This command has no default settings.
------------------------	---------------------------------------

Command Modes	User EXEC
----------------------	-----------

Command History	
------------------------	--

Release	Modification
Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.

Usage Guidelines	Use the show gw-system: system status command to display the system status information, such as, RAM, storage, temperature, power source, and so on.
-------------------------	---

This example shows how to view the system status information:

```
Router# show gw-system:system status
SYSTEM INFO
Platform PID                = CG522-E
Product Serial Number       = FGL2443L0UR

System Up Time               = up 20 days
Current Time                 = Sun Jun  4 21:06:08 UTC 2023
Current CPU Usage            = 5%

RAM
Total Memory in KBytes      = 993852
Memory Used in KBytes       = 688960
Memory Free in KBytes       = 304892

STORAGE
Disk type                    = Bootflash
Disk Size in KBytes          = 999320
Disk Used in KBytes          = 2768
Disk Available in KBytes     = 927740
Disk Used Percentage         = 0%

TEMPERATURE
Ambient temperature         = 52 deg C

Power source                 = AC
```

show led status

To display LED status, use the **show led status** command in user EXEC mode.

show led status

Syntax Description

This command has no arguments or keywords.

Command Default

This command has no default settings.

Command Modes

User EXEC

Command History

Command History

Release	Modification
Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.

Usage Guidelines

Use the **show led status** command to display LED status.

This example shows how to view LED status:

```
Router# show led status
      LED      LED
LED LABEL  COLOR  STATE
-----
LED 5G      BLUE  SOLID
LED 4G      OFF   OFF
```

show license udi

To show the values for Universal Device Identifier (UDI), product ID (PID) and Serial Number (SN), use the **show license udi** command in user EXEC mode.

show license udi

Syntax Description

This command has no arguments or keywords.

Command Default

This command has no default settings.

Command Modes

User EXEC

Command History

Command History

Release	Modification
Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.

Usage Guidelines

Use the **show license udi** command to show the values for Universal Device Identifier (UDI), product ID (PID) and Serial Number (SN).

This example shows how to display the license udi information:

```
Router# show license udi
UDI: PID:CG522-E,SN:FGL2443L0UR
```

show software

To display the software versions, use the **show software** command in user EXEC mode.

show software

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	This command has no default settings.
------------------------	---------------------------------------

Command Modes	User EXEC
----------------------	-----------

Command History	
------------------------	--

Command History	Release	Modification
	Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.

Usage Guidelines	Use the show gw-system: system partition command to display the software versions.
-------------------------	---

This example shows how to view the software versions:

```
Router# show software
software 17.12.01.0.230115.1682431692..Bengaluru
  active      false
  default     false
  previous    true
  confirmed   true
  timestamp   2023-05-15T07:42:22-00:00
software 17.12.01.0.230135.1684159528..Bengaluru
  active      true
  default     true
  previous    false
  confirmed   true
  timestamp   2023-05-15T07:42:22-00:00
```

show version

To display software version of the Cellular Gateway device, use the **show version** command in user EXEC mode.

show version

Syntax Description

This command has no arguments or keywords.

Command Default

This command has no default settings.

Command Modes

User EXEC

Command History

Command History

Release	Modification
Cisco IOS XE Amsterdam 17.3.x release	This command was introduced.

Usage Guidelines

Use the **show version** command to display software version of the Cellular Gateway device.

This example shows how to view the software version of the Cellular Gateway device:

```
Router# show version
Active image
Product name       = Cisco Cellular Gateway
Build version      = 17.12.01.0.230135.1684159528..Bengaluru
Software version   = 1.0.0
Build date         = 2023-05-15_07.05
Build path         = /san1/BUILD/workspace/Nightly_c1712_throttle-eio/base/build_eio
Built by           = aut
Firmware info
Uboot version      = 2018.03-7.1.0-cwan-0.0.16
Uboot date         = 10/06/2020
Last reboot reason = Admin Reload
```

show version