

Figure 7
Inside Configuration of the EUT

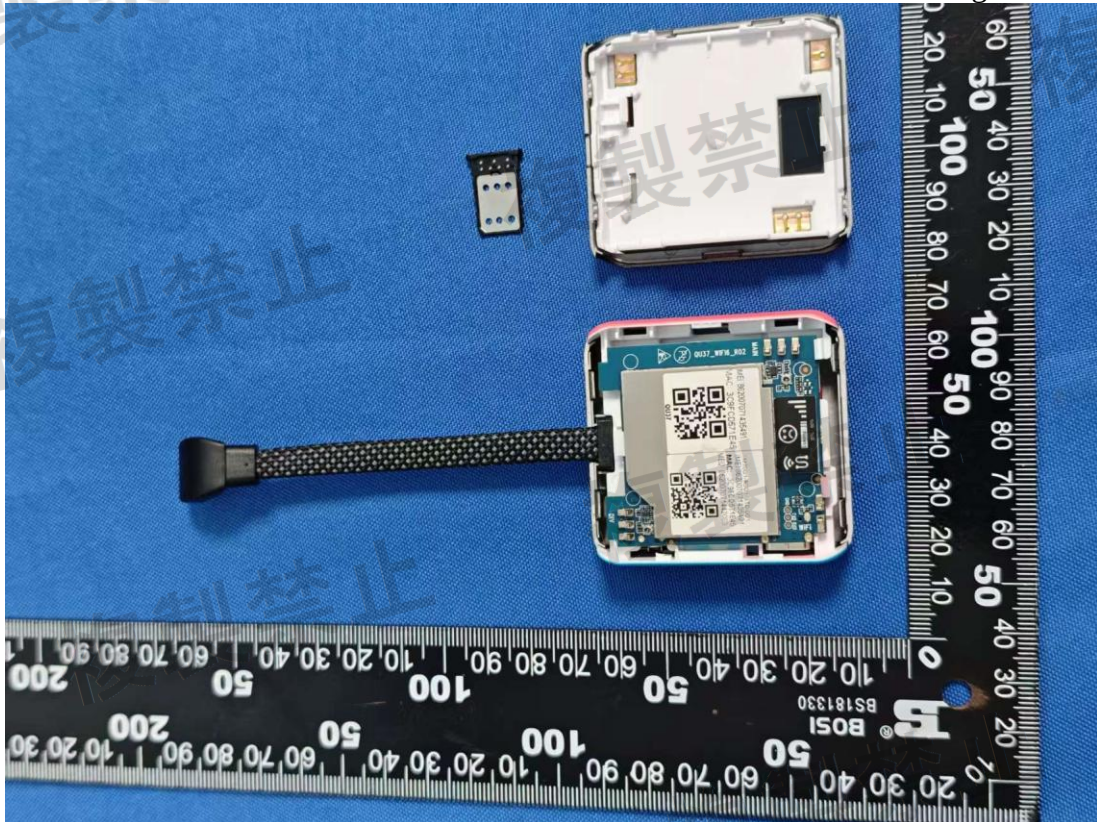


Figure 8
Inside Configuration of the EUT

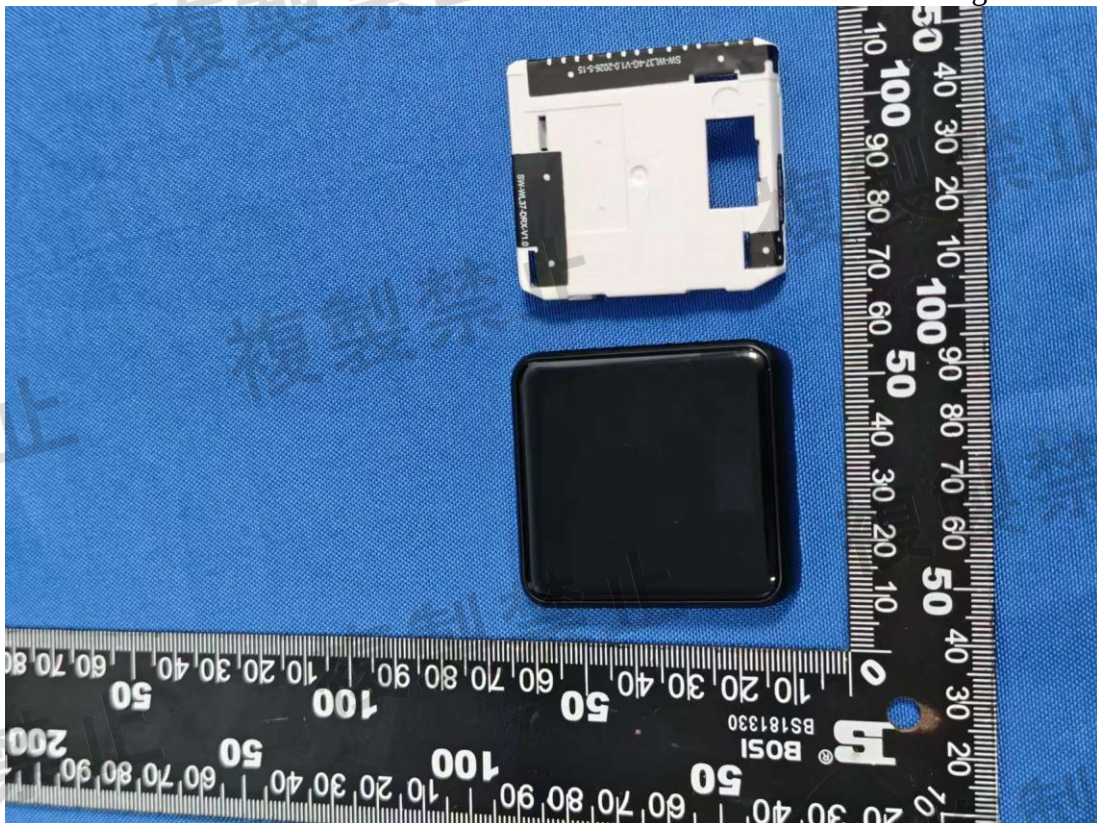


Figure 9

Inside Configuration of the EUT

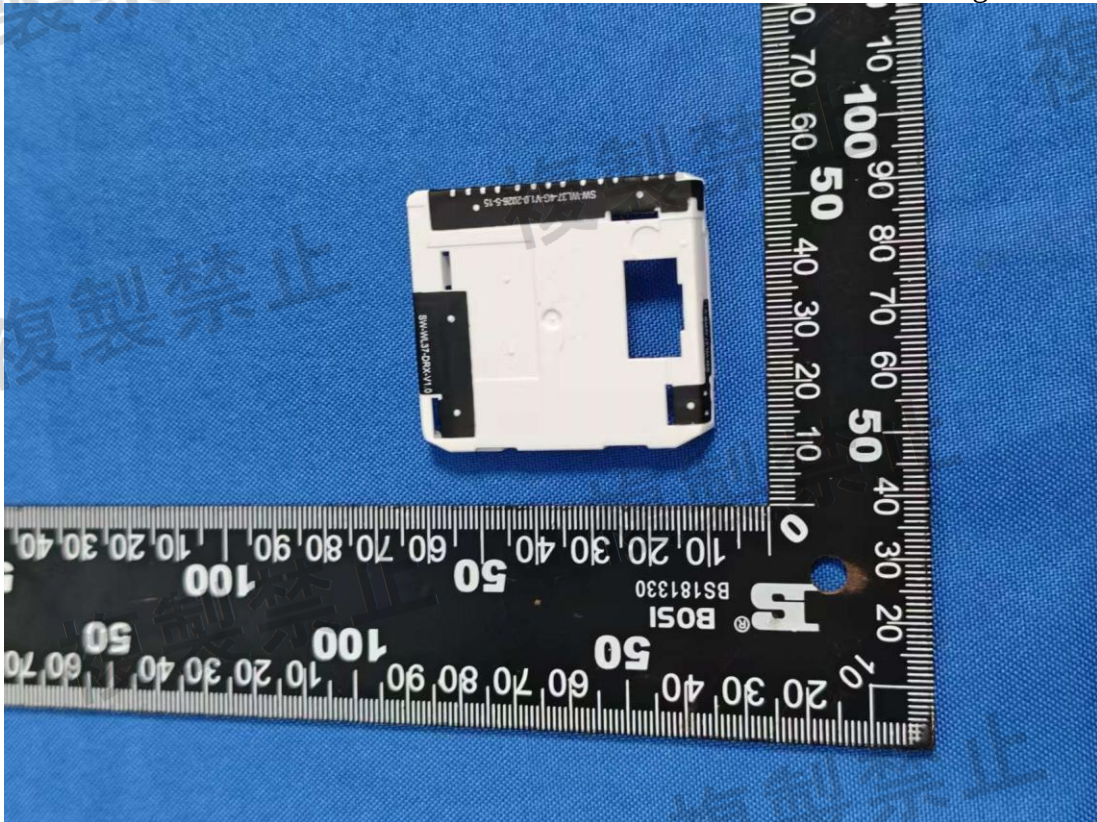


Figure 10

Inside Configuration of the EUT

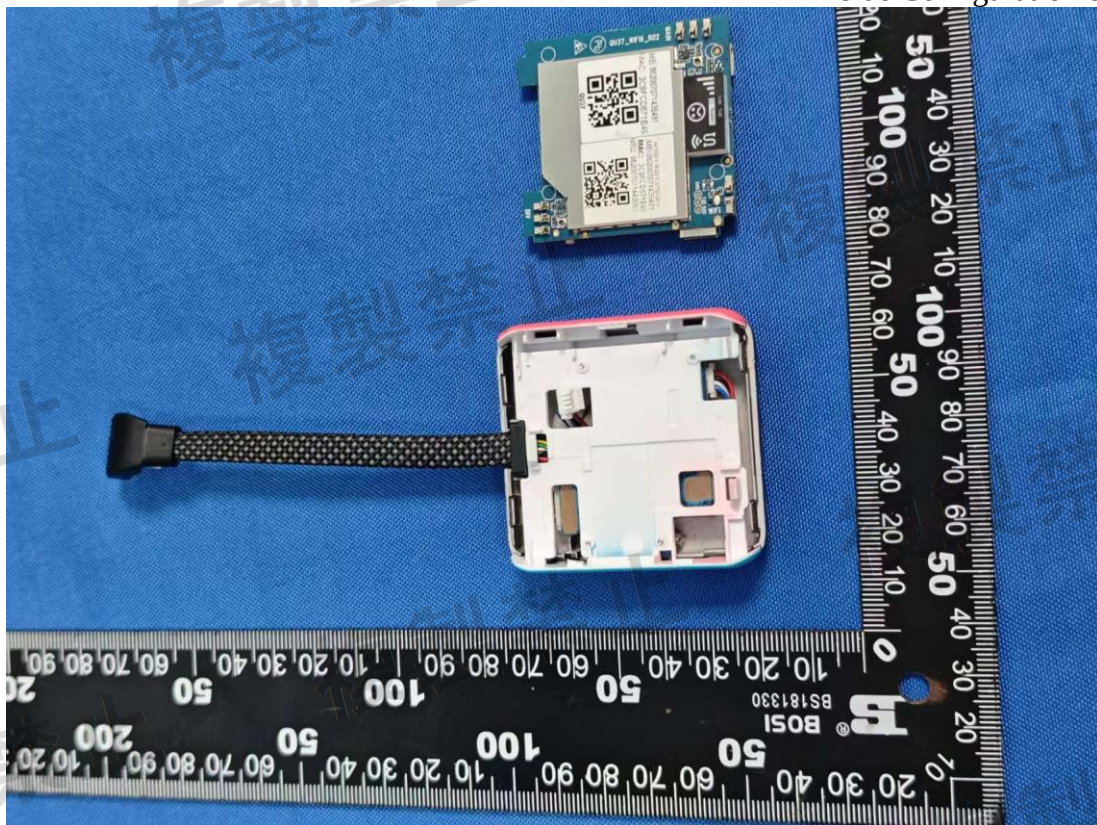


Figure 11

Inside Configuration of the EUT

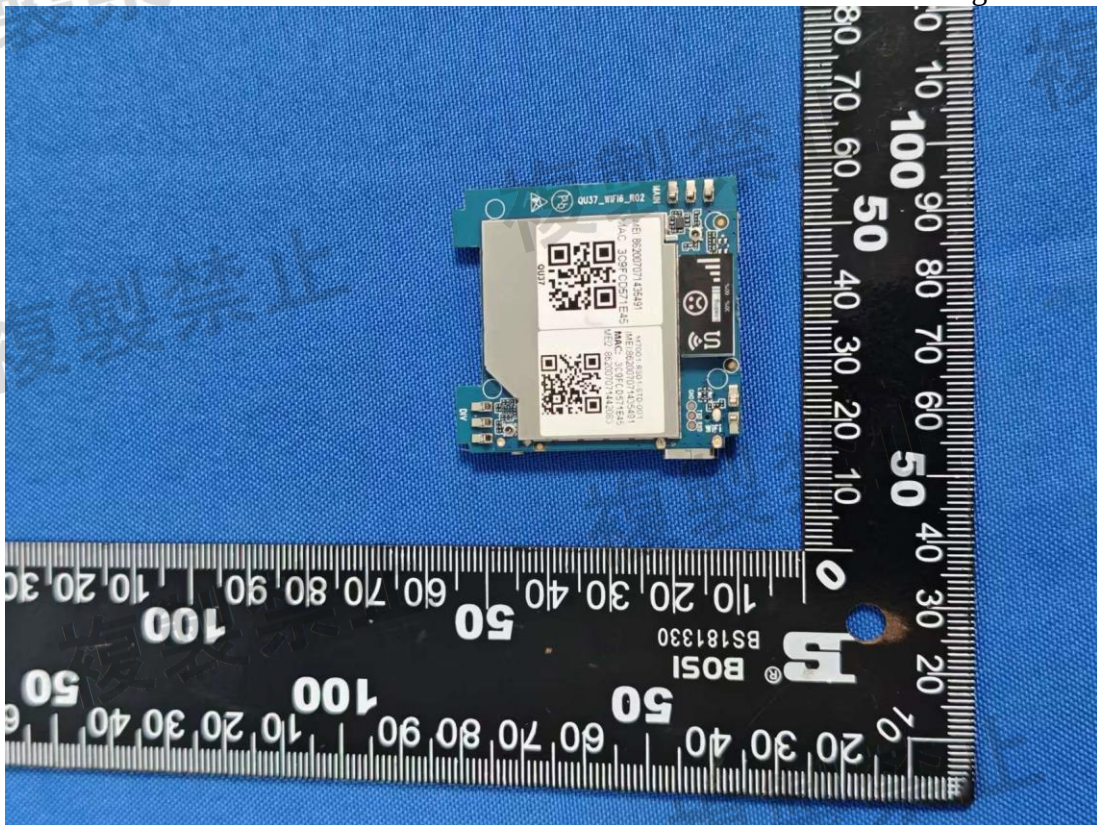


Figure 12

Inside Configuration of the EUT

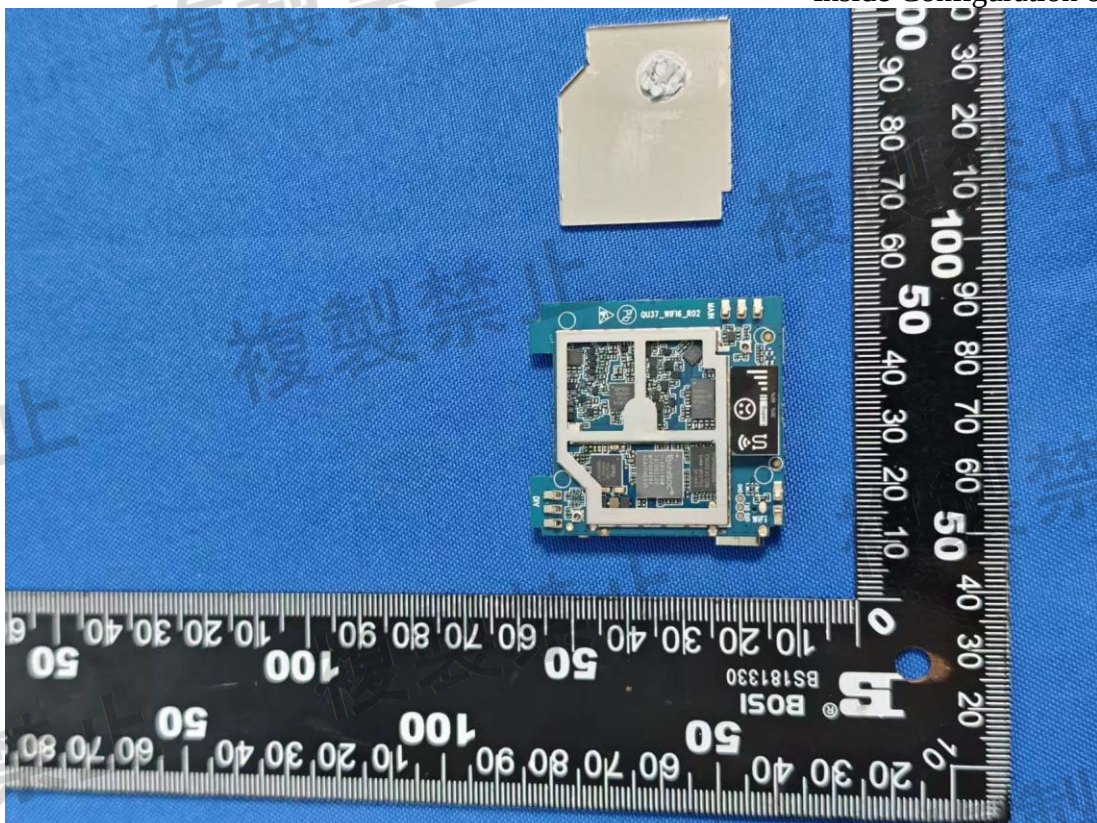


Figure 13

Inside Configuration of the EUT

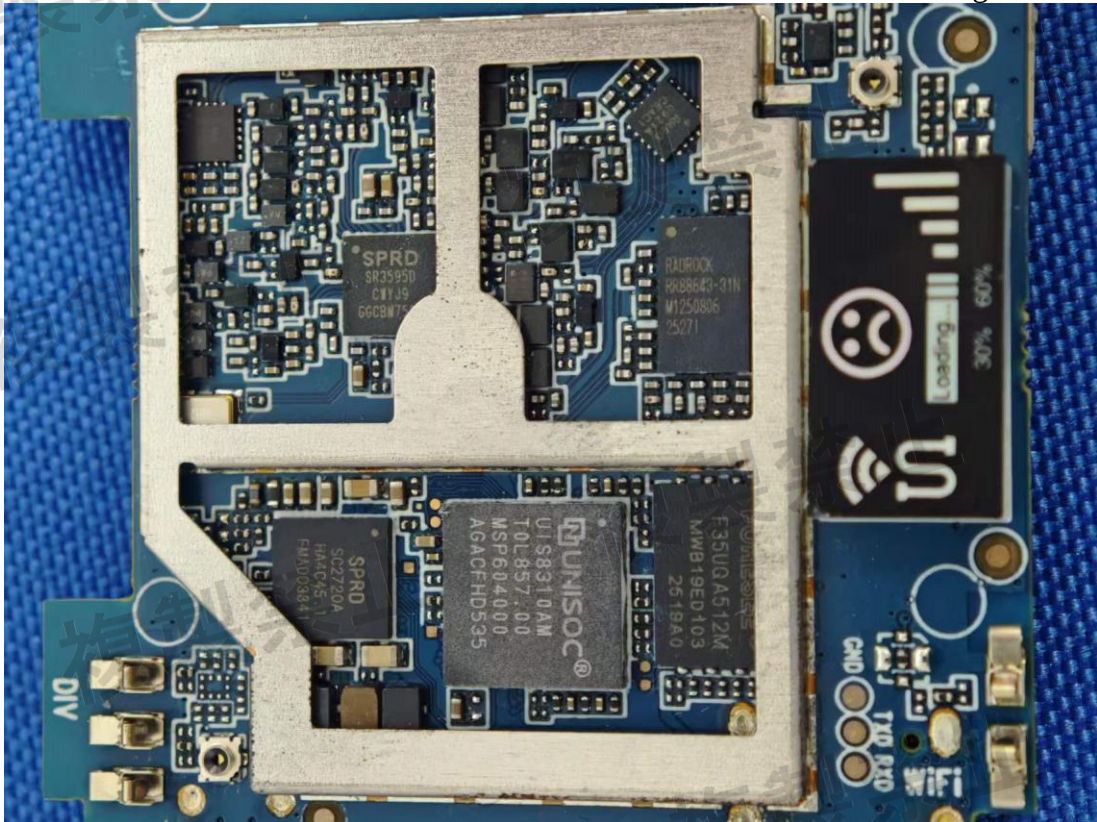


Figure 14

Inside Configuration of the EUT

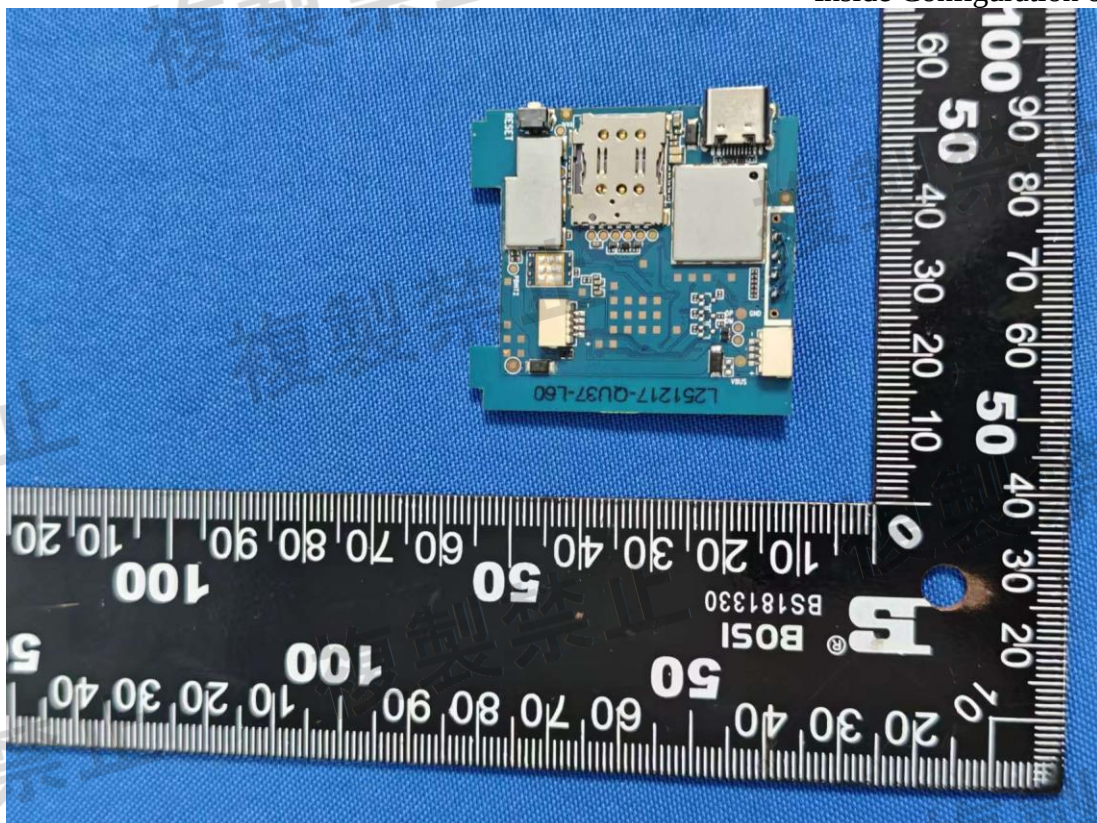


Figure 15
Inside Configuration of the EUT

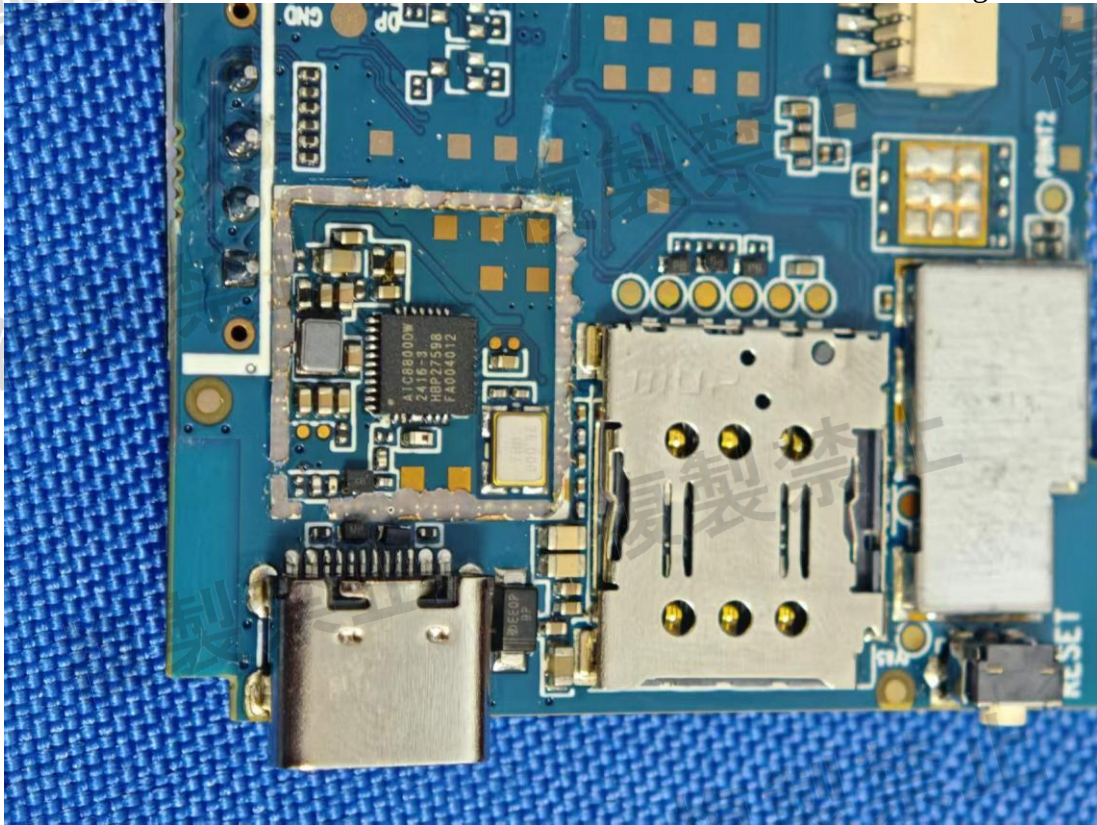


Figure 16
Inside Configuration of the EUT

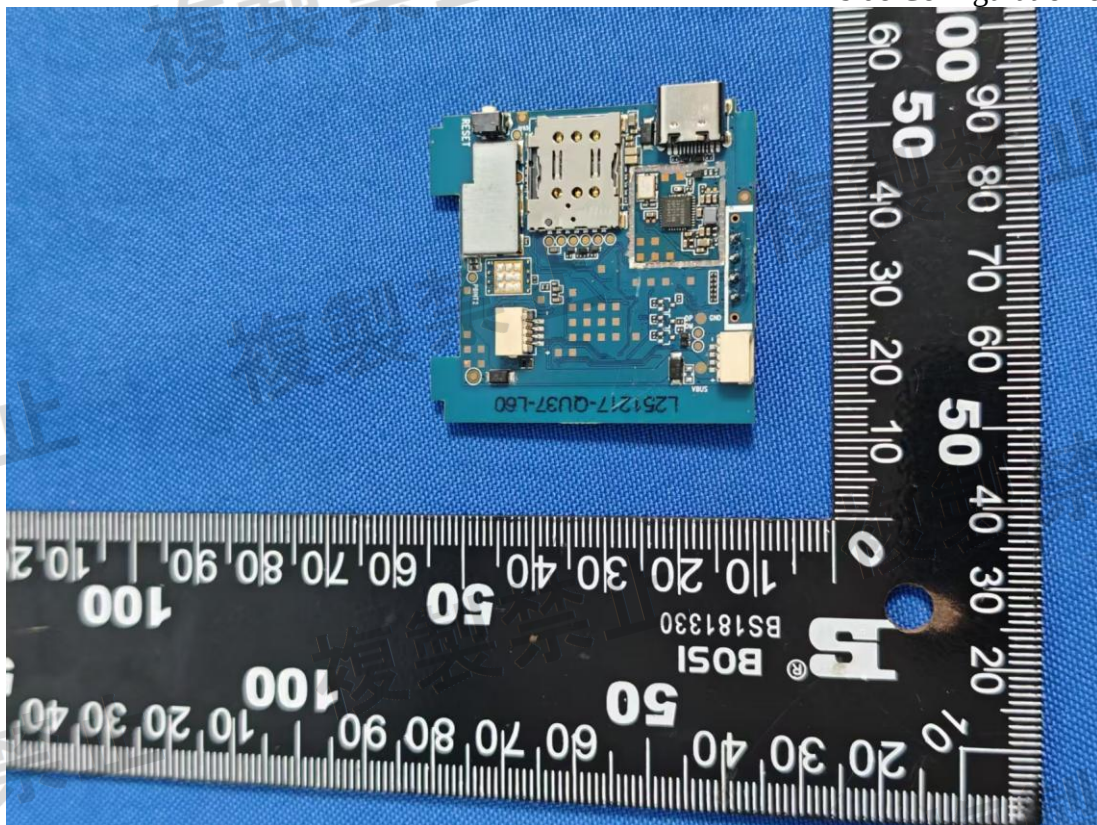


Figure 17

Inside Configuration of the EUT

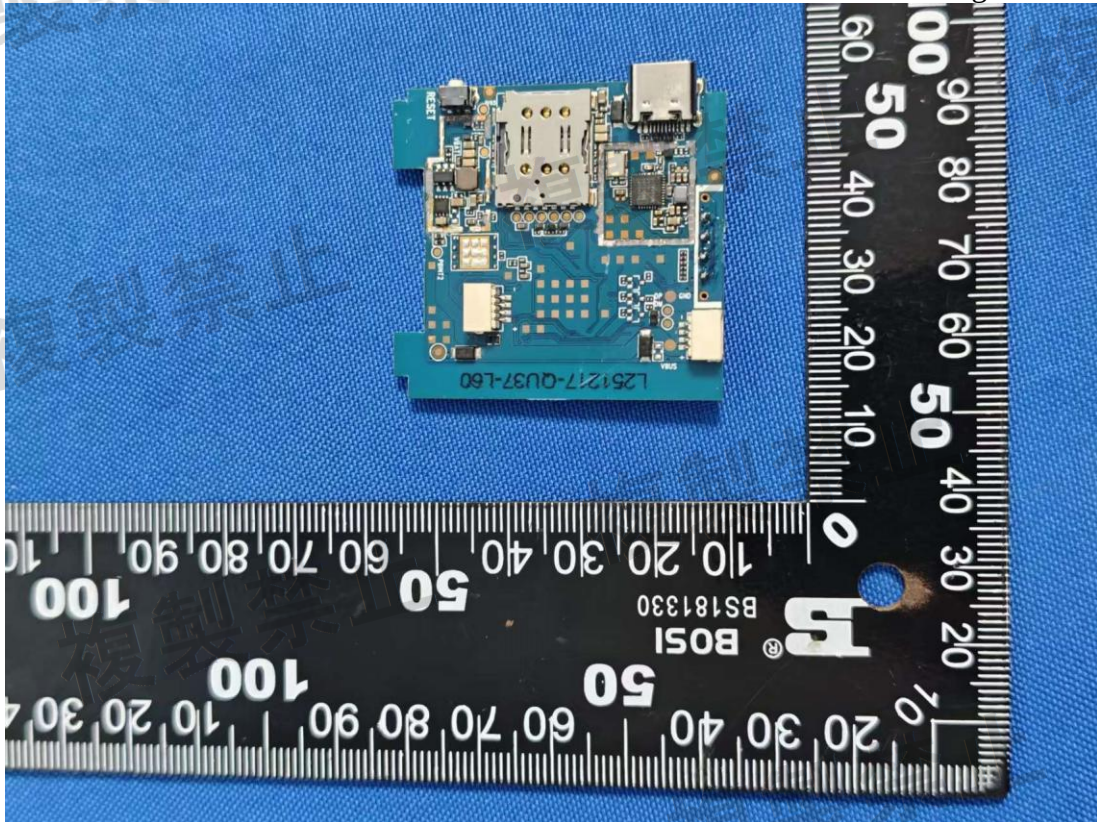


Figure 18

Inside Configuration of the EUT

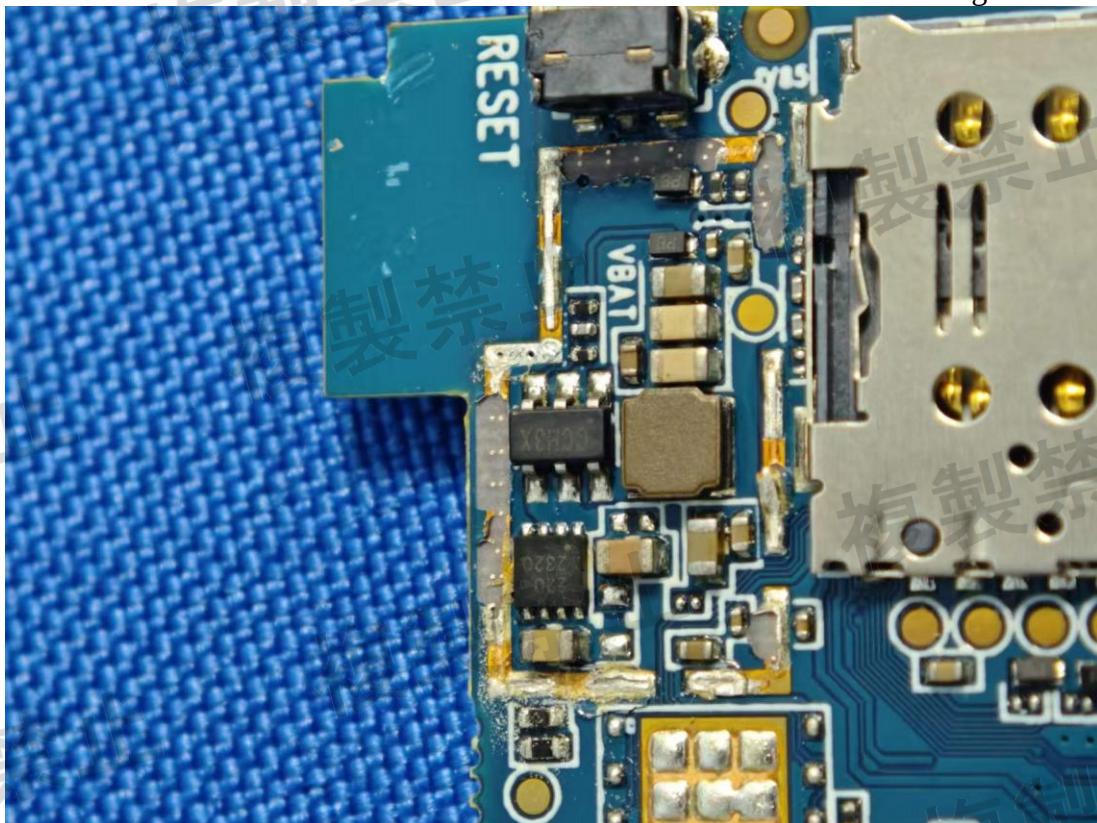


Figure 19

Inside Configuration of the EUT

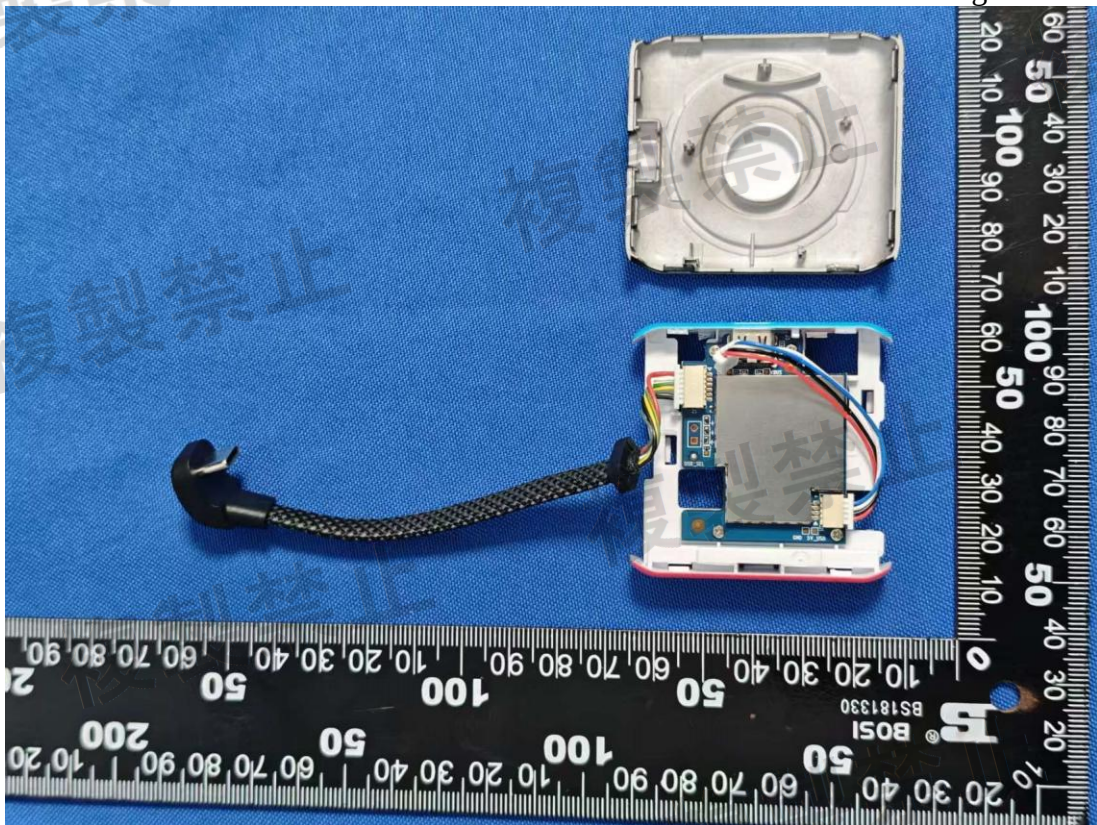


Figure 20

Inside Configuration of the EUT

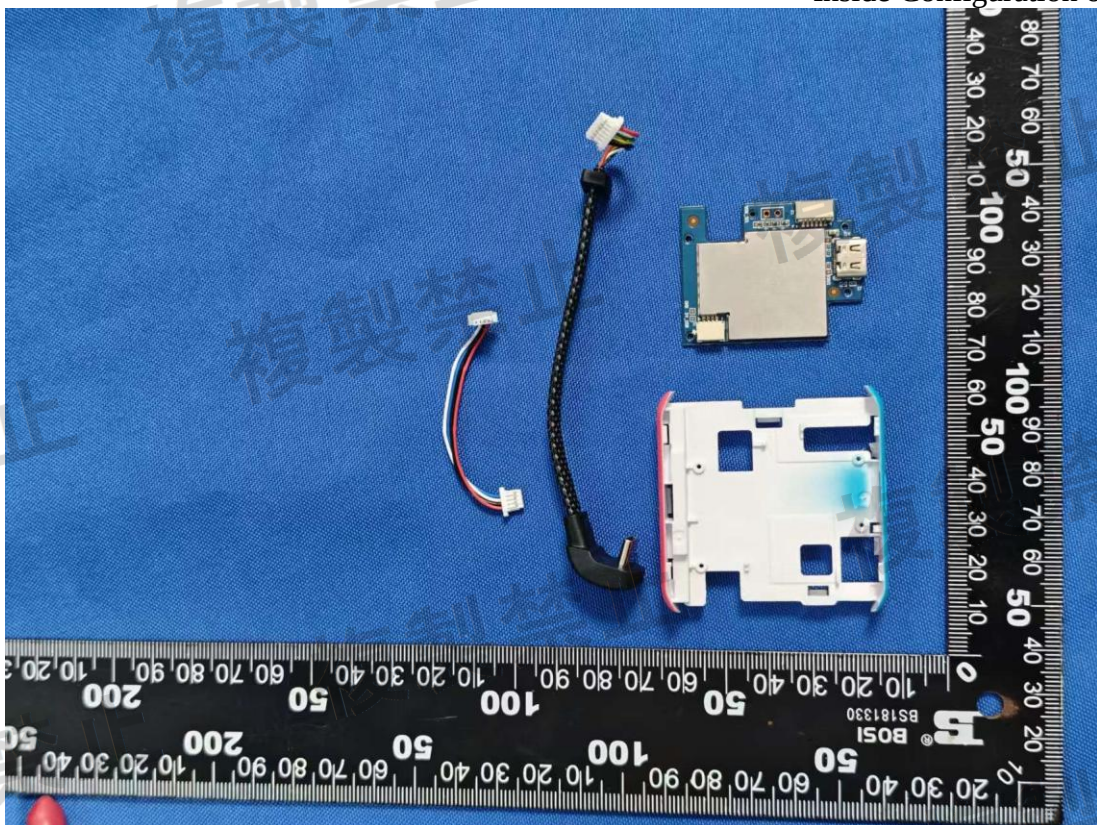


Figure 21

Inside Configuration of the EUT

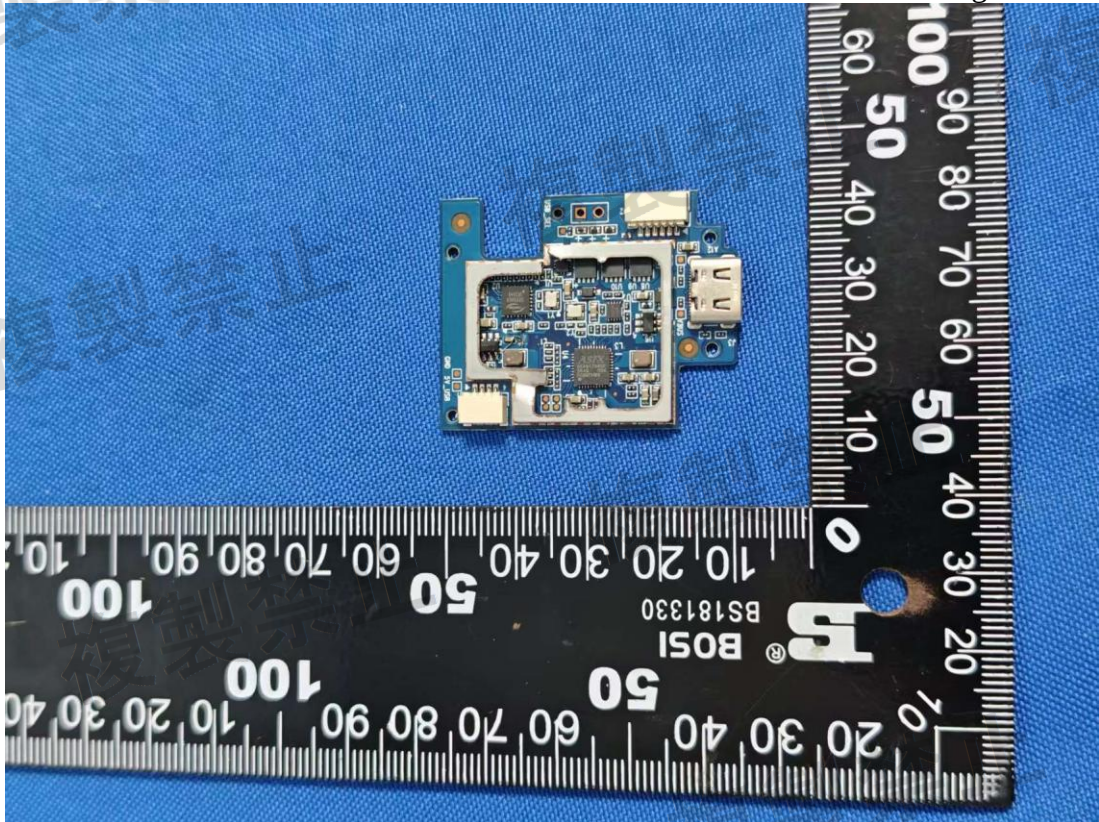


Figure 22

Inside Configuration of the EUT

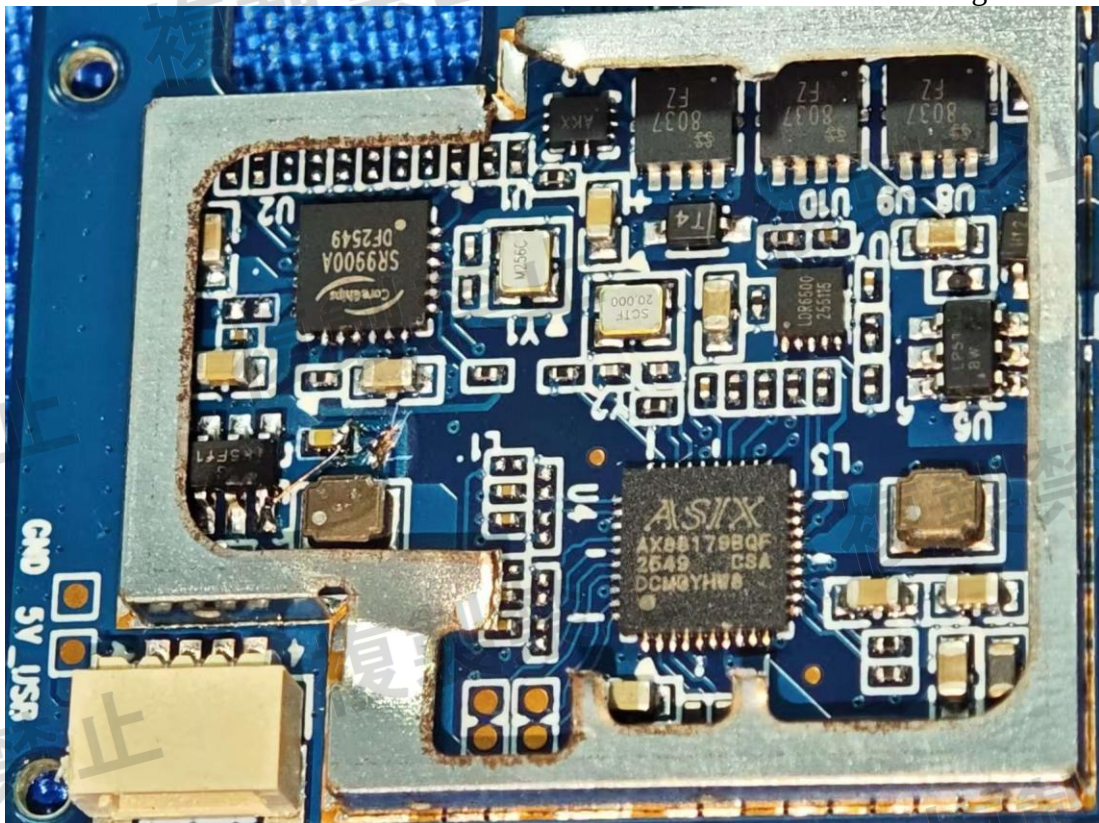


Figure 23
Inside Configuration of the EUT

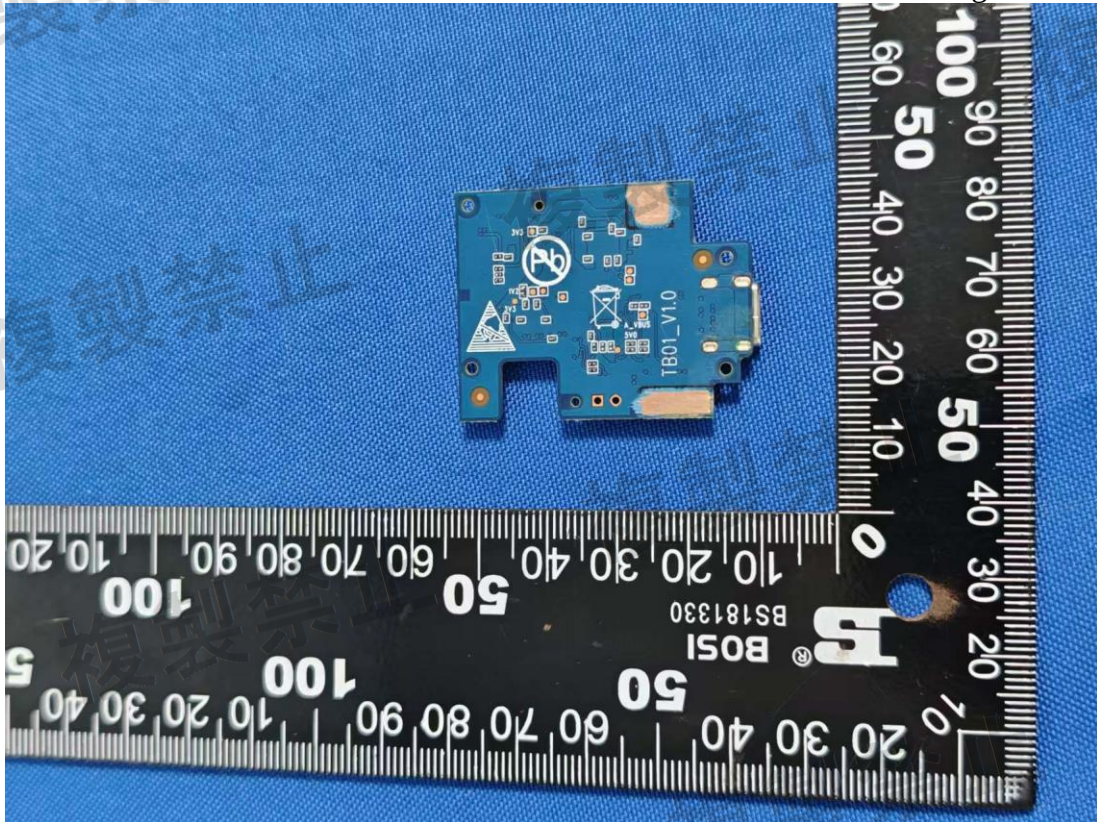


Figure 24
WiFi Module of the EUT

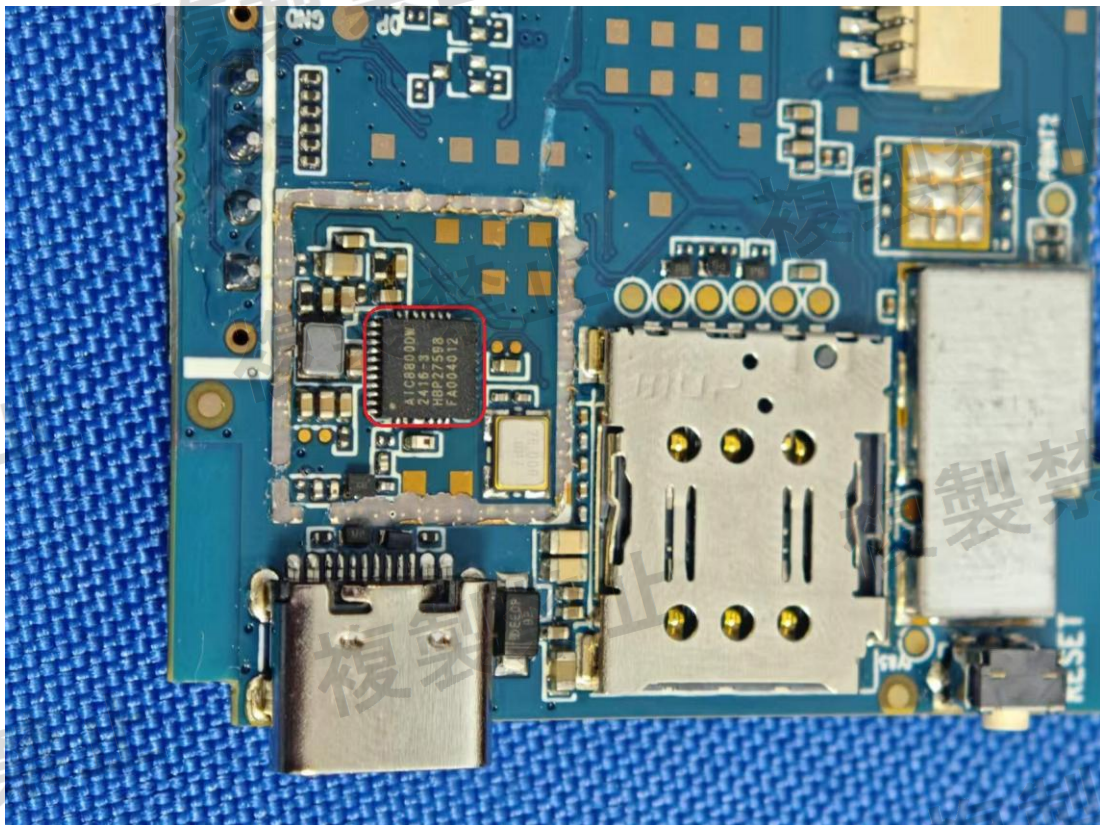


Figure 25
LTE Module of the EUT


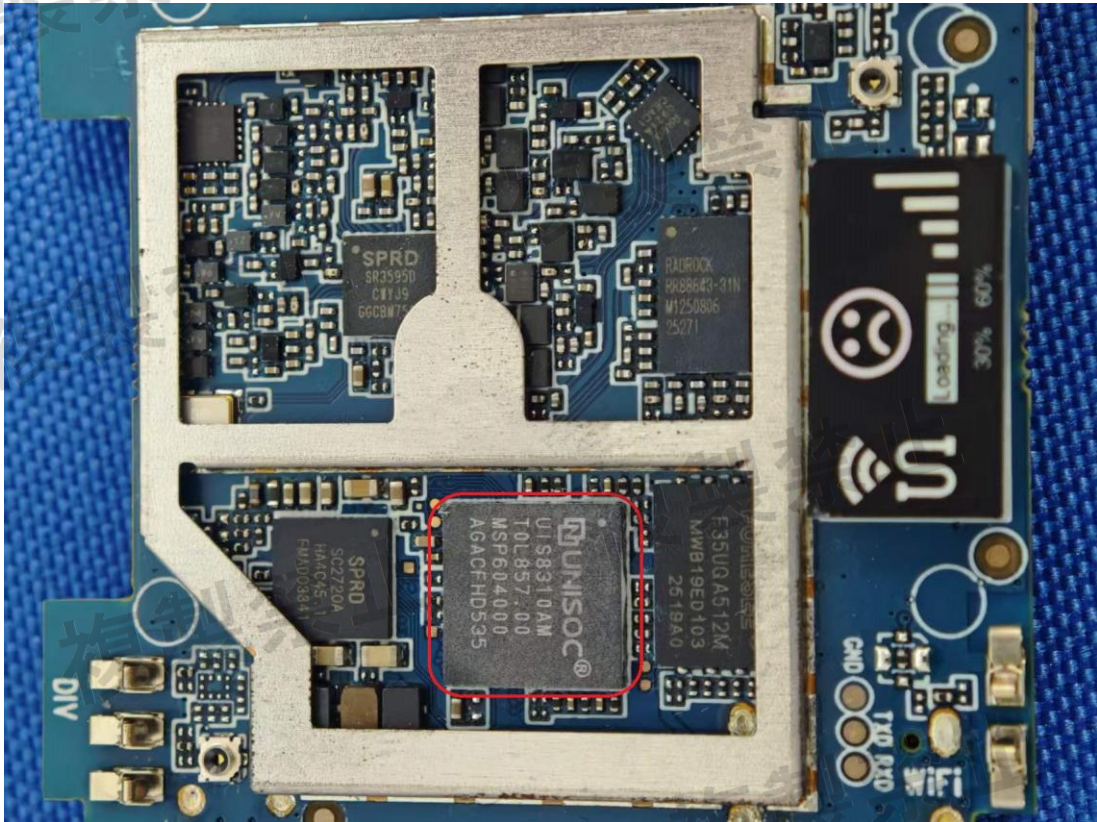


Figure 26
Antenna of the EUT

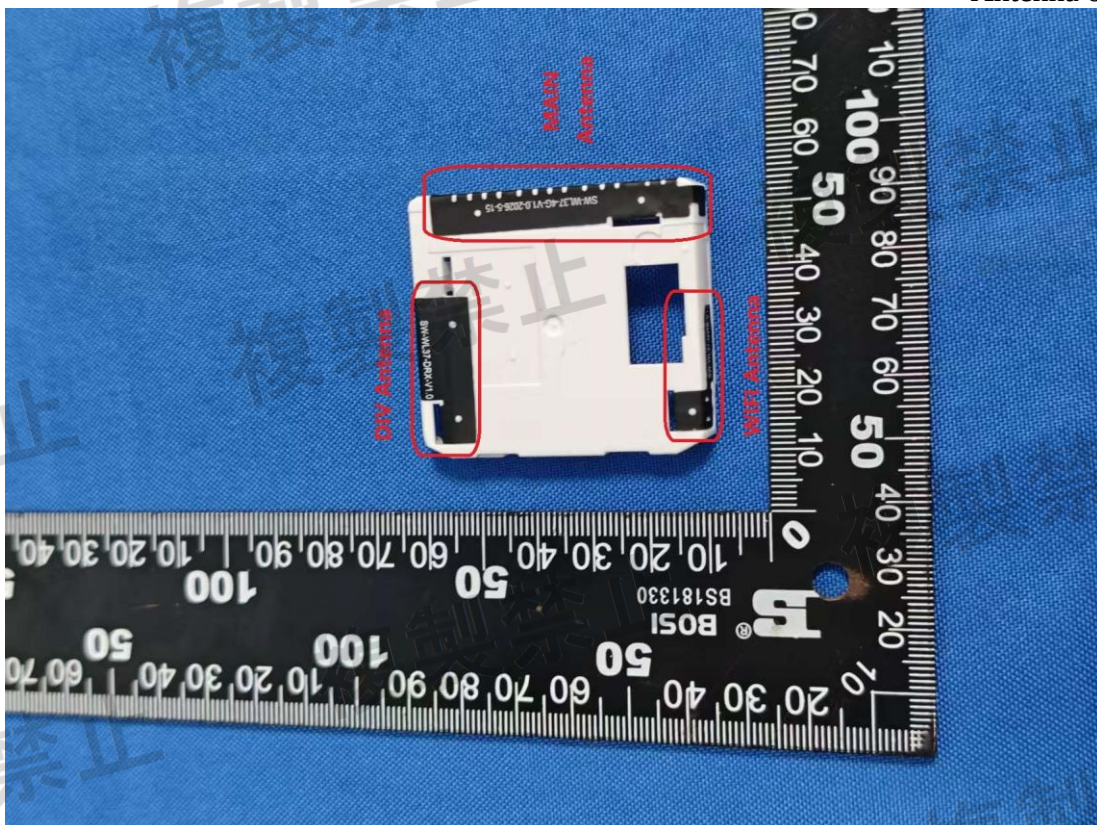

THE END