

User's Manual

200S GSM Desktop Phone


General Type	2
Phone appearance	2
The specifications to "the facade of the phone"	3
The specification to "handset"	3
The specification to "the rear appearance of the phone"	3
The specifications to "the back of the phone"	3
SIM card installation	4
Major Functions	4
Power on	4
Power off	5
Menu	5
Outgoing Calls	5
Receive Incoming Calls	6
Inquire the Outgoing Call	6
Inquire information for received calls	6
Inquire Not Received Calls	7
Inquire call charge statistics	7
Read or Delete Short Messages	8
Phone Book	9
Edit Phone book entries	9
Dial the number in the Phone book	10
Hot Keys	10
Inquire signal strength and the version of software	10
Call divert set-up and cancellation	10
Menu Keypad Tones	11
Ringing Tones and Volume Adjustment	11
Appendix 1. Technology characteristics	11
Appendix 2. Maintenance	11
Appendix 3. Troubleshooting	12
Appendix 4. Quick reference	13

General Type


- This phone shall not be used at garage, oil storage base, chemical plant or inflammable or explosive substance;
- This phone shall be avoided in the hospital, medical electronics equipment such as pacemaker or audiphones gets easily interference by it;
- If the phone is found not successful in login of the network before the use or after the use, please check up whether the SIM card is installed well;
- The phone does not identify old SIM card of 5V and 1.8V.




Phone appearance

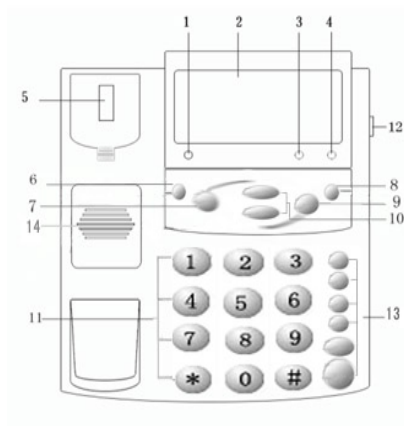

Facade of the phone

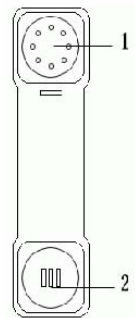

Handset Bottom of the phone

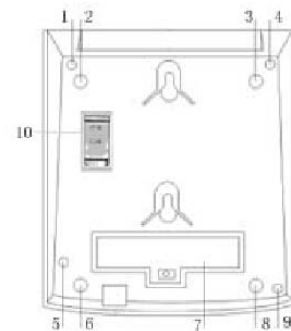

Back of the phone

SWITCH

The specifications to “the facade of the phone”

- 1 status indicator - at standby state, it flashes slow .at working state, it flashes fast.
- 2 LCD
- 3 Power indicator - When connected to power supply, it stays bright.
- 4 Working indicator - When the phone is working ,it stays bright.
- 5 Pinchcock
- 6 Save - Used to save telephone numbers
- 7 Menu - Enter function menu
- 8 Shift - Used to switch three input modes: ABC, abc and 123
- 9 Back - Back to the up-level menu
- 10 Up - Used during editing telephone book and reading records, short messages and menu. It is uses to adjust the volume during a call. Down - Used during editing telephone book and reading records, short messages and menu. It is uses to adjust the volume during a call.
- 11 Keyboard - -Used to input digit 0 to 9 and “*” and “#”
- 12 Antenna
- 13 Keys
 - Function key - Including Dialed calls key, Received calls key, Missed calls key, C key, Handfree key, OK key.
 - Dialed calls - inquire or redial the dialed telephone numbers
 - Received calls - inquire or call the answered telephone numbers
 - Missed calls - inquire or call the missed telephone numbers
 - C - cancel error input or refuse the incoming call
 - Handfree - answer or making calls at handfree status
 - OK - make calls or save setting
- 14 Loudspeaker

The specification to “handset”

- 1 - earphone
- 2 - microphone


The specification to “the rear appearance of the phone”

- 1,4,5,9 - screw holes
- 2,3,6,8 - cashions
- 7 - batteries box
- 10 - SIM card seat

The specifications to “the back of the phone”

- 1 Power interface connect to 7.5V AC
- 2 Ring volume switch
- 3 Power switch

SIM card installation

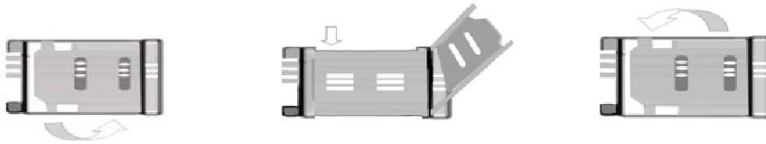


1. Push right and raise SIM card seat.
2. Insert SIM card to SIM card seat to ensure that SIM card edge is in the left side, make the metal side downwards.
3. Close it and slide the SIM card seat to the left, and fix it to the suitable position.
4. Close the card case.

Major Functions

When using, the phone should be power on within network coverage.

Power on

Connect the input end of transformer to Main Power socket, and connect the output end to the phone power supply port, the phone begins searching for the network login, and the display shows turn "SEARCHING FOR NETWORK""INITIALIZATION" "READ SIM PHONE BOOK"; When the display shows icons such as operator name, time and the signal, etc., the phone completes login.

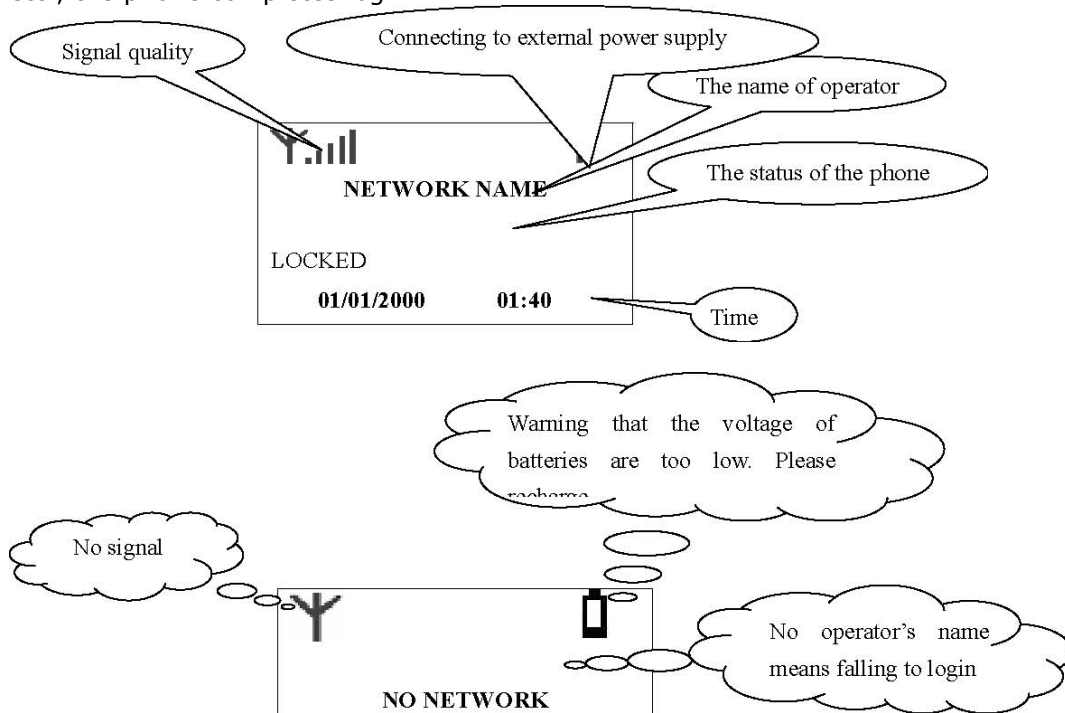


Notice: Please charge when the warnings for batteries appear. Otherwise the phone will halt. Then all the phone's functions will be ended. If the phone has halted, please connect the phone to external power supply and the phone will work in gear.

Power off

Cut off the Main power, the phone is power off and the display is cleared.

Menu

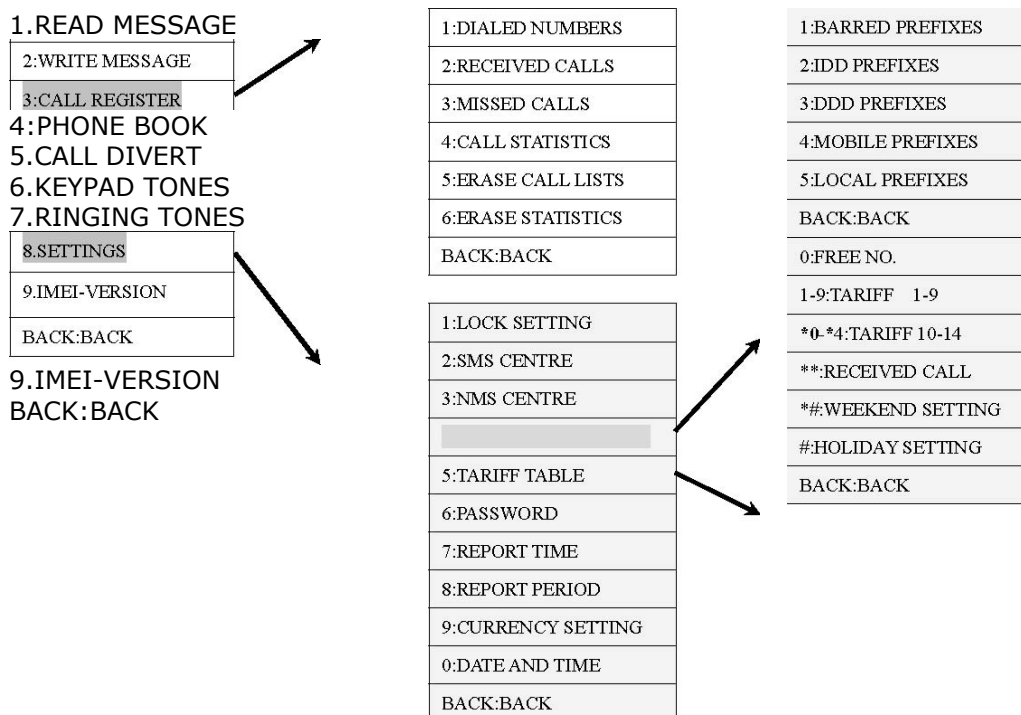

Notice: In main menu, you can't enter "SETTING" unless you input correct passwords.

 
Outgoing Calls

1. Pick the handset or press " Hand Free", the screen shows " PRESS OK TO REDIAL ", dial upon hearing the dialing tone;




PRESS OK TO REDIAL

2. Dial: dial the called number, the number dialed is shown on the screen in turn, and the sound for pressing key is heard. If there are any mistakes in dialing, press " Cancel" to return and input again; Press " OK " to redial the last number;



PRESS OK TO SEND 264145

 3. After dialing, press " OK" to send, if there is no dialing for continuous 6 seconds, and the number dialed is 2 digits or is more than 2 digits, the phone will send out the number automatically, the LCD shows number sending indication; If the number dialed is less than 2 digits, and it continues for 6 seconds of not dialing, the call will be cut automatically; If the number dialed is set by the operator as barred number, the LCD shows " BARRED NO." and returns to standby status;



BARRED NO. 264145

4. After the called party hooks off, the phone starts time calculation and billing: The display shows the tariff (The currency type is: Indian rupee. It is the same hereinafter) "TARIFF XXXX.XX/XXs", call duration " h:mm:ss" and call charge " INR:XXXXX.XX ";



TARIFF: 3.00/60S

0:00:12 INR: 3.00 26419086

In calling, press the numeral key or " * " or " # " to output corresponding Dual Tone Multiple Frequency (DTMF);

- In calling, press "Up" or " Down" to adjust volume;
5. Flap hook unit or press " Hand Free", the line is disconnected.

Receive Incoming Calls

1. When there is incoming call, the phone sends out ring and displays the incoming call number, hook off the phone or press " Hand Free" to receive the call; Also you can directly press " Cancel" to reject the call;



CALLING . . . 13537584454

2. When the call is connected, the phone begins timing and billing; The display shows the tariff (The currency type is: Indian rupee. It is the same hereinafter) "TARIFF XXXX XX/XXs", call duration " h:mm:ss" and call charge " INR:XXXXX.XX ";

TARIFF: 3.00/60S

0:00:12 INR: 3.00 26419025

In calling, press "Up" or " Down" to adjust the volume;

If there is no number for the incoming call (e.g., IP incoming call), the incoming call number will be displayed as " 0000".

Inquire the Outgoing Call

1. Press " Menu" to enter the main menu, select " 3:CALL. REGISTER ".



1:READ MESSAGE 00/02 2:WRITE MESSAGE 3:CALL REGISTER ↓

2. After entering call register menu, select "DIALED NUMBERS"



1:DIALED NUMBERS 2:RECEIVED CALLS 3:MISSED CALLS ↓

3. The display shows the information of last outgoing call: number, calling date, calling time, call duration and call charge;



01: 05/01/2004 16:59

0:00:12 INR: 0.95 26419025

Press "Up" or "Down" to inquire the latest 40 groups of outgoing call information;

Press "OK" to start the call and press "BACK" to return to up level menu; Press "Dialed Calls" to inquire outgoing calls.

Inquire information for received calls

1. Press "Menu" to enter the main menu. Select "3:CALL REGISTER".



1:READ MESSAGE 00/02 2:WRITE MESSAGE 3:CALL REGISTER ↓

2. Select "2:RECEIVED CALLS" after entering call register menu.



1:DIALED NUMBERS 2:RECEIVED CALLS 3:MISSED CALLS ↓

3. The display shows information of last call: number, incoming call date and incoming call time, call duration and call charge;



01: 05/01/2004 16:59

0:00:12 INR: 0.95 13560712331

Press "Up" or "Down" to inquire information for the latest 20 groups of received calls;

Press "OK" to start the call and press "BACK" to return to up level menu; Press "Received Calls" to inquire received calls.

Inquire Not Received Calls

When there is an un-received call in postpaid mode, the display shows "X MISSED CALLS" (X refers to the count of un-received calls)

1. Press "Menu" to enter the main menu, select "3:CALL REGISTER"



 
1:READ MESSAGE 00/02 2:WRITE MESSAGE

3:CALL REGISTER ↓

2. Select "3:MISSED CALLS" after entering call register menu.

1:DIALED NUMBERS 2:RECEIVED CALLS 3:MISSED CALLS ↓

3. The display shows phone number, call date and call time for un-received call of last time;



01: 05/01/2004 16:59

0:00:00 13560712331

Press "Up" or "Down" to inquire the last 10 groups of not received calls;

Press "OK" to start the call and press "BACK" to return to up level menu; Press "Missed Calls" to inquire missed calls.

Inquire call charge statistics

1. Press "Menu" to enter the main menu. Select "3:CALL REGISTER"



1:READ MESSAGE 00/02 2:WRITE MESSAGE 3:CALL REGISTER ↓

2. Select "4:CALL STATISTICS" after entering call register menu.



2:RECEIVED CALLS ↑

3:MISSED CALLS 4:CALL STATISTICS ↓

The display shows accumulation of call charge and call duration;

Press "Down" or "OK" to switch in order the accumulation of call charge and call duration for all calls, IDD, DDD, mobile phone, local fixed calls, incoming calls; Press "Up" to switch to the previous ones display

ALL CALLSCOSTS: 5.64 DURAS: 0000:01:40

5. Press "Back" to return to up level menu.

10. Clear call register

1. Press "Menu" to enter the main menu. Select "3:CALL REGISTER".



1:READ MESSAGE 00/02 2:WRITE MESSAGE 3:CALL REGISTER ↓

2. Select "5:ERASE CALL LISTS" after entering call register menu.

 


3: MISSED CALLS ↑

4: CALL STATISTICS

5: ERASE CALL LISTS ↓

3. The display shows "ERASE CALL LISTS? YES 1 NO 0"



ERASE CALL LISTS? YES:1 NO:0

4. Press "1" to erase call lists (outgoing calls, incoming calls and un-received calls), press "0" to return to up level menu.

Notes: If the phone bill memory is full, the phone automatically overrides phone bills generated previously.

11. Clear call charge statistics

1. Press "Menu" to enter the main menu. Select "3:CALL REGISTER"



1:READ MESSAGE 00/02 2:WRITE MESSAGE 3:CALL REGISTER ↓

2. Select "6:ERASE STATISTICS" after entering call register menu



4: CALL STATISTICS ↑

5: ERASE CALL LISTS

6: ERASE STATISTICS ↓

3. The display shows "ERASE STATISTIC YES 1 NO 0"



ERASE STATISTICS? YES:1 NO:0

4. Press "1" to erase statistics, press "0" to return to up level menu.

Read or Delete Short Messages

When a SMS is received, the phone will make a short alert tone, and display the new SMS icon on the LCD.

Press "Menu" to enter phone function selection menu when the phone is in standby status. The LCD shows "1 Read Messages" Press "1" key to enter the SMS list;



1:READ MESSAGE 00/02 2:WRITE MESSAGE 3:CALL REGISTER ↓

3. Press "UP" and "DOWN" to select the SMS to be read (the left of order number will be marked with

□").

□01:SMS UNREAD

02:SMS READ 03:SMS READ ↓

4. Press "OK" to read this SMS.



HELLO,ERIC! From:8613823631205 Time:04/07/03 16:15

Press "UP" or "*" to scroll up, and press "DOWN" or "#" to scroll down the message and related content such as the sender's phone number, date and time;

Press "OK" to forward the SMS after input number of the other party;



SEND TO: 8613923760855

7. In SMS listing status or reading status, press "Cancel" to delete the SMS.

13. Edit or Send Short Message

With this function, you can edit a message not longer than 140 English characters.

Press "Menu" to enter main menu when phone is in standby status.

The LCD shows "2 WRITE MESSAGES" Press "2" to enter SMS editing.



1:READ MESSAGE 00/02 2:WRITE MESSAGE 3:CALL REGISTER ↓

The LCD shows "1 NO 2 SMS F1 BACK OK SEND"

1:NO. 2:SMS BACK:BACK OK:SEND

3. Press "1" to input the number to which the message will be sent, press "OK" to save this number. If message cache is not empty, it indicates whether the sending is done, or returns to the menu of SMS editing



SEND TO: 8613823631205

4. Press "2" to edit message and input the text with keys, and press "BACK" to save the message after editing; If message cache is not empty, it indicates whether the sending is done, or returns to the menu of SMS editing.



ABC HELLO,ERIC!



Press "OK", the LCD shows "SEND? YES:OK NO:BACK"



SEND?

YES:OK NO:BACK

Press "OK" to send the message, Press "BACK" for not sending the message. Press "OK", the LCD shows "SENDING... PLEASE WAIT", if it is finished.




SENDING..PLEASE WAIT

The LCD shows "DONE" and return to up level menu, otherwise it shows "FAILED" and returns to menu of phone function selection.

DONE

When editing short message, press "123/ABC" to switch input methods as follows: letters (abc), capital letters (ABC), numbers (123). Press key "1" to select punctuation input under English mode.

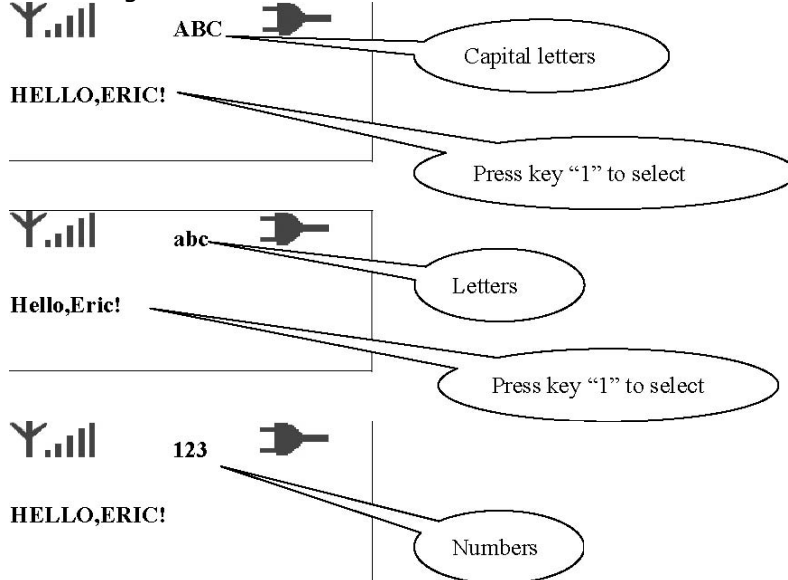

Phone Book

The phone book can save 30 entries including name and telephone number.

Enter Phone book

Press "Menu" to enter phone function selection when phone is in standby.

Press "UP" or "DOWN" to search "4 PHONE BOOK".

Press "4" to inquire phone book.



2: WRITE
MESSAGE

 
3: CALL
REGISTER

4: PHONE BOOK

Edit Phone book entries

At first enter the phone book.

Press "UP" or "DOWN" to select the entry that you want to edit (The entry selected by you will be marked with a "□" on its left).



□01:JACK
02:ANNA
03:SMISH

Press "Menu", you can edit the entry selected, the LCD shows down level Menu "NAME:
NO: "



abc

□NAME: JACK NO:13017262235




Press "UP" or "DOWN" to select what you want to edit name or telephone number(the entry selected by you will be marked with a "□" on its left). Input directly the name or NO. If you finish, press "SAVE" to save your entry and return to phone book menu.

Dial the number in the Phone book

Press "UP" or "DOWN", select the entry that you want (The entry you selected will be marked with a "□" in its left).

Press "OK" to dial the number.

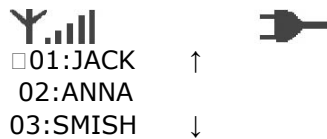


Hot Keys

If you press an appropriate digit key, you can quickly retrieve and dial the number saved in the first 10 locations of the phone book;

- 1) Lift up the handset or press "Hand-Free".
- 2) Press the appropriate digit key.
- 3) Press "OK", it will dial the number saved in appropriate location of the phone book (Digit 0 will dial phone book location 10).

Inquire signal strength and the version of software

The informations about the phone such as IMEI code ,the version of software and hardware can be inquired if you elect "9—IMEI-VERSION" in the main menu. Press "OK" or "F1" to back the main menu.

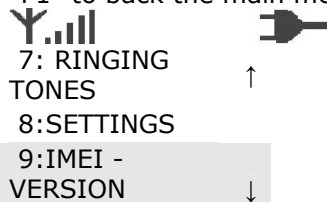


IMEI:351249000337442
SOFTWARE: V01R01 HARDWARE: V1.00

Call divert set-up and cancellation

Before using this service please confirm you have applied for it from the GSM operator. If not, this set-up is invalid.

- 1) Press "MENU" to enter the main menu when the phone is in standby status.

□ Press "UP" or "DOWN" to select "5: CALL DIVERT".

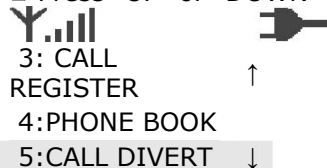

- 2) Set call divert:

If call divert is not set, press "5" to set up call divert.
Use the number keys to edit the telephone number which incoming call will be diverted to.

□ Press "OK", the LCD shows "SET-UP DONE" if the call divert have been set. 3) Cancel call divert
Press "UP" or "DOWN" to select "5 CALL DIVERT".
Press "5" to cancel call divert if it is set up.
The LCD shows "DIVERT CANCELED" if call divert is cancelled successfully.

Menu Keypad Tones

1) Press "Menu" to enter the main menu when the phone is in standby status. 2) Press "UP" or "DOWN" to select "6 KEYPAD TONES". 3) Press "6" to switch menu keypad tones. 4) Press "1", the tone will be ON; Press "0", the tone will be OFF. 5) Press "OK" to return to the main menu.

KEYPAD TONES 1:ON 0:OFF

1

Ringing Tones and Volume Adjustment

Your phone can select 7 kinds of ringing tones and 5 steps of sound level. 1) Press "Menu" to enter main menu when phone is in standby status. 2) Press "UP" or "DOWN" to select "7 RINGING TONES". 3) Press "7" to enter ring tones setting. 4) Press "1", "2"... "7" to select ring tones, press "UP" or "DOWN" key to change ring tones level. 5) Press "OK" to return to the main menu.



RINGING TONE(1-7)V ↑↓ 62

Appendix 1. Technology characteristics

- Working condition environment temperature: 0 ~ +50
- Relative humidity: 10%~95%
- Air pressure: 86~106kPa
- Environment yawp: ≤60dB(A)
- working frequency: GSM900/GSM1800 MHz
- stability of frequency: better than 2.5PPM
- delicacy of signal: -94dBm
- emission power: <2w
- 220v AC power supply
- Continuous call time duration when using battery: 2-3 hours
- Continuous standby time duration when using battery: 48-72 hours (related to network condition)

Appendix 2. Maintenance

- 1) The phone should save in the desiccant place.
- 2) When use the phone, it should not be knocked, avoid breaking the case.
- 3) When the face of the case is dirty, please use soft cloth to wipe up. Avoid using chemical ingredients.
- 4) If there is some trouble of the phone, please send it to the repair center.

Storage: the phone that is packed or not should save in cool and dry place,

- 5) pile up no more than 10 layers

Appendix 3. Troubleshooting

Couldn't Dial-in and Dial-out Using batteries	1.The Voltage of battery is low, please recharge up. 2.Tole of Battery box isn't connected well.
LCD black screen	1. Power supply isn't connected well. 2. LCD was not joined well, please check the line of front plate and motherboard.
No dial tone	1.Check the joint of handset and phone, please connect it again. 2.The line of handset or earphone in handset is broken.
Couldn't hear of the sound during call	1.Handset was not joined well with motherboard please join it again. 2.The line of handset or earphone in handset is broken.
Sound is too loud or has noise	1.Network signal is interfered. 2.Sound sets too loud, press "UP" or "DOWN" to adjust during call.
Can't work	1.Press "ON/OFF" to restart. 2.Power supply doesn't connect well. 3.Power switch is broken.
No response to keystroke	The line of keyboard isn't connected well, please check the line of front plate and motherboard.
Signal indication is unstable	1.Network signal is unstable, please pull out the antenna. 2.Antenna is loose turn the screw to the right to tighten it.
Can't login the network	1. SIM card doesn't fix well. 2. SIM card is locked, take SIM card out and set it's PIN to 1234, close PIN yard. 3. Network signal is unstable.
Ring volume too small or no sound	1.Turn audio-switch to side of H.

Appendix 4. Quick reference

1. Press "UP" or "DOWN" to adjust volume loud or small.

Echo during call

2. Network malfunction

Set-up Instructions

This document is not provided to the final user of wireless GSM business phone, it is only provided to operators distributing the phone. Engineers of related departments shall read carefully. The password for set-up shall be memorized and confidentiality shall be kept.

I. Enter the set-up procedures

If the customer does not put forward any special requirements, the phone can be set as no locking of card or no locking of phone when it leaves the factory, And the user insert any SIM card to login the network and enter standby status. Card locking: add password to SIM card to limit SIM card's applications in other types of mobile phone; Phone locking: the phone only identify SIM card first set up, the phone can not be used when other cards are applied; No permit to use other SIM card in this phone; Press "MENU" in hook-on, select Item 8th "SETTINGS" to enter the set-up procedure.



8 :SETTINGS ↑9:IMEI-VERSION BACK:BACK

II. Set up the phone parameters

1. Hook on, press "MENU", the display shows main menu list, press "UP" or "DOWN" to find "8.SETTING", press "8", the screen shows "ENTER PASSWORD", input 8-digit password (the initial password for factory leaving is sets up as 30459086). Press "OK", if the password is correct, the display shows set-up menu List, otherwise it indicates "PASSWORD ERROR" and returns to the status of main menu list;




ENTER PASSWORD *****

2. Modify set-up information: Press "1" in set-up menu to select "LOCK SETTING"

1: LOCK SETTING 2:SMS CENTER 3:NMS CENTER ↓

 Input 8-digit numbers WXYZCRIJ to set up locking card, locking phone, whether permit to receive calls, etc. (the default value is 00001111,i.e., no locking card or phone, allow to receive calls), press "F1" to return to the set-up menu;



LOCK SETTING 00001111

W=0: not locking card, W=1: locking card;

X=0: not locking phone, X=1: locking phone;

I=0: not permit to receive calls, I=1: permits to receive calls;

Y Z C R J are backup digits. Only W,X,I are valid now.

Notes: When W is 1 and X is 1 at the same time, it realizes locking phone and locking card concurrently.

3. Short message center set-up: in the set-up menu, press "2" to select "SMS CENTER", the display shows "SMS CENTER", press "#" to clear the input line, press "MENU" to switch input numbers or characters, press '1' to input '+' in character input status, input SMS center number by pressing number keys in number input status, press "F1" to return to the set-up menu;



123 SMS CENTRE +8613800755500



4. Set up Network Management System: In set-up menu, press "3" to select "NMS CENTRE", the LCD shows "NMS CENTRE", press "#" to clear the input line, press "MENU" to switch input numbers or characters, press '1' to input '+' in character input status, input NMS center number by pressing number keys in number input status, press "BACK" to return to the set-up menu;

 


123 NMS CENTRE +8613923760855



5. Set up prefix for barred NO. and DDD prefix, mobile phone prefix, etc: presses "4" in set-up menu to select "PREFIXED NO.", the LCD shows menu, press "1", "2", "3" "4" and "5" to enter respectively the set-up of barred number prefix (BARRED PREFIXES), IDD prefix (IDD PREFIXES) and a DDD prefix (DDD PREFIXES), mobile phone prefix MOBILE

PREFIXES local fixed phone prefix LOCAL PREFIXES ; In the set-up of NO., press '#' to clear the whole NO., press "CANCEL" to delete the last digit of number displayed, press "OK" to erase a certain number after deleting it, add the number after viewing the last number, press "OK" to input the next number after input of a certain number. Each type of NO. can set up 15 numbers at maximum.



1: BARRED PREFIXES 2: IDD PREFIXES 3: DDD PREFIXES ↓

(i) Barred NO. prefix Set up barred NO. prefix the phone automatically bar the NO. starting with the barred prefix.



BARRED PREFIXES

1: 16

(ii) IDD prefix

Set up international long distance matching prefix such as "00". After the set-up of this prefix, IDD traffic can be calculated correctly.



IDD PREFIXES

1: 00

(iii) DDD prefix Set up domestic long distance matching prefix, such as "01 02 ... 09". After the set-up of this prefix, DDD traffic can be calculated correctly.

 


DDD PREFIXES

1: 01

(iv) Mobile phone prefix

Set up the mobile phone matching prefix after the set-up the mobile phone traffic can be calculated correctly.



MOBILE PREFIXES

1: 138

(v) Local fixed phone prefix

Set up local fixed phone prefix after the set-up the local fixed phone traffic can be calculated correctly. After the set-up, press "BACK" to return to menu, where you press "BACK" to return to set-up menu.



LOCAL PREFIXES

1: 26

6. Set up the FREE NO.: Press "5" in set-up menu to select "TARIFF TABLE", LCD shows tariff menu, press "0" to enter the free number. (FREE NO.) set-up;

0: FREE NO.

1-

9 TARIFF 1-9

*0- 10-


*4: TARIFF 14 ↓

In the free GNP set-up, press "CANCEL" to delete the last digit of number displayed, press '#' to delete the whole line, press "OK" to erase a certain number after deleting it, add the number after viewing the last number of GNP, press "OK" to input the next number after input of a certain number. The maximum free numbers are 20, press "BACK" to return to tariff menu after the set-up, press "BACK" in the tariff menu to return to set-up menu;

TARIFF 00 FREE NO.

NUM01: 110

 7. Set up tariff and GNP You can set up 14 tariffs other than free NO.. In set-up menu press "5" key to select "TARIFF TABLE" the display shows tariff menu, press "1"- "9" key respectively to enter the set-up of tariff type 1-9. For tariff type of 10-14, press "*" first, then press "0-4" keys to enter set-up.



1-9 TARIFF	1-9	↑
*0-	10-	
*4 TARIFF	14	
** :RECEIVED	CALL	↓

(Tariff Menu)

Tariff set-up adopts unified tariff for holidays and weekend discount period without time section. Time section mode is adopted for charge of working days, it is applied to time sections of one day, from 0 to 24 O'CLOCK there are maximum 4 time sections for each day.

When you enter the tariff set-up, the display shows "T :000000"

"F1:000000000000", "MUM01:"

TARIFF No.(tariff type)

□T 000000 F1 000000000000 NUM01

first time billing time duration 3 digits 000-250 unit second billing duration after the first time 3 digits 000-250 unit second

Press "OK", the LCD will display as follows;

TARIFF No.(tariff type)

□D 0000000000000000 F1 000000000000 NUM01

D stands for holiday and weekend tariff set-up the format is F0F1F2F3, F0 F1 F2 F3 is respectively the holiday first time charge rate 4 digits 0000-9999 holiday charge rate after the first time charge 4 digits 0000-9999 weekend first time charge rate 4 digits 0000-9999 weekend charge rate after the first time charge 4 digits 0000-9999 Fn stands for working day n time section (1<=n<=4) tariff set-up the format is

hnhnmnmFn0Fn1 hnhnmnmn is the end time for n time section among them, hnhn is the end hour of time section 2 digits mnmn is the end minute of time section 2

digits Fn0 is the first time charge rate for n time section 4 digits 0000-9999 Fn1 is the first time charge rate for n time section 4 digits 0000-9999 after the first

time Press "CANCEL" key to delete the last digit of this tariff press "#" to clear tariff can be set up again after clearing. When the whole tariff shall be deleted without deleting

GNP press "#" to clear T and then press BACK to return.

Press "OK" to set up another time section if 4 time sections are set-up, press "OK" to next step to set up GNP corresponding to this tariff

Example 1 For the whole day of the working day, 500 units/minute is charged for the first time then 250 units is charged for each 30 seconds 300 units/minute is charged for the first time of holiday then 150 units is charged for each 30 seconds hereinafter 400 units/minute is charged for the first time of weekend 200 units is charged for each 30 seconds hereinafter.

We can set up as follows

TARIFF 01

□T 060030 F1 000000000000 NUM01

T : "060030" press "OK"

TARIFF 01

□D 0300015004000200 F1: 000000000000 NUM01

D : "0300015004000200" press "OK"

TARIFF 01 D 0300015004000200

□F1: 240005000250 NUM01

F1: "240005000250"

Press "OK" to next time section but if there is no need of set-up for next time section press continuously "OK" to next step

Example 2 7 00 to 20 20 600 units for the first 60 seconds of the working day and 300 units for each 30 seconds hereinafter

20 20 to 22 00 400 units for the first 60 seconds of the working day and 200 units for each 30 seconds hereinafter

22 00 to next day 7 00 300 units for the first 60 seconds of the working day and 150 units for each 30 seconds hereinafter.

For holiday time sections, 300 units are charged for the first 60 seconds and 150 units for each 30 seconds hereinafter. For weekend time sections, 400 units are charged for the first 60 seconds and 200 units for each 30 seconds hereinafter.

You can set up as follows,

TARIFF 01

□T 060030 F1 000000000000 NUM01

T : "060030", Press"OK"

TARIFF 01

□D 0300015004000200 F1: 000000000000 NUM01

D : "0300015004000200", Press"OK"

TARIFF 01 D 0300015004000200

□F1: 070003000150 NUM01

1st Time section F1 "070003000150", Press"OK"

TARIFF 01 D 0300015004000200

□F2: 202006000300 NUM01

2nd Time section F2 "202006000300", Press"OK"

TARIFF 01 D 0300015004000200

□F3: 220004000200 NUM01

3rd Time section F3 "220004000200", Press"OK"

TARIFF 01 D 0300015004000200

□F4: 240003000150 NUM01

4th Time section F4 "240003000150", Press"OK" to next step

TARIFF 01 D 0300015004000200 F4: 240003000150

□NUM01 1861

After tariff set-up, press"OK"to set up the phone prefix of tariff billing. In GNP set-up press"CANCEL"to delete the last digit of NO. displayed press"#"to clear. After clearing a certain NO., press"OK" to delete this NO., view the last part of the GNP and then add NO., press"OK"after input of one NO. and then you can input the next NO., maximum 20 GNP can be set up for each type of tariff after set-up of corresponding GNP of this tariff, press"BACK"to return to tariff menu press"BACK"to return to set-up menu in tariff menu.

8. Set up incoming call tariff: press "5" to select "TARIFF TABLE", LCD shows tariff menu, press "UP" or "DOWN"to find "** RECEIVED CALL ", press "*"+"*" keys to enter the incoming call tariff set-up. The screen shows tariff set-up, the default is free incoming call (displays "T :000000" "D :0000000000000000","F1:000000000000"), the definition for tariff format is the same as that in Article 8. Press " CANCEL" to delete the last digit of call charge, press "#"to reset the tariff for incoming call, whose tariff can be set up after clearing. When you need to delete the whole tariff, press "#" to delete T, press "BACK" to return;

TARIFF 15

□T 000000 F1: 000000000000

TARIFF 15

□D 000000 F1: 000000000000

Press "BACK" to return to tariff menu after the set-up. Press "BACK" in tariff menu to return to set-up menu

Example 1: TARIFF LEVEL 15 is set up as "060030" "0100005001000050", "240001000050" it shows 100 unit will be charged for the first 60 seconds for a call in working day, holiday or weekend, 50 units will be charged for each 30 seconds hereinafter;

TARIFF 15

□T 060030 F1: 000000000000

TARIFF 15 D 0100005001000050

□F1: 240001000050

Example 2: TARIFF LEVEL 15 is set up as"060030","0100005001500075","240002000100:

TARIFF 15

□T 060030 F1: 000000000000

TARIFF 15 D 0100005001500075

□F1: 240002000100

It shows that for working days, 200 units will be charged for the first 60 seconds, and 100 units will be charged for each 30 seconds hereinafter;

For holidays, 100 units will be charged for the first 60 seconds, and 50 units will be charged for each 30 seconds hereinafter;

For weekend, 150 units will be charged for the first 60 seconds, and 75 units will be charged for each 30 seconds hereinafter;

Example 3: TARIFF LEVEL 15 is set up as "000000" "000000000000000000"

"00000000000000" :

TARIFF 15

□T 000000 F1: 00000000000000

TARIFF 15

□D 000000000000000000 F1: 00000000000000

It shows that it is a free incoming call;

Notice: the above incoming call tariff can be valid when "the bit of whether or not permit to receive calls" in setting "LOCK SETTING" is equalled to '1', if not, Phone will refuse the incoming call.

9. Set up weekend discount time section: Press "5" in set-up menu to select "TARIFF TABLE" the display shows the set-up menu, press "*" + "#" to enter weekend discount time section, the display shows "WEEKEND" and the parameter format is "W1h1h1W2h2h2", among them "W1h1h1" "W2h2h2" is respectively weekend discount start time and end time, W1 stands for what day is the start time of weekend (1 digit, 1-7 corresponds respectively to Monday-Sunday), h1h1 is the start hour (2 digits, 00-23), W2 stands for what day is the end time of weekend (1 digit, 1-7 corresponds respectively to Monday-Sunday), h2h2 is the end hour (2 digits, 00-24).

Example 1: Set up the whole day of Saturday and Sunday as weekend discount time section Set it as: 600724



WEEKEND

600724

Example 2: Set up Saturday 13 00 to next Monday 07 00 as weekend discount time section Set it as: 613107



WEEKEND

613107

When you set it up, press "CANCEL" to delete the last digit of NO. displayed, press "OK" to save, press "BACK" to return to tariff menu after set-up. If the user does not set up this item, the phone recognizes set-up in Example 1 as weekend discount time section.

10. Set up holidays: Press "5" to select "TARIFF TABLE" the display shows tariff menu, press "#" to enter holiday set-up, the display shows holiday 01, among them ""START MMDDhh" stands for holiday start time, "END MMDDhh" stands for holiday end time, the time format is: MM is month (2 digits, 01-12), DD is the day (2 digits, 01-31), hh is the hour 2 digits 00-23. When editing, press "Up" or "Down" to switch start/end time, press "Cancel" to show the last digit of the NO., Press "#" to clearing, press "OK" to delete one holiday after clearing of a certain holiday. Only after viewing the last of the holiday can you add the holiday, press "OK" to input the next holiday after the input of one holiday. You can set maximum 10 holidays, press "BACK" to return to tariff menu after set-up.



HOLIDAY 01

□START: 010100 END : 010200

11. Revise set-up password: press in set-up menu " 6" to select "PASSWORD", screen shows "CHANGE PASSWORD", press " OK" after input new password, the display shows "REENTER PASSWORD", input again the new password and press " OK". If the twice password input is in compliance, it saves successful, the display shows "CHANGED" to return to the set-up menu, otherwise the LCD shows " FAILED " and returns to the set-up menu.



CHANGE PASSWORD *****

12. Set up timely report time: In set-up menu, press "7" to select "REPORT TIME", the LCD shows "REPORT TIME(hhmm)", in which hh is for hours 00-23 mm is for minutes 00-59. After set-up, press "OK" to save and return. After each successful set-up, the phone will take automatically the set-up date as the first report date.



REPORT TIME(hhmm)

1230

13. Set up report interval: In set-up menu, press "8" to select "REPORT PERIOD", the LCD shows "REPORT PERIOD 00-31 " '00' means no report, 01-30 are XX day, 31 means the report period is one month (e.g., this report date is January 31st, and the next report date will be February 29th / March 29th / April 29th). After set-up, press "OK" to save and return, the phone will take automatically the set-up date as the first report date.

REPORT PERIOD(00-31) 01

14. Set up currency types: Press "9" in set-up menu to select "CURRENCY SETTINGS" the display shows "CURRENCY NAME-SYMBOL" and currently-used currency name, currency standard symbol.



CURRENCY NAME-SYMBOL 0:INDIAN RUPEE

INR

Press "UP" or "DOWN" to select one currency type, and then press "OK" to save and return.

The currency types are as follows:

No.	Currency name	Symbol	Billing display format
0	INDIAN RUPPEE	INR	XXXXX.XX
1	U.S. DOLLAR	USD	XXXXX.XX
2	EURO	EUR	XXXXX.XX
3	CAF FRANC	FCFA	XXXXX.X
4	AFC FRANC	XOF	XXXXX.X
5	NIGERIAN NAIRA	NGN	XXXXX.X
6	EGYPTIAN POUND	EGP	XXXXX.X
7	KENYAN SHILLING	KES	XXXXX.X
8	MAURITANIA OUGUIYA	MRO	XXXXX.X
9	ALGERIAN DINAR	DZD	XXXXX.X
10	JORDANIAN DINAR	JOD	XXXXX.X
11	RUSSIAN RUBLE	SUR	XXXXX.X

15. Set up time and date

(a) Press "0" key to select "0 DATE AND TIME" in the settings menu the LCD will display "(YYYYMMDD)(hhmm)".

(b) Input the correct date and time :Year(2digits),month,day,hour and minute, for example:2003/5/10,12:30,you should input "200305101230";



(YYYYMMDD)(hhmm) 200305101230

(c) Press "OK" key to save the input and return to the settings menu Notes:

i. When the phone charges, it searches in turn from tariff 0 to tariff 14 GNP, until the matching. So when the number of a certain prefix including another prefix but the tariff is different, the one included need to be defined earlier, for instance: number beginning with 0 includes 00, 01, 02, etc., the prefix of 00 is IDD, so IDD should be defined earlier than DDD.

ii. In parameter modification or tariff set up, press "OK" to confirm this modification and then hook on to save.

iii. Number within barred number list or numbers not set up in all tariff tables are in barred group.

FUTURE CONTACTS

AlineA Limited

BULGARIA, 1303 Sofia

72 Hristo Botev Blvd, fl. 2

Phone: (+359 2) 931 2222; 489 3200

Fax: (+359 2) 931 2384

E-mail: office@alinea.bg

WEB: http://voip.alinea.bg