


## Wireless Charger

### User Manual

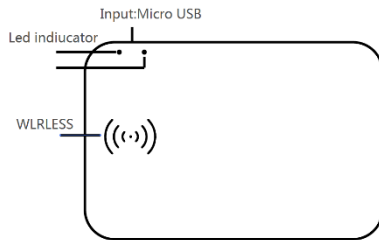

#### Product Specification

SKU #:362992

Model No.: MQ-W14

Input:9V/2A, 5V/2A

Output:10W (Max)


Efficiency:  $\cong 73\%$

Transmission distance:  $\cong 8\text{mm}$

#### Product Introduction

Wireless charger is an intelligent product, with simple design and compatible with all smart phones that has wireless option. Charging your smart phones without plugin any cables, which is more convenient and efficient, it can bring you with limitless life experience as well as safe and free experience with wireless charging function.

#### INSTRUCTIONS:

- 1, Connect the Micro USB end to the wireless charger, and connect the USB end to DC charger or wall charger
- 2, When the wireless charger connects to the power supply, those two LED indicators will flash 3 times
- 3, Put your wireless device on top of the wireless charger where there has a wireless symbol 
- 4, Once the wireless device is charging, there will be one green LED light on
- 5, Once the wireless device is full charged, there will be one blue LED light on

#### Attention:

- 1, Please keep this charger away from water or other liquid
- 2, If you need to clean the charger, please make sure it is not connected to power supply
- 3, Using Environment temperature remains 0-45°C

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/ TV technician for help

Enesco Properties, LLC

26301 Curtiss Wright Parkway, Suite 400, Richmond Heights, Ohio 44143 USA.

Customer service:

T: [866 902 4438](tel:8669024438)

E: [customerservice@thingsremembered.com](mailto:customerservice@thingsremembered.com)