

AI Smart Time Manager



(AI alarm clock)

Instruction Manual

MODEL:A1



- OK** a.Short press. – Confirm,Play,Pause
 b.Long press – Turn off the alarm, Turn on/off the light.

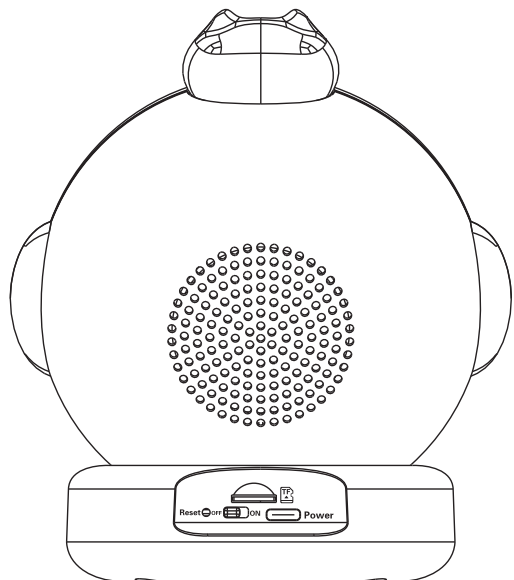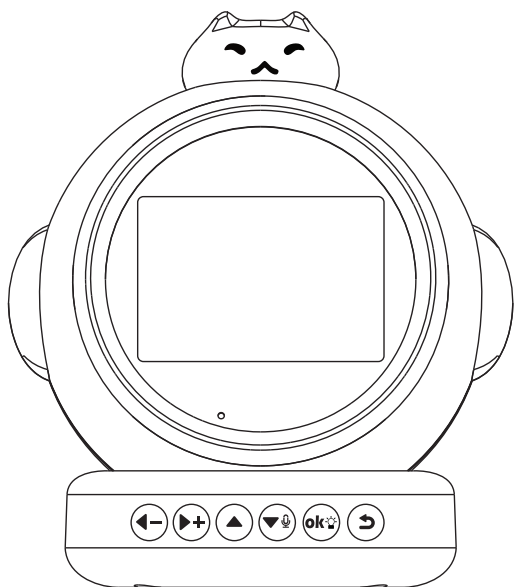

1 Device keys – Function definition

    : Arrow keys

 – a.Short press. – In the left
 b.Long press – Volume –

+  a.Short press – To the right
 b.Long press – Volume +

 a.Short press. – Upward direction

 a.Short press – Direction down
 b.Long press – Voice assistant

OK a.Tap – Confirm, Play, Pause
 b.Press and hold – Turn off the alarm

 a.Back
 b.Disable the MIC

 Power Charging port type-c

OFF  ON Power on / off

  TF card slot

 Reset

2

Rouse

The wake-up call for the voice assistant is "Hello Timi"

Everybody's talking

"Hello Timi"




"Wake me up at 8:00 every morning"

"Count down five minutes for me"

"Turn on the alarm clock"

"Start timing"

"Check how many alarms I have"

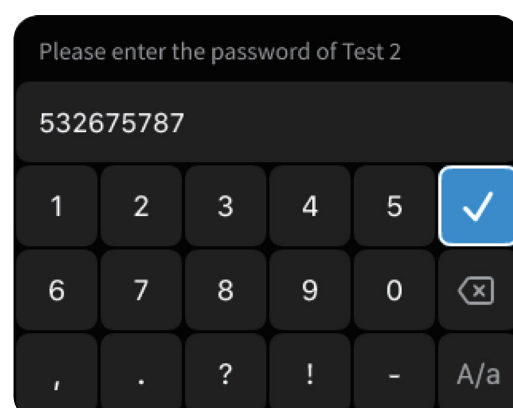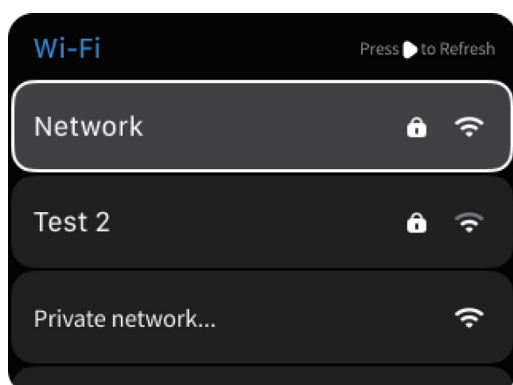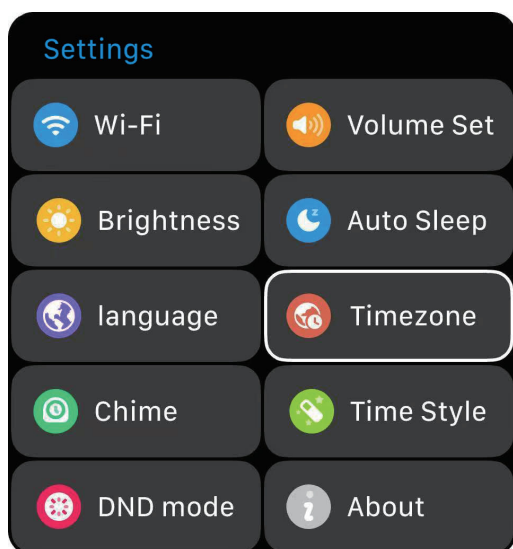

Settings option description:



-  **Auto Sleep:** Enter the standby interface
-  **Language:** Multilingual options
-  **Timezone:** Time setting
-  **Time Style:** Time format
-  **Chime:** Hourly chime options
-  **DND mode:** Do Not Disturb Time Slot

3

How do I network my devices



Start by opening [Settings] – [Wi-Fi] on your device.

Once in the network list, select a Wi-Fi and press the OK key to connect

The password must be entered using the arrow key and the OK key.

Attention:

- (1) If you cannot find the WiFi name, check whether the router hides the WiFi.
- (2) The product does not support 5G WiFi connection, and the 5G related network name will not be displayed on the WiFi list.

For iPhone 12 and later models, turn on the "Maximum Compatibility" option on the hotspot when connecting to the network.

Path: Mobile [Settings] – [Personal hotspot]



4

Time setting guide diagram



. Start by opening [Settings] – [Timezone] on your device.

. Use the Up, Down, Left, Right arrow keys to select a setting option, and press OK to enter the settings.

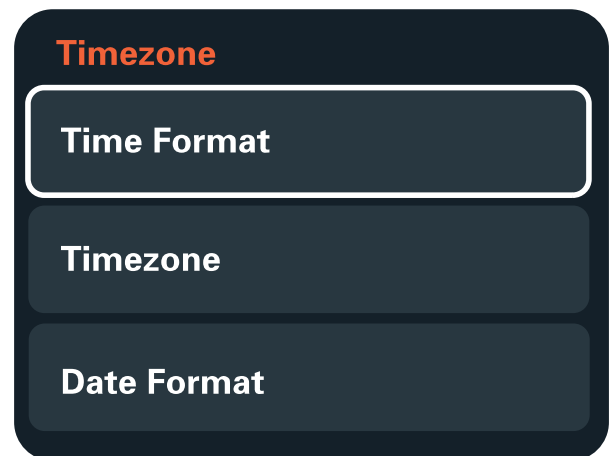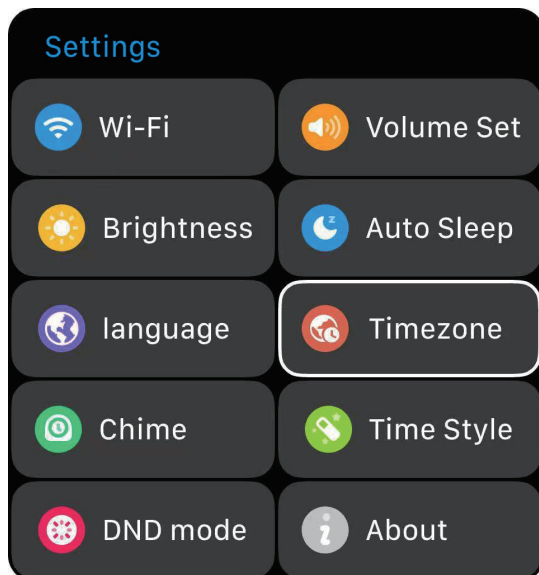

Time Format

10:05

24-hour clock

12-hour clock

Select country

select continent

North America

South America

Europe

Date Format

2025/9/16

YYYY/MM/DD

MM/DD/YYYY

DD/MM/YYYY

Select city

current continent: North America




UTC-5 New York

UTC-6 Chicago

UTC-7 Denver

Attention:

After connecting to WiFi, the time will be updated in real time based on the selected city.

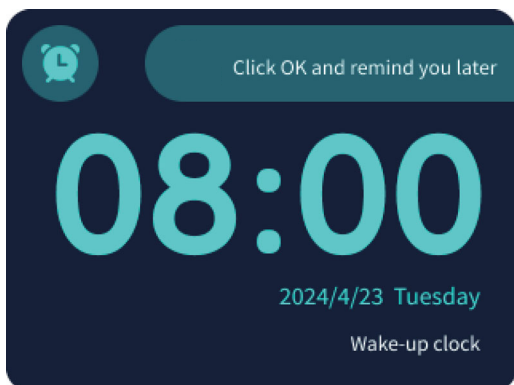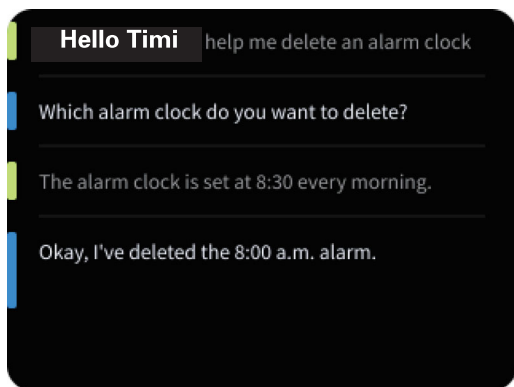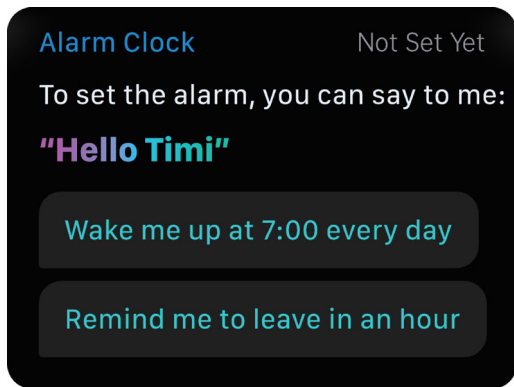

5 My alarm clock



Set alarm

Method 1: On the device, you can only add an alarm by voice control. For example:

"Hello Timi, set an alarm clock for 8:00 tomorrow morning."

Deleting an alarm

Method : Use voice to delete the alarm clock, example: "Hello Timi, delete the alarm clock at 8:00 tomorrow morning"



Edit alarm clock

Method : Modify by voice.

Example: "Hello Timi, tomorrow morning the alarm clock at 8:00 will be changed to 9:00."

Alarm response

When the alarm time is reached, the device will automatically ring, now **Press the OK button for snooze mode**, It will ring again in five minutes; **Hold down the OK key to disable the alarm**.

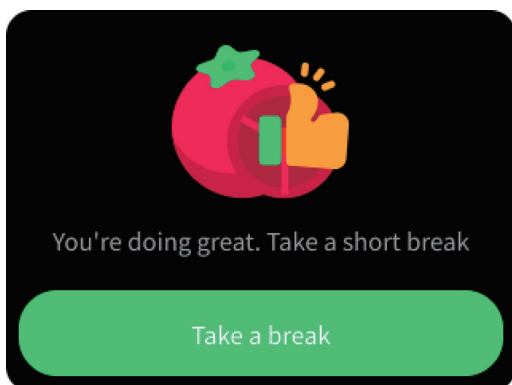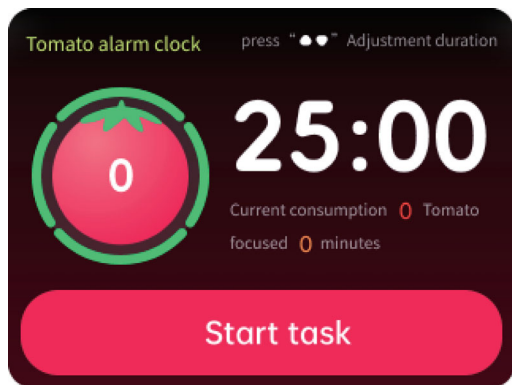

6

Tomato alarm clock



Set tomato alarm




Method : The default Tomato clock time is 25 minutes, Can pass the device **In the direction, Down key**, Select the usual tomato time;

Tomato bell open

After setting the tomato time, **Press OK** Just start, During the operation of the Tomato-bell, the default background music can also be used **Arrow keys Combine the OK key** Turn off the background music on the left, press the OK button to pause the Tomato-clock, and press the button on the right to stop the Tomato-clock. Before stopping the Tomato-clock, there will be a confirmation pop-up window requiring the user to confirm;

End Tomato clock

At the end of the Tomato-clock, there will be a short 5-minute break After 4 rounds, or get a long rest.

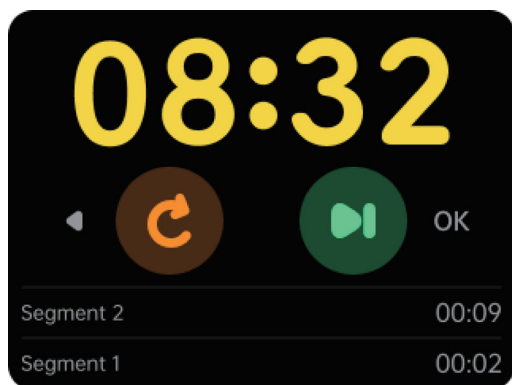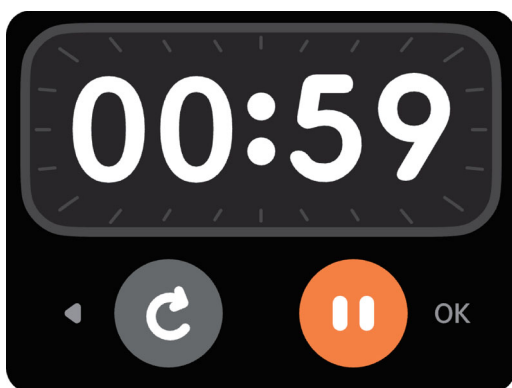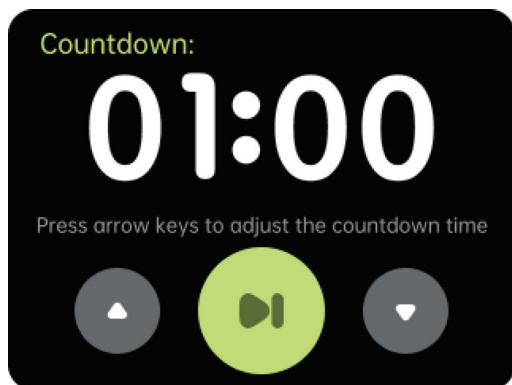

7 Countdown:

Set countdown time

Mode1: The default value is 1 minute. You can adjust the countdown time by pressing the up and down keys. The unit of each adjustment is 1 minute

Press the OK key to start;

Mode2: voice-controlled, Give an

example: "Hello Timi, count down three minutes."

End countdown

Double click back Countdown can exit.


8 Timer

After entering the application, press the "OK" key to start timing;

Pause: After starting the timing, press OK again to pause the timing;

reset: After suspending the timing, press the left button to reset the timing directly;

section: When the time is being timed, press the left key to record the current time, which is convenient for segmented recording.

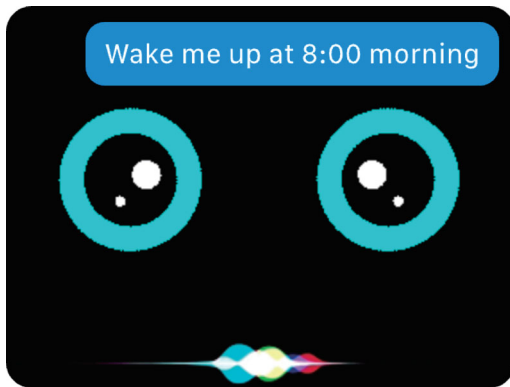

9 Voice assistant



Wake mode

Mode1: Press and hold the voice button on your device

Mode2: wakeword **"Hello Timi"** Wake up immediately

Mode3: Press OK from the voice assistant icon on the home screen

After waking up, you can speak the command to the device

Give an example:

"Set my alarm for 9:00 tomorrow morning."

"Full volume"

"Brightness set to minimum"

"Turn on XX function"

"Time me."

"..."

• Charging precautions

1. Avoid charging the battery for a long time, which may damage the battery

2. Do not use the wrong charger, as shown in the following figure, avoid using the charger with Type-C at both ends.

3. Choose either 5V=1A ~ 2A for the charging adapter.



Type-C is supported at one



Type-C is not supported at both

Warm reminder

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

