



尺寸: 90mm*63mm

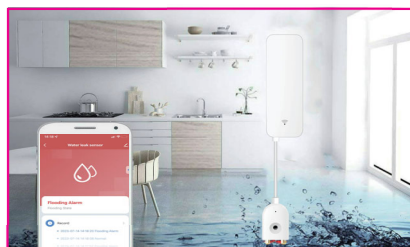


USER MANUAL

Model: W06

Product Presentation:

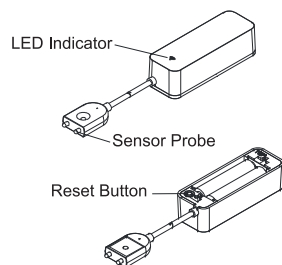

What's in the box

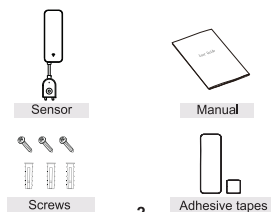

Specification:


Material: ABS
Size: 71*25*20mm (Main body)
1.0 m (Sensor Cable length)
Battery: LR03-1.5V/AAA*2 (Alkaline battery)
Battery Life: 6000 times trigger
Standby Current: 8uA
Alarm Current: 70mA~120mA
Wireless Type: 2.4GHz
Wireless Standard: IEEE 802.11b/g/n

Checklist before using the device:

- Your smartphone has connected to a 2.4GHz Wi-Fi network.
- Input the correct Wi-Fi password.
- Your smartphone must be Android 6.0 + or iOS 11 +.
- If the numbers of devices connected to the Wi-Fi router reach the limit, you can try to disable device to vacate the channel or try with another Wi-Fi router.

How to Use


Slide to open the back cover of battery compartment, install 2 x AAA Alkaline batteries in the right direction of the electrode, the indicator will blink.

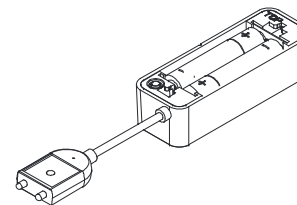


(Notes: when the batteries are run out, please choose Alkaline battery instead of Carbon-zinc battery.)

How to Set up


- Use your phone to scan QR code or search "Smart Life" app in Google Play store or APP Store to download and install it.

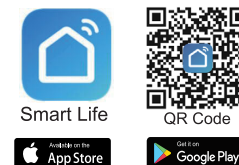

- Create an account with your mobile number and enter authentication code.

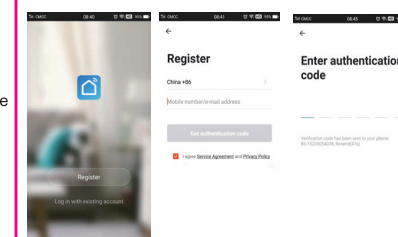


- Connect your mobile to your WiFi router at your home, click "+" at the upper right corner of homepage or click "Add Device".

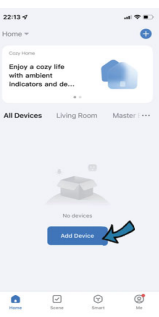



4. 1) Bluetooth Mode:

The app will advise you to turn on the bluetooth on your mobile, then it will search the device. Enter your Wi-Fi name and password, it will connect automatically.

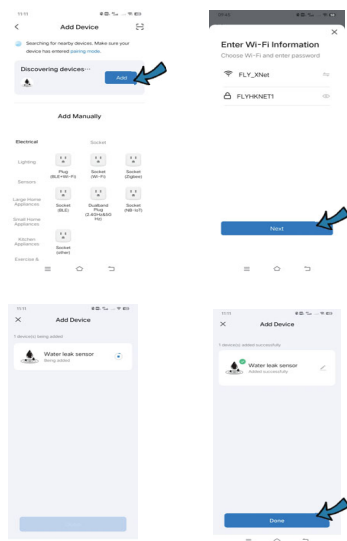

2) Wi-Fi Mode:


Select "Flood Detector (BLE+Wi-Fi)" from "Sensors", then select "Blink Slowly", make sure LED indicator is blinking slowly, if not, hold the reset button till indicator is blinking slowly, connect your mobile to the device's hotspot: "SmartLife-XXXX", click to return to App interface, configuration completed.

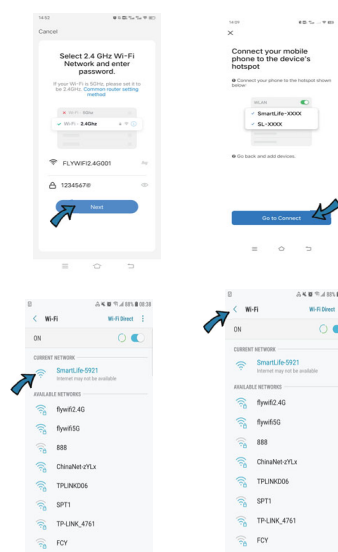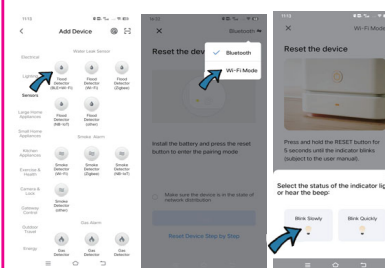


Installation

Two ways to mount the sensor:

- Use a clean and dry cloth to clean the wall where you want to mount the sensor. Tear off adhesive tapes to place the sensor and press hard for about 10s to fix them well.



- Or you can fix with screws included.

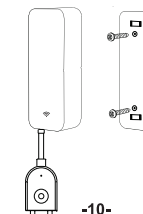

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

.