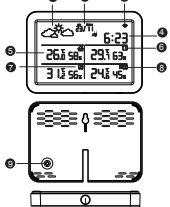

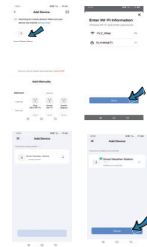


Size : 70*90 MM

Smart Weather Station Sensor for Indoor/Outdoor use USER MANUAL  -1-	Product Presentation:  -2-	Weather Date WiFi symbol Time Reset Button (Single-click to switch TC/°F) (Double-click to switch 12H/24H) Switch Button (Single-click to view the data of other sensors) WiFi Gateway Sensor 1 Sensor 2 Sensor 3 Lanyard Hole LED Indicator Reset Button -3-	Packaging Kits: WS06+RTH11*2  WS06+RTH11*3  -4-	Specification WiFi Gateway Size: 65x2x12mm 1.5M length (USB Cable) Power Supply: DC 5V/1A (Type-A) Measure Range: -9°C-60°C 0-99%RH Accuracy: ±0.5°C ±5%RH Wireless Protocol: WiFi, Bluetooth, RF 433MHz IP65 Waterproof T&H Sensor Size: 73x25x20mm Battery: LR03-1.5V/AAA*2(Alkaline battery) Measure Range: -20°C-60°C 0-99%RH Accuracy: ±0.5°C ±5%RH Wireless Protocol: RF 433MHz -5-	How to set up: 1. Use your smartphone to scan QR code, or search "Smart Life" app in Google Play Store or APP Store to download and install.  2. Create an account with your mobile number and authentication code.  -6-	3. Insert the USB-A cable of the WiFi gateway to 1A USB power adapter, then connect your mobile to router , click " + " at the upper right corner of homepage or click "Add Device" .  4. 1) Bluetooth Mode: The app will advise you to turn on the bluetooth on your mobile, ensure the wifi symbol is flashing, enter WiFi information, it will connect automatically.  -7-	FAQ 1) The sensor is with waterproof design, it can be used outdoor, but don't make it exposure to rain or sunshine for a long time, to ensure its lifecycle. 2) We don't advise to put the sensor in refrigerator, if you use in refrigerator, please choose the battery which can endure temperature range -20 ~ 60°C, low temperature in the refrigerator will reduce the battery life, and electromagnetic interference will also cause the communication distance of RF433 frequency shorter. 3) Please make the distance between Gateway and WiFi router within 10 meters. 4) When the ambient temperature change>±0.5°C, or the humidity>±5%, the temp and humidity will be updated immediately. 5) When the ambient temperature change < ±0.5°C or the humidity change < ±5%, the temperature and humidity will be updated once an hour. -8-	FCC Statement This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. To ensure continued compliance, any changes or modifications not expressly approved by the party. -9-	Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral device). This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. FCC Radiation Exposure Statement: The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. -10-
2) Wi-Fi Mode: Select "Temperature and Humidity Sensor (BLE+Wi-Fi)" from "Sensors", select "Blink Slowly", make sure the wifi symbol is blinking slowly. If not, hold the reset button till the wifi symbol is blinking slowly. Connect your mobile to the device's hotspot. "SmartLife-XXXX", then click to return to App interface, it connect automatically.  -9-	5. Add Temp & Humidity Sensors 1. Prise off the back cover of battery compartment, then install 2 x AAA Alkaline batteries in the right direction of polarity, click "+" icon, long press the reset button, the wifi gateway will search sensor and add automatically, then release the reset button.  2. Repeat the above steps to add more sensors, you can add 9 sensors at Maximum, and stick the supplied S/N label on the sensor to distinguish.  -10-	Installation Methods After the sensor added successfully, close the back cover of sensor, then you can: 1. Use a clean and dry towel to clean the area where you want to mount the sensor. Peel off the adhesive tape to stick on the back of sensor, then press hard to fix it well. 2. Hang on the wall or door with supplied lanyard. Warnings 1. DO NOT attempt to repair by yourself, all repairs should be performed by an authorised professional. 2. It should NOT be used as security equipment for home, building,warehouse or any other places. If a user violates the user instruction, the manufacturer will not be liable for any risks and property losses. -11-	Functions 1. Temp & humidity Alarm You can preset the range for temp and humidity in the Alarm page, when the actual temperature or humidity goes out of the range, it will push instant alarm message. 2. Temp & Humidity Calibration You can calibrate the temperature and humidity in the Setting page, select the calibration value and save, the temp or humidity data will sync on the screen and in the App . 3. 12/24-hour System Switch Double-click the reset button to switch between 12-hour and 24-hour system. -12-	4. Temperature Unit Switch Single-click the reset button to switch temperature unit between Celsius and Fahrenheit on the screen, then you have to select temperature unit in the App setting, the temperature unit in App will change. 5. Temp and humidity Statistics You can view the historic statistics of temperature and humidity in the Stat page, and export the data to your email address.  -13-	6. Intelligent Linkage You can create linkage scene with other TuYa smart devices like Smart IR Remote Controller. For example, when the indoor temperature > 30°C, Air conditioner will turn on automatically, or when the humidity is < 20%, the humidifier will spray. 7. Low battery Alarm When the battery power level of sensor is low, it will push alert message via app to remind you to change new batteries. 8. Third-party Voice Control You can enquiry about temp and humidity via Amazon alexa, Google assistant smart speaker. OK Google, what is the <device> humidity ? OK Google, what is the <device> temperature ? Alexa, what is the <device> humidity ? Alexa, what is the temperature of <device name> ? -14-	15. When the battery power level of sensor is low, it will push alert message via app to remind you to change new batteries. -15-	16. When the ambient temperature change>±0.5°C, or the humidity>±5%, the temp and humidity will be updated immediately. -16-	17. When the ambient temperature change < ±0.5°C or the humidity change < ±5%, the temperature and humidity will be updated once an hour. -17-	18. When the ambient temperature change < ±0.5°C or the humidity change < ±5%, the temperature and humidity will be updated once an hour. -18-