

USER MANUAL

AHS7705CA

Precautions

1. This user manual has been specially designed to guide you through the functions of your mobile phone.
2. The company follows the strategy of sustainable development, so we will reserve the right to modify the product function, interface and the shape without informing the user.
3. When there are some discrepancies between the description and the actual product, the actual product shall prevail.
4. Please power off following the correct steps, do not remove the battery when power on or charging, to avoid adverse consequences, such as data loss, etc.

Guidelines for Safe and Efficient Use

To safely and effectively to use your product, please read this information in depth before using your phone. The following suggestions may help you to follow the warranty terms and prolong its service life.

To avoid the damage of hearing, please answer the call or lower the volume in advance before placing your phone to ear.

Using your product (phone), charger and other accessories

- Turn off your product where noticed and prohibited (including airports, gas stations and hospital, etc.).
- Keep your product and its accessories away from small children.
- Do not expose your product and its accessories to liquid or moisture or humidity.
- Do not expose your product to extreme high or low temperature.

- Do not expose your product to open flames or lit tobacco products.
 - Do not paint your product.
 - Do not drop, throw or try to bend your product.
 - Do not store your product with PC-disk, credit-card, travel-card or other metallic objects. Otherwise information stored in the disk or credit-card may be affected by your product.
 - Do not expose your product or battery in the areas where temperature may exceed 60°C, such as windowsill or behind direct sunlight glass plate, etc.
 - Do not attempt to disassemble your product, do not unauthorized service your product and its accessories.
 - Do not use any battery or chargers that are not approved by the phone manufacturer, to avoid potential dangers.
 - Wipe your product with a slightly damp or anti-static cloth. Do not use dry or electrostatic cloth to wipe your phone.
Do not use chemicals or detergents containing grinding ingredients, otherwise it may damage the casing.
 - LCD parts belong to the fragile and easily scratched parts that need to pay attention to store. Do not hit or crush your product. Do not store your product with sharp objects, to avoid scratching the screen or your phone.
 - If your phone, battery, charger or other accessories are not working properly, bring your product and related accessories to the nearest authorized professional maintenance department, the staff will assist you, and arrange repair if necessary.
- Inflammable and explosive area**
- Turn off your product and comply with all the safety signs or instructions whenever you in and around the inflammable and explosive area (e.g., refueling points). Otherwise your

product will produce slight spark or radio wave and could cause explosions or fire.

Aircraft

- Turn off your product or switch to the airplane mode, and comply with all the safety signs or instructions when you on the plane. In such places, the waves emitted from your phone can interfere with aircraft navigation equipment and control system, and make the automatic control device receive the wrong information, do the wrong operation, case danger, even make the plane crash.

Hospital

- Turn off your product and comply with all the safety signs or instructions when you in the hospital. Otherwise the waves emitted from your phone will affect the proper functioning of the electronic medical equipment and the cardiac pacemaker, and then endanger the patient's life.

Personal Healthcare Device Class

- Mobile phones may affect the operation of cardiac pacemakers, hearing aid, implanted Cochlear and other medically implanted equipment. Avoid placing the mobile phone in the breast pocket. When using the mobile phone, place it at the ear opposite the pacemaker. Keep the minimum distance of 15cm between the mobile phone and the pacemaker throughout. If you have any reason to suspect that interference is taking place, immediately turn off your mobile phone, move it to the far place, then contact your cardiologist for more information. If you use any other personal medical device or implanted equipment, e.g. hearing aid, consult the manufacturer of your device.

Driving

- Always give full attention to driving and pull off the road and park before making or answering a call. If local laws and/or regulations permit drivers to use a Hands Free solution, we recommend that you use 'Interior

Hands Free' solutions intended for use with your mobile phone only.

Child safety instructions


- Keep your phone and all accessories out of the reach of small children. Do not allow children to play with your mobile phone or its accessories, they could hurt themselves or others, or could accidentally damage the mobile phone or its accessories. Your mobile phone or its accessories may contain small parts that could be detached and cause a choking hazard or serious injury if swallowed.

Used battery

- The used battery should never be placed in common municipal waste. Please consult local regulations for disposal of waste electronics products to get the correct disposal ways.

Use of original accessories

- **Charger:** Connect the AC power adapter to designated power sources as marked on the product. Make sure the cord is positioned so that it will not be subjected to damage or stress. To reduce risk of electric shock, unplug the unit from any power source before attempting to clean it. The AC power adapter must not be used outdoors or in damp areas. Never alter the cord or plug.
- **Battery:** We recommended that you charge the new battery (or one that has not been used for a long time) for 12 hours at least and less than 24 hours before you use your mobile phone for the first time. The battery can only be charged in temperatures between -5°C and +45°C. When the battery is fully charged, unplug the adapter or the charging cable. A new battery or one that has not been used for a long time need several fully charged and discharged to reach its best performance. Use only our company branded original chargers to charge your battery. Do not short-circuit the battery. To avoid explosions, never dispose of batteries in a fire.

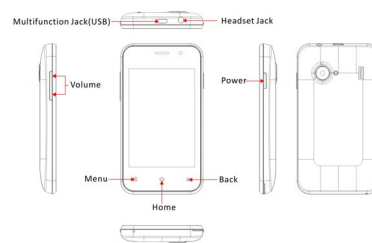


Screen icon definition

Icon	Function Description
	Network status identification Once you insert the SIM card, the idle screen display the icon.
	Network signal strength After inserting SIM card, the more phone signal bars displayed on the screen means the stronger signal.
	Battery power level The more full the bottle is, the more power the battery has. The icon will be displayed on Standby screen.
	Alarm activated This icon means the alarm has been set on. When the clock is set off, it will disappear automatically.

	New message This icon will be displayed on status bar when you have unread messages.
	Missed call This icon will be displayed on status bar when you have missed calls.
	Silent mode The icon will be displayed on status bar when changing the phone profile to silent mode.
	Vibration mode The icon will be displayed on status bar when changing the phone profile to vibration mode.
	Outdoor mode The icon will be displayed on status bar when changing the phone profile to outdoor mode.
	WLAN connection The icon will displayed in the status bar, when the phone is connected to an AP network.
	Bluetooth activated The icon will be displayed in the status bar, when the Bluetooth is set on.
	Headset The icon will be displayed in the status bar, when the headphones are connected to the mobile phone successfully.
	Airplane mode The icon will be displayed on status bar when changing the phone profile to flight mode.

■ **Install and remove the memory card, SIM card**


- Remove the battery before install the memory card or SIM card.

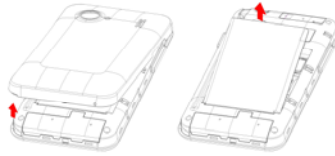

- Install the memory card (TF card): Open the cover of the memory card slot, insert a memory card, and then lock the card slot.



- Install the SIM card: SIM1 card slot and SIM2 card slot is marked as '1' and '2'. Insert the SIM card into card slot following the SIM card logo and directions.

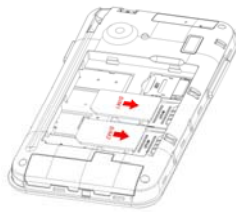

■ **Turn your product on and off**

- When your product is power-off, long-press the power key to startup and enter the main interface (Home).
- When your product is in the state of power-on, long-press the power key will pop-up a 'Phone option list' menu, you can select: 'Reboot', 'Airplane mode', 'Power-off' as desired.

■ **Charge the battery**

1. Plug the end of the adapter into the phone charger/USB data cable multifunction jack.
 2. Plug the adapter into a power outlet.
 3. Now, the battery power level icon at the top right of the screen will blink; If your product is power-off when charged, the charging dynamic icon will appear in the center of the screen, that means the battery is charging.
 4. When the battery power level icon at the top right of the screen shows full and no longer moves, it indicate that the battery is fully charged.
- If your product is charged when power-off, the charging flash will be static on the screen after

completely charged. The course needs 2-3 hours in general.

During charging, the battery, phone and charger may feel hot to the touch, which is normal.

5. When the battery is fully charged, unplug the adapter from the phone and then from the AC power outlet.

■ **Use the headset:** As you plug headset into the phone's headset jack, your phone's audio output will switch to headset output automatically.

■ **Calling functions**

Keypad: You can make a call with keypad, phonebook or logs. Regarding the keypad, you can directly dial the number from it. Calling record will be shown when no entering in keypad. Once starting to enter the number, the matched phone number will be listed out and could be selected to dial quickly.

Answer a call: When a call comes in, drag the answering icon to right to answer.

Reject a call: When a call comes in, drag the answering icon to left to reject.

■ **Call logs:** Call logs save the History you dialed and the incoming calls.

■ **Speed dial up:** Set your favorite number, click the entry to dial out

■ **Phonebook**

Phonebook can be used for storing contact information (names, phone numbers, email addresses, etc.). You can assign personal ringtones and picture phonebook, and do various communication operation directly.

Create a phone-contact: 1. In the phonebook main interface, press [Create a contact] button, select [OK] when a box message displayed; 2. Enter contact information, press [Done], you phone will save the information and exit the edit interface.

View, edit contact: In the phonebook main interface, press the contact to access the detail interface of the contact. you can view the related information stored; Press Message icon, can send the message to the number; Press the menu key, you can edit contact using [Edit] in the menu options as well as other options are available.

Search: The product provides you a search function in the phonebook main interface, press the icon [Search], enter the searching keywords. you can find the eligible contact.

Fast locating: This phone gives you a quick locating feature and can quickly go to the contact. In the "All contacts" interface, click the letter that corresponds with the contact name, you can quickly find the location to a contact.

Create a group: In the phonebook main interface, press the icon [Group], [Add group], enter the name of the new group, and press [Done], a new group can be added.

■ Message

Write a message: In message menu, press [Create message], access to the message editing interface, enter the contact number or select from Contact list, after enter your message text, press [Send] to send a text message, or press 'Menu', then from options of [Add subject], [Insert smiley], [Insert contact] , etc to have more other operations.

Read messages: If there are unread messages, the tray will show a prompting icon.

Search message: Press the icon [Search], and then start to search messages.

■ Message settings

Storages settings: In the message view, you can delete

the old message if the total number of message reaches the upper limit; SMS limit: the number of SMS limited to store in each session; MMS limit: the number of MMS limited to store in each session.

Call settings: you can set whether to display the message notification in the status bar or not; the setting of ringtone when SIM1 and SIM2 on arrival.

SMS settings: Press the 'Menu' button in the main message interface, select [setting] menu, to have the relative settings.

■ **File manager:** You can view the file content in your mobile phone and SD card by this file manager. You can manage files according to the window menu options.

■ **Browser:** You can connect to the Internet fast and conveniently by using your phone browser. In the navigation page, you can open the homepage easily and browse the commonly website. When browsing the web, you can conduct operations according to the browser menu option button, such as saving bookmarks or webpage, viewing the history and the download content, settings, and etc.

■ **E-mail:** Using your phone, you can send, receive and classify to manage your email directly. Before using an email, you need to own an e-mail address. You can log onto an Internet site to apply for one or use an existing e-mail address.

■ **Calendar:** Access the calendar interface of the current month. Press Menu, through the menu options, you can create an activity, view the schedule, clear all events, and select the data, see the Week, Month, or Day view, setting, etc.

■ **Clock:** With this function, you can edit the alarm time, ringtone, repetitive mode, tags, etc.

■ **Calculator:** The phone has a built-in calculator, which can add, subtract, divide and multiply.

■ **Notepad :** Use notepad to record your daily activities or memo, etc.

■ **Music:** You can select 'music' to access the audio interface in the application list, you can select songs, playlist, album or artist to classify and view. In the process of playing, you can pause/play, up/down, adjust volume, set the circulation mode, etc.

■ **Video player:** Click into the interface, you can manage and view the videos.

■ **Gallery:** Click into gallery, you can manage and scan the pictures.

■ **SIM Toolkit:** Using the function, you can view the SIM information and a variety additional services offered by your service provider.

■ **Camera:** Your product supports for taking photos and video recording. Before taking a photo or video recording, you can set the following options: Exposure value, Viewfinder mode, Preview mode, Image quality, Auto contrast, Color effects, Shooting mode, White balance, Size, Brightness, etc. You can press the Thumbnail picture to view, edit, share the picture or video. Press 'Menu' for more options.

■ **Voice Recorder:** Your product supports [Voice Recorder], you can record voice, set the record formats, view the record list, etc.

■ **Radio:** Plug a headset into your product, turn on the FM radio, you can listen to the radio. You can scan and save available stations automatically through the menu. Moreover, in the main interface, you can search channels manually, view the list of radio stations and turn on the speaker, etc.

■ **Downloads:** You can view all the download files through [Downloads]. In addition, you can remove or sort those files.

■ **Search:** You can search the Address book, Message, Notepad which stored in your phone.

■ **Settings**

Dual SIM settings: When SIM1 and SIM2 in your phone at the same time, you can enable SIM1 or SIM2 in idle mode; when data connecting, voice calling or SMS/MMS sending, you can use SIM1 or SIM2.

WLAN: Using the function, you can search the available WLAN network

Bluetooth: This function can exchange the information with other device in short distance.

Wireless and Networks: Using the function, you can set Flight mode, Tethering and portable hotspot, VPN settings, Mobile networks, Cell broadcast, etc.

Audio profile: In the settings, you can select the predefined Audio Profiles. Each profile can be edited by press it.

You can switch to different Audio profiles based on different application scenes, and set each profile in detail, except Silent mode and Vibration mode. The profiles can be set including: 1.Standard mode; 2.Outdoor mode. You can also add the Customize phone profiles.

Display: Brightness: Using the function, you can adjust the backlighting. Auto-rotate screen: With the function, you can set whether or not to rotate the screen content automatically. Sleep: With the function, you can adjust the delay time your product waits before auto-locking screen. Other functions includes Font size and Wallpaper.

Storage: Using the function, you can view the phone memory/SD card total capacity and available space, install/uninstall or format your SD card, and view the available space of your phone.

Battery: Check the lasting time of battery power and percentage of power consumption of each AP.

Security: Using the function, you can set [Use wireless networks], [Set screen unlock], [SIM card lock], etc.

SIM card lock: When you buy the SIM card, the PIN code is offered by your network service provider, you can select whether or not to use as required. Activate the PIN lock feature to require the following settings: Press to access the SIM lock setting interface, press [Lock SIM card], popup the window to enter the PIN, enter the PIN code that offered by your network service provider, press [OK].

Applications: Unknown sources: You are allowed to install applications provided by non-electronics market.

Manage applications: Using the function, you can manage or uninstall the applications installed.

Running services: Using the function, you can view or manage the services you are using.

Accounts and sync: Using the function, you can set or manage the accounts.

Backup and reset: Using the function, you can select Factory data reset, erase all the information, and select whether or not to format your SD card.

Language and input: Using the function, you can select the language area, set the Input Method (IME), add or delete words to user dictionary.

Data and time: Using the function, you can set the time updated automatically using the Internet or manually, select the time zone and data/time format.

Accessibility: You can set your phone to end a call when you press [Power].

About phone: Using the function, you can view the Status message, Battery power level, Legal information, Model, Versions, etc.

Warning

Specific Absorption Rate (SAR) information

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. This models (FCC ID: 2ABOU7705) has also been tested against this SAR limit.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1cm from the body.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.