

CREATRON

**Wall Mountable Bluetooth Music
System with CD**



USER MANUAL MIC192U



PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and

without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.



Customer's Record:

The serial number of this product is found on its back cover. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: MIC192U

Serial Number: _____

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. Read these instructions – All the safety and operating instructions should be read before the appliance is operated.
2. Keep these instructions – The safety and operating instructions should be kept for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.

4. Follow all instructions – All operation and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water; for example, near a bath tub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
6. Clean only with dry cloth – The appliance should be cleaned only as recommended by the manufacturer.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. AC adaptor is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the AC adaptor should be disconnected from the mains socket outlet completely.
10. Only use attachments / accessories specified by the manufacturer.
11. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
15. Power Sources – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Do not overload wall outlet.
16. Battery shall not be exposed to excessive heat such as sunshine, fire or the like
17. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
18. Do not attempt to dismantle, open or repair this product yourself. If a fault occurs, seek advice from your local qualified service technician or contact the distributor via the telephone number at the back of this instruction manual.
19. Caution marking and nameplate are located on back of product.
20. The device is not intended to be operated within 20 cm from the user



IMPORTANT NOTE

Avoid installing the unit in locations described below:

- Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters.

- Places subject to constant vibration.
- Dusty, humid or moist places.
- Sources of electrical noise such as fluorescent lamps or motors.
- In case of malfunction due to electrostatic discharge, the apparatus has to be reset by disconnecting AC adaptor from mains supply, wait at least for 10 minutes before reconnect the AC adaptor.

COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT
APPAREIL À LASER DE CLASSE 1
PRODUCTO LÁSER DE CLASE 1

CAUTION
INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS
DEFEATED.
AVOID EXPOSURE TO BEAM.



This product contains a low power laser device.

Follow the advice below for safe operations.

ON PROTECTION AGAINST LASER ENERGY EXPOSURE

- o As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the casing.
- o Stop operation immediately if any liquid or solid object should fall into the cabinet.
- o Do not touch the lens or poke at it. If you do, you may damage the lens and the player may not operate properly.
- o Do not put anything in the safety slot. If you do, the laser diode will be ON when the CD door is still open.
- o This unit employs a laser. The use of controls or adjustment or performance of procedures other than those specified here may result in exposure to hazardous radiation.

ON SAFETY

- When connecting and disconnecting the AC power, grip the AC adaptor plastic body and not the cord itself. Pulling the cord may damage it and create hazard.
- When you are not going to use the unit for a long period of time, disconnect the AC adaptor from the wall outlet and remove all batteries.

ON AC VOLTAGE

- Before use, check that the rated voltage of your unit matches your local voltage.

ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the CD player.
- When there is condensation inside the unit, the unit may not function normally.
- Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.

Should any trouble occur, disconnect the AC power cord and refer servicing to qualified personnel.


PROTECT YOUR FURNITURE

This product is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

INSTALLATIONS

PLACING THE MIC192U ON A TABLE


Put the hook from base in the central cavity at the back of the unit until a "click" sound is heard. Check the base is locked firmly on stand and does not come off. To remove the stand, pull the hook of back cabinet downwards to unlock, see illustration below:

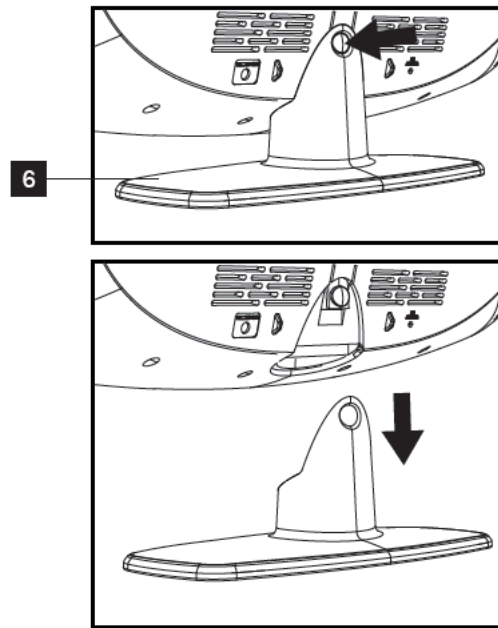

FOR WALL MOUNTING

It's important to be sure there are no electric, gas or water lines located behind the wall where you are attaching the unit. We recommend having this speaker professionally installed. Use the included wall mounting accessories and template to attach the sound bar to the wall.


1. Use the supplied wall mounting instruction sheet to make anchor hole marks on the wall. Make sure the marks are level before drilling.
2. Drill $\frac{1}{4}$ " holes on the marks.
3. Insert the included plastic anchors into the holes and push in until they are flush with the wall.
4. Attached the 2 fixing wedges (included) to the wall using the 2 screws (included) to the wall.
5. Insert the included screws with wedges into the anchors and tighten the screws. When the screws with wedges are tightened, the screw heads should be about $\frac{1}{4}$ " away from the fixing wedges. Line up the slots located on the back of the main unit with screws in the wall, see illustration below:

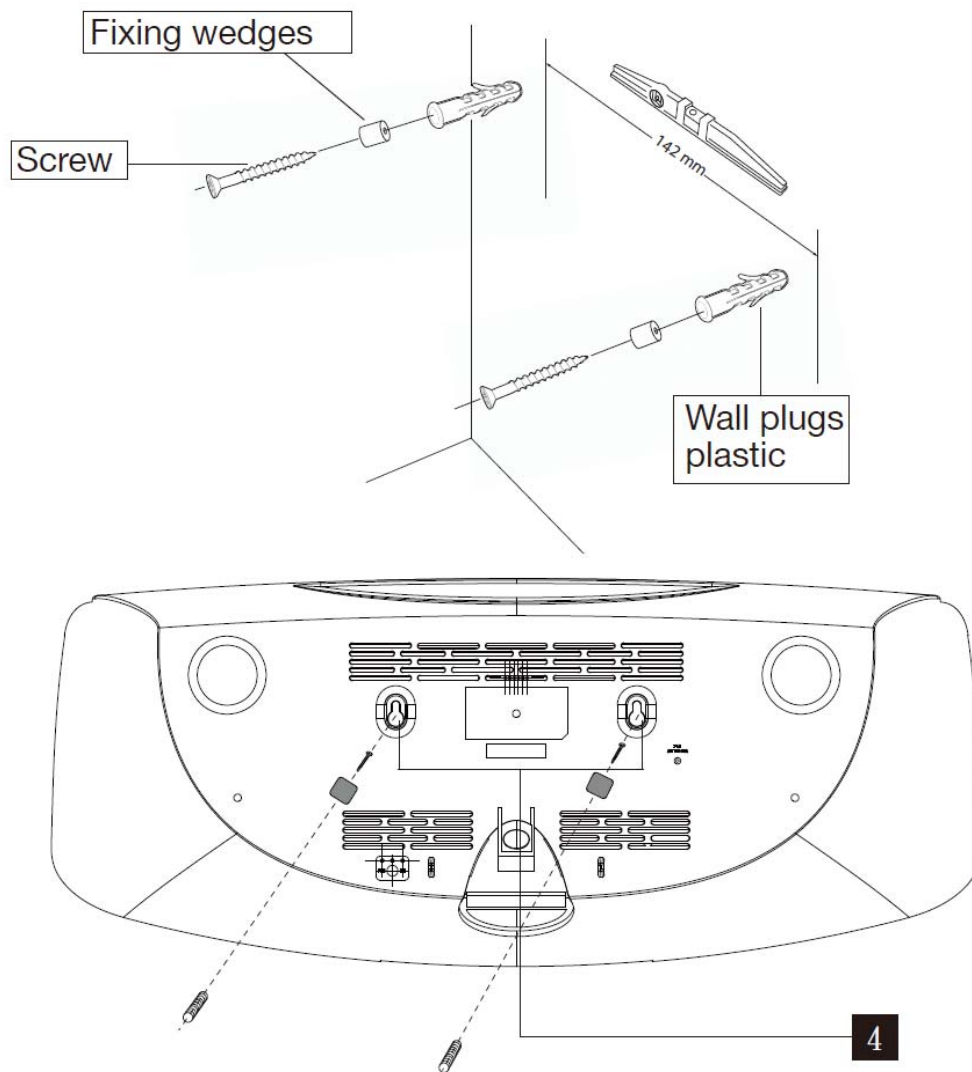


LOCATION OF CONTROLS

MAIN UNIT


FRONT VIEW

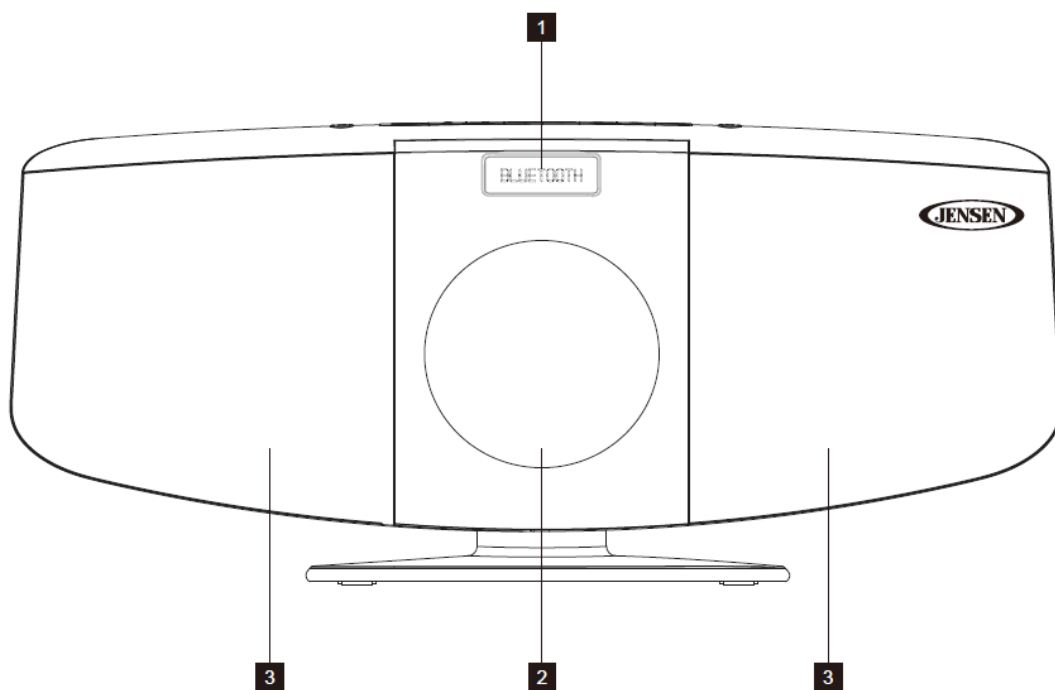

BACK VIEW

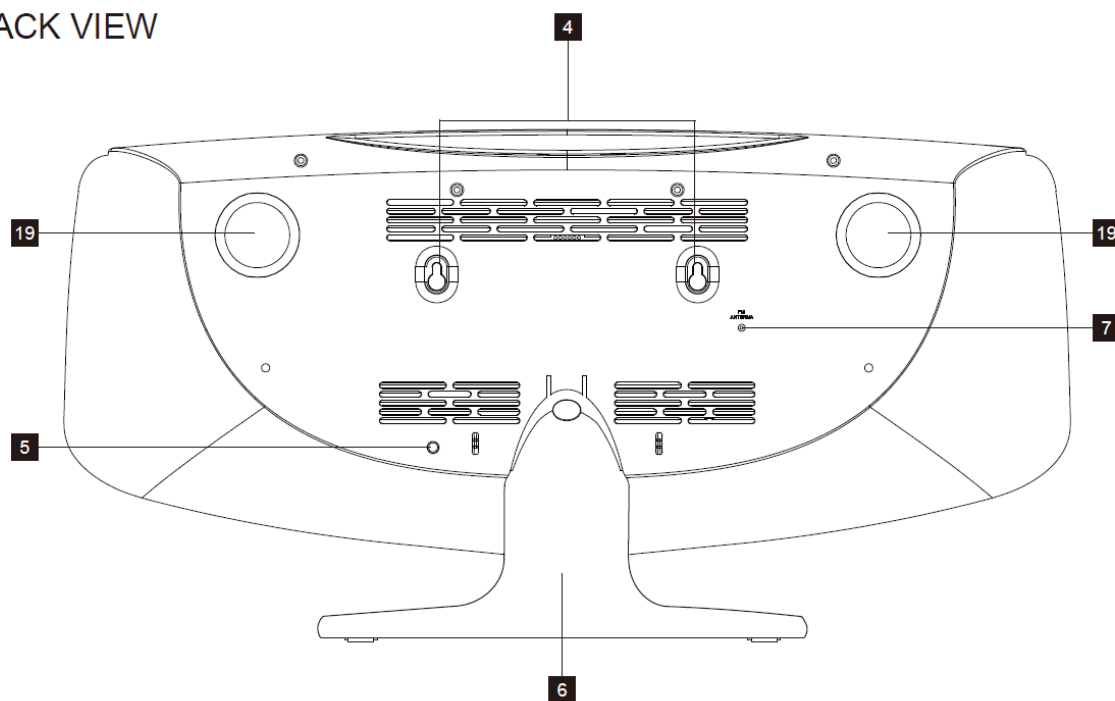


VIEW FROM UNDERNEATH

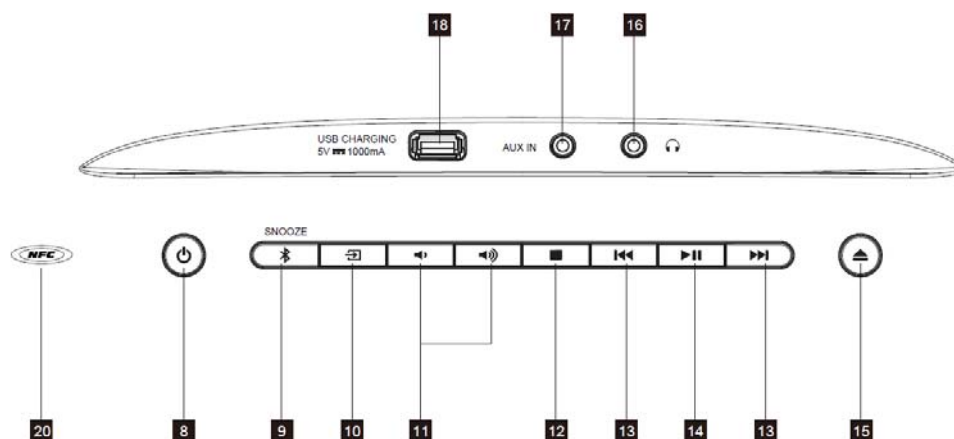

1		LCD Display
2		CD Door
3		Built-in Speaker
4		Wall Mounting Hole
5		DC IN Jack
6		Stand
7		FM Wire Antenna
8		Power On / Standby
9		Bluetooth Mode / SNOOZE Button
10		Function Mode Button (FM / CD / AUX)
11		Volume Down / Up Button
12		In CD mode: Stop CD playing.
13		• In CD / BLUETOOTH mode: Skip to the previous or next track. • In CD mode: Press & hold to fast backward/forward. • In FM mode: Tuning Down / Up.
14		In CD / BLUETOOTH mode: Play / Pause.
15		In CD mode: Open / Close the CD Door.
16		Headphone Jack
17	AUX IN	3.5 mm AUX IN Jack
18	USB CHARGING	USB Charging Port
19		Passive Radiator
20		NFC linking Point

REMOTE CONTROL

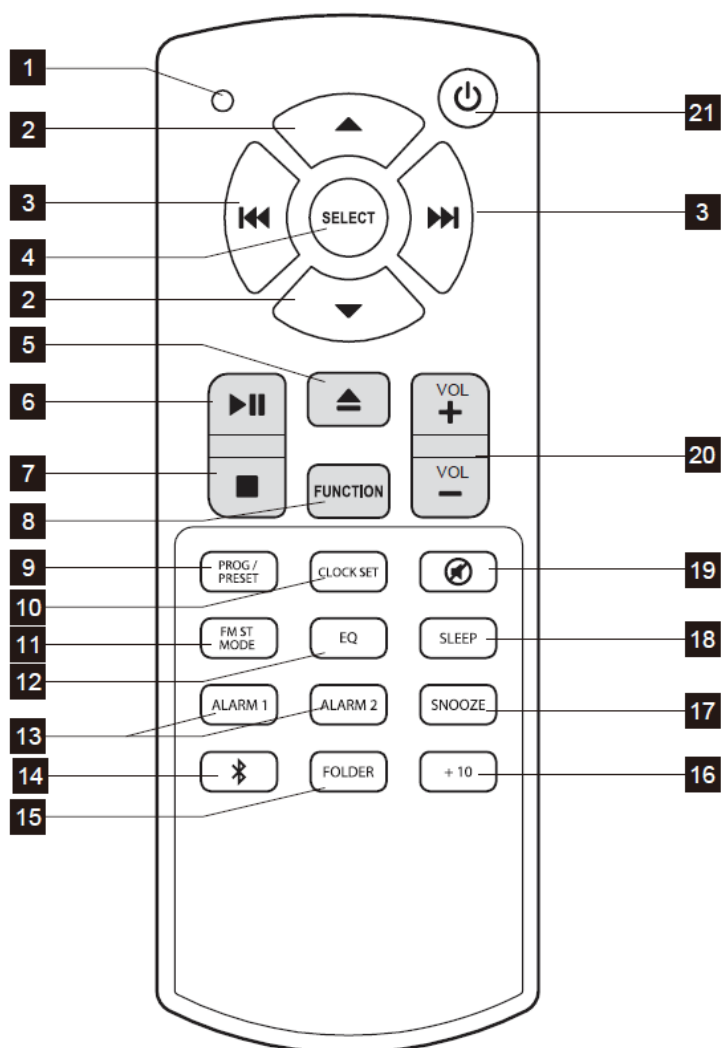

1		Remote Control Operating Indicator
2	▲ / ▼	In FM preset mode: Select Preset Channel locations. In FM mode: Recall Preset Stations
3	⏮ / ⏭	- In CD / BLUETOOTH mode: Skip to the previous or next track. - In CD mode: Press & hold to fast backward/forward. - In FM mode: Tuning Down / Up.
4	SELECT	Confirm the selection during setup
5	⏏	In CD mode: Open / Close the CD Door.
6	⏮	In CD / BLUETOOTH mode: Play / Pause.
7	■	In CD mode: Stop CD playing.

8	FUNCTION	Mode selector (RADIO / CD / AUX IN).
9	PROG / PRESET	• In CD mode: Program CD tracks • In FM mode: Memory the Preset Stations
10	CLOCK SET	Clock Set Mode Button
11	FM ST / MODE	In FM radio mode: Select FM Stereo / Mono. In CD mode: Select CD Repeat / Random Play.
12	EQ	Select Preset Equalizer.
13	ALARM 1/ ALARM 2	Alarm 1 / 2 Setting; Alarm ON/OFF Button.
14		Bluetooth Mode Button
15	FOLDER	In MP3 CD mode: Skip to next MP3 folder currently playing.
16	+10	In MP3 CD : Skip to music track of + 10.
17	SNOOZE	Alarm Snooze Button
18	SLEEP	Sleep Timer Button
19		Mute Button
20	VOL + / -	Volume Up / Down Button
21		Power On/Standby Button

GETTING STARTED

ACCESSORIES INCLUDED


Carefully remove the unit and all accessories from the display carton.

Please verify that you have all the following accessories before recycling the gift box.

- User Manual
- AC Adaptor Input: 100-240V~ 50/60Hz
 Output: 12V $\equiv$ 1500 mA, center-positive
- Remote control
- Wall mounting instruction sheet
- 2 screws, 2 wedges and 2 plastic anchors

POWER SOURCE


This unit operates on an external AC adaptor rated at 12V $\equiv$ 1500mA (included) and requires one 3V $\equiv$ type CR2025 Lithium battery (included) for remote control. Do not attempt to operate the unit from any other power source. You could cause damage to the unit and void your warranty.

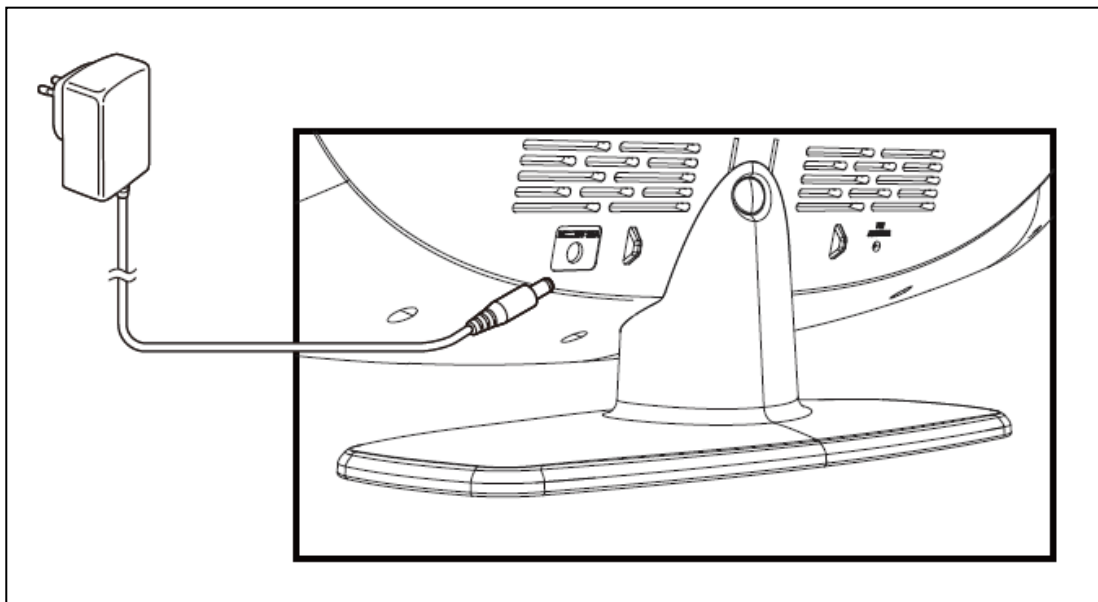

AC-DC Adaptor Connection

An AC-DC Adaptor with the output 12V $\equiv$ 1500mA (Included) is required for operating the main unit. To connect the AC-DC Adaptor to the unit and 120V~ 60Hz AC Outlet:


1. Firmly and securely insert the DC plug of the adaptor into the **DC IN Jack** at the back of the unit.
2. Plug the adaptor's AC plugs into a power outlet rated at 120V~ 60Hz.

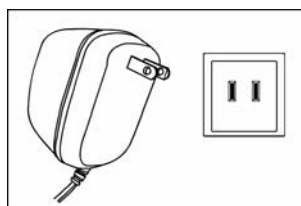

NOTE ON NON-MAGNETICALLY SHIELDED SPEAKERS

This unit is not magnetically shielded and may cause color distortion on the screen of some TVs or video monitors. To avoid this, you may need to move the unit further away from the TV or monitor if unnatural color shifts or image distortion occurs.

Remote Control

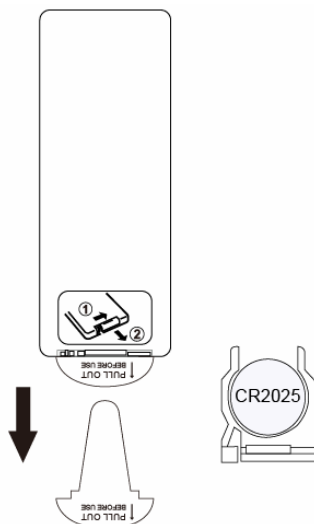

The remote control operates on one CR2025 battery (included). To activate the remote control, remove the insulation tab inserted in the battery compartment.

When the operation of the remote control becomes intermittent or unsatisfactory, replace the original battery with a new 3-volt lithium battery.

1. Slide out the battery holder from the remote control case.
2. Replace the 3V CR2025 battery. Be sure the battery is installed correctly. The remote will not work if the battery is installed with the wrong polarity.

CAUTION:

- 1.) Danger of explosion if the battery is replaced incorrectly.
- 2.) Replace only with the same or equivalent type battery.
- 3.) Insert the battery holder back into the battery slot.

NOTE: Only use a well-known brand of battery to ensure the longest life and best performance.

Battery Precautions

- Replacement of batteries must be done by an adult.
- The supply terminals are not to be short-circuited.
- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed.
- Only batteries of the equivalent type are to be used.
- Batteries are to be inserted with the correct polarity.
- Dispose of batteries properly. Do not dispose of batteries in fire. The batteries may explode or leak.



WARNING

**DO NOT INGEST BATTERY, CHEMICAL BURN
HAZARD**

The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

TURNING THE UNIT POWER ON/OFF

1. In Off (standby) mode, tap the **POWER**  **Button** on main unit or remote control to turn the unit ON. The last selected input mode icon will show on LCD display.
2. To turn the unit OFF (standby), tap the **POWER**  **Button** on main unit or remote control again. The **LCD DISPLAY** will dim and show the current time.

Note:

When the device is turned on but not used for 20 minutes, it automatically switches onto standby mode for power saving.

CLOCK SETTING (REMOTE CONTROL ONLY)

After plugging in the AC adaptor, "12:00" will appear and start blinking on the LCD display.

1. In Power Off (Standby) mode, tap the **CLOCK SET Button** on the remote control. The 12 HOUR format will show in display and digit "12" will keep blinking.
2. Tap the **⏮** or **⏭** **Button** on remote control or main unit to select 24 Hour format if necessary. Otherwise, press the **SELECT Button** to confirm 12 Hour clock format and enter clock setup mode, Hour digits will be flashing.
3. Tap the **⏮** or **⏭** **Button** on remote control or main unit to adjust the hour. Press and hold the button for fast advance / reverse setting.
Note: Make sure the hour is set so that the **PM** indicator is displayed correctly.
4. Press the **SELECT Button** on the remote control to confirm the hour setting, the minute digits will flash to prompt for input.
5. Tap the **⏮** or **⏭** **Button** on remote control or main unit to adjust the minute. Press and hold the button for fast advance / reverse setting.
6. Press the **SELECT Button** on the remote control again to complete the setting.

NOTE: The clock and radio station presets will need to be reset if the power is interrupted or in the event of a power outage. "12:00" will appear and start blinking on the LCD display to notify you that the power was interrupted and the clock will need to be reset. Please follow steps 1-5 above to reset the clock.

CLOCK CHECKING (REMOTE CONTROL ONLY)

Unit will show current time in standby mode. To check current time in Power ON mode, press the **CLOCK SET Button** on remote control, current time will show for 5 seconds and then return to show its operating mode.

ALARM OPERATION (REMOTE CONTROL ONLY)

SETTING ALARM CLOCK

This function allows the system to turn on automatically and wake you up by beeping alarm, CD or FM radio.

1. In standby mode, tap the **ALARM 1 Button** on remote control, alarm time AM 12:00 will appear in display. Press and hold the **ALARM 1 Button** again until Hour digits of alarm clock start flashing.
2. Press the **⏭** / **⏮** **Button** to set the hour and then press the **SELECT Button** again to confirm, Minute digits will be flashing.
3. Press the **⏭** / **⏮** **Button** to set the minute and then press the **SELECT Button** again to confirm, alarm wake up source will appear in display.
4. Press the **⏭** / **⏮** **Button** to select wake to radio, CD or Beep and then press the **SELECT Button** again to confirm, alarm volume level will be flashing.
5. Press the **⏭** / **⏮** **Button** to preset the wake up alarm volume level and then press the **SELECT Button** to finish alarm setup.

NOTE:

- 1.) The system provides dual alarm settings so you can preset another wake up time individually by using the **ALARM 2 Button**.
- 2.) If "Wake to CD" is selected but a CD is not inserted, the alarm source will default to the Beeping Alarm automatically when the alarm wake time is reached.
- 3.) For "Wake to Radio", the system will default to the last radio station listened to before switching off.

ACTIVE/DE-ACTIVE ALARM FUNCTION

1. To active ALARM 1, press the "**ALARM 1**" **Button** repeatedly until the alarm indicator  is shown on LCD display .
2. To cancel ALARM 1 function by press again "**ALARM 1**" **Button** until the alarm indicator  goes off.
3. Follow the same operation by pressing **ALARM 2 Button** to active / de-active ALARM 2  function.

Wake to Radio, CD or Beeping Alarm

- When the alarm time is reached, the CD, radio or beeping alarm will sound for 60 minutes then shut off and reset itself for the following day (without pressing the snooze button). You may activate the snooze function manually after the alarm sounds by pressing the **SNOOZE Button**. The buzzer stops for the snooze time (9 minutes) then comes again. The snooze operation can be repeated again within the remaining 50 minutes from the set alarm time.
- To stop the alarm immediately after it sounds, tap the corresponding **ALARM 1 / ALARM 2 Button** on remote control or **Power**  **Button** on main unit once. It resets itself for the following day.

Note: If you press the  **Button** on main unit or **FUNCTION Button** on remote control when alarm sounding, unit will stop the alarm and switch to function mode immediately.

- To cancel the following day alarm, tap the **ALARM 1 or 2 Button** repeatedly until corresponding ALARM indicator  or  goes off.

SNOOZE FUNCTION

Press the **SNOOZE Button** on remote control or  / **SNOOZE Button** on main unit once to terminate the alarm mode temporarily, and the alarm will re-start again after 9 minutes on each press. To cancel the SNOOZE mode, press the **POWER**  **Button** once. SNOOZE icon will disappear from display and alarm icon stop flashing.

RADIO OPERATION

1. Tap the **POWER**  **Button** on main unit or remote control to turn on the unit.
2. Tap the **FUNCTION**  **Button** on main or **FUNCTION Button** on remote control to select Radio mode, the "FM" mode and radio frequency appear in display.
3. To manually tune in a specific radio station, tap the  or  **Button** on main unit or remote control repeatedly. Use the manual tuning method to tune in weaker stations that are bypassed during Automatic Tuning.

4. To automatically tune to the next available radio station, press and hold the **⏮** or **⏭** **Button** on main unit or remote control for 1-2 seconds until frequency readout on the display begins to scan and then release the button. The tuner will stop scanning when it receives the next broadcasting station of adequate signal strength.
5. Press the volume control **🔊 / 🔊** **Button** on main unit or **VOL+/-** **Button** on remote control to adjust the volume control to the desired volume level.

FM & FM-Stereo reception

- When listening to the FM radio, press the **FM ST/MODE** **Button** on remote control to switch between stereo mode and mono mode. FM stereo icon “((ST))” will appear in display if unit is in stereo mode. It is preferable to receive the program in mono when you are receiving a weak station.

HINTS FOR BEST RECEPTION:

The receiver has a build-in FM wire antenna hanging from the back cabinet. This wire should be totally unwrapped and fully extended for the best reception.

NOTE: Automatic tuning depends on the signal strength of the broadcasting station, so weak stations may be skipped. You can manually tune to find the weak stations if a station gets skipped. With strong signals, the tuner may stop before it reaches the actual broadcast frequency, so you may need to manually tune for the best reception.

PRESET RADIO STATIONS

1. Press the **POWER** **🔌** **Button** on main unit or remote control to turn on the unit.
2. Tap the **FUNCTION** **Button** on main unit or remote control to select Radio mode.
3. Tune to the desired radio station either by “manually” or “automatically” tuning method.
4. Press the **PROG/PRESET** **Button** on remote control; the next available preset memory number flash in the LED display. (Note: “P01” will blink in the display if you are programming preset for first time)
5. Tap the **▲** or **▼** **Button** on remote control to select the preset number you want to assign the station to.
6. Press the **PROG/PRESET** **Button** on remote control to confirm the setting.
7. Repeat step #3 thru # 6 to preset up to 20 stations.

RECALLING PRESET MEMORY CHANNELS

In radio mode, recall the pre-set channels by pressing the **▲** or **▼** **Button** on remote control repeatedly.

NOTE:

The clock and radio station presets will need to be reset if the power is interrupted or in the event of a power outage. “12:00” will appear and start blinking on the LCD display to notify you that the power was interrupted and the clock will need to be reset. Please follow steps 1-7 above to resave the preset stations.

CD PLAYER OPERATION

PLEASE READ THIS IMPORTANT INFORMATION:

CD mechanisms used in devices like this are designed to fully read all commercial CDs. They will also read self-compiled CD-R/CD-RW discs but it may take up to 10 seconds for playback to start. If playback does not start, it is likely due to the quality of the CD-R/RW disc and/or the compatibility of the CD compilation software. Manufacturer is not responsible for the playback quality of CD-R/RW discs. Do not attach a label or seal to either side of the CD-R/RW disc. It may cause a malfunction.

PLAYING A CD

1. Press the **POWER**  **Button** on main unit or remote control to turn on the unit.
2. Tap the **FUNCTION** **Button** on remote control or  **Button** on main unit to select CD mode and then press the **OPEN/CLOSE**  **Button** to open the CD door.
3. Place an audio CD or MP3 CD on the center spindle with its label side facing out towards the **CD DOOR**. Press the  **Button** to close the CD Door.
4. Unit starts to read the disc, "READ CD" shows in display. After few seconds, the total number of tracks and time on the CD will be shown on the **LCD DISPLAY**.
Note: MP3 CD will show total track and starting counter of 00:00.
5. Press the **PLAY/PAUSE**  **Button** on main unit or remote control, the CD will start playing from first track.
6. Press the volume control  **Button** on main unit or **VOL+/-** **Button** on remote control to adjust to the desired volume level.
7. To pause playback, press the **PLAY/PAUSE**  **Button** on main unit or remote control. The track time and  icon will flash. To resume playing, press the **PLAY/PAUSE**  **Button** again.
8. You can choose to play your favorite track directly by pressing either the **SKIP +**  **Button** or **SKIP -**  **Button**. The LCD Display will indicate the correct track number selected. If you are playing a MP3 CD, you can also press the **FOLDER** or **+10** **Button** on remote control to skip to next folder or +10 track to current playing track.
9. To locate a particular section within a track, press and hold the  or  **Button** until the section is found. Release the button to continue playing your selection.
10. To stop playing, press the **STOP**  **Button**.
11. Turn off the MIC192U when you have finished listening.

DIFFERENT PLAY MODES (REMOTE CONTROL ONLY)

Press the **FM ST/MODE** **Button** on remote control repeatedly to select different of play modes when CD or MP3 CD is playing.

When playing CD, the play modes are shown as below.

Repeat 1 ➡ Repeat All ➡ Random ➡ Normal
↑ _____ ↓

When playing MP3 CD, the play modes are shown as below.

Repeat 1 ➡ Repeat Folder ➡ Repeat ALL ➡ Random ➡ Normal
↑ _____ ↓

REPEAT 1 - the track being played and will repeat continuously. Repeat icon  flashing.

REPEAT FOLDER - the tracks in same folder will repeat continuously. Repeat icon  solid ON while MP3 icon flashing.

REPEAT ALL - all tracks will repeat continuously. Repeat icon  solid ON.

RANDOM – the tracks in the disc will be played in random sequence. Random icon “RAND” solid ON.

PLAY TRACK SEQUENCE PROGRAMMING (REMOTE CONTROL ONLY)

This function allows the tracks to be played in a programmed sequence.

NOTE: Program can only be set in STOP mode.

1. Press the **PROG/PRESET Button** on remote control, the program track number “00”, next available program number and the icon “PROG” show in the LED display. (Note: “00 P-01” will be in the display if you are programming first time).
2. Use the **◀◀** or **▶▶ Button** on main unit or remote control to select the desired track. The track number will be shown in front of the program number.
3. Press the **SELECT Button** on remote control to store the selected track in the memory, the next program number will advance one (i.e. “P-02”) in LCD display while track number will reset to “00” for next programming track.
4. Repeat steps 2 to 3 to store more tracks in the memory. You can store up to 20 tracks.
5. Press the **PLAY/PAUSE ▶|| Button** on main unit or remote control to start playing the CD or MP3 CD in the programmed sequence.
6. Press the **FM ST/MODE Button** on remote control to select Repeat 1/All or Random play if necessary.
7. To stop playing, press the **STOP ■ Button** on main unit or remote control.
8. To cancel the program play, press the **STOP ■ Button** on main unit or remote control twice, “PROG” icon disappears from display.

BLUETOOTH OPERATION

Press the **Power ON/OFF  Button** to turn ON the unit and follow the directions below to connect via Bluetooth.

CONNECTING YOUR BLUETOOTH DEVICE USING NFC **ABOUT NFC**

NFC (Near Field Communication) is a technology enabling short-range wireless communication between various devices, such as mobile phones and IC tags. Thanks to the NFC function, data communication can be achieved easily just by touching the relevant symbol or designated location on NFC compatible devices.

1. Make sure your Smartphone or Bluetooth device has the NFC feature, and it is turned ON (enabled).
2. Turn on the MIC192U power, press the **Bluetooth  Button** on main unit or remote control. Wait 10 seconds for the unit to enter pairing mode, the Bluetooth “PAIRING” message will be scrolling in display.

Note : If the MIC192U is connected to other smartphone, press and hold the

Bluetooth  Button for 3 seconds to enter Bluetooth pairing mode.

3. Touch the back of your smartphone to the NFC linking point (#20) located on the

- top panel of the unit (near Power ON/OFF button). Check the owner's manual of your Bluetooth device to locate the NFC touch point if you are not sure where it is.
4. If the MIC192U is in pairing mode, it will turn on and enter Bluetooth mode automatically and pair with your smartphone. Display will show "CONNECTED" message and then change to show "BT" and Bluetooth icon  turns ON.
 5. Some smartphones may ask you to confirm the pairing if they are not paired before.

NOTE: If you have multiple NFC compatible devices to link, just touch the smartphone to a different device to switch the connection to that device. For example, when your smartphone is connected to the MIC192U, just touch the linked smartphone to the system to disconnect it and then touch another smartphone you want to change the Bluetooth connection to (one touch connection switching). The connection will automatically be transferred from your smartphone to the new device.

NOTE ON CONNECTING

Some 3rd party batteries and/or add-on wireless charging coils may interfere with using the NFC feature on this unit. If you followed the directions above for connecting, but find that you are still having problems connecting using NFC, we recommend checking to be sure your Bluetooth device is only using factory authorized parts and batteries.

PAIRING (Linking) a BLUETOOTH ENABLED cell phone OR OTHER BLUETOOTH ENABLED DEVICE to the MIC192U

If the MIC192U has never been paired with a Bluetooth device before. You need to follow the pairing instructions below to link the MIC192U with your Bluetooth device.

1. Press the **POWER**  **Button** on main unit or remote control to turn on the unit.
2. Tap the **BLUETOOTH**  **Button** on main or remote control to select Bluetooth mode, Bluetooth "PAIRING" message appears in display.
3. If the MIC192U has never been paired with a Bluetooth device before or cannot find the last paired device, the "PAIRING" on LCD will indicate the MIC192U is in search mode. You need to follow the pairing instructions below to link the MIC192U with your Bluetooth device.
 - Turn on the Bluetooth function of your Bluetooth device and enable the search or scan function to find the MIC192U.
 - Select "MIC192U" from the device list when it appears on your device screen. If required, enter the pass code "0000" to pair (link) the JCR-300 with your device.
4. After successfully pairing (linking), display will show "CONNECTED" and then change to show "BT", the Bluetooth icon  also will show in display. You can begin playing music from your Bluetooth device wirelessly to the speaker.
5. After selecting your favorite song, press **PLAY/PAUSE**  **Button** on the unit or remote control to play or pause the song.
6. Press the volume control  **Button** on main unit or **VOL+/- Button** on remote control to adjust to the desired volume level.
7. Press **◀** or **▶** **Button** on main unit or remote control to skip to previous or next song.
8. If you want to pair the MIC192U with another Bluetooth enabled device, press and hold the  **Button** for 3 seconds or turn off the Bluetooth function of device

currently paired with MIC192U then repeat step 3 above.

Notes:

- 1.) Refer to the manual of your cell phone, tablet PC, computer or other Bluetooth enabled devices for Bluetooth operation since it may vary from model to model.
- 2.) If your Bluetooth enabled device does not support A2DP profile, it will not play the music through the speaker, even if paired (linked).
- 3.) If you are pairing (linking) your computer to the unit using Bluetooth, you may need to set the speaker as your computer's default sound device.

AUXILIARY INPUT OPERATION

This unit provides an auxiliary audio signal input jack for connecting external audio devices like MP3 players, Digital Audio Device and listen to them through the speakers of this unit.

1. Use an audio cable (not included) with one 3.5 mm stereo plug on each end of the cable.
2. Plug one end into the **AUX IN JACK** on the main unit and the other end of the cable into the Line-out Jack or Headphone Jack of your external audio device.
3. Turn on the unit and external audio device.
4. Tap the **FUNCTION Button** on main or remote control to select AUX mode, display will show "AUX-IN".
5. The volume level can now be controlled through the main unit. Operate all other functions on the auxiliary device as usual.

Note:

- If you connect this unit to the Line-Out Jack of your external device then you only need to adjust the volume control of this unit. If you connect the Headphone Jack of your external device then you may need to adjust both the volume controls of your external device and this unit to obtain the desirable volume setting.
- Press the **POWER**  **Button** on main unit or remote control to turn off the unit when you have finished listening. Don't forget to switch off the power of your external device as well.

PRESET EQ (REMOTE CONTROL ONLY)

This unit provides 5 different EQ modes to enhance your listening experience. You can select the desired effect by pressing the **EQ Button** on remote control repeatedly at following sequence:



MUTE BUTTON (REMOTE CONTROL ONLY)

- Press the **MUTE**  **Button** on remote control to mute the sound output from the speaker temporarily. The volume set level will appear in display and flashing
- Press the  **Button** again or **VOL+/- Button** to resume to normal speaker playback.

CHARGING YOUR SMART PHONE OR PORTABLE DEVICE

This unit features a 1 AMP USB port for charging your portable device (iPod, iPhone, Android phone, etc.) when used with the USB charging cord that came with your

device.

1. Plug one end of the USB cable (not included) into the **USB Charging Port** located on the top panel of the unit. Plug the other end of the cord into the device you wish to charge.
2. Observe the battery charge indicator on your device to make sure the charging process starts normally.
3. Unplug the cable when your device is fully charged.

CAUTION:

Before charging, please refer to the user manual of the device you wish to charge to make sure the charging current requested does not exceed 1A (1000mA). Overloading the charging circuit may damage the unit permanently and void the warranty.

1. The USB charging port of this unit supplies a DC 5V output at 1000 mA maximum current to charge your smart phone or portable device battery and it cannot support any other voltage range.
2. Make sure the device you want to charge has a battery charge rating of DC 5V only.
3. The USB port of this unit is designed for smart phone or portable device battery charging only and it cannot support data transfer or connect to computer.
4. Do not connect the USB port of this unit to other external power charger USB ports, it may damage both units and void the warranty.

Note:

- 1.) Some smart phones and portable devices use proprietary USB connections and circuitry, so they may not charge when plugged into the USB port. Please refer to your device user manual before you attempt to charge them.
- 2.) It is normal if the unit gets warm while the USB port is in use and charging your smart phone or portable device.
- 3.) Do not charge your smart phone over 12 hours continuously. Disconnect your smart phone or other portable device from the USB cord once it is fully charged.

USE HEADPHONES (NOT INCLUDED)

Inserting the plug of your stereo headphones (not included) into the headphone jack will enable you to listen in private. When using headphones, the speakers will be disconnected.

Read this Important Information before Using Your Headphones

- 1.) Avoid extended play at very high volume as it may impair your hearing.
- 2.) If you experience ringing in your ears, reduce the volume or shut off the unit.
- 3.) Keep the volume at a reasonable level even if your headset is an open-air type designed to allow you to hear outside sounds. Please note that excessively high volume may still block outside sounds.

RESETTING

If the system does not respond or has erratic operation, you may have experienced an electrostatic discharge (ESD) or a power surge that triggered the internal computer to shut down automatically. If this occurs, unplug the AC adaptor from power source, wait for 10 minutes, then plug the AC adaptor to power source again. The unit will be reset, you need to setup the clock, alarm and preset radio channels.

CARE AND MAINTENANCE

1. Do not subject the unit to excessive force, shock, dust or extreme temperature.

2. Do not tamper the internal components of the unit.
3. Clean your unit with a dry cloth. Solvent or detergent should never be used.
4. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
5. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
6. If drop-outs or interruptions occur in the music during CD play, or if the CD fails to play at all, its bottom surface may require cleaning. Before playing, wipe the disc from the center outwards with a good soft cleaning cloth.



CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on the unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.
- If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your unit.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

TROUBLESHOOTING GUIDE

If you experience difficulties in the use of this music system, please check the following or call 1-800-777-5331 for Customer Service.

Symptom	Possible Cause	Solution
The unit does not respond (no power)	The unit is disconnected from the AC outlet.	Reconnect to the AC outlet.
	The AC outlet has not power.	Try the unit on another outlet.
Unit is ON but there is low or no volume	Volume set too low.	Press the  Button on main unit or VOL+ Button on remote control to turn the sound level up.
No Sound	Bluetooth speaker is not linked with the cell phone	Go through "Bluetooth Operations" process to link the speakers.
	Speaker placement out of range	Relocate the speaker within Bluetooth operating range
Noise or sound distorted on FM broadcast	Station not tuned properly. FM wire antenna is not fully extended.	Fine tune the FM broadcast station. Fully extend the FM wire antenna.
CD player will not play	Unit not in CD function mode. CD is installed incorrectly. If the CD is self-compiled, the media used may not be compatible with the player.	Select CD function mode. Insert CD with label facing to the CD door. Use better quality blank media and retest.

CD skips while playing	Disc is dirty or scratched.	Wipe CD with clean cloth or use another disc.
Intermittent sound from CD Player	Dirty or defective disc. Dirty pick up lens. Player is subject to excessive shock or vibration.	Clean or replace the defective disc. Use a CD-lens cleaning disc to clean the lens. Relocate the player away from shock or vibration.
Sound is distorted	Volume level is set too high.	Decrease the volume.
	Sound source is distorted.	Try a different sound source. If you are using an external sound source like older generation of iPod, try reducing the output volume on the device itself. Also try turning bass boost OFF or change the EQ setting.
Unit gets warm after extended play at high volume	This is normal.	Turn the unit off for a period of time or lower volume

SPECIFICATIONS

Power requirement:

AC adaptor for main unit

Remote control:

AC input: 120V ~ 60Hz

DC output: 12V  1500 mA

1 x 3V  CR2025 Lithium Battery

Frequency Range

Radio Band:

FM 87.5 ~ 108 MHz